

Centre Console (Up To '95½ MY) - Remove And Install (43 814 0)


CAUTION:

This procedure involves the disconnection of several multiplugs. When disconnecting multiplugs do not pull on the wiring; pull on the multiplug body.

Remove


CAUTION:

Disconnect the battery negative lead.

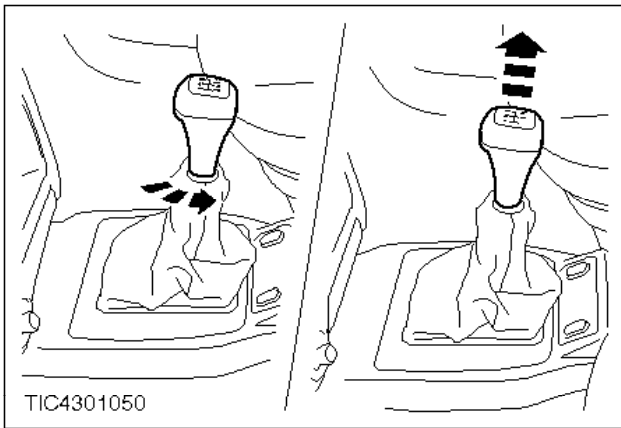


- ➊ 1. Remove the gear knob.

Screw type B5/IB5 transmission.
Push on/pull off type MTX 75 transmission.

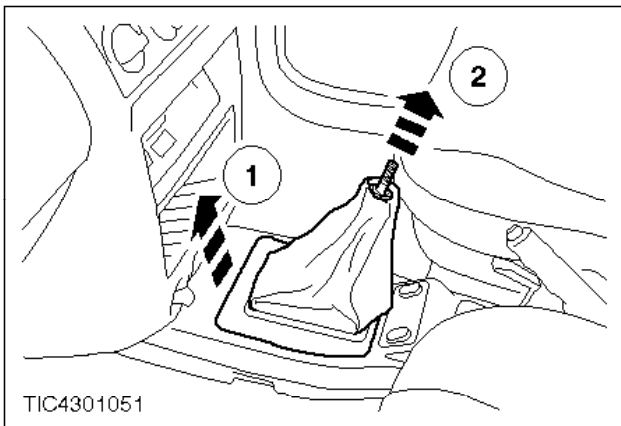


- ➋ 2. Remove the gear lever gaiter and surround.
 - 1 Carefully prise up the surround.
 - 2 Remove the gaiter and surround.

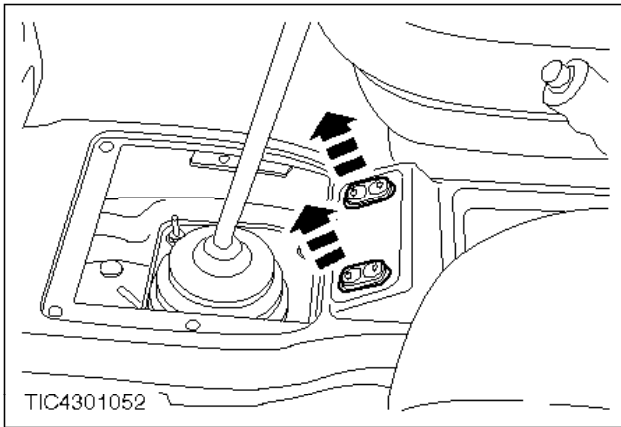


Variants with electric windows

- 3. Push out the power window switches from the underside of the centre console.

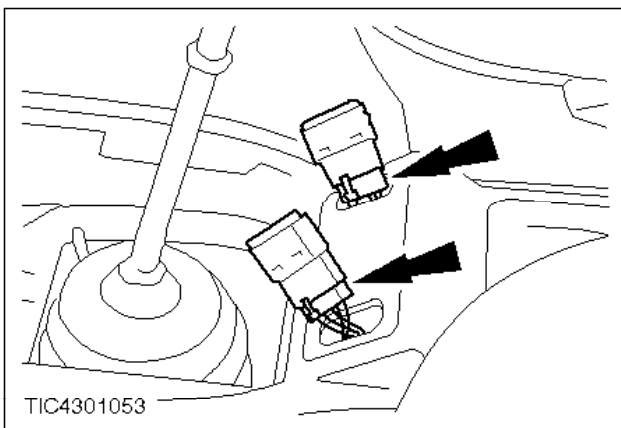


- 4. Disconnect the multiplugs and remove the switches.

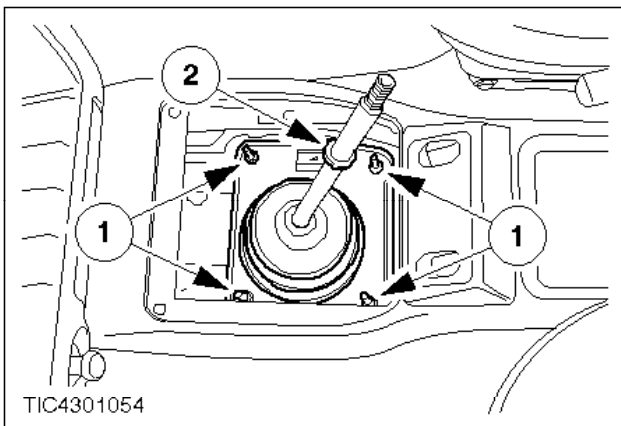


All variants

- 5. Detach the gearshift floor gaiter retaining plate.
 - 1 Remove four retaining nuts.
 - 2 Remove the rubber O-ring.

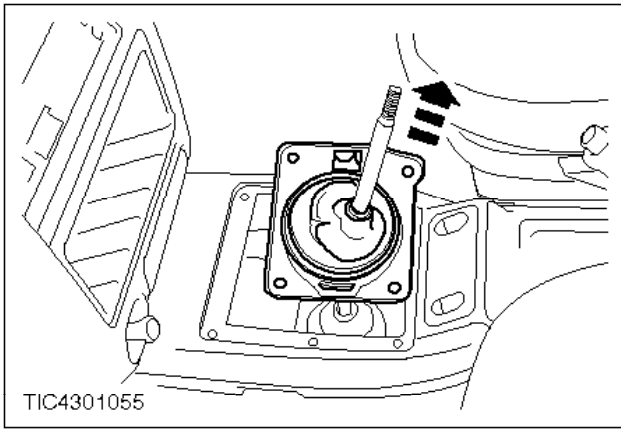


- 6. Remove the gearshift floor gaiter and retaining plate.

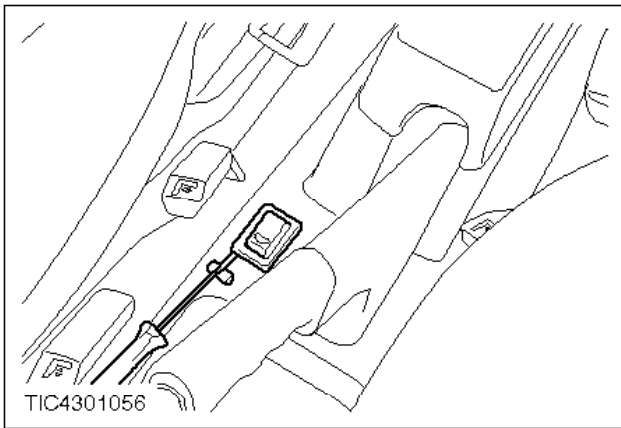


Variants with electric tailgate release

- 7. Carefully prise out the switch.

Use a pad between the screwdriver and surround to prevent damage.

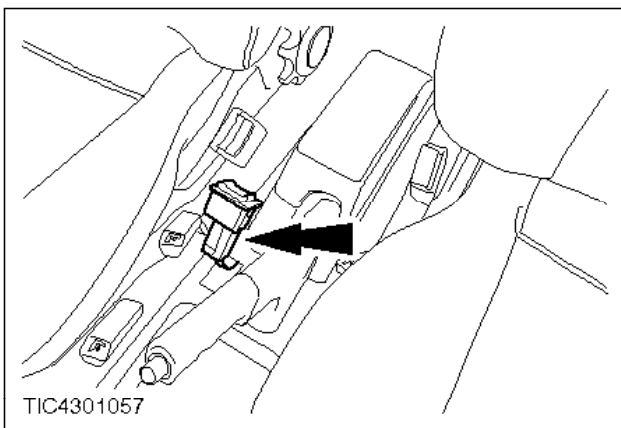


- 8. Disconnect the multiplug and remove the switch.

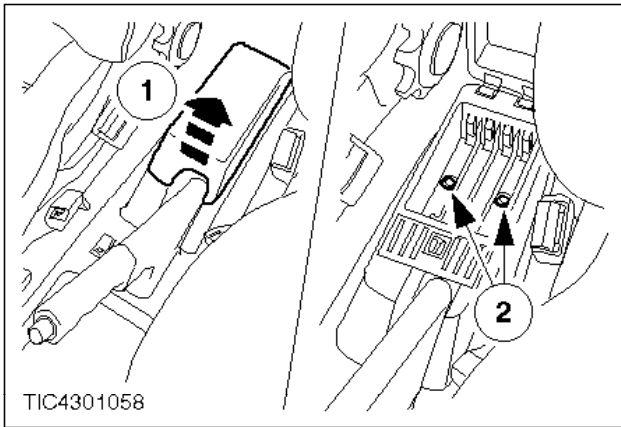


All variants

- 9. Remove the centre console retaining screws.
 - 1 Raise the cassette/storage box lid.
 - 2 Remove the two rear centre console retaining screws.

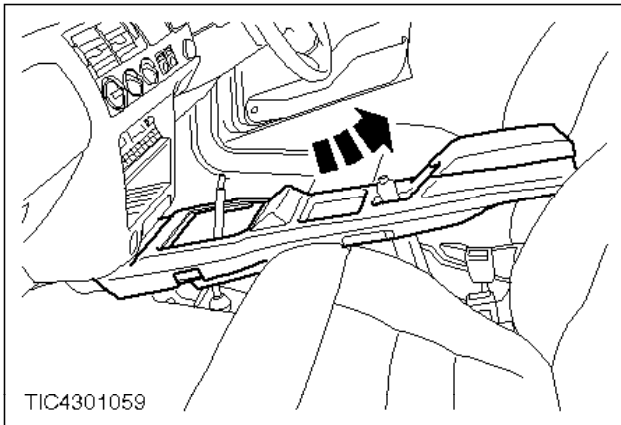

- 10. Lift the centre console from the rear and remove.

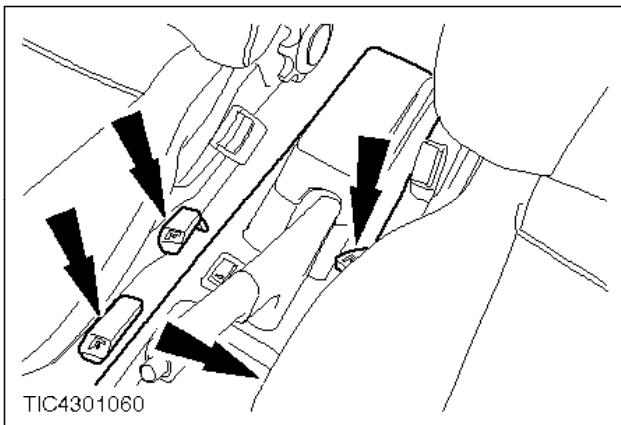

Install

Note:

When refitting the console ensure the seat adjusting levers are carefully moved to the side to prevent damage to either component.

⬅ 11. Refit the components in reverse order.
