
Starter Motor - Remove And Install (26 204 0)


Remove




CAUTION:

Disconnect the battery negative lead.


1. Raise the vehicle and remove the undershield if necessary.

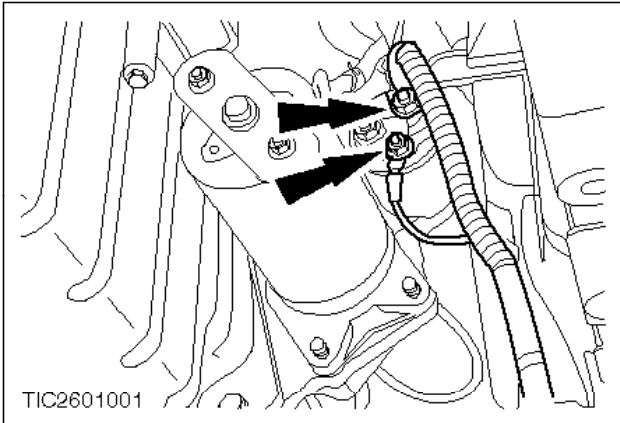


2. Disconnect the starter motor wiring (diesel variant illustrated).

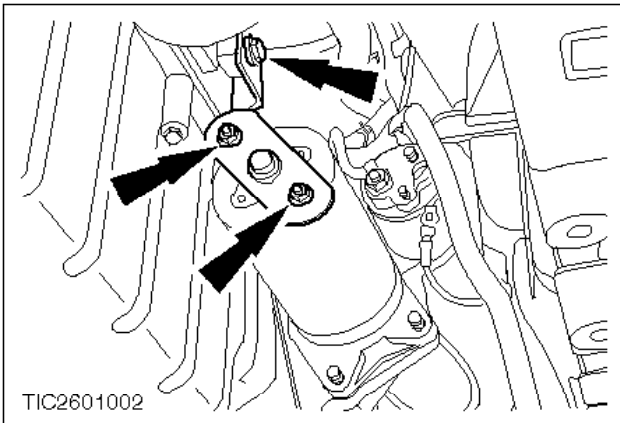

3. Remove the starter motor support bracket if fitted (two nuts, one bolt).

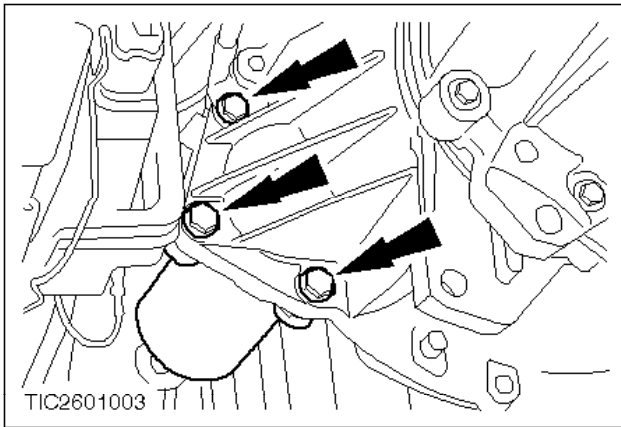

- 4. Remove the starter motor (three bolts).

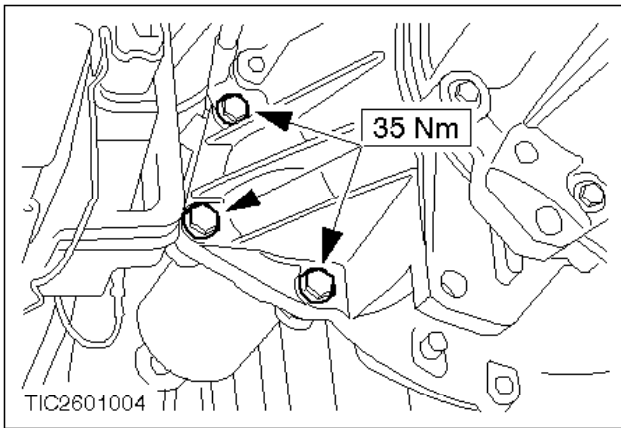

Install

- 5. Refit the components in reverse order.

