



Clutch Disc and Pressure Plate - Remove and Install (Engine or Transmission Removed) (16 724 4)

Special Tools

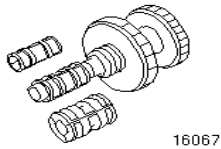


16067

16-067 Aligner, clutch plate

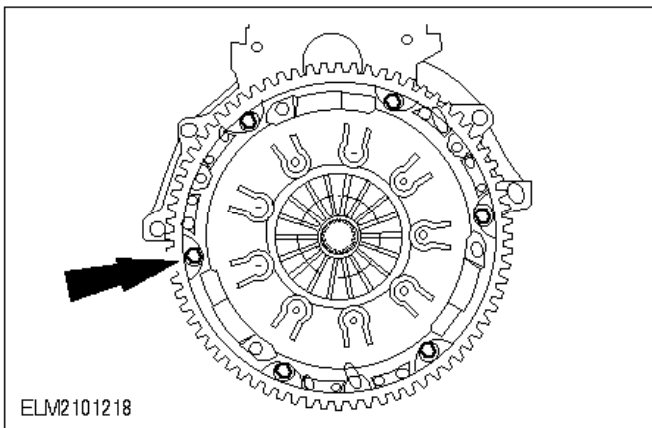


Remove

- 1. Remove the clutch disc and pressure plate.
Undo the retaining bolts evenly.

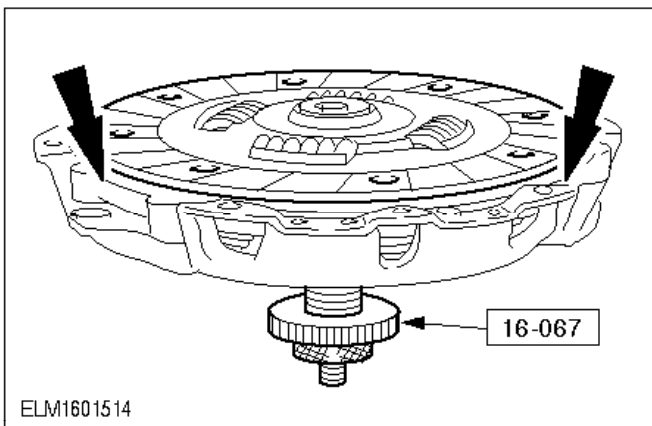

Install

- 2. Centre the clutch disc on the clutch pressure plate and fix it in place using the special tool.

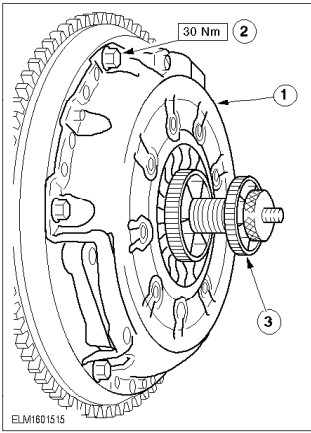

Note:

Remove the special tool only after tightening the pressure plate.

- 3. Fit the clutch disc and pressure plate.

- 1 Locate the pressure plate, special tool and disc assembly together on the flywheel locating pegs.

Note:

Tighten down the pressure plate evenly by turning a maximum of two revolutions, working diagonally.

- 2 Tighten the pressure plate.
 - 3 Remove the special tool.
-