

Bush - Pivot - Rear Suspension - Renew (15 730 0)

Special Tools




IA1511001



IA1511002

15-110-01Adaptor for 15-110

15-110-02Adaptor for 15-110

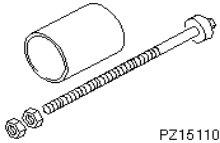

PZ15110


15-110Remover/installer pivot bush

Material


Disc brake shim grease	ESEA-M1C-1014A
------------------------	----------------

Remove


1. Raise the vehicle.
2. Support the rear axle assembly.

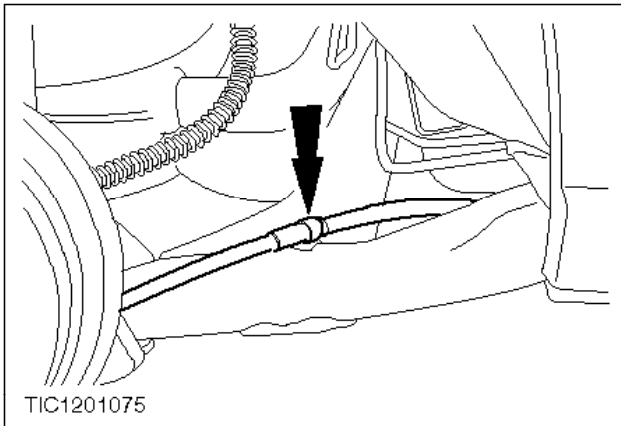

3. Detach the handbrake cables from the rear axle assembly.

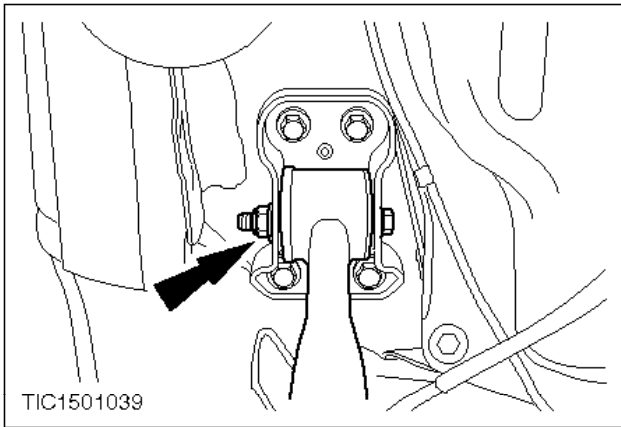


- ⌚ 4. Remove the trailing arm to axle mounting bracket retaining nuts and bolts (both sides).
- 5. Carefully lower the rear axle assembly so that the bushes are clear of the axle mounting bracket and the body side rail.

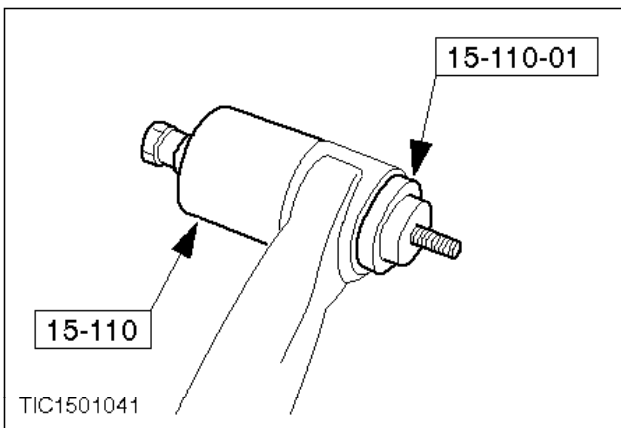

CAUTION:

Before removing the pivot bush lubricate the shaft of the special tool with the grease provided with the tool.

- ⌚ 6. Remove the rear suspension bush.

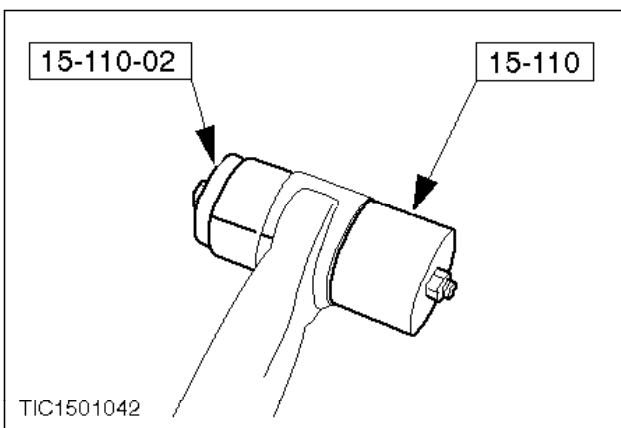

Install


Note:

The final tightening of the rear suspension components should be carried out when the vehicle weight is on the road wheels.

⚠ CAUTION:


Before refitting the pivot bush lubricate the shaft of the special tool and the new bush with the grease provided with the tool.

- 🔩 7. Fit the new rear suspension bush.

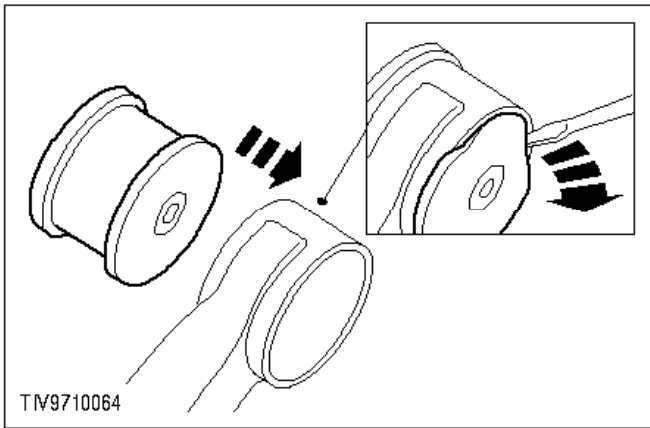

Vehicles built after 1996 model year

- 🔩 8. Carefully pull out the rubber lip on the inboard side of the pivot.

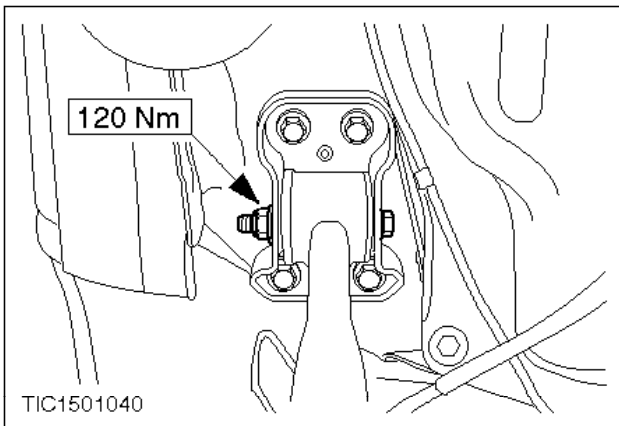

All vehicles

- 🔩 9. Refit the remaining components in reverse order.
-