





- ◆ → '95
- ◆◆ 95 → '95 1/2
- ◆◆◆ '95 1/2 →

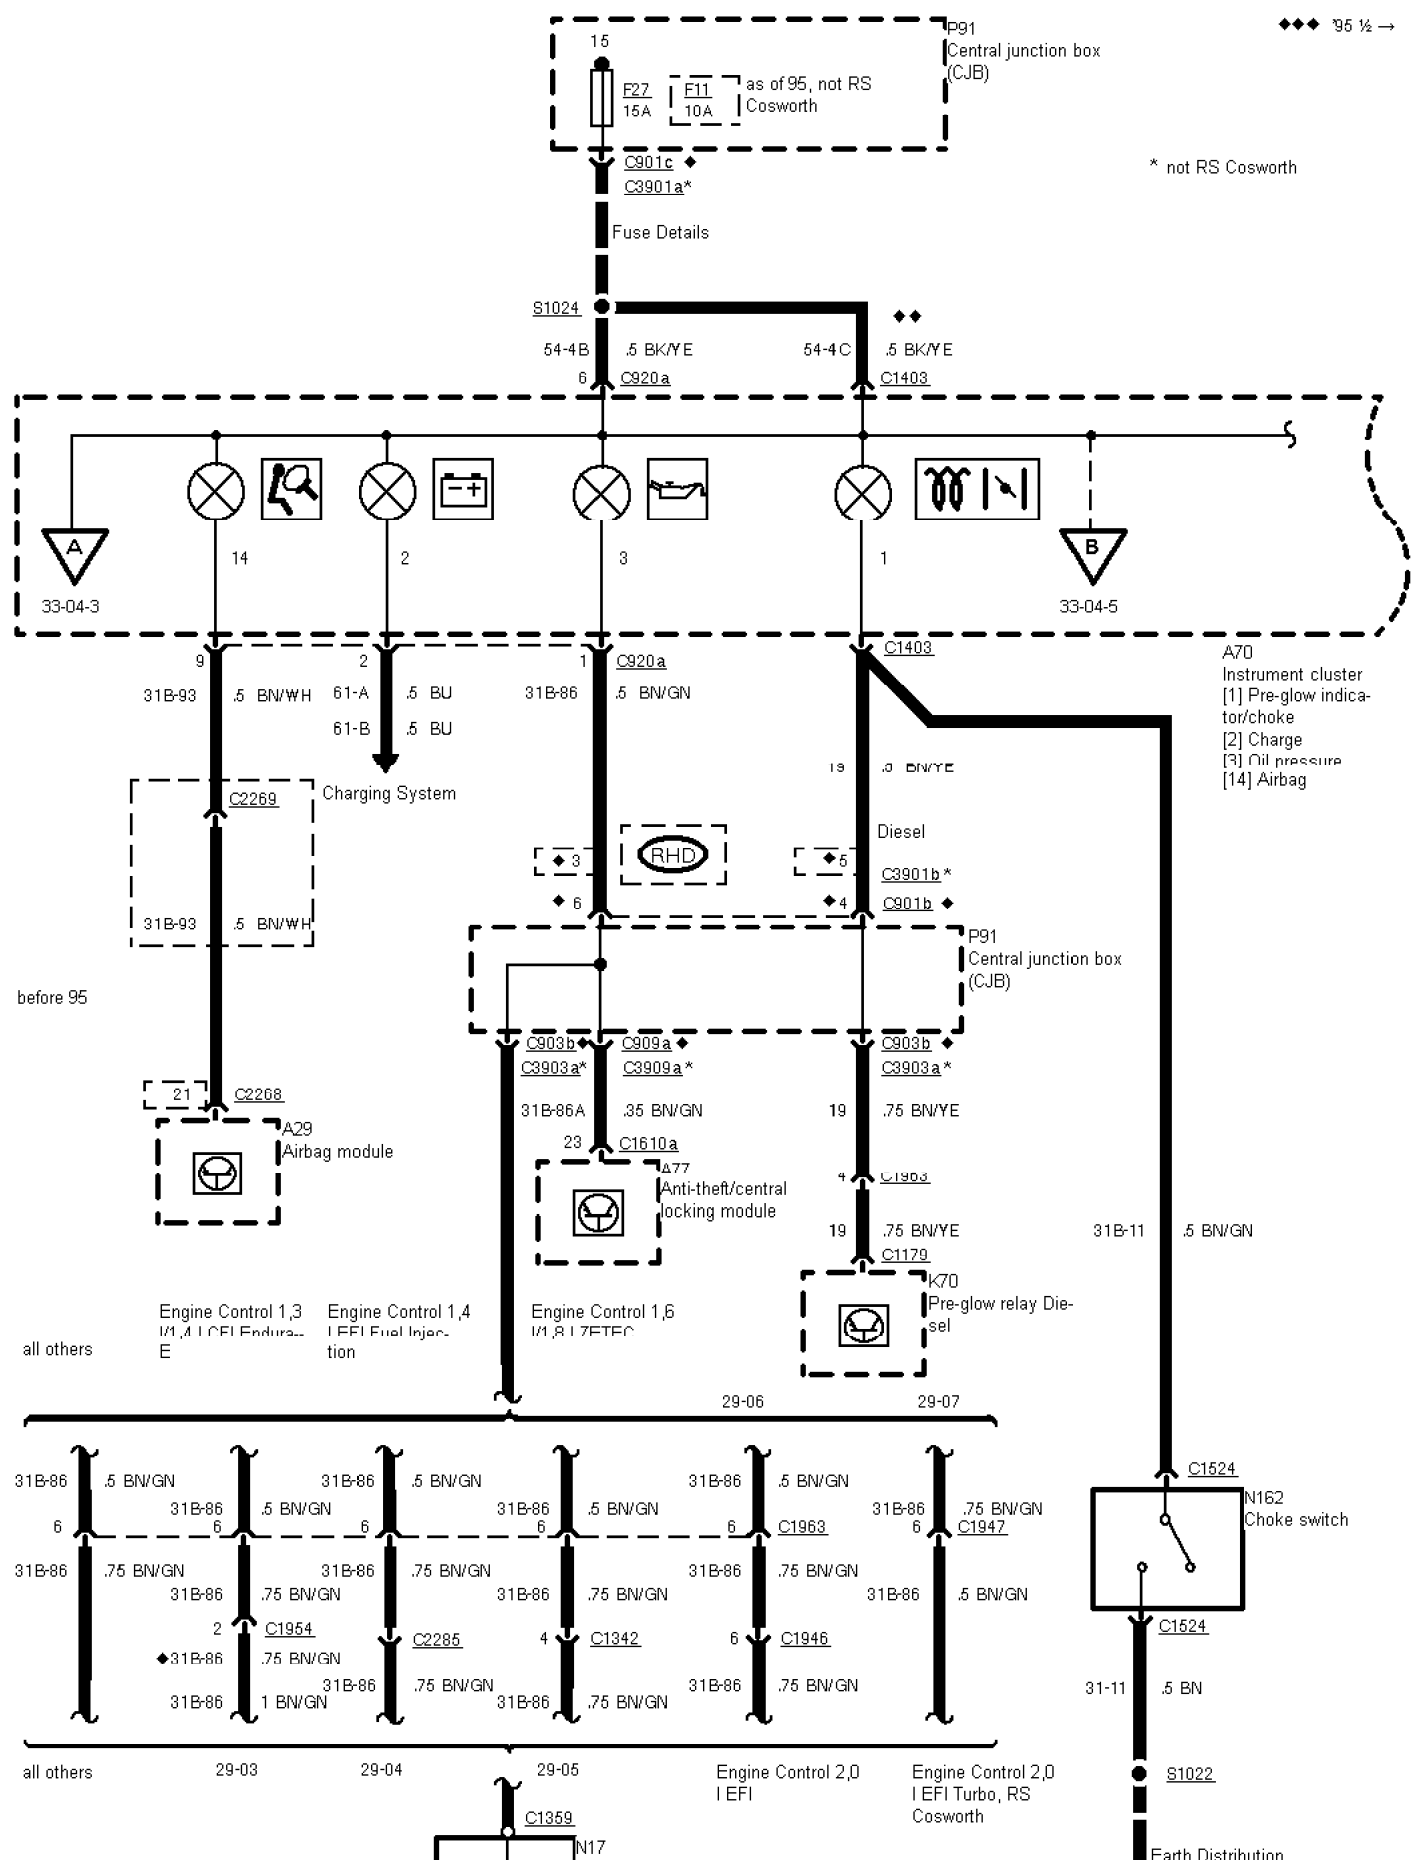

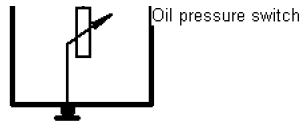



---

33-04-002 , Instrument Cluster , Before 95 1/2

---

- ◆ → '95
- ◆◆ 95 → '95 ½
- ◆◆◆ '95 ½ →

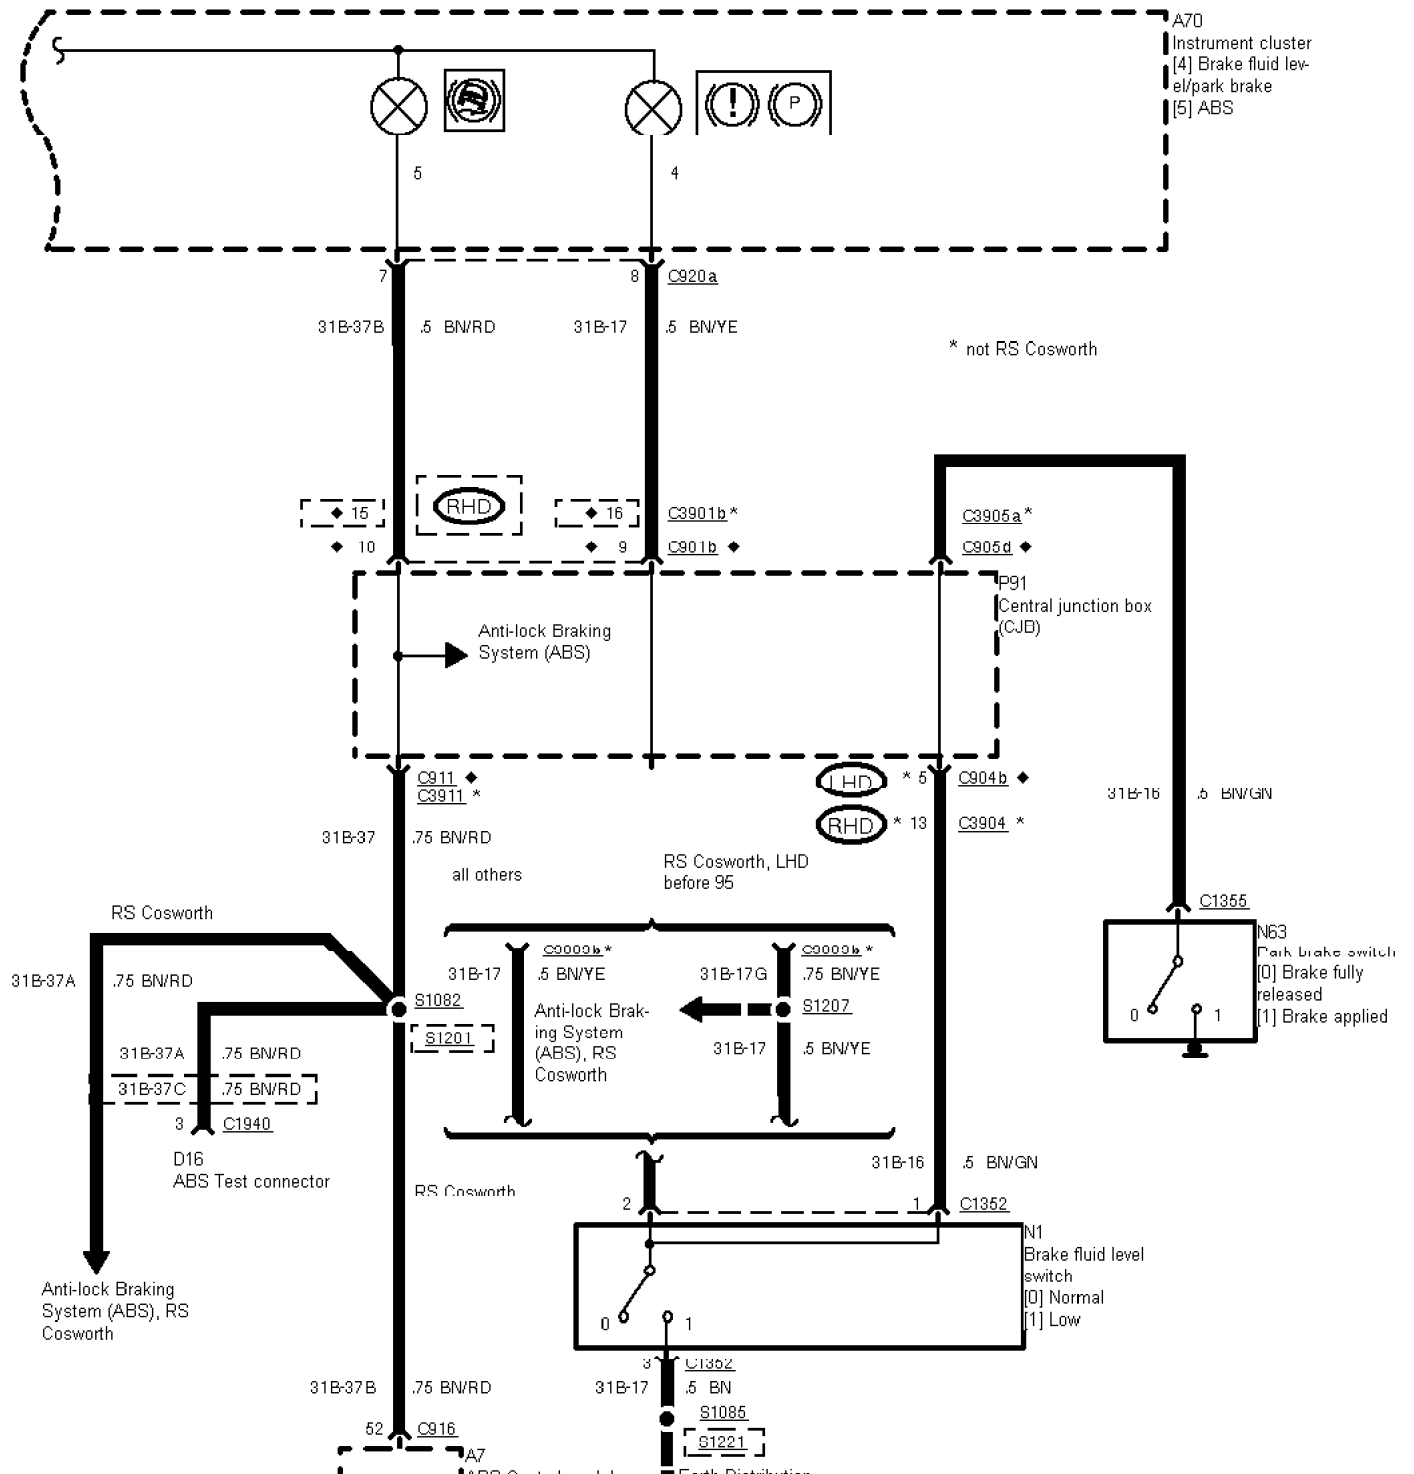


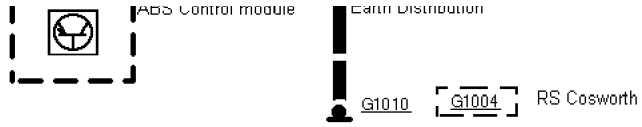





---

33-04-003 , Instrument Cluster , Before 95 1/2

---

   - ◆ → '95
- ◆◆ 95 → '95 1/2
- ◆◆◆ '95 1/2 →

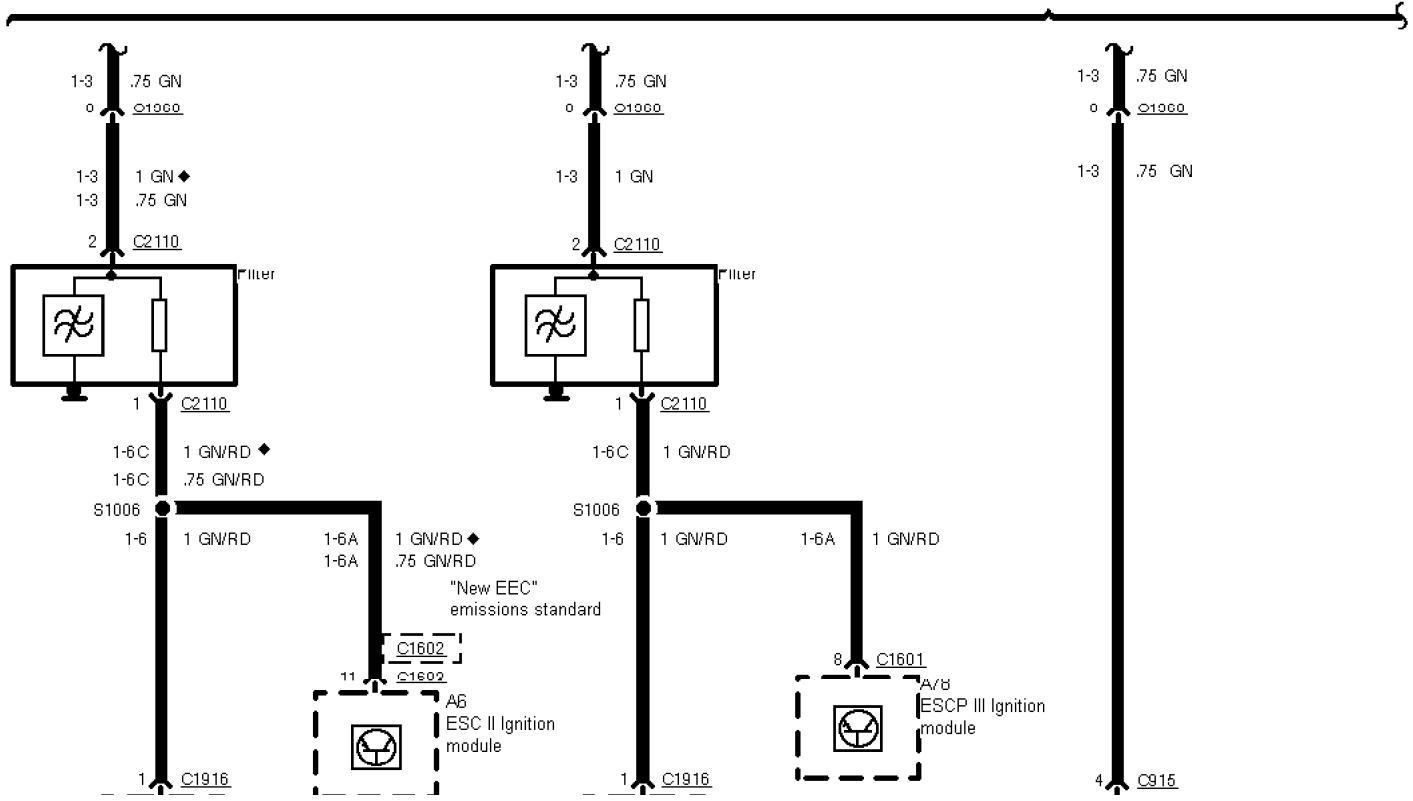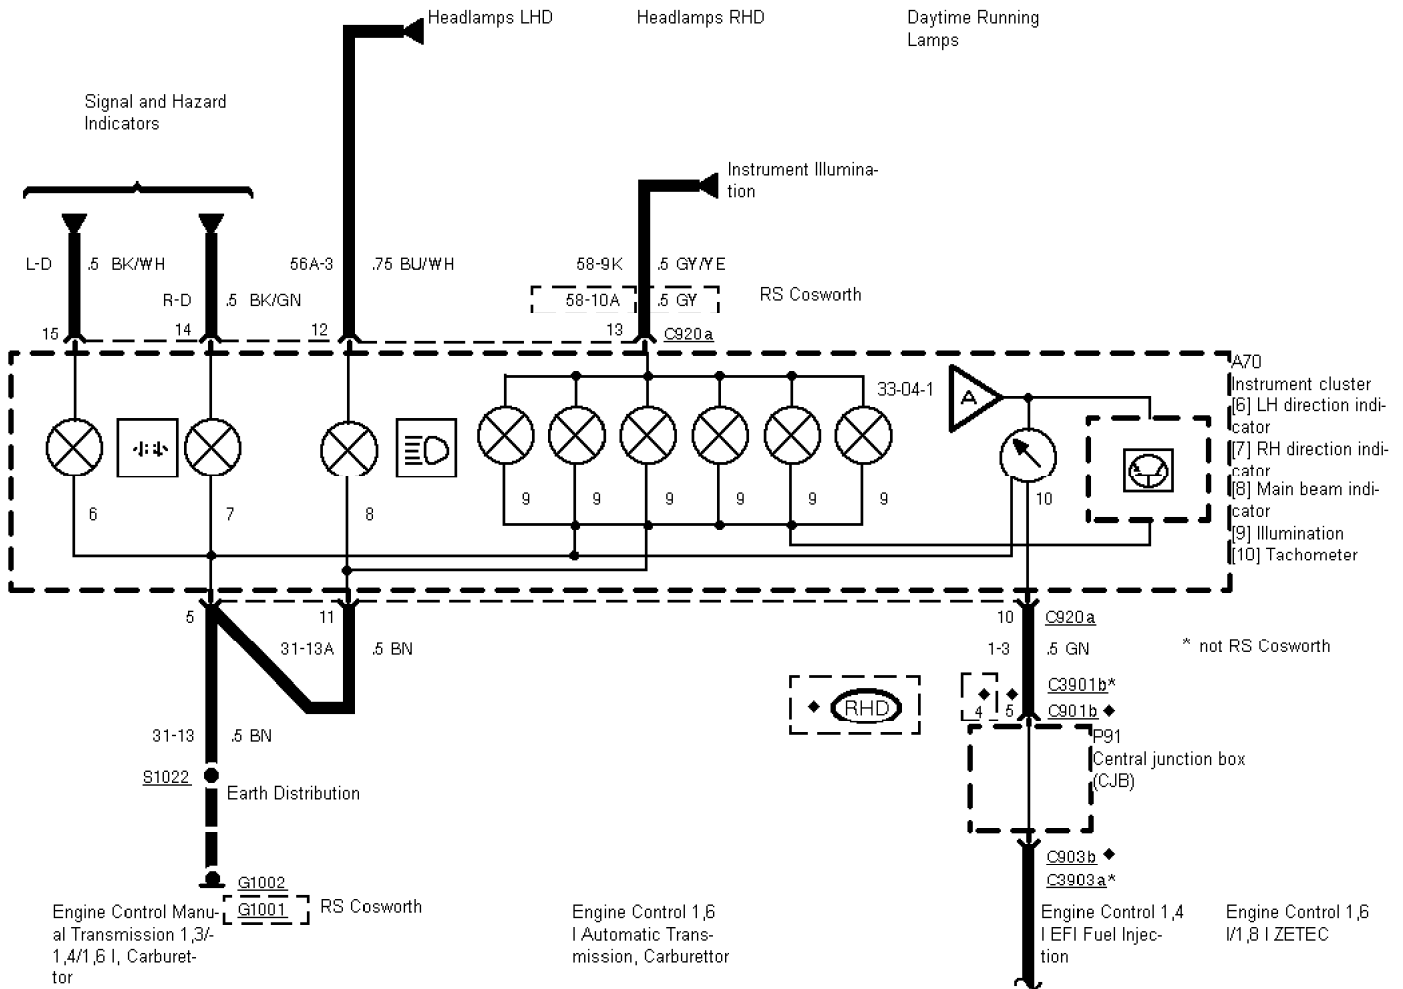



---

33-04-004 , Instrument Cluster , Before 95 1/2

---


Engine Control 1,3  
| V1,4 | CFI Endura-  
| E

Engine Control 1,8  
| Diesel



Engine Control 2,0  
| EFI

Engine Control 2,0  
| EFI Turbo, RS  
| Cosworth

Engine Control 1,8  
| Turbo Diesel

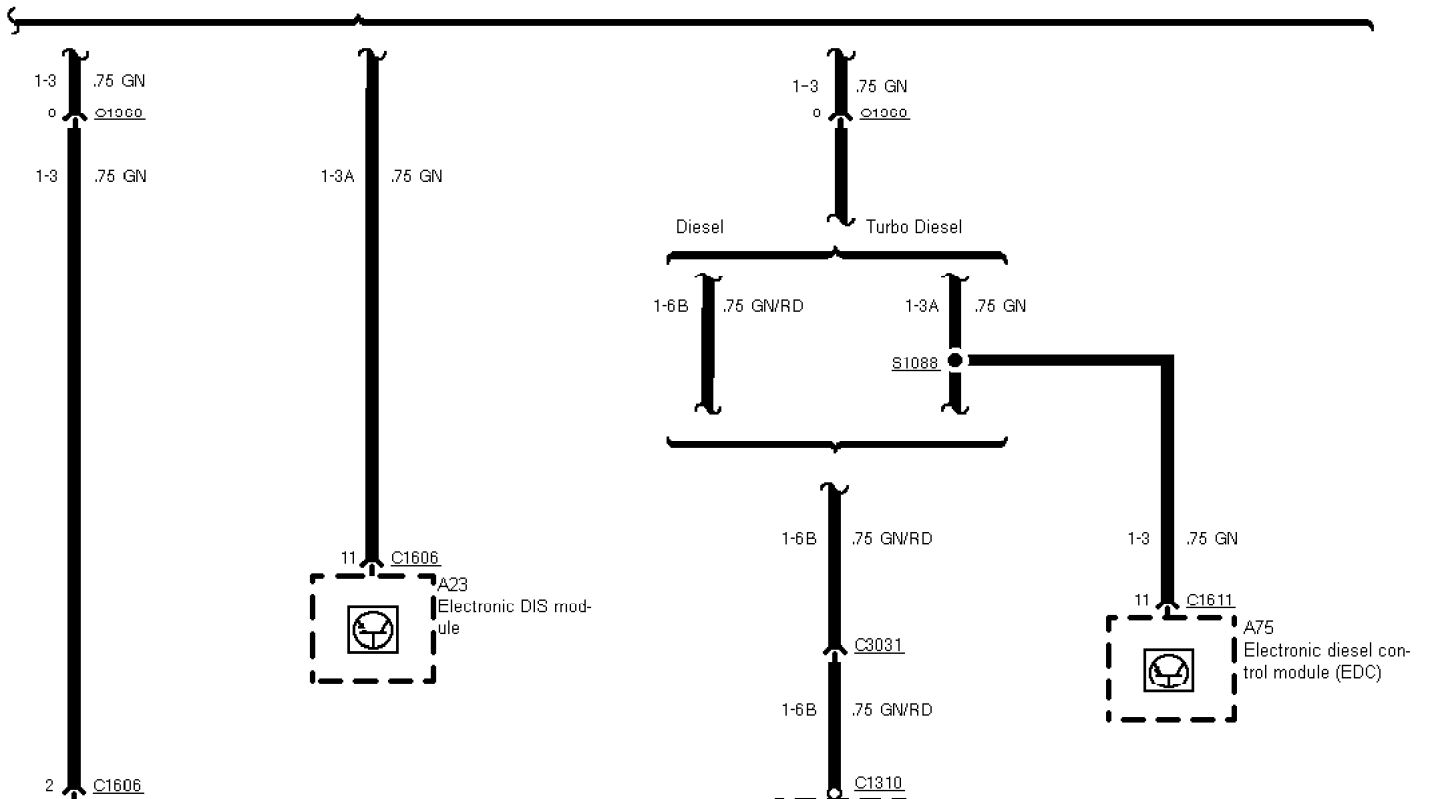



  



---

33-04-005, Instrument Cluster, Before 95 1/2

---

 - ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

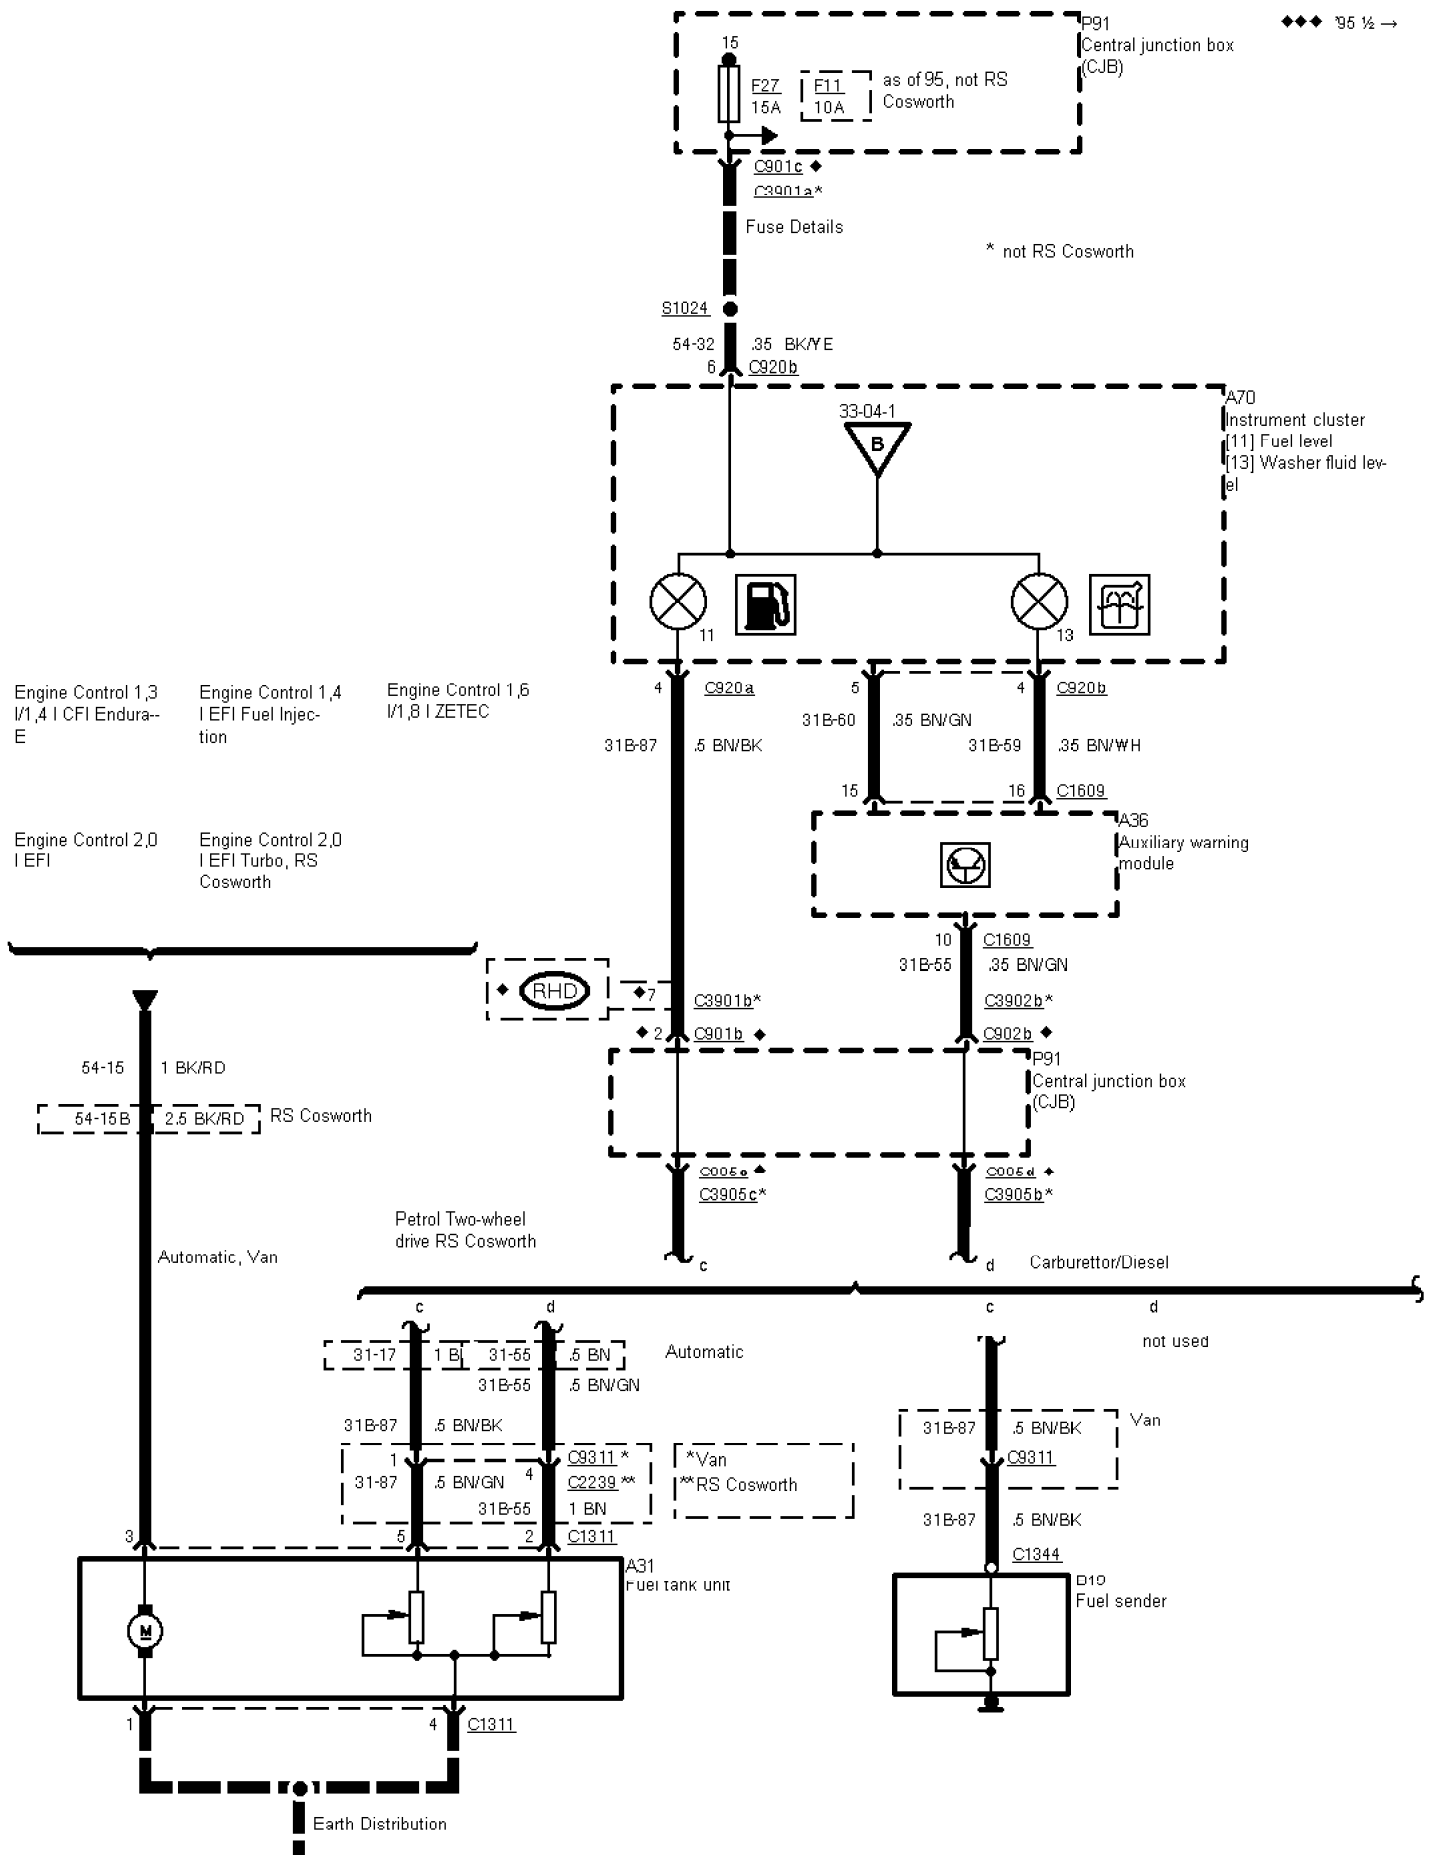




RS Cosworth



---

33-04-006 , Instrument Cluster , Before 95 1/2

---

- ◆ → 95
- ◆◆ 95 → 95 ½
- ◆◆◆ 95 ½ →

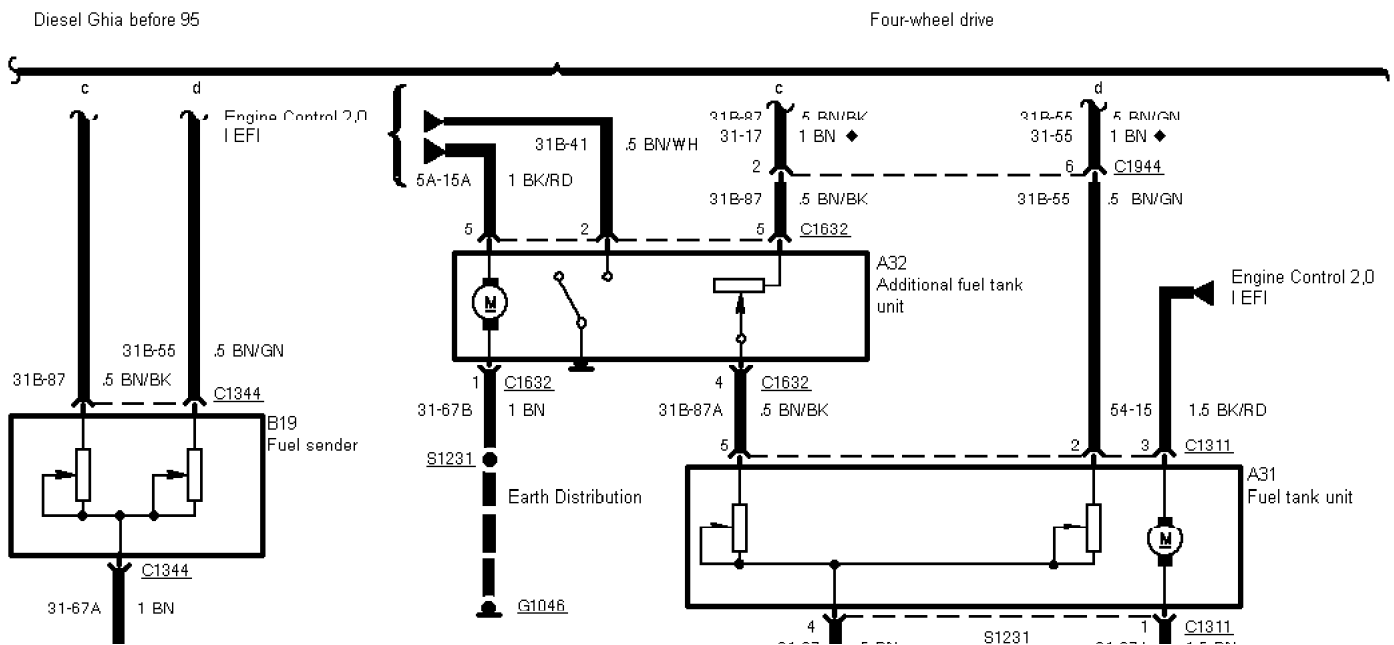

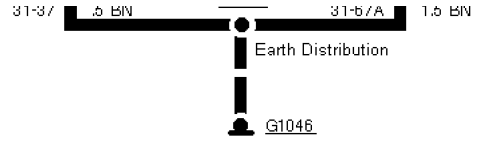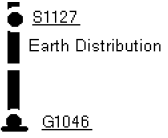




---

33-04-007 , Instrument Cluster , Before 95 1/2

---

 - ◆ → '95
- ◆◆ 95 → '95 ½
- ◆◆◆ '95 ½ →

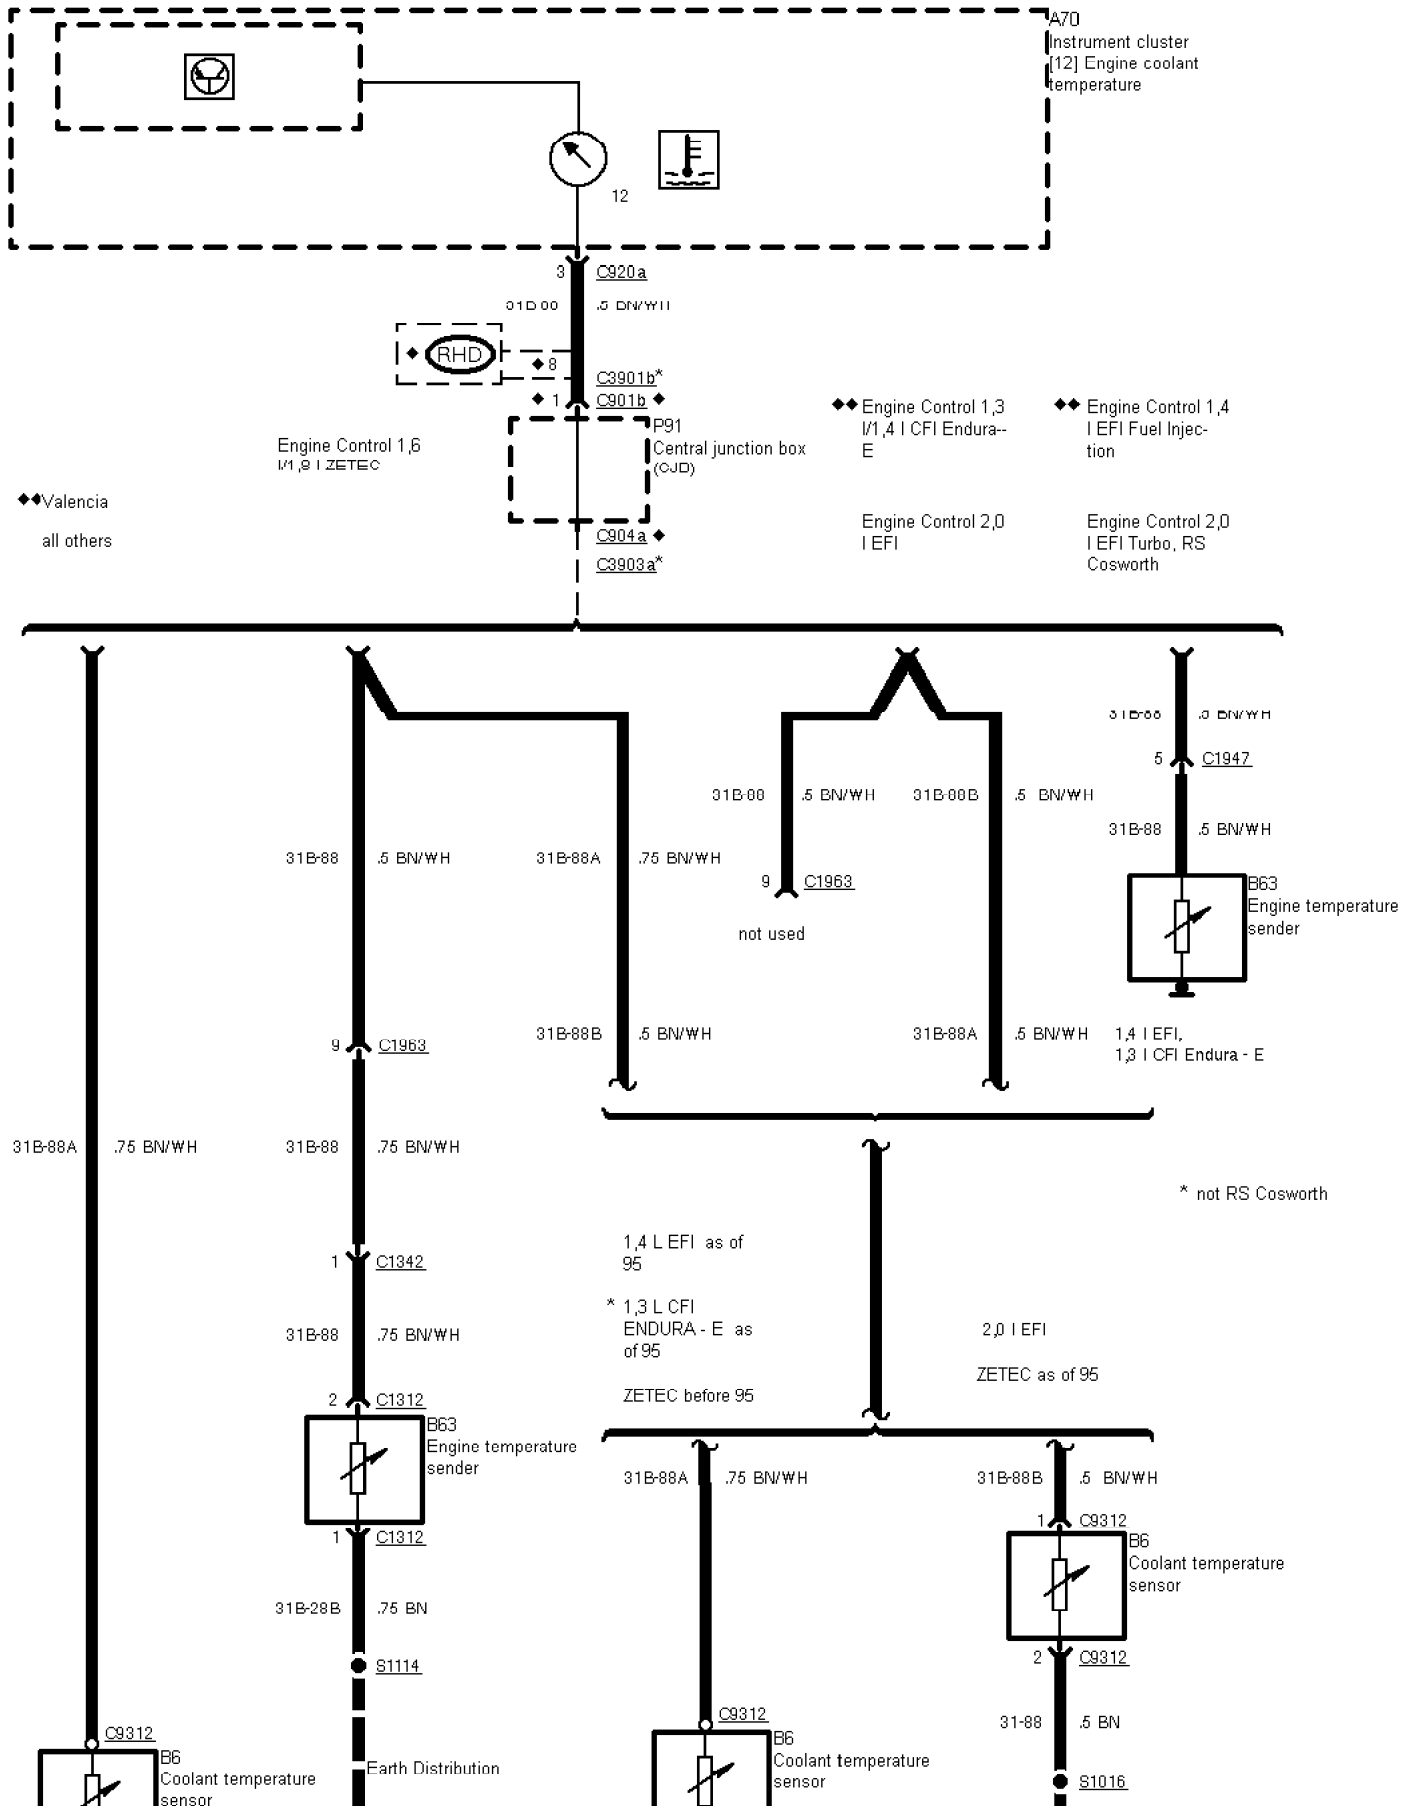

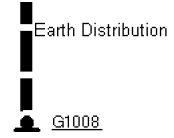

---

33-04-008 , Instrument Cluster , RS Cosworth

---

