



# Fuse and Relay Information


Relay panel

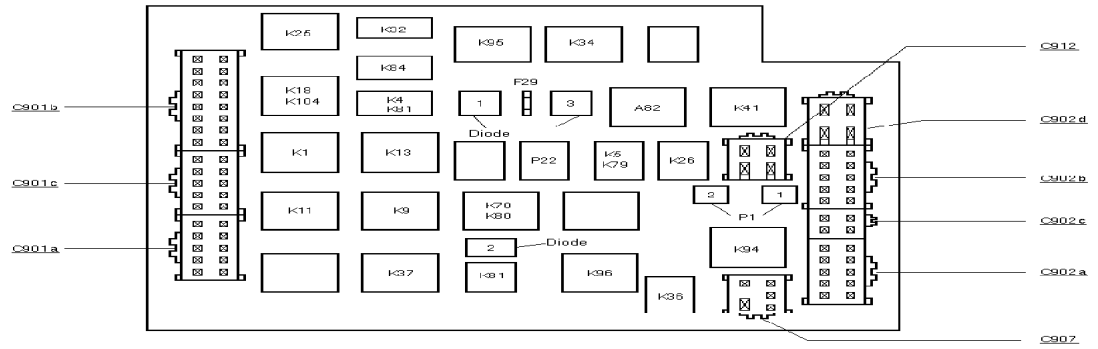

Modular connector panel

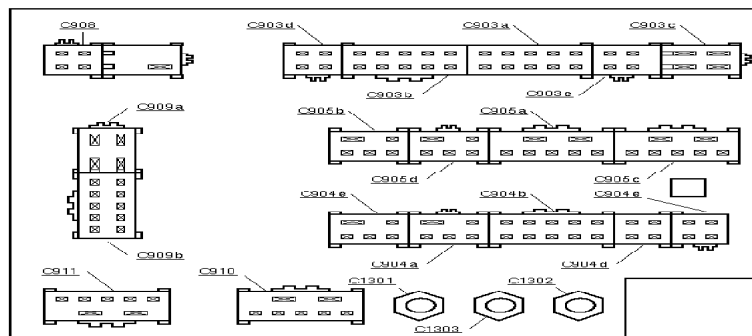

Fuse panel

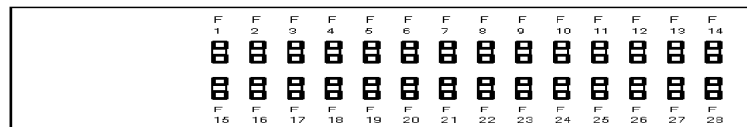


LHD shown, RHD similar


Relay	Connector	Name of component	
<b>A82</b>	<b>C1171</b>	Front fog lamp module	<b>NL</b>
<b>K1</b>	<b>C1153</b>	Rear window heater relay	
<b>K4</b>	<b>C1159</b>	Fuel pump relay	
<b>K5</b>	<b>C1170</b>	Daytime running lamps relay (DTRL)	Scandinavian
<b>K9</b>	<b>C1157</b>	Intermittent wiper relay, rear	Higher option content
<b>K11</b>	<b>C1152</b>	Intermittent wiper relay, front	
<b>K13</b>	<b>C1158</b>	Power hold relay	
<b>K18</b>	<b>C1154</b>	ABS Main relay	Except RS Cosworth
<b>K25</b>	<b>C1155</b>	ABS Pump relay	Except RS Cosworth
<b>K26</b>	<b>C1175</b>	Front fog lamp relay	Higher option content
<b>K32</b>	<b>C1161</b>	A/C Wide Open Throttle (WOT) relay	
<b>K34</b>	<b>C1172</b>	Headlamp cleaning relay	Except RS Cosworth, LHD
<b>K36</b>	<b>C1173</b>	Dip beam relay	
<b>K37</b>	<b>C1156</b>	Main beam relay	
<b>K41</b>	<b>C1176</b>	Ignition relay	
<b>K78</b>	<b>C1163</b>	Dim-dip relay I	<b>RHD</b>
<b>K79</b>	<b>C1170</b>	Dim-dip relay II	<b>RHD</b>
<b>K80</b>	<b>C1163</b>	Daytime running lamps relay (parking lamps)	Scandinavian
<b>K81</b>	<b>C1162</b>	Cold advance relay	Before 95
<b>K84</b>	<b>C1160</b>	Engine run relay	
<b>K94</b>	<b>C1174</b>	Start inhibit relay	RS Cosworth
<b>K96</b>	<b>C1167</b>	Delayed interior light relay	Except RS Cosworth
<b>K104</b>	<b>C1154</b>	Voltmeter relay	RS Cosworth
<b>K144</b>	<b>C3003</b>	Main beam relay II	<b>RHD</b> as of 95
<b>K145</b>	<b>C3016</b>	Main beam relay I	<b>RHD</b> as of 95
<b>P1</b>		Busbar	
<b>P22</b>	<b>C1169</b>	Busbar for rear fog lamp	
<b>P23</b>	<b>C1171</b>	Busbar for front fog lamp	Except <b>NL</b>
<b>P24</b>	<b>C1163</b>	Busbar LHD	<b>LHD</b> except <b>N</b> <b>S</b>
<b>P25</b>	<b>C1157</b>	Busbar for rear window wiper relay	Lower option content
<b>P26</b>	<b>C1172</b>	Busbar for headlamp washer	RS Cosworth, LHD
<b>P27</b>	<b>C1174</b>	Busbar for manual transmission	manual transmission
<b>P30</b>	<b>C1161</b>	Busbar for Diesel with A/C	
<b>P31</b>	<b>C1167</b>	Busbar for interior light w/o delay function	
		Diode	




Relay panel

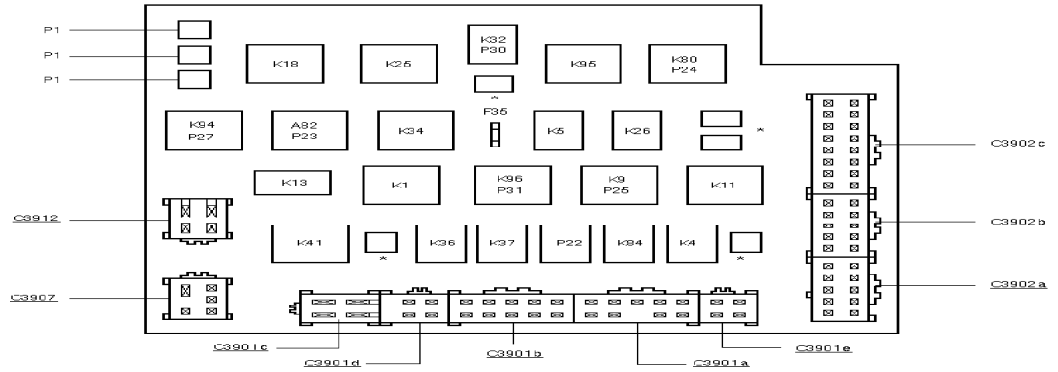

Modular connector panel

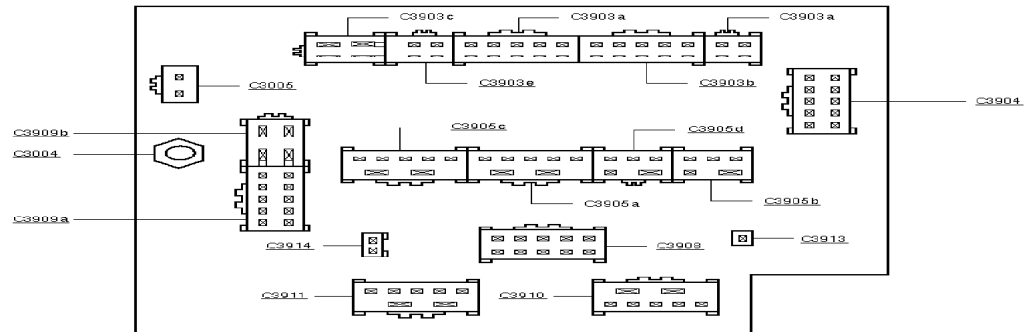


Fuse panel

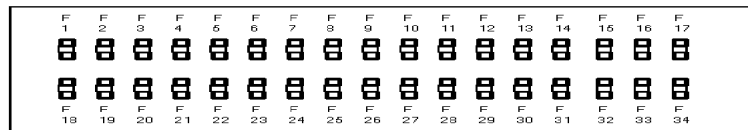




Relay panel


\* Diode

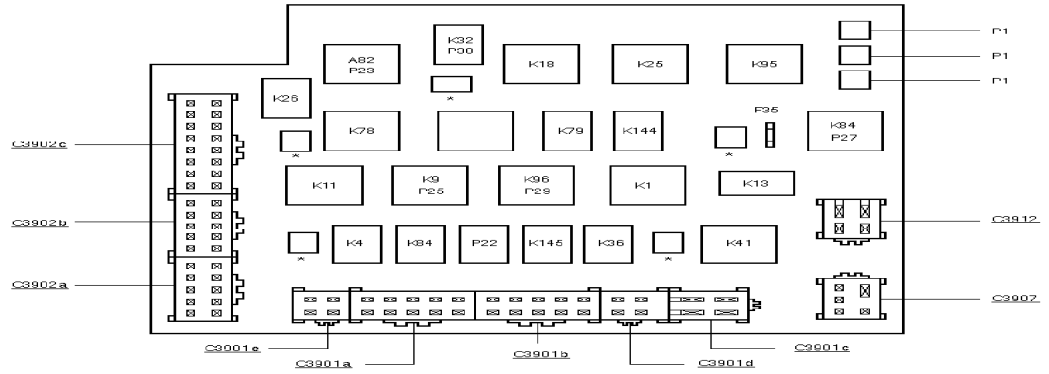

Modular connector panel

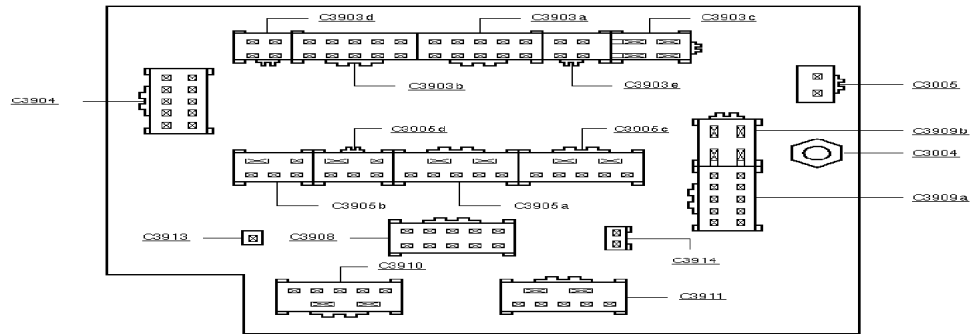

Fuse panel

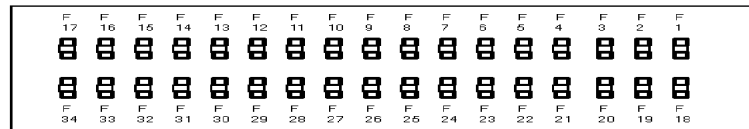

		Fuse number																	
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
		25A	3A* 30A	20A* 10A	15A	20A	10A	10A	10A	3A* 30A	10A	15A	10A	20A	25A	30A	3A	7.5A	15A
12-01	Anti-lock Braking System (ARS)		●													●			
12-02	Anti-lock Braking System (ABS), RS Cosworth																		
26-01	Starting System																		
29-01	Engine Control Manual Transmission 1,3/1,4/1,6 l. Carburettor																		
29-02	Engine Control 1,6 l Automatic Transmission, Carburettor																		
29-03	Engine Control 1,3 l/1,4 l CFI Endura E			●						●									
29-04	Engine Control 1,4 l EFI Fuel Injection			●															
29-05	Engine Control 1,6 l/1,8 l ZETEC			●		●													
29-06	Engine Control 2,0 l EFI			●		●													
29-07	Engine Control 2,0 l EFI Turbo, RS Cosworth			●		●									●				
29-08	Engine Control 1,8 l Diesel																		
29-09	Engine Control 1,8 l Turbo Diesel					●													
29-10	Diagnostic System																		
31-01	Charging System																		
32-01	Headlamps LHD				●						●								●
32-02	Headlamps RHD				●						●								
32-03	Daytime Running Lamps				●						●								●
32-04	Headlamp Levelling						●	●											
32-05	Stop Lamps																		
32-06	Reversing Lamps														●				
32-07	Fog Lamps						●		●			●							
32-08	Signal and Hazard Indicators														●				
32-09	Parking Lamps/Licence Plate Lamps						●	●											
32-10	Wiper/Washer Control														●				
32-11	Headlamp Washer																		
32-12	Horn																		
33-01	Entry Illumination	●																	
33-02	Courtesy Lamps						●												
33-03	Instrument Illumination						●												
33-04	Instrument Cluster		●				●												
33-05	Instrument Cluster (MY 95 1/2 ->)																		

\* RS Cosworth

Area number																														
19	20	21	22	23	24	25	26	27	28	29	FB 37	FB 38	FB 39	FB 40	FB 41	FB 42	FB 43	FB 44	FB 53	FB 54	FB 55	FA	FB	FC	FD	FE	FF			
3A	15A	16A	30A	30A	10A	3A	15A	15A	15A	20A	15A	30A	30A	10A	20A	30A	30A	30A	25A	1A	15A	80A	60A	60A	60A	40A	50A	50A		
•								•							•	•	•	•												12-01
								•																						12-02
																														26-01
																														29-01
																									•					29-02
						•																		•	•					29-03
					•																			•	•					29-04
					•																			•	•					29-05
					•																			•	•					29-06
					•																			•	•					29-07
									•																•			•		29-08
								•	•																•			•		29-09
									•																					29-10
								•	•																					31-01
					•				•															•						32-01
					•				•															•						32-02
					•				•															•						32-03
									•																					32-04
									•																					32-05
									•																					32-06
									•															•	•					32-07
	•																													32-08
																														32-09
																														32-10
					•																									32-11
																														32-12
																														33-01
																														33-02
																														33-03
•																														33-04
																														33-05
19	20	21	22	23	24	25	26	27	28	29	FB 37	FB 38	FB 39	FB 40	FB 41	FB 42	FB 43	FB 44	FB 53	FB 54	FB 55	FA	FB	FC	FD	FE	FF			
3A	15A	15A	30A	30A	10A	3A	15A	15A	15A	20A	15A	30A	30A	10A	20A	30A	30A	30A	25A	1A	15A	80A	60A	60A	60A	40A	50A	50A		

•with air conditioning

		Equip number																	
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
		25A	3A* 30A	20A* 10A	15A	20A	10A	10A	10A	3A* 30A	10A	15A	10A	20A	25A	30A	3A	7.5A	15A
<b>33-06</b>	Auxiliary Warning						●												
<b>33-07</b>	Vehicle Speed Sensor																		
<b>33-08</b>	Cigar Lighter/Clock																		
<b>33-09</b>	Anti-theft Alarm																		
<b>33-10</b>	Passive Anti-theft System (PATS)																		
<b>33-11</b>	De-icing	●																●	
<b>34-01</b>	Heating/Ventilation						●								●				
<b>34-02</b>	Air Conditioning														●				
<b>34-03</b>	Air Conditioning, RS Cosworth														●				
<b>38-01</b>	Radio/Cassette						●												
<b>38-02</b>	Premium Sound CD/AMP						●												
<b>38-03</b>	Power Antenna																		
<b>40-01</b>	Heated Seats						●												
<b>40-02</b>	Power Seats																		
<b>40-03</b>	Airbags																	●	
<b>41-01</b>	Central Door Locking																		
<b>41-02</b>	Power Roof, Cabriolet																		
<b>41-03</b>	Power Sunroof																		
<b>42-01</b>	Power Windows																		
<b>42-02</b>	Power Windows, Cabriolet																		
<b>42-03</b>	Power Windows, Cabriolet (MY 95 ->)																		
<b>43-01</b>	Power Mirrors	●																	

\* RS Cosworth

		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
		25A	3A* 30A	20A* 10A	15A	20A	10A	10A	10A	3A* 30A	10A	15A	10A	20A	25A	30A	3A	7.5A	15A

Even numbers

19	20	21	22	23	24	25	26	27	28	29	FB 37	FB 38	FB 39	FB 40	FB 41	FB 42	FB 43	FB 44	FB 53	FB 54	FB 55	FA	FB	FC	FD	FE	FF		
3A	15A	15A	30A	30A	10A	3A	15A	15A	15A	20A	15A	30A	30A	10A	20A	30A	30A	30A	25A	1A	15A	80A	60A	60A	60A 60A 40A	60A	60A		
								●																				33-06	
																													33-07
		●						●																					33-08
		●								●																			33-09
								●																	●		●		33-10
																													33-11
																										●			34-01
																										●	●		34-02
							●																			●			34-03
		●																				●							38-01
		●																				●							38-02
															●														38-03
							●																						40-01
								●		●																			40-02
								●																					40-03
		●								●																			41-01
											●																		41-02
												●																	41-03
			●																										42-01
			●																										42-02
			●										●	●															42-03
																													43-01
19	20	21	22	23	24	25	26	27	28	29	FB 37	FB 38	FB 39	FB 40	FB 41	FB 42	FB 43	FB 44	FB 53	FB 54	FB 55	FA	FB	FC	FD	FE	FF		
3A	15A	15A	30A	30A	10A	3A	15A	15A	15A	20A	15A	30A	30A	10A	20A	30A	30A	30A	25A	1A	15A	80A	60A	60A	60A 60A 40A	60A	60A		
																											● with air conditioning		



		Fuse number																	
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
		10A		10A		15A	15A	3A	10A	30A	30A	10A	7.5A	20A	10A	10A	20A	10A	30A
<b>12-01</b>	Anti-lock Braking System (ABS)										●	●							
<b>12-02</b>	Anti-lock Braking System (ABS), RS Cosworth																		
<b>26-01</b>	Starting System																●		
<b>29-01</b>	Engine Control Manual Transmission 1,3/1,4/1,6 l, Carburettor																		
<b>29-02</b>	Engine Control 1,6 l Automatic Transmission, Carburettor													●					
<b>29-03</b>	Engine Control 1,3 l/1,4 l CFI Endura E							●						●	●		●		
<b>29-04</b>	Engine Control 1,4 l EFI Fuel Injection							●						●	●		●		
<b>29-05</b>	Engine Control 1,6 l/1,8 l ZETEC							●						●	●		●		
<b>29-06</b>	Engine Control 2,0 l EFI							●						●					
<b>29-07</b>	Engine Control 2,0 l EFI Turbo, RS Cosworth							●											
<b>29-08</b>	Engine Control 1,8 l Diesel																●		
<b>29-09</b>	Engine Control 1,8 l Turbo Diesel											●					●		
<b>29-10</b>	Diagnostic System							●											
<b>31-01</b>	Charging System											●							
<b>32-01</b>	Headlamps LHD				●	●					●					●		●	
<b>32-02</b>	Headlamps RHD				●	●					●					●		●	
<b>32-03</b>	Daytime Running Lamp				●	●					●					●		●	
<b>32-04</b>	Headlamp Levelling		●													●		●	
<b>32-05</b>	Stop Lamps																		
<b>32-06</b>	Reversing Lamps																		
<b>32-07</b>	Fog Lamps	●		●					●			●							
<b>32-08</b>	Signal and Hazard Indicators																		
<b>32-09</b>	Parking Lamps/Licence Plate Lamps			●					●										
<b>32-10</b>	Wiper/Washer Control																		
<b>32-11</b>	Headlamp Washer										●	●							
<b>32-12</b>	Horn																		
<b>33-01</b>	Entry Illumination																		
<b>33-02</b>	Courtesy Lamps			●															
<b>33-03</b>	Instrument Illumination			●					●										
<b>33-04</b>	Instrument Cluster											●							
<b>33-05</b>	Instrument Cluster (MY 95 1/2 ->)											●							

Even number																	FB	FB	FB	FA	FB	FC	FD	FE	FF			
19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	37	38	40	FA	FB	FC	FD	FE	FF			
25A	3A	30A	16A	20A	30A	10A	25A	16A	16A	20A	15A	16A	20A	16A	20A		16A	40A	10A	60A	60A	60A	60A	40A	60A	60A		
		●				●									●												12-01	
																												12-02
																												26-01
																												29-01
																							●					29-02
			●											●								●		●				29-03
			●											●								●		●				29-04
			●											●										●				29-05
			●											●										●				29-06
																												29-07
			●										●											●		●		29-08
			●										●									●		●		●		29-09
														●														29-10
																												31-01
																							●					32-01
																							●					32-02
																							●					32-03
																												32-04
																●												32-05
							●																					32-06
							●		●				●								●		●					32-07
							●		●																			32-08
																												32-09
					●																							32-10
																												32-11
										●																		32-12
																												33-01
																												33-02
																												33-03
																												33-04
																												33-05
19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	FB	FB	FB	FA	FB	FC	FD	FE	FF			
25A	3A	30A	16A	20A	30A	10A	25A	16A	16A	20A	15A	16A	20A	16A	20A		16A	40A	10A	60A	60A	60A	60A	40A	60A	60A		

●with air conditioning

		Ecu number																	
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
		10A		10A		15A	15A	3A	10A	30A	30A	10A	7.5A	20A	10A	10A	20A	10A	30A
<b>33-06</b>	Auxiliary Warning			●								●							
<b>33-07</b>	Vehicle Speed Sensor													●					
<b>33-08</b>	Cigar Lighter/Clock																		
<b>33-09</b>	Anti-theft Alarm																	●	
<b>33-10</b>	Passive Anti-theft System (PATS)																		
<b>33-11</b>	De-icing																		
<b>34-01</b>	Heating/Ventilation			●															
<b>34-02</b>	Air Conditioning																		
<b>34-03</b>	Air Conditioning, RS Cosworth																		
<b>36-01</b>	Radio/Cassette			●															
<b>36-02</b>	Premium Sound CD/AMP			●															
<b>36-03</b>	Power Antenna																		
<b>40-01</b>	Heated Seats																		
<b>40-02</b>	Power Seats																		
<b>40-03</b>	Airbags											●	●						
<b>41-01</b>	Central Door Locking																		
<b>41-02</b>	Power Roof, Cabriolet																		
<b>41-03</b>	Power Sunroof																		●
<b>42-01</b>	Power Windows																		●
<b>42-02</b>	Power Windows, Cabriolet																		●
<b>42-03</b>	Power Windows, Cabriolet (MY 95 1/2 ->)																		●
<b>43-01</b>	Power Mirrors																		
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
10A		10A		15A	15A	3A	10A	30A	30A	10A	7.5A	20A	10A	10A	20A	10A	30A		

Eura number																			FB	FB	FB	FA	FB	FC	FD	FE	FF	
19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	37	38	40	50A	50A	50A	50A	50A	50A			
																											33-06	
																											33-07	
																											33-08	
																											33-09	
																											33-10	
																											33-11	
																											34-01	
																											34-02	
																											34-03	
																											36-01	
																											36-02	
																											36-03	
																											40-01	
																											40-02	
																											40-03	
																											41-01	
																											41-02	
																											41-03	
																											42-01	
																											42-02	
																											42-03	
																											43-01	
19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	37	38	40	50A	50A	50A	50A	50A	50A	50A	50A	with air conditioning