


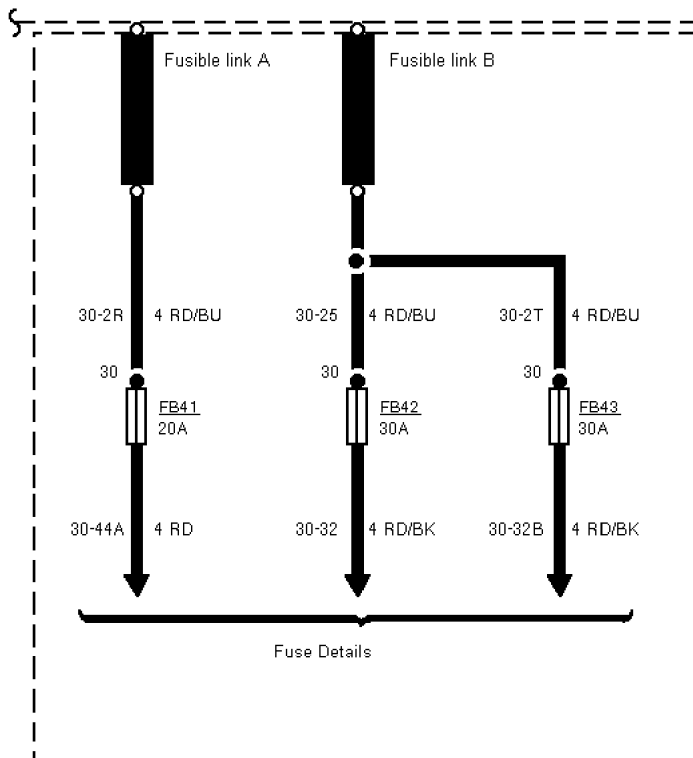


G1004





01-02-002 , Power Distribution , Before 95, RS Cosworth before 95 1/2




 RS Cosworth

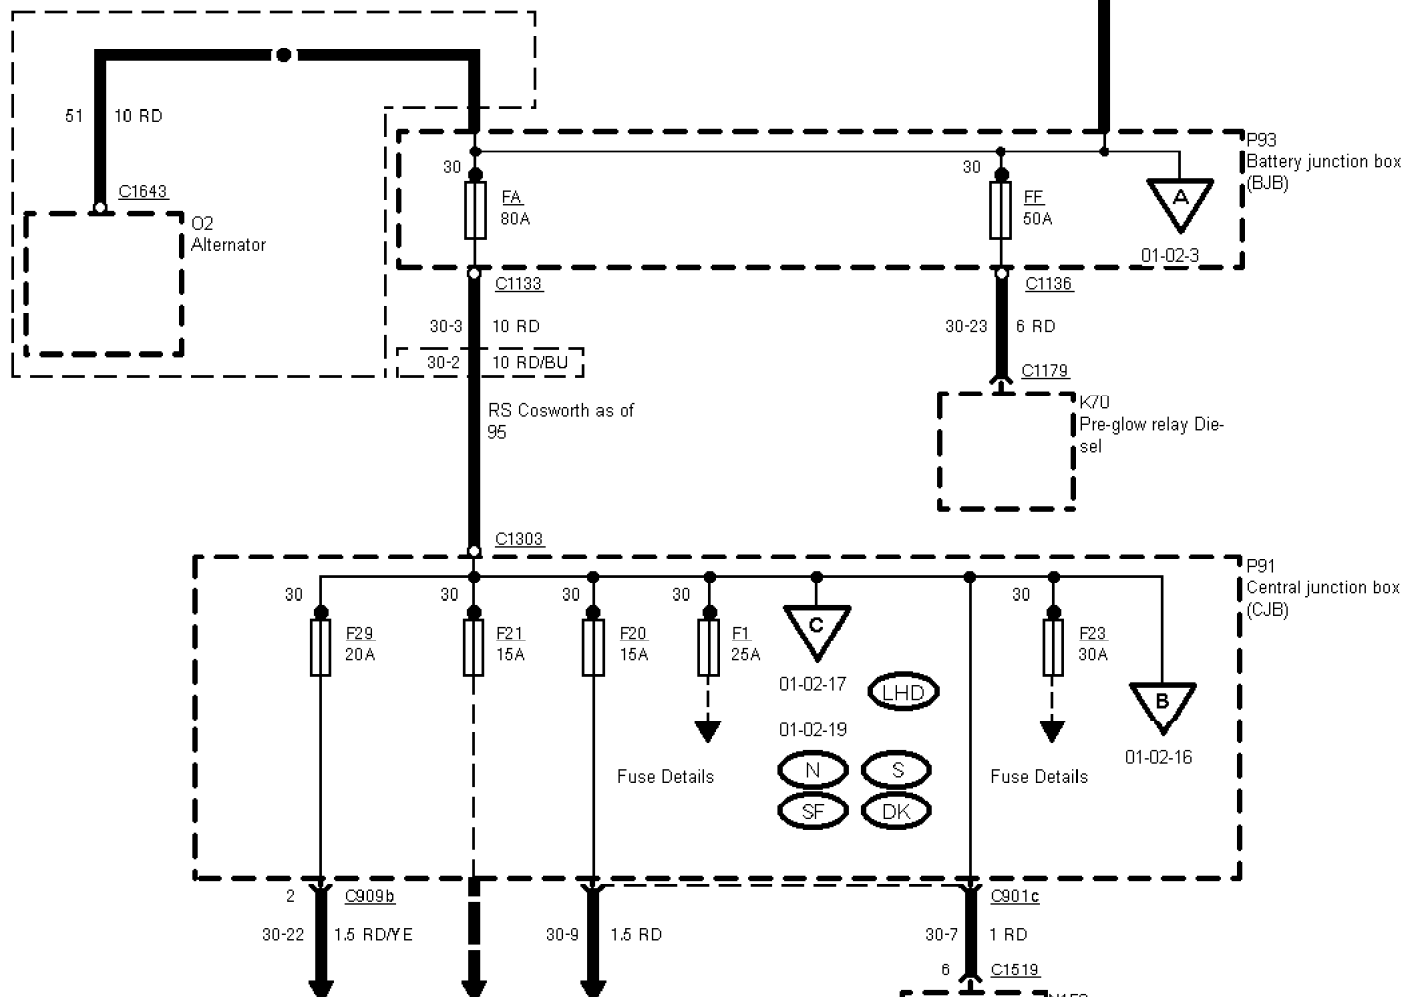


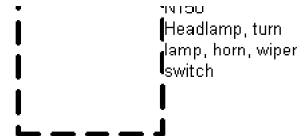


01-02-003 , Power Distribution , Before 95, RS Cosworth before 95 1/2


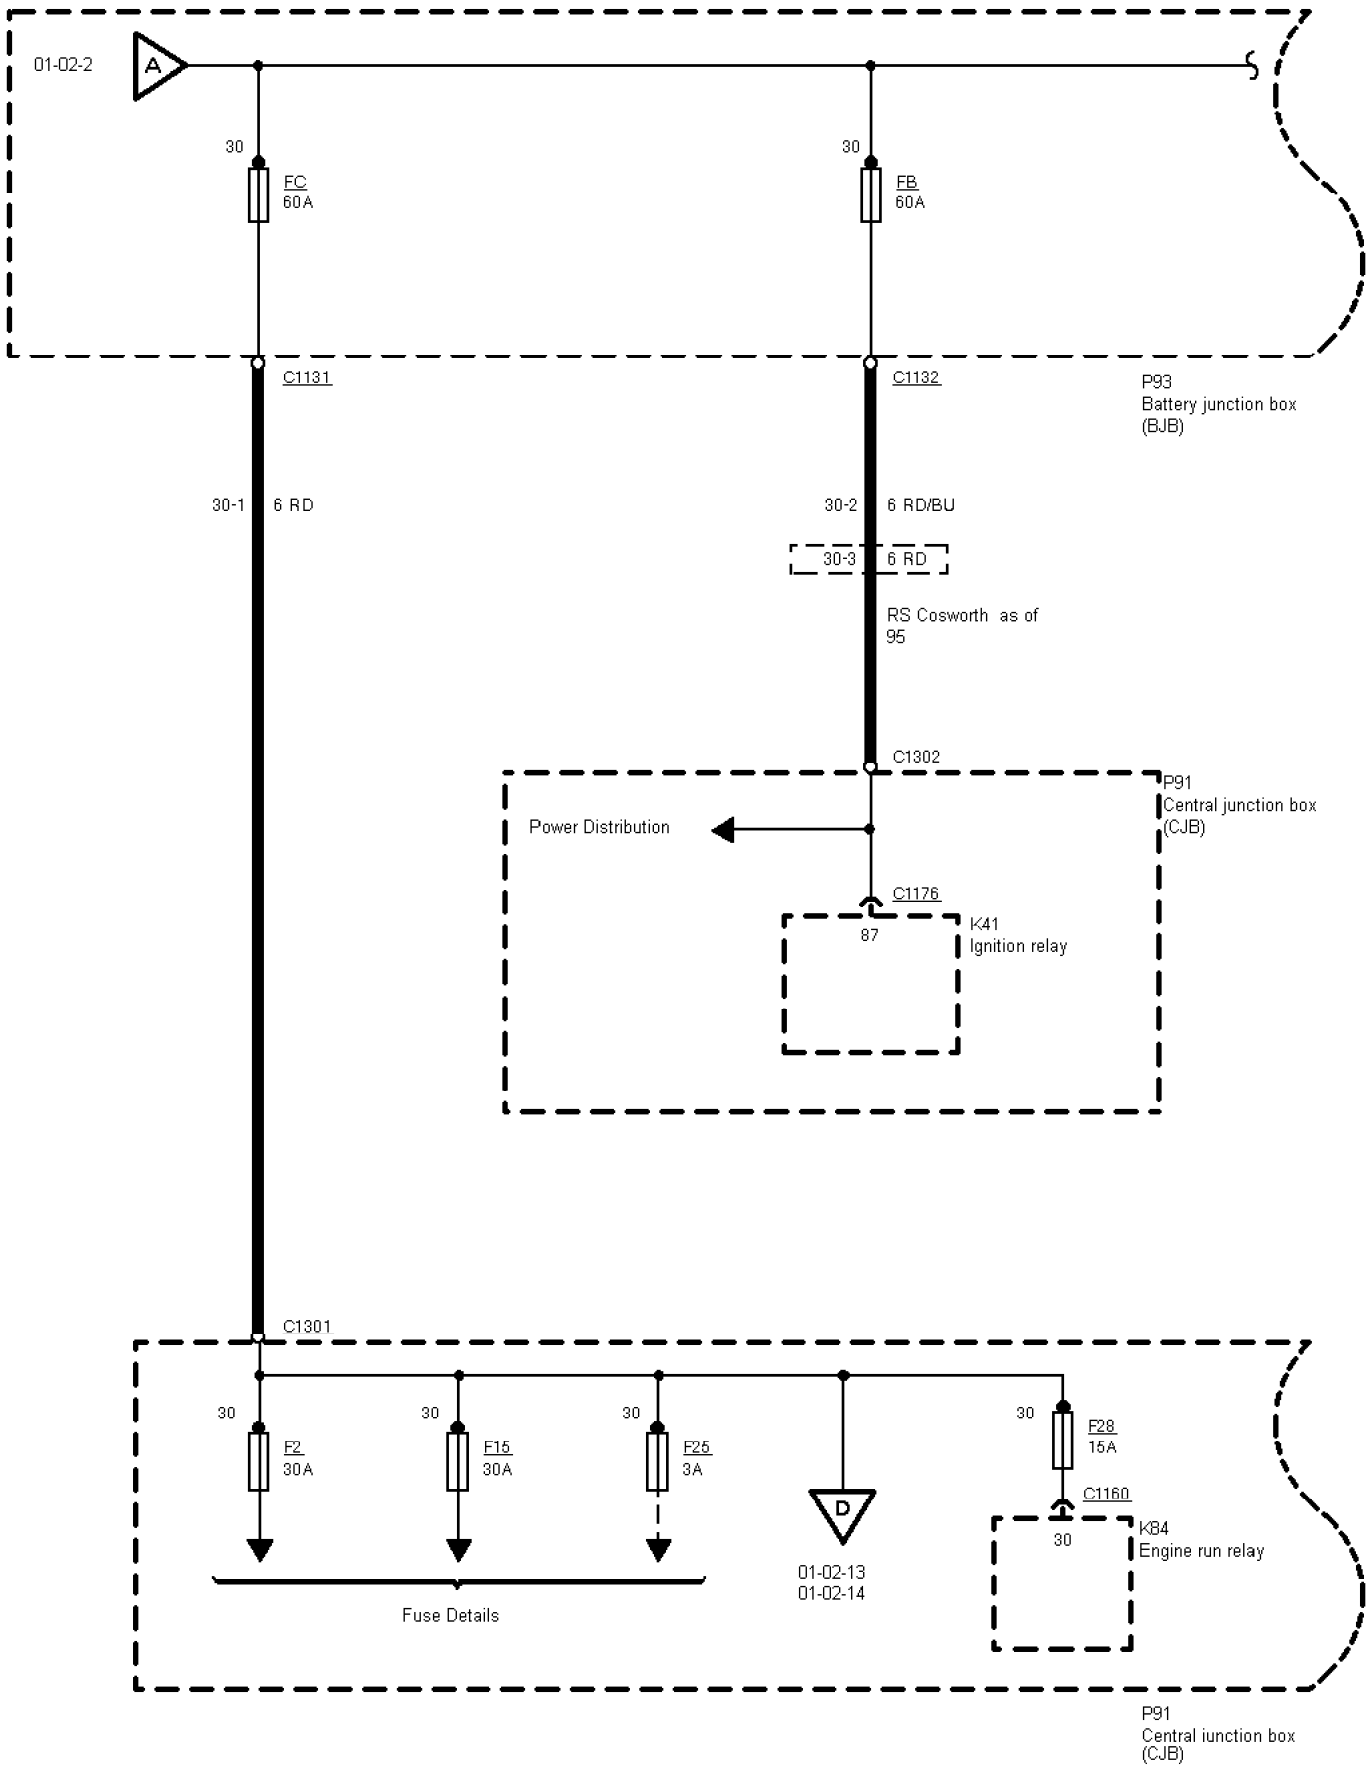


01-02-004 , Power Distribution , Before 95, RS Cosworth before 95 1/2

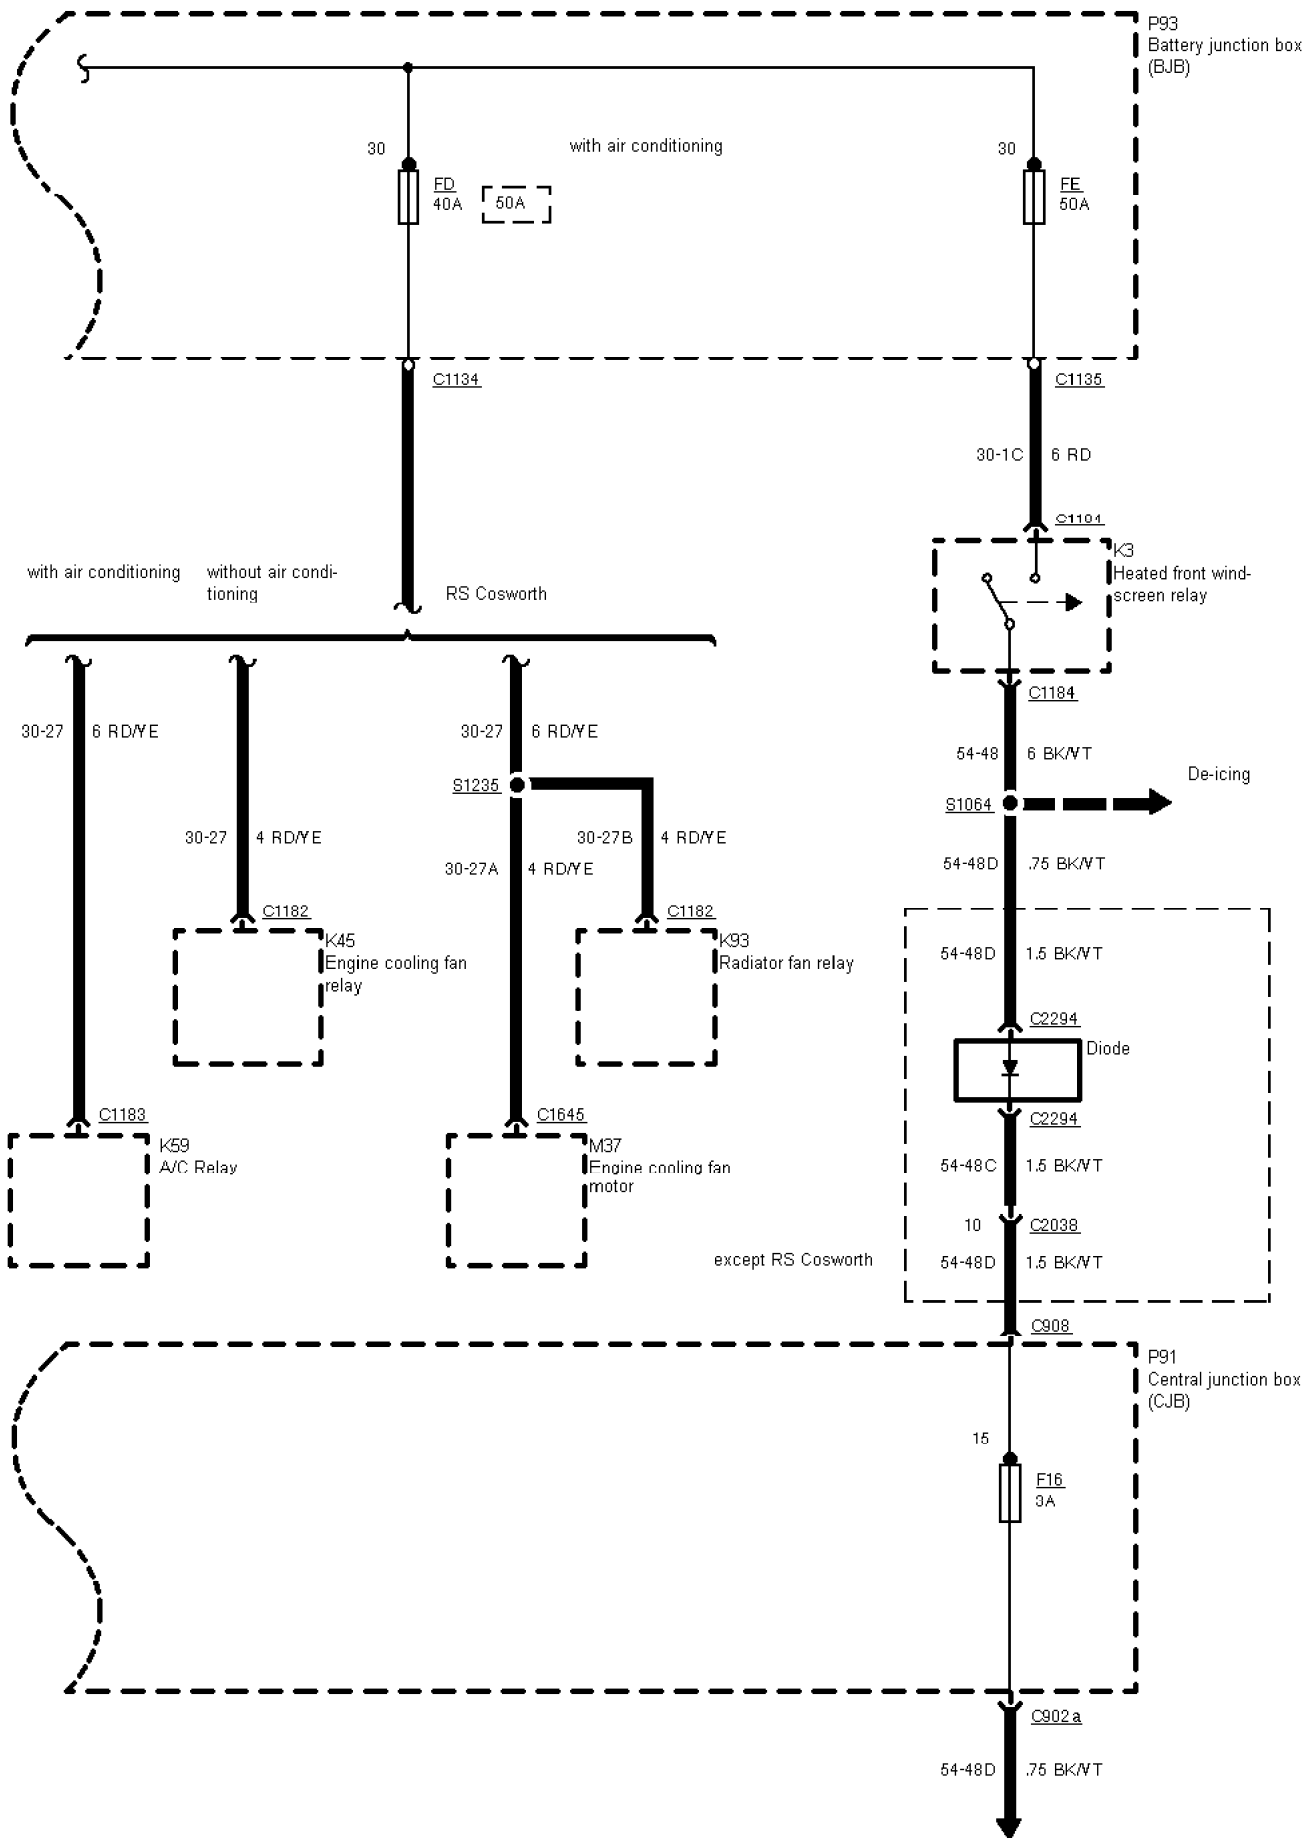


01-02-005 , Power Distribution , Before 95, RS Cosworth before 95 1/2 Ignition switch

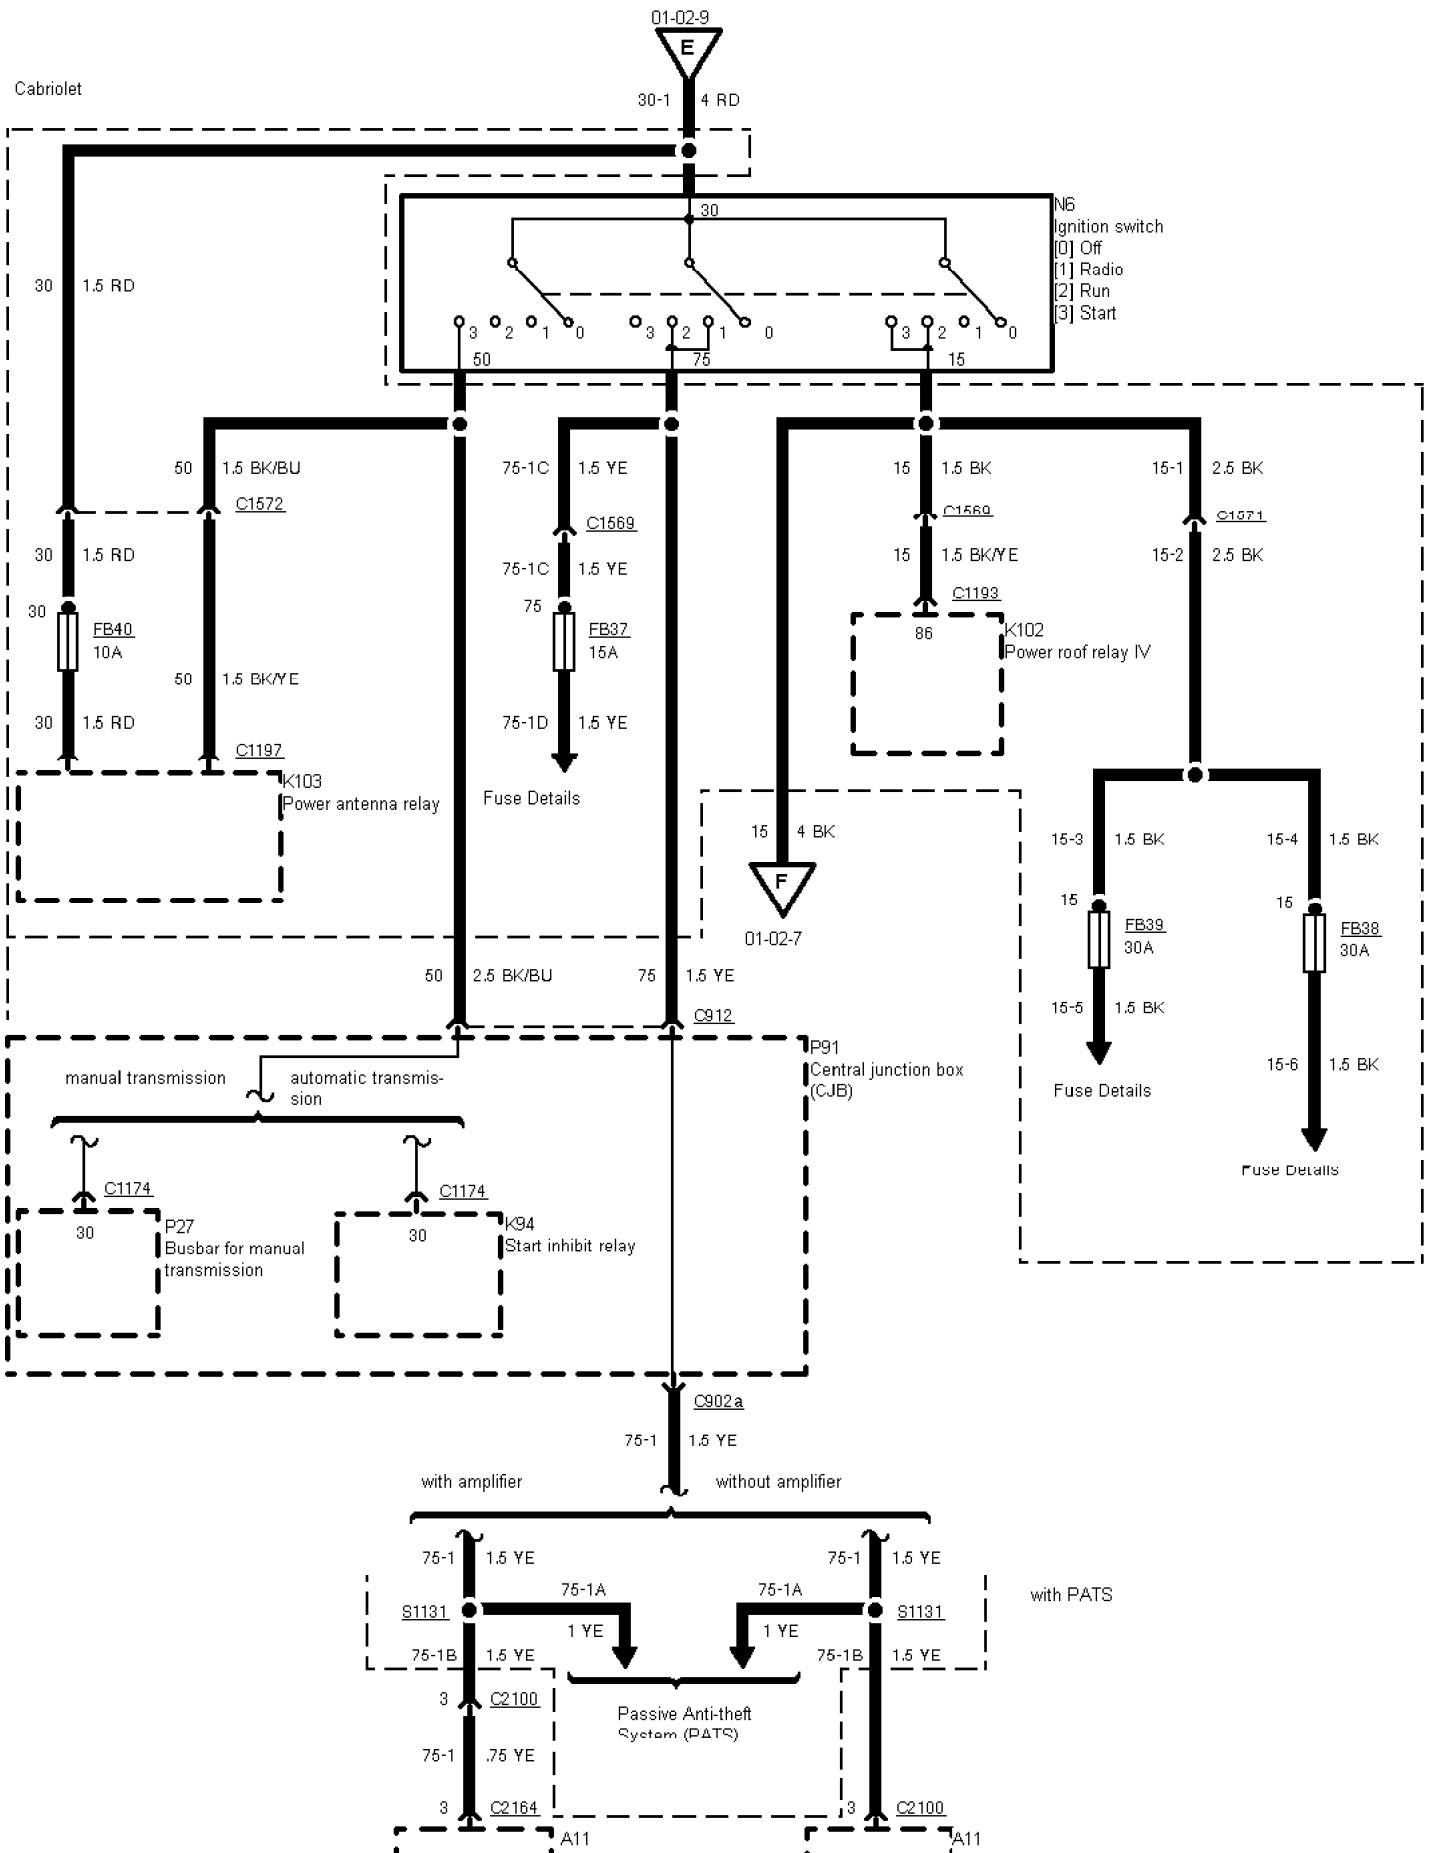


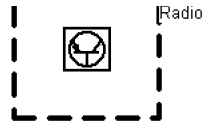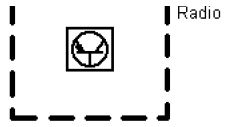


01-02-006 , Power Distribution , Before 95, RS Cosworth before 95 1/2 Ignition switch, RS Cosworth

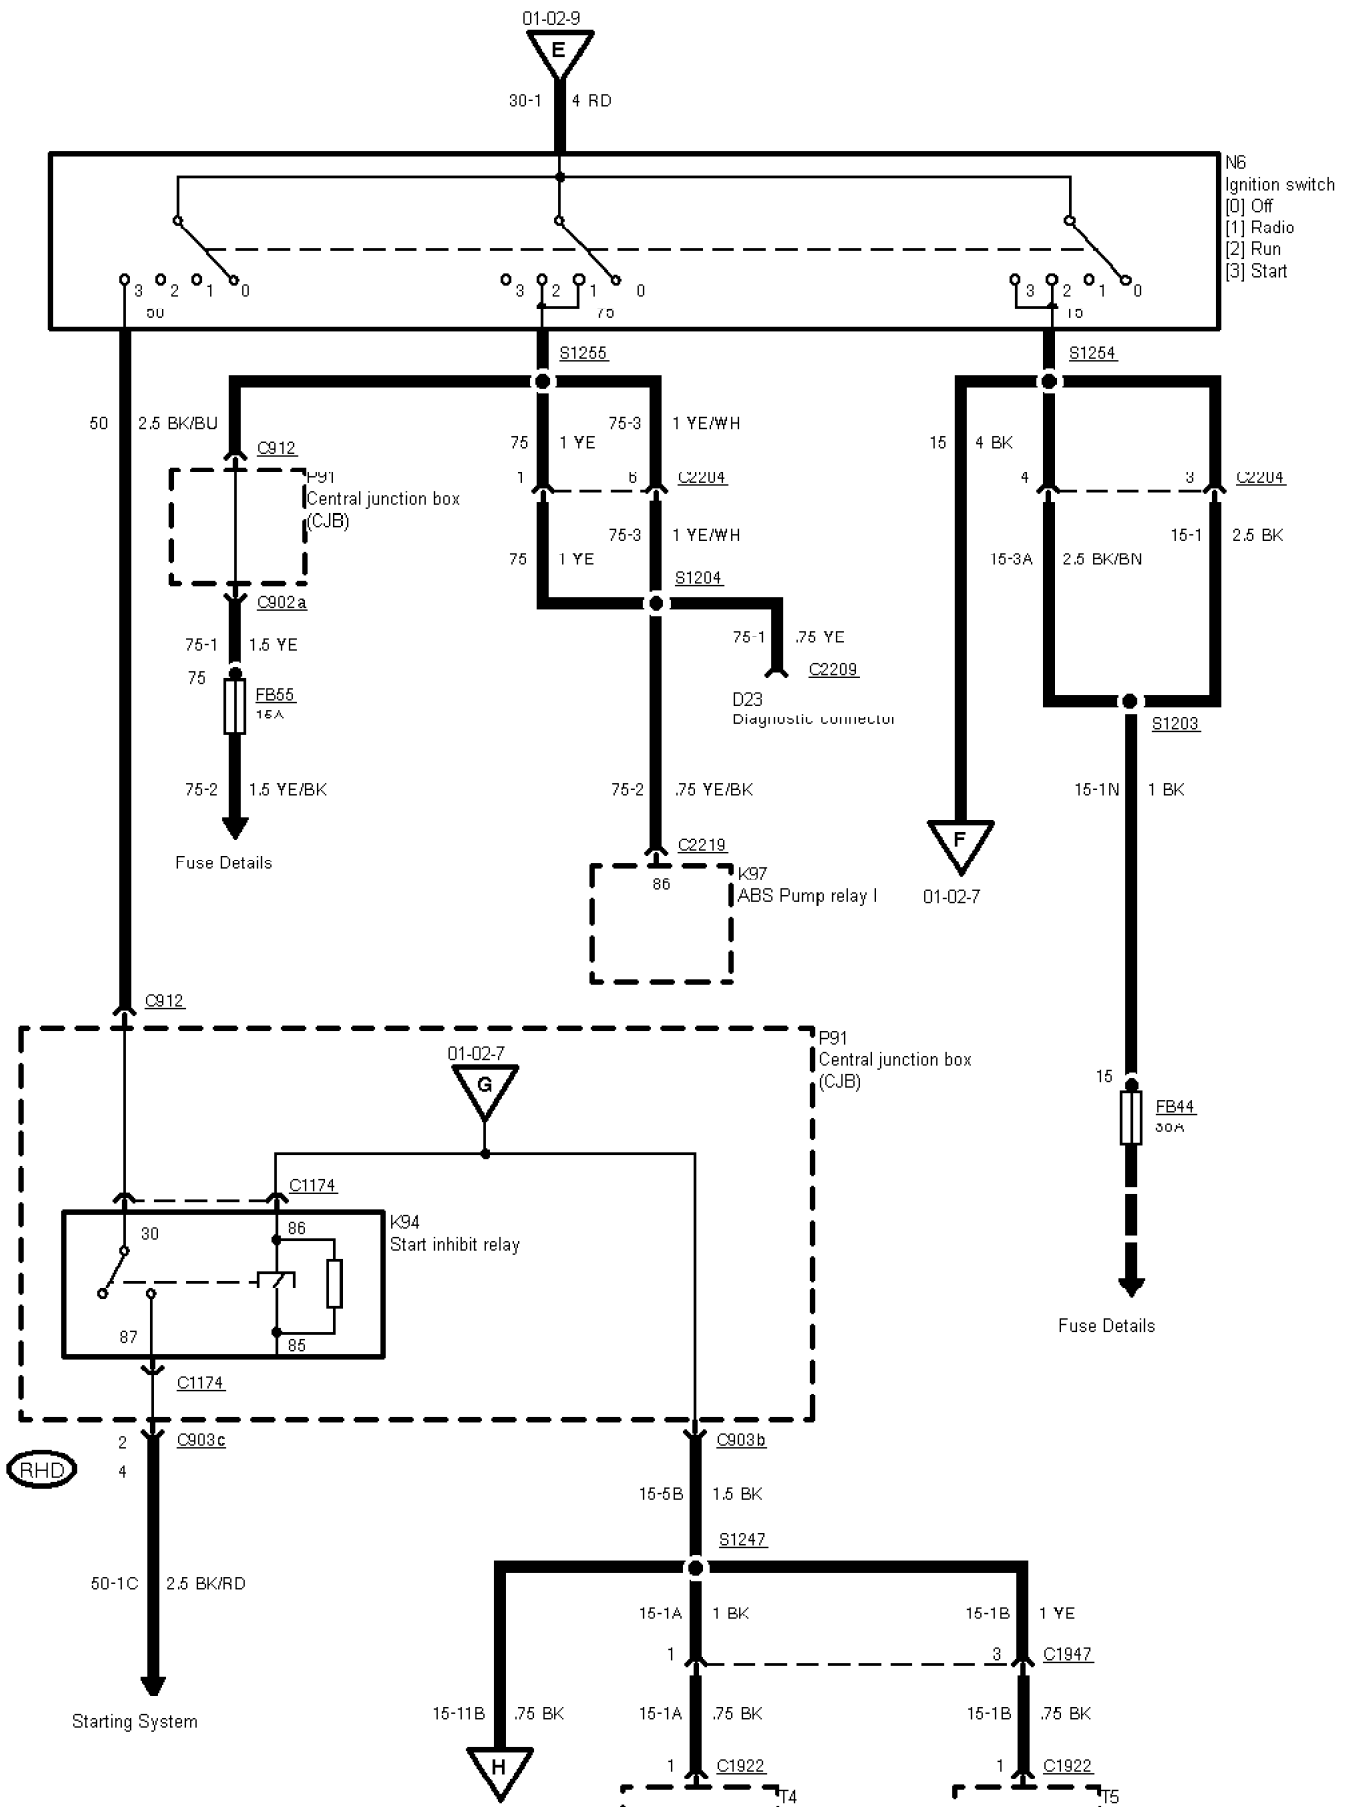


01-02-14

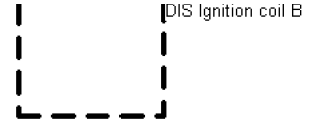


01-02-007 , Power Distribution , Before 95, RS Cosworth before 95 1/2

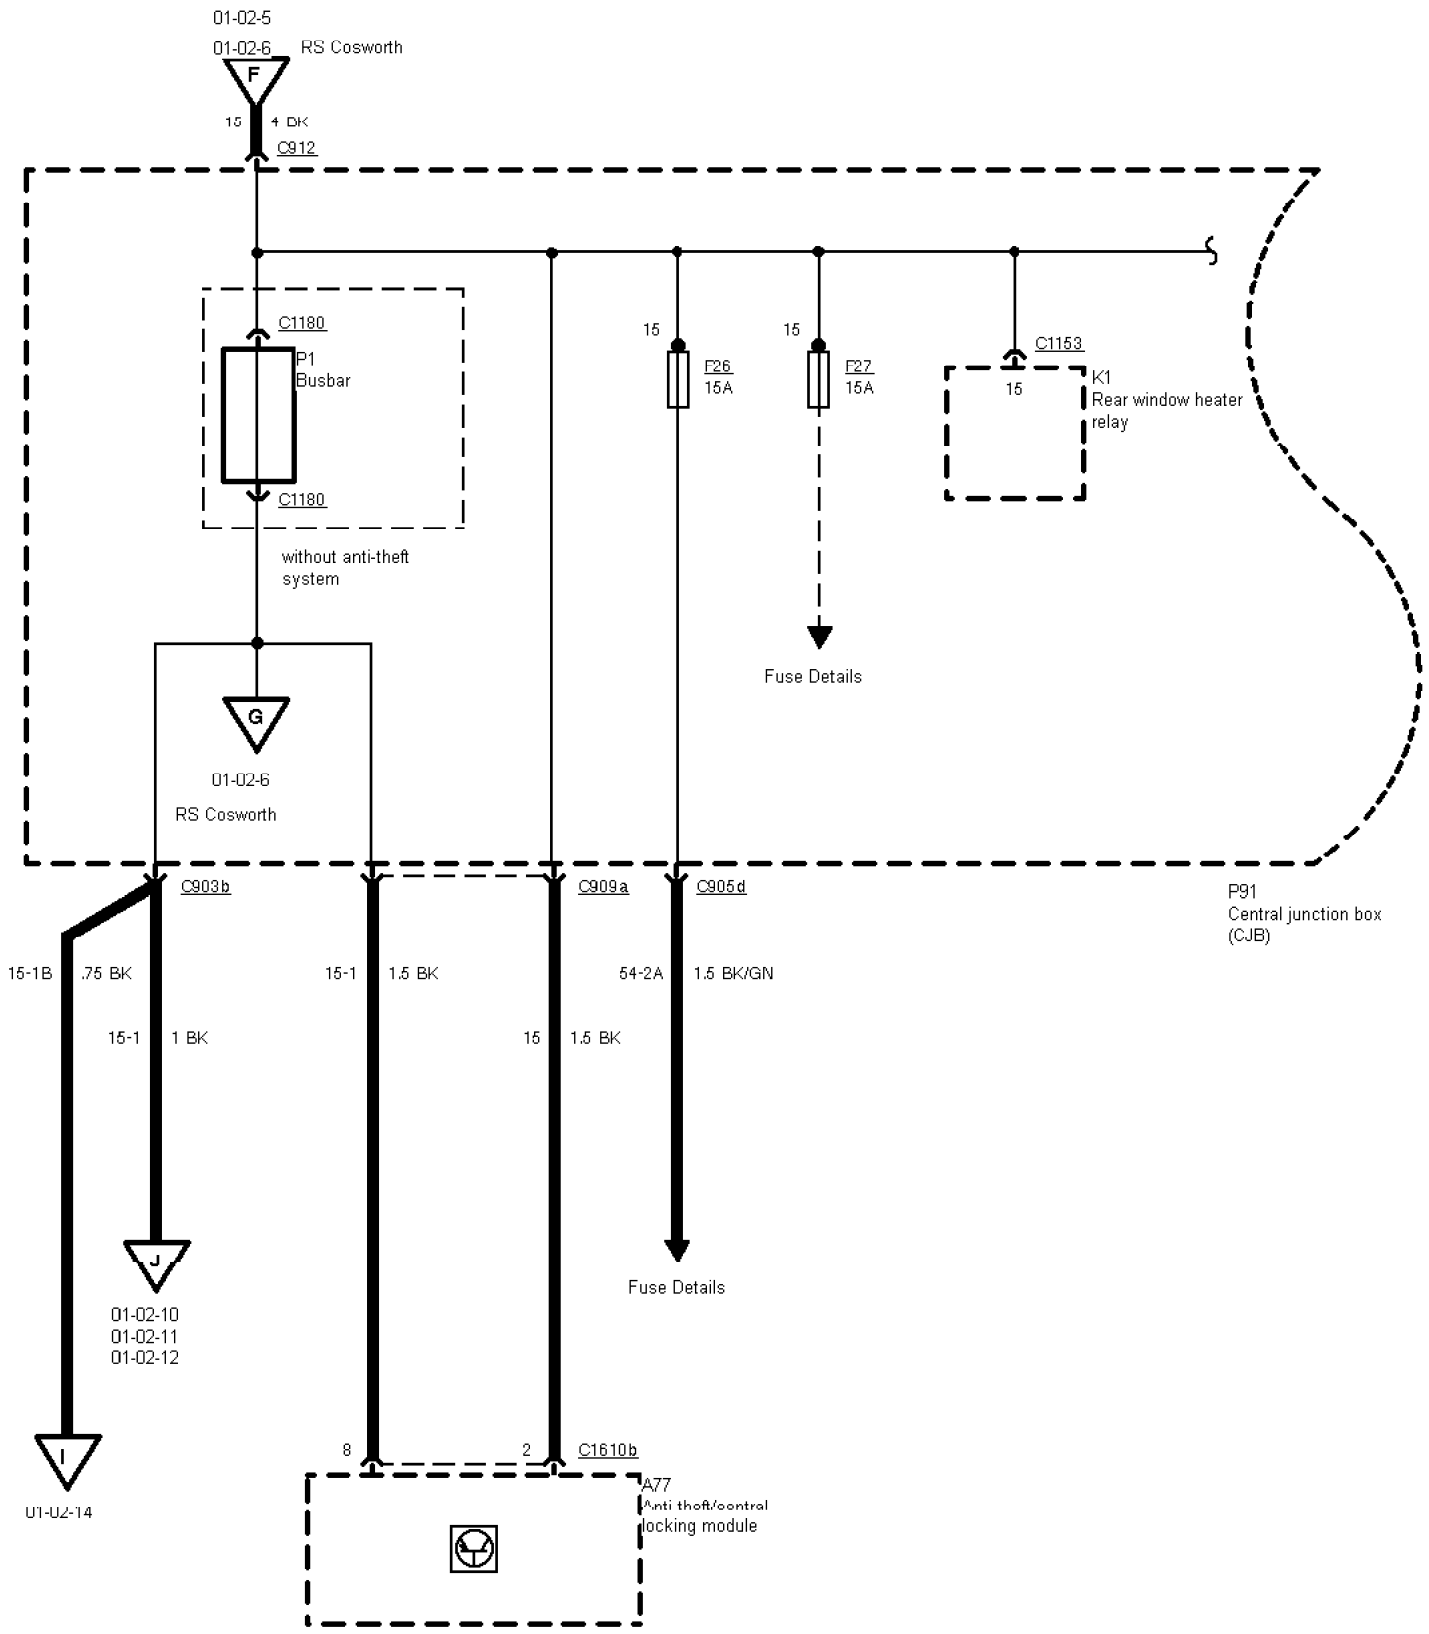

01-02-008 , Power Distribution , Before 95, RS Cosworth before 95 1/2

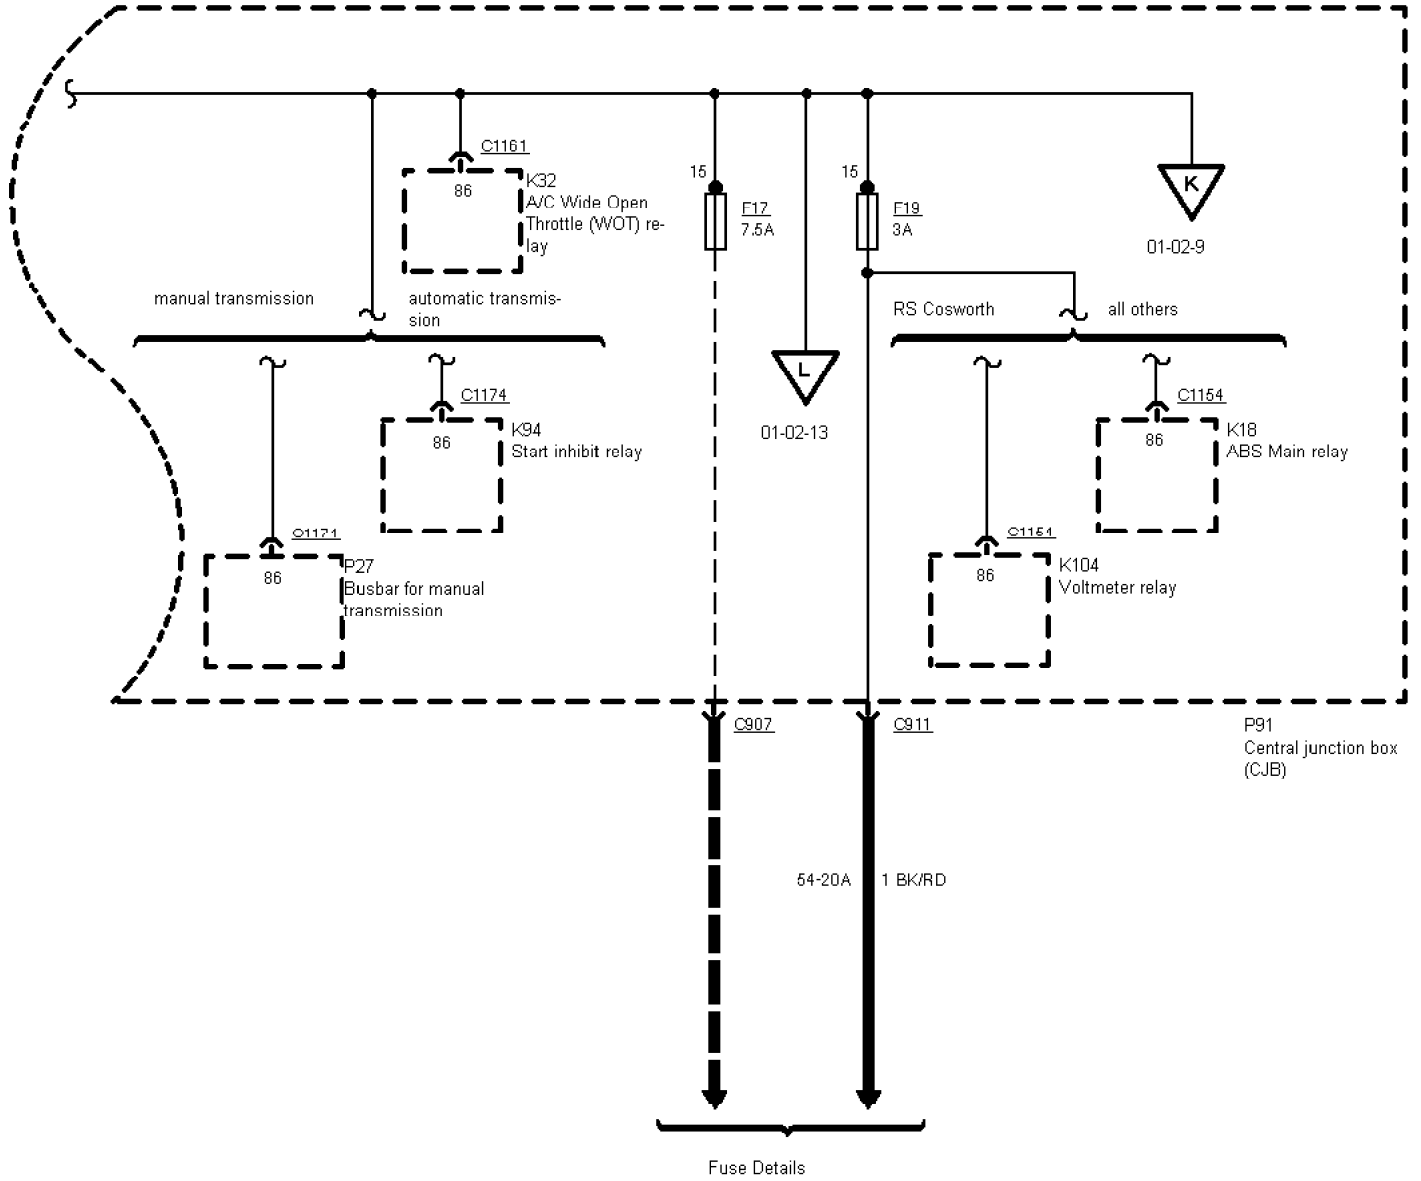

01-02-009 , Power Distribution , Before 95, RS Cosworth before 95 1/2

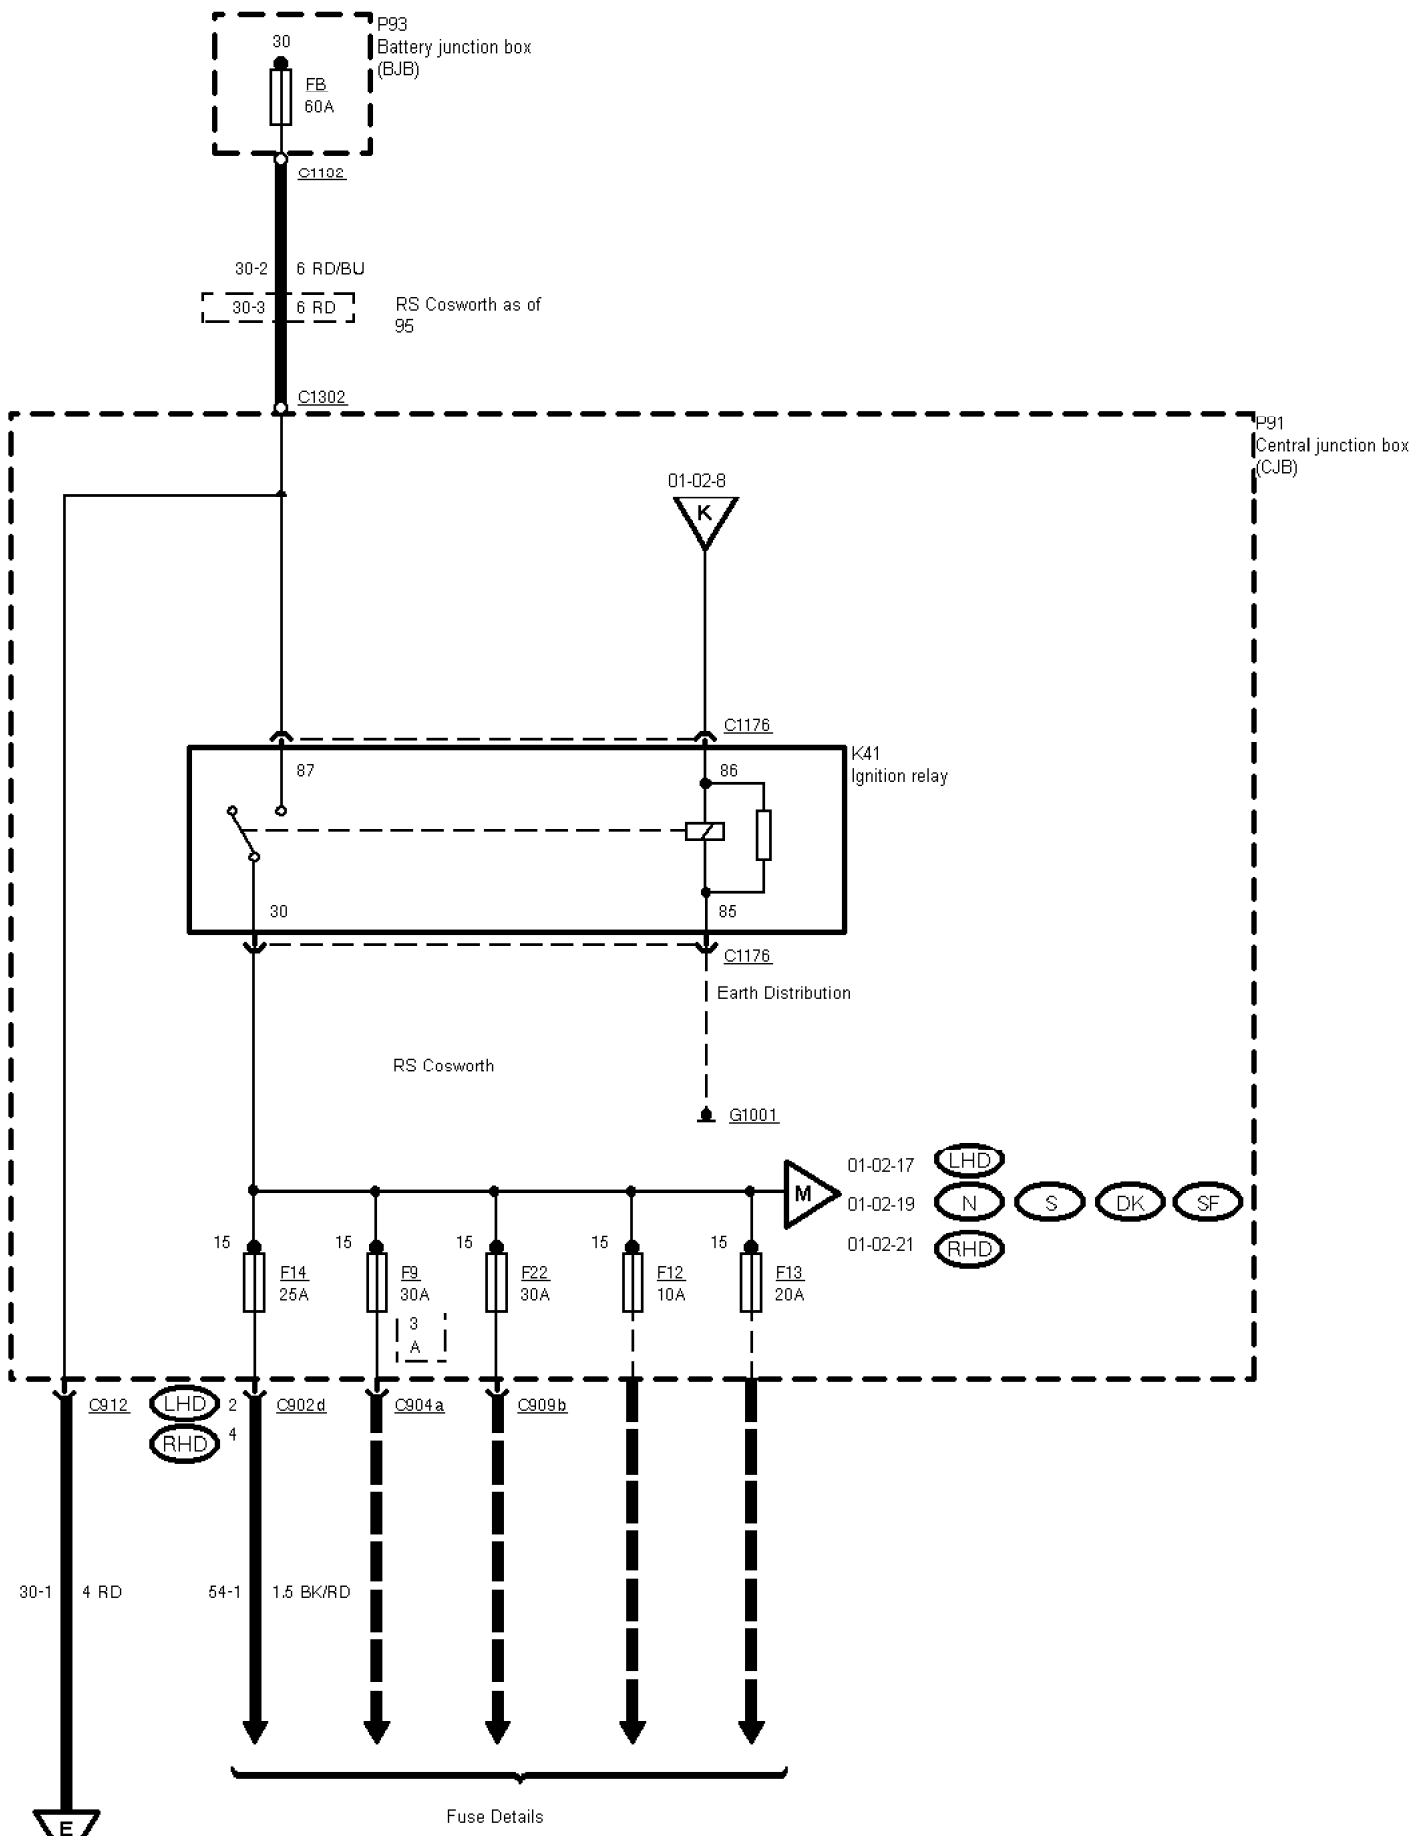





01-02-5
01-02-6 RS Cosworth

01-02-010 , Power Distribution , Before 95, RS Cosworth before 95 1/2

Engine Control Manual
 Transmission 1,3/1,4/1,6 I, Carburetor

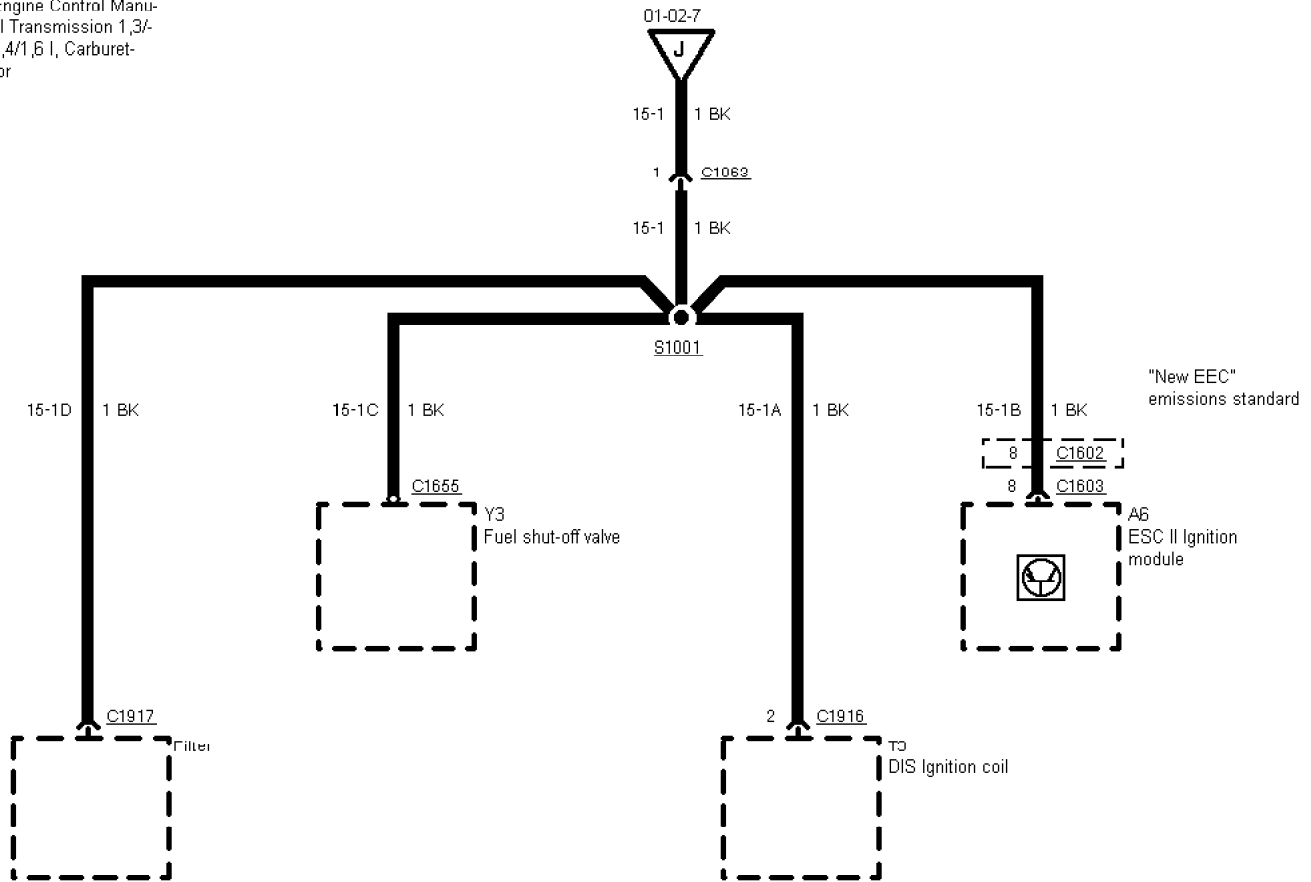


Engine Control 1,6
 I Automatic Transmission, Carburetor

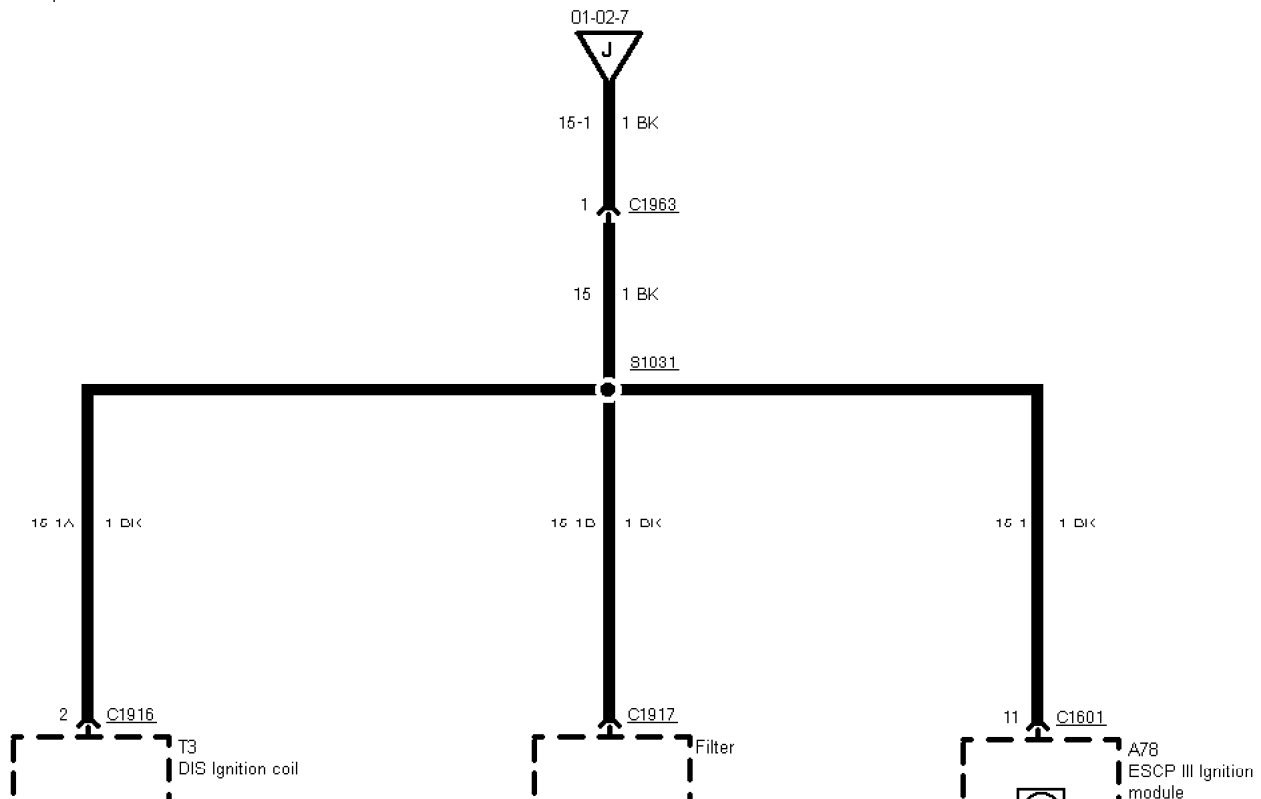




01-02-011 , Power Distribution , Before 95, RS Cosworth before 95 1/2

Engine Control 1,3
 I/1,4 I CFI Endura--
 E

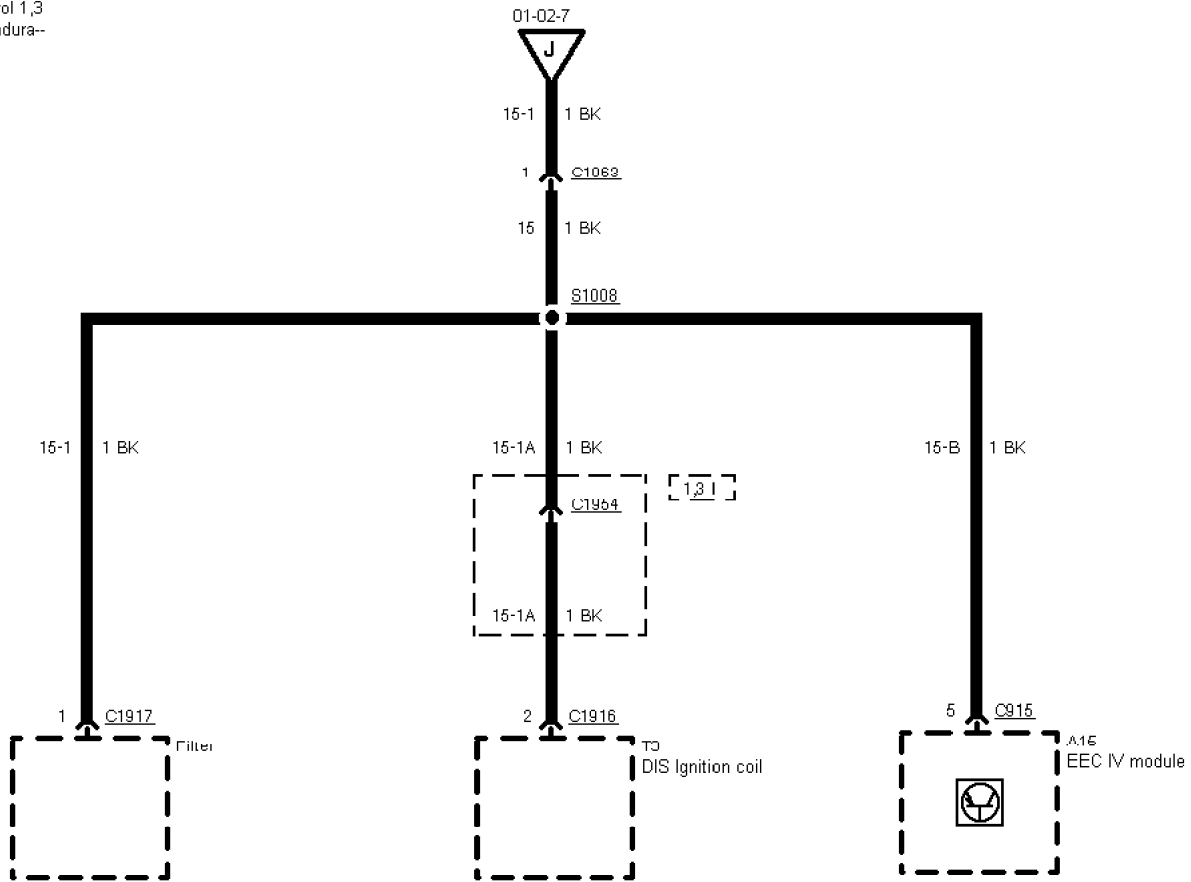

Engine Control 1,4
 I EFI Fuel Injection


Engine Control 1,6
 I/1,8 I ZETEC

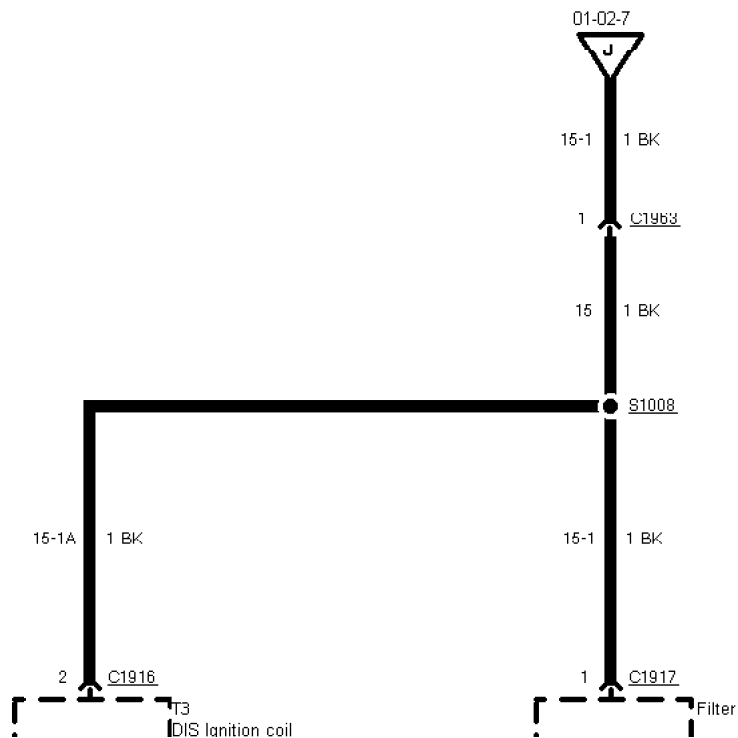




01-02-012 , Power Distribution , Before 95, RS Cosworth before 95 1/2


Engine Control 2,0
I EFI

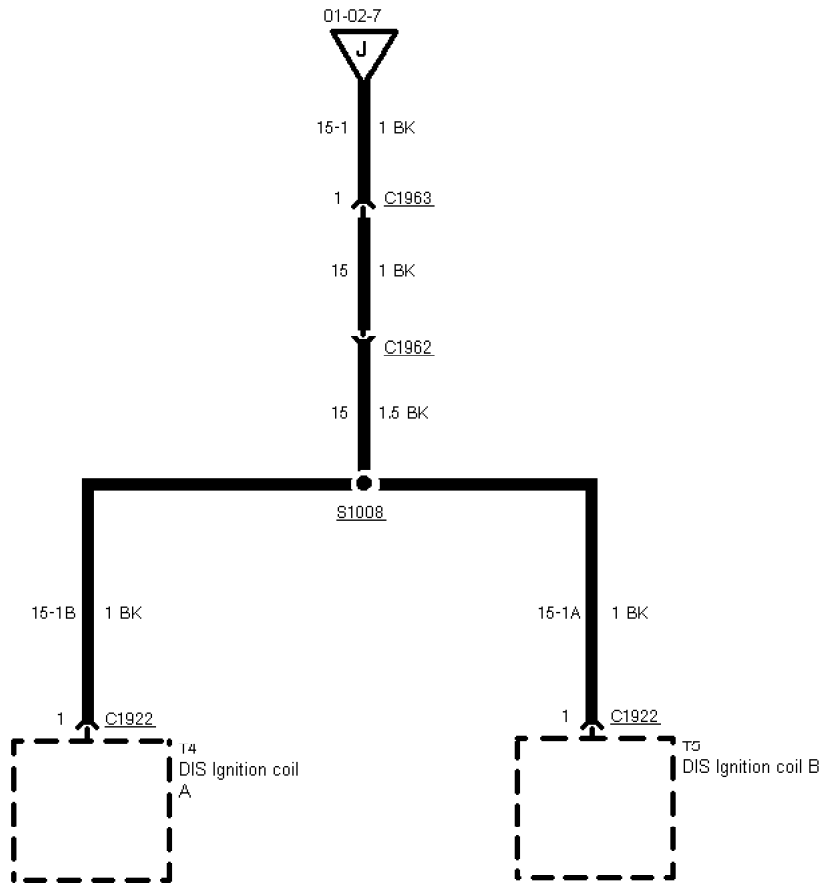


Engine Control 1,8
I Diesel

 
Engine Control 1,8
I Turbo Diesel

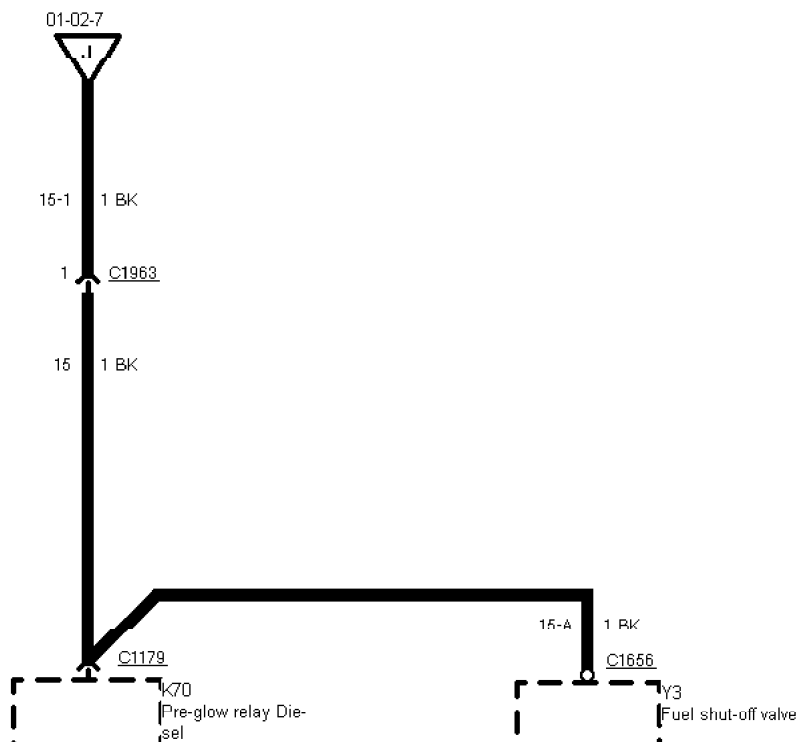




01-02-013 , Power Distribution , Before 95, RS Cosworth before 95 1/2 Diesel/Carburettor models

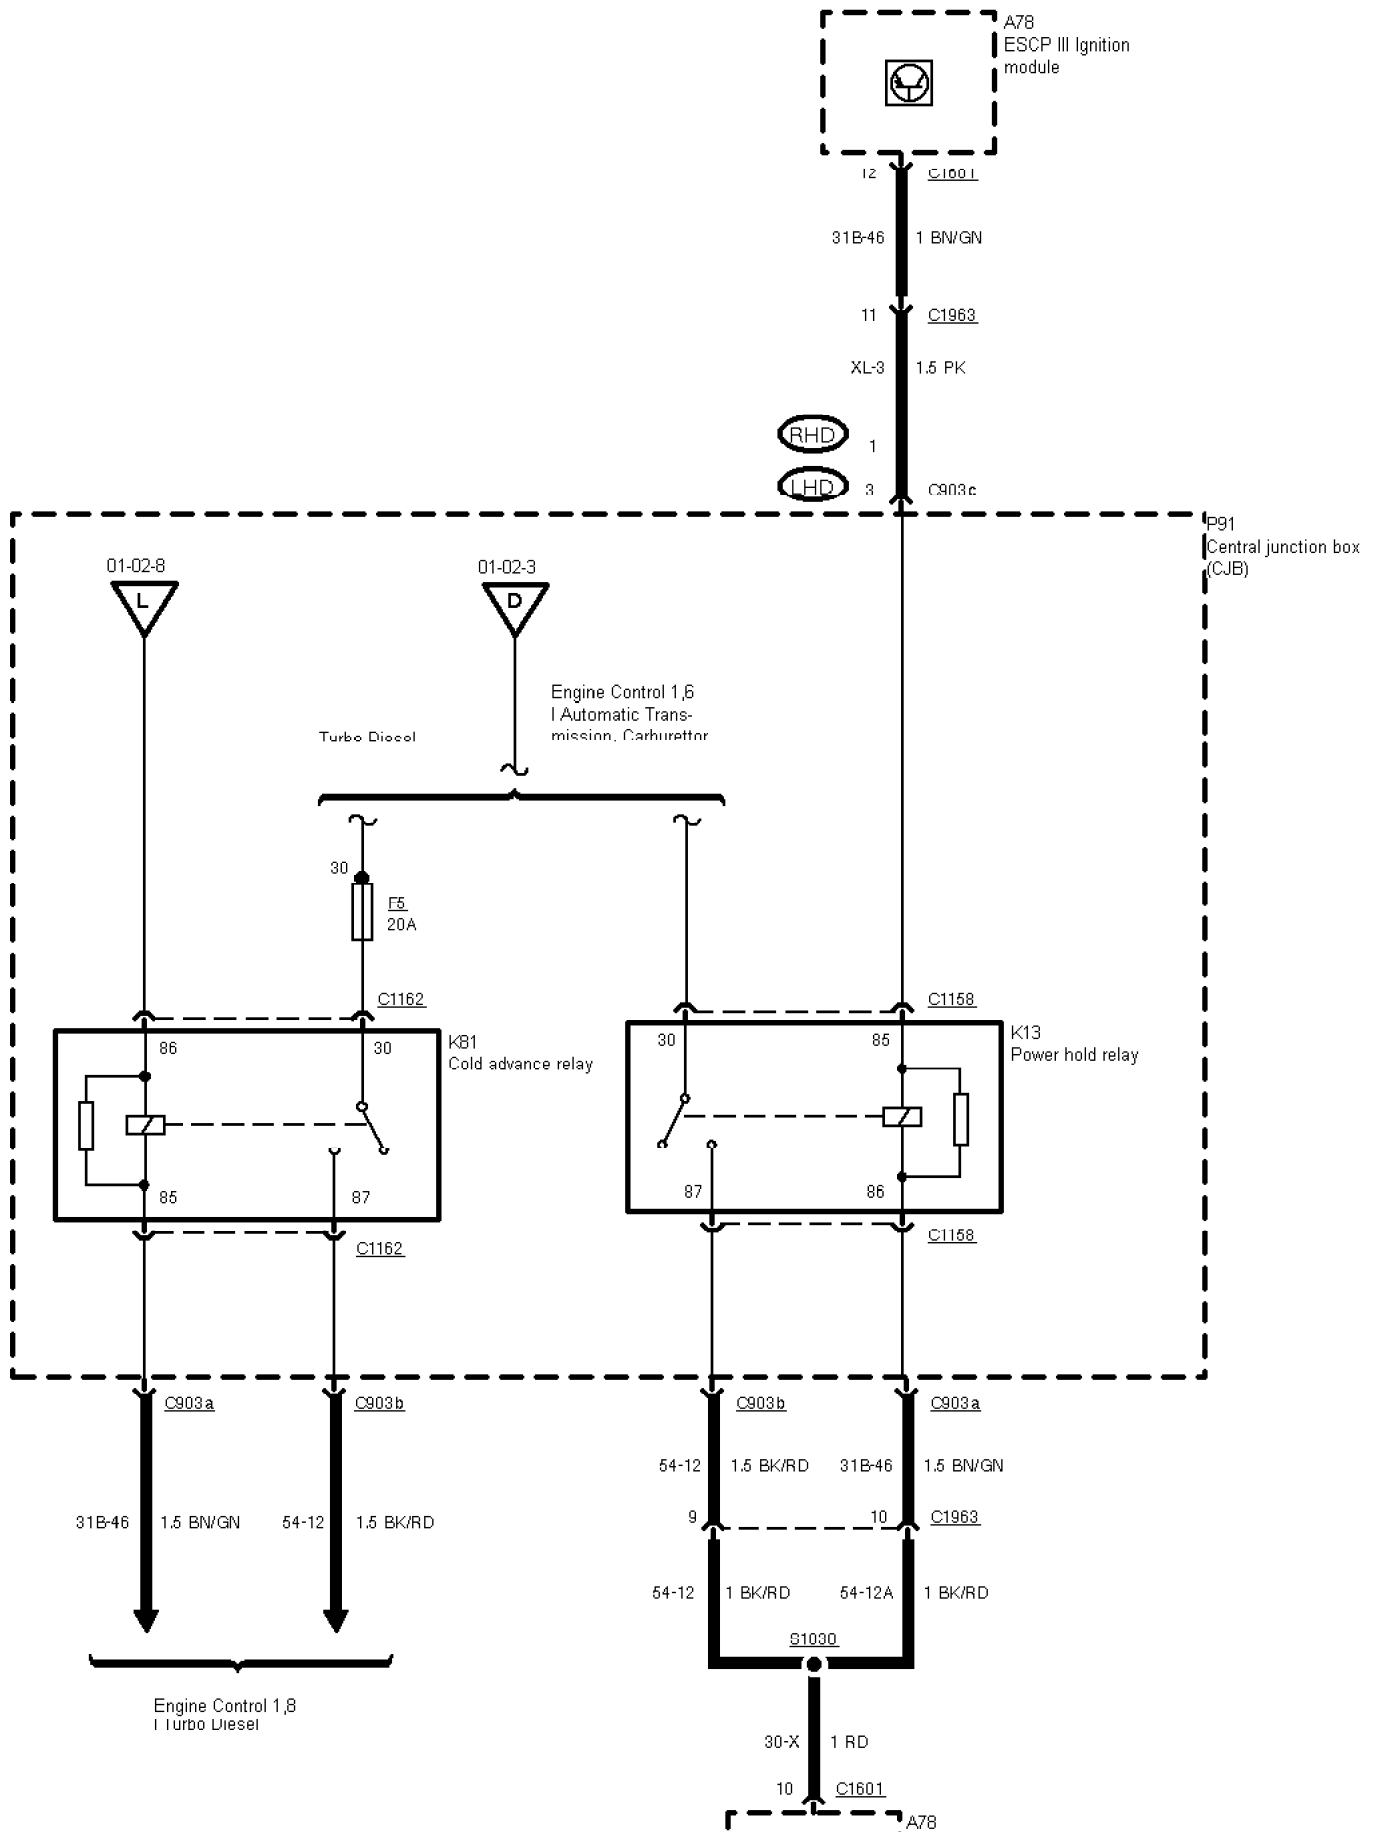

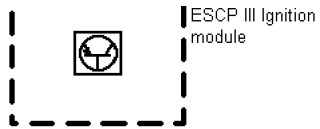

01-02-014 , Power Distribution , Before 95, RS Cosworth before 95 1/2 With fuel injection

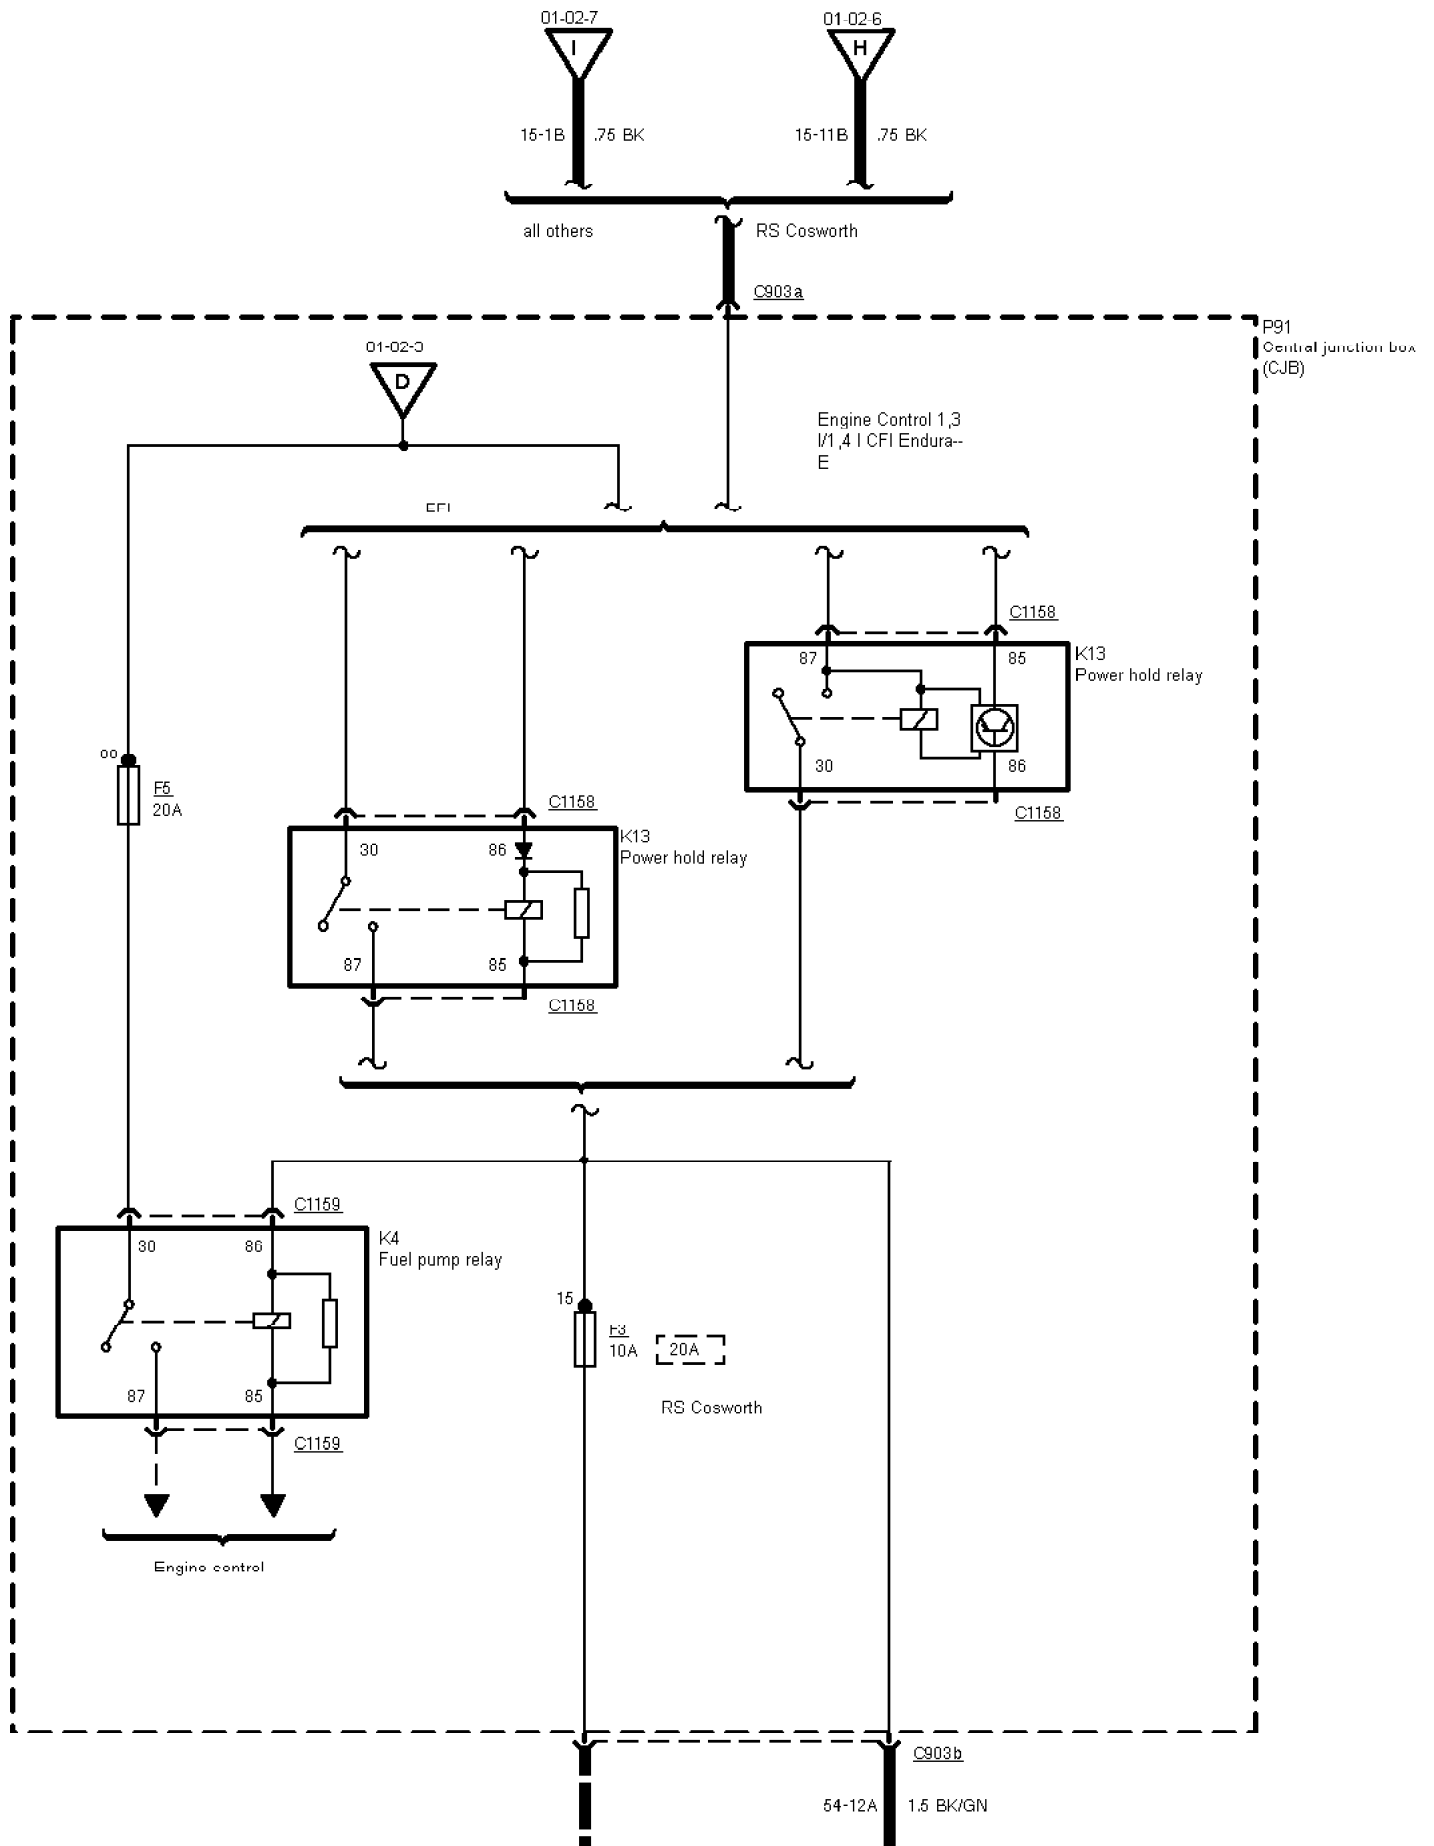






Fuse Details




Engine control


01-02-015 , Power Distribution , Before 95, RS Cosworth before 95 1/2 Light switch

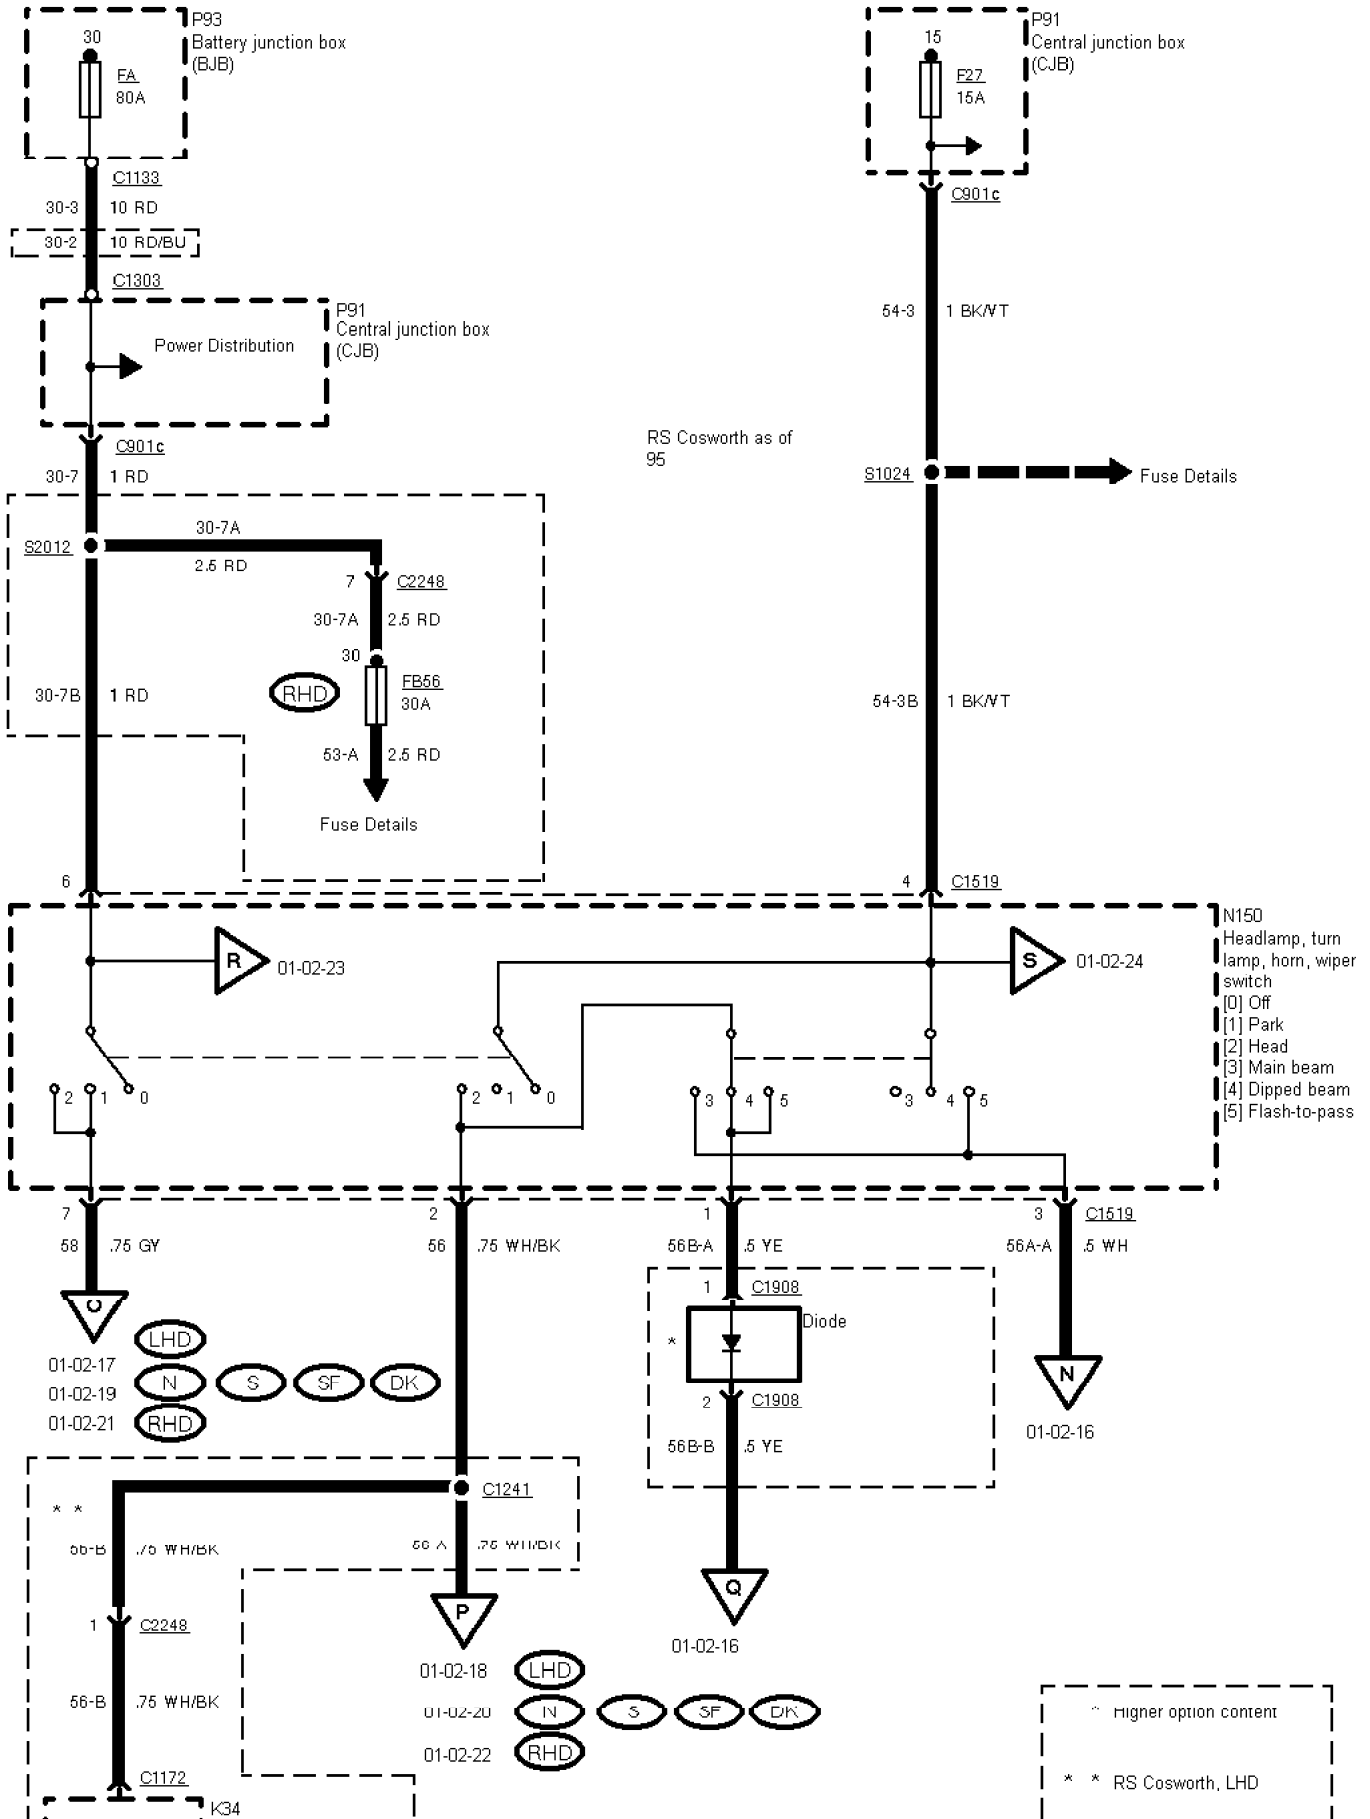

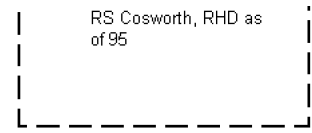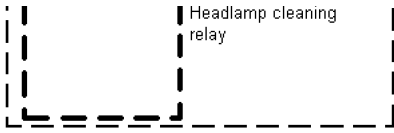

 01-02-016 , Power Distribution , Before 95, RS Cosworth before 95 1/2

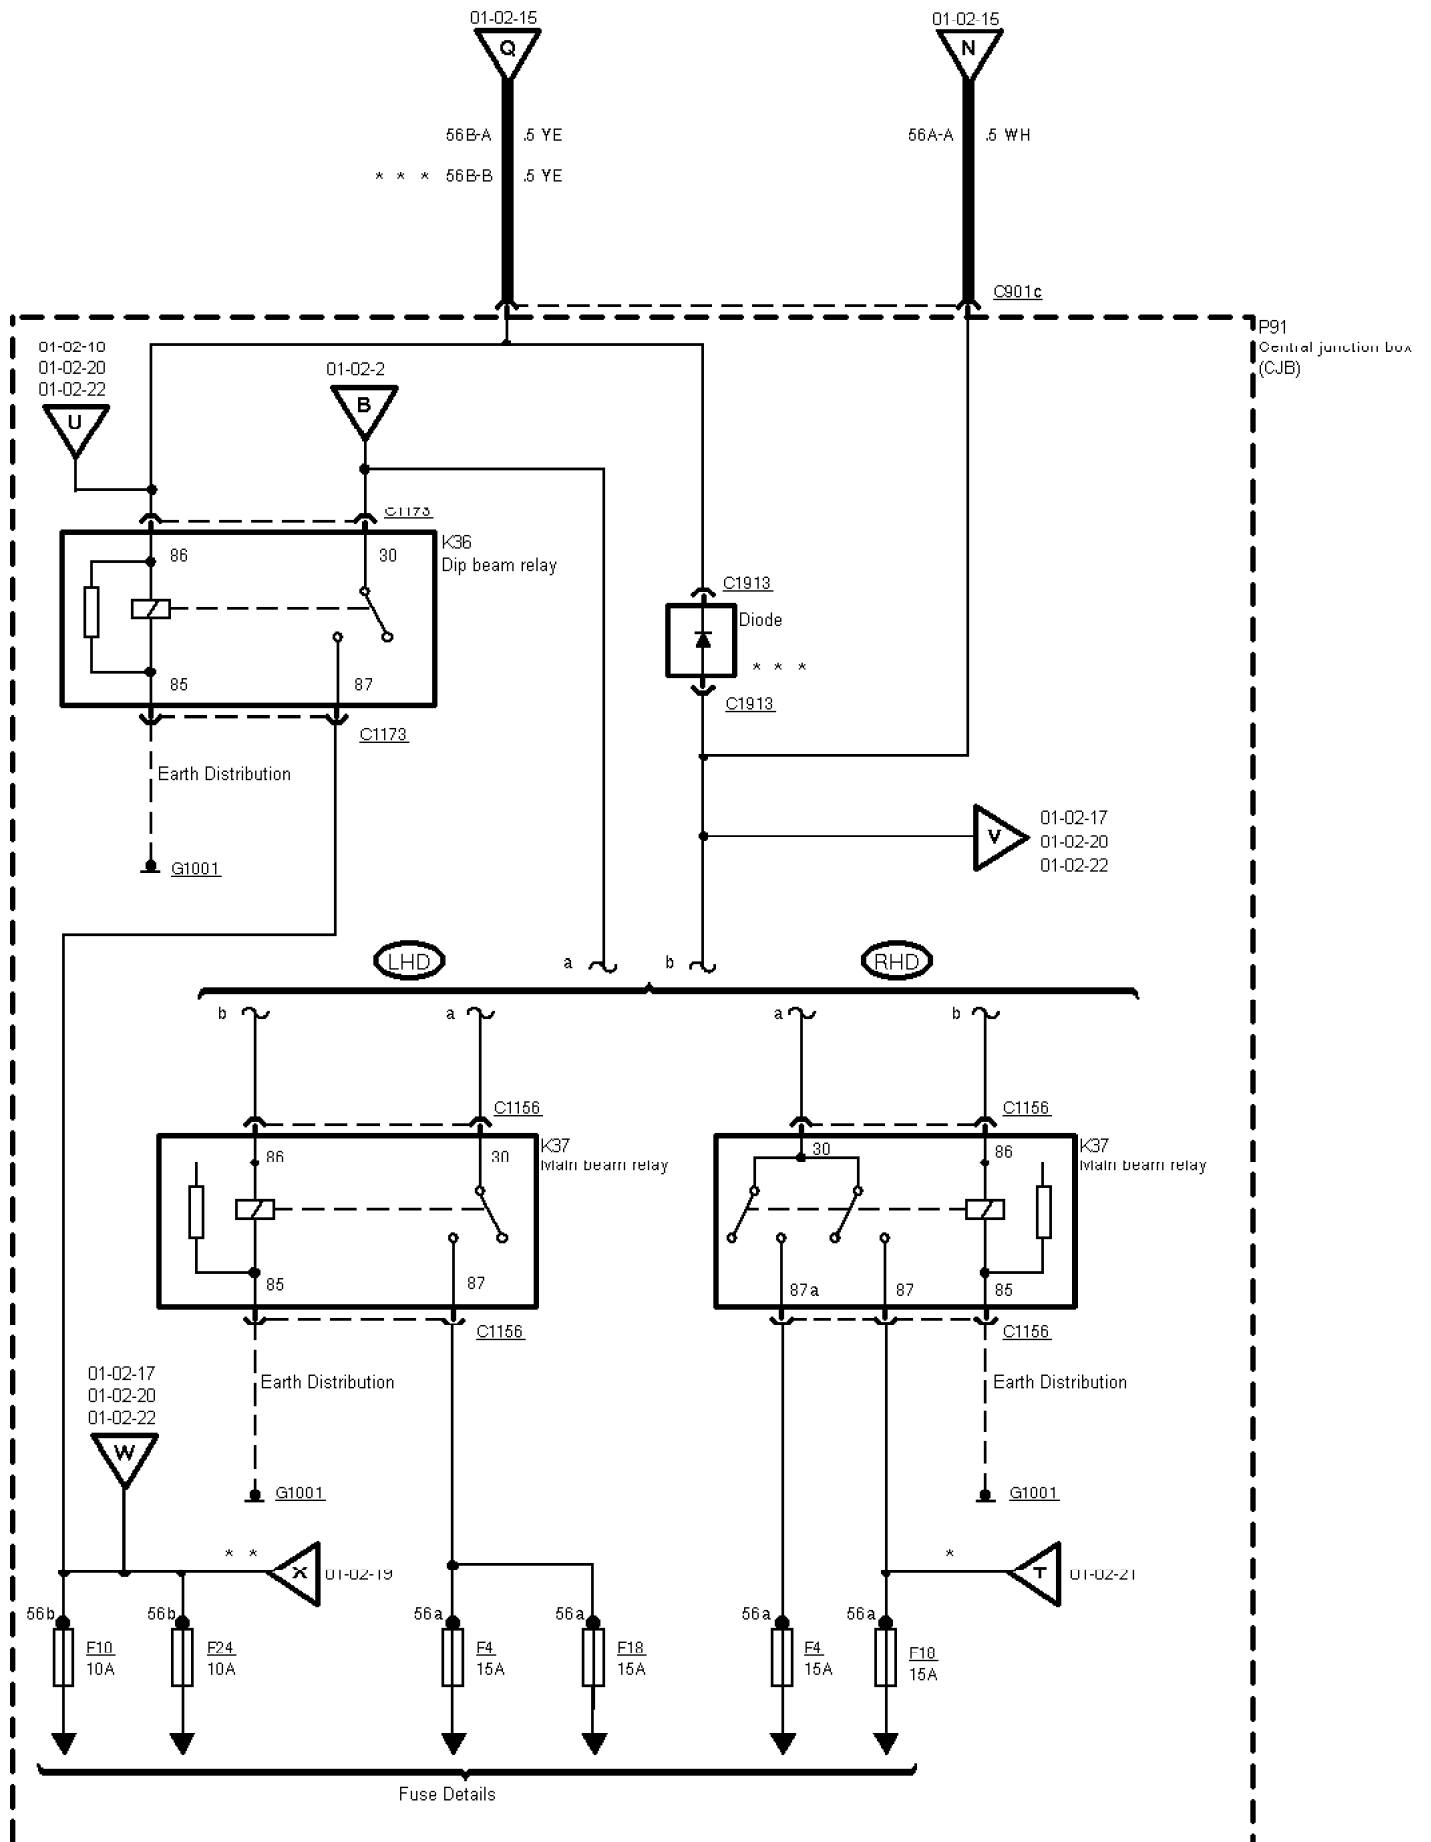



* RHD
* * N S SF DK


* * * Higher option content

01-02-017 , Power Distribution , Before 95, RS Cosworth before 95 1/2 Left-hand-drive vehicles


▼
Fog Lamps


▼
Fog Lamps

01-02-018 , Power Distribution , Before 95, RS Cosworth before 95 1/2 Left-hand-drive vehicles

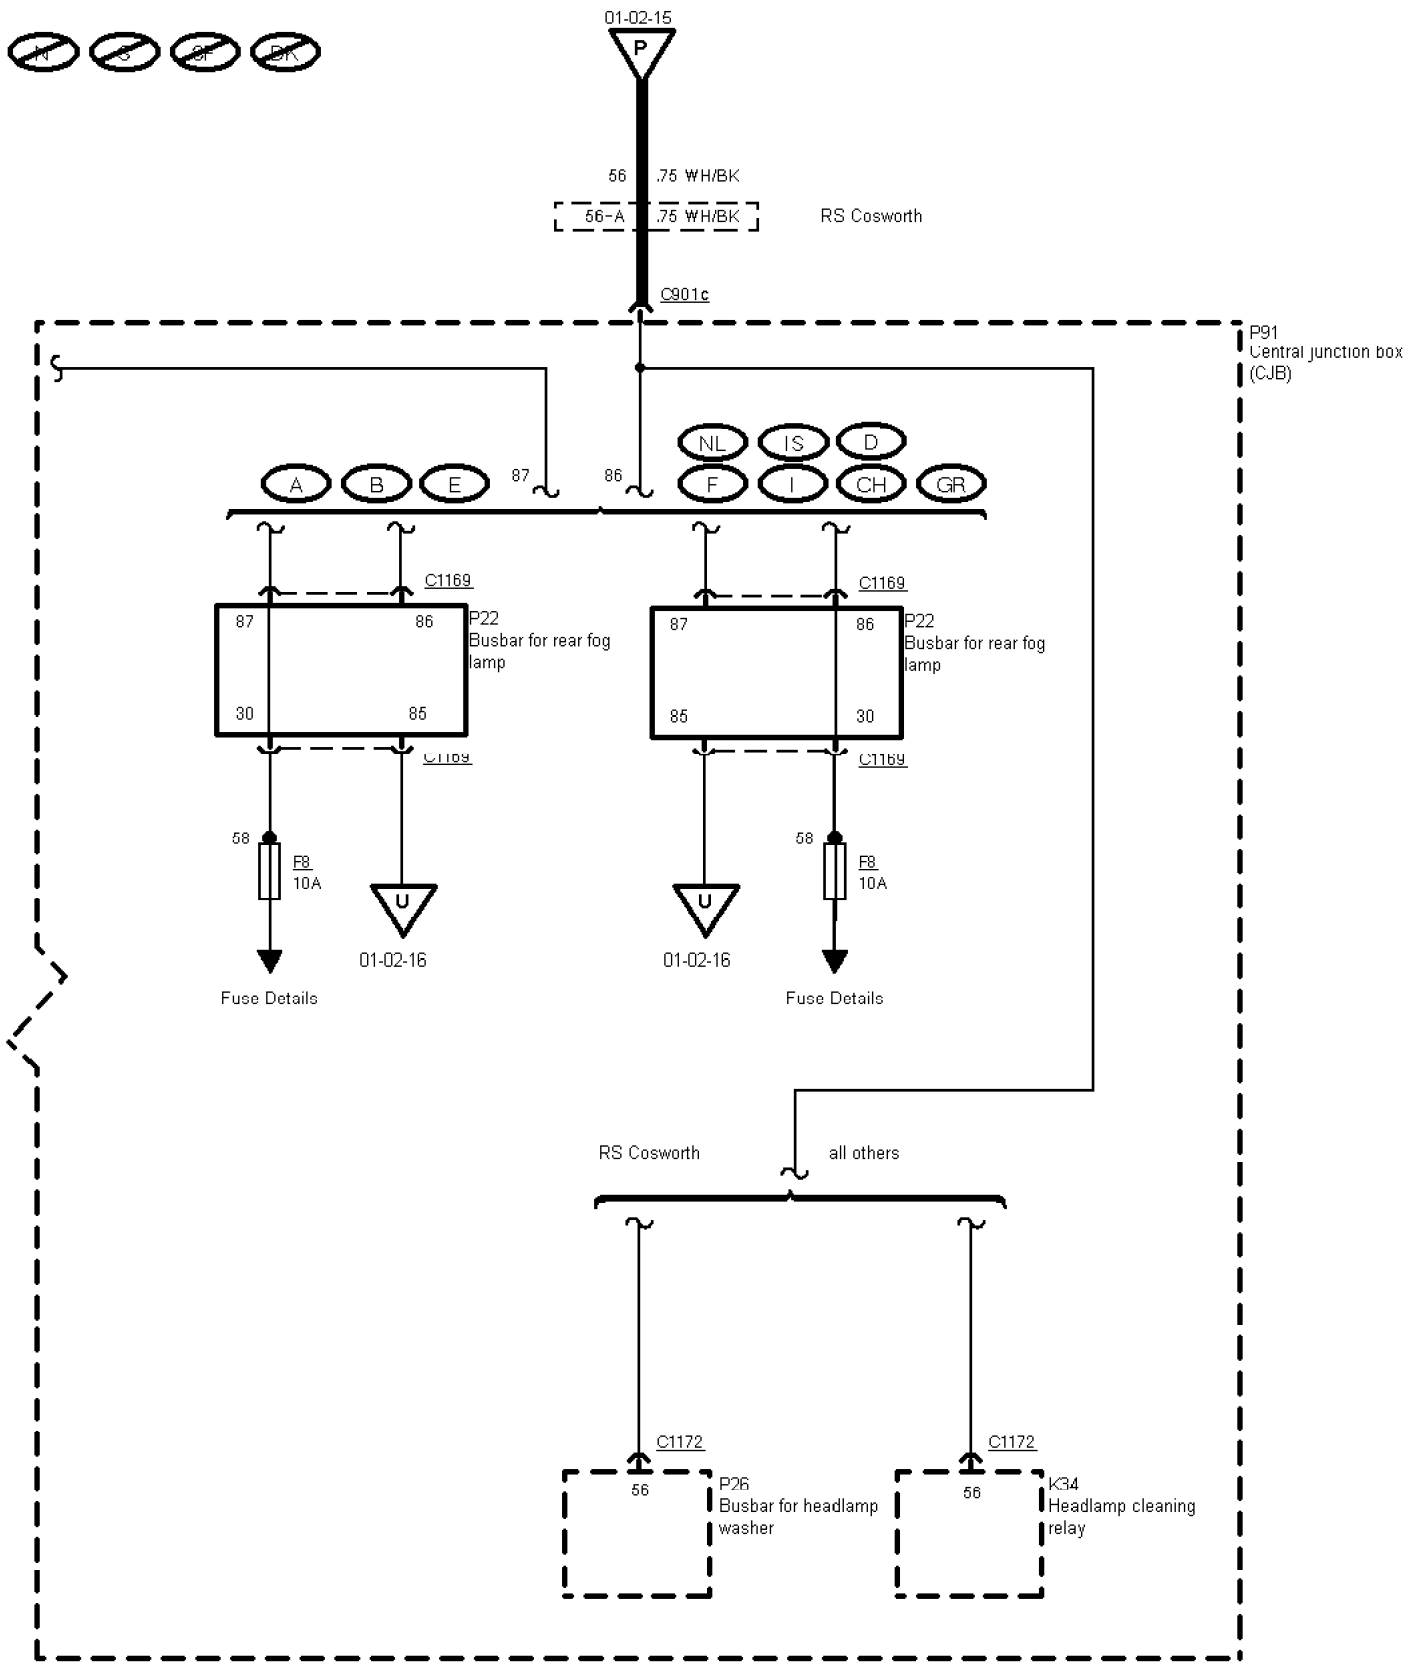

 01-02-019 , Power Distribution , Before 95, RS Cosworth before 95 1/2

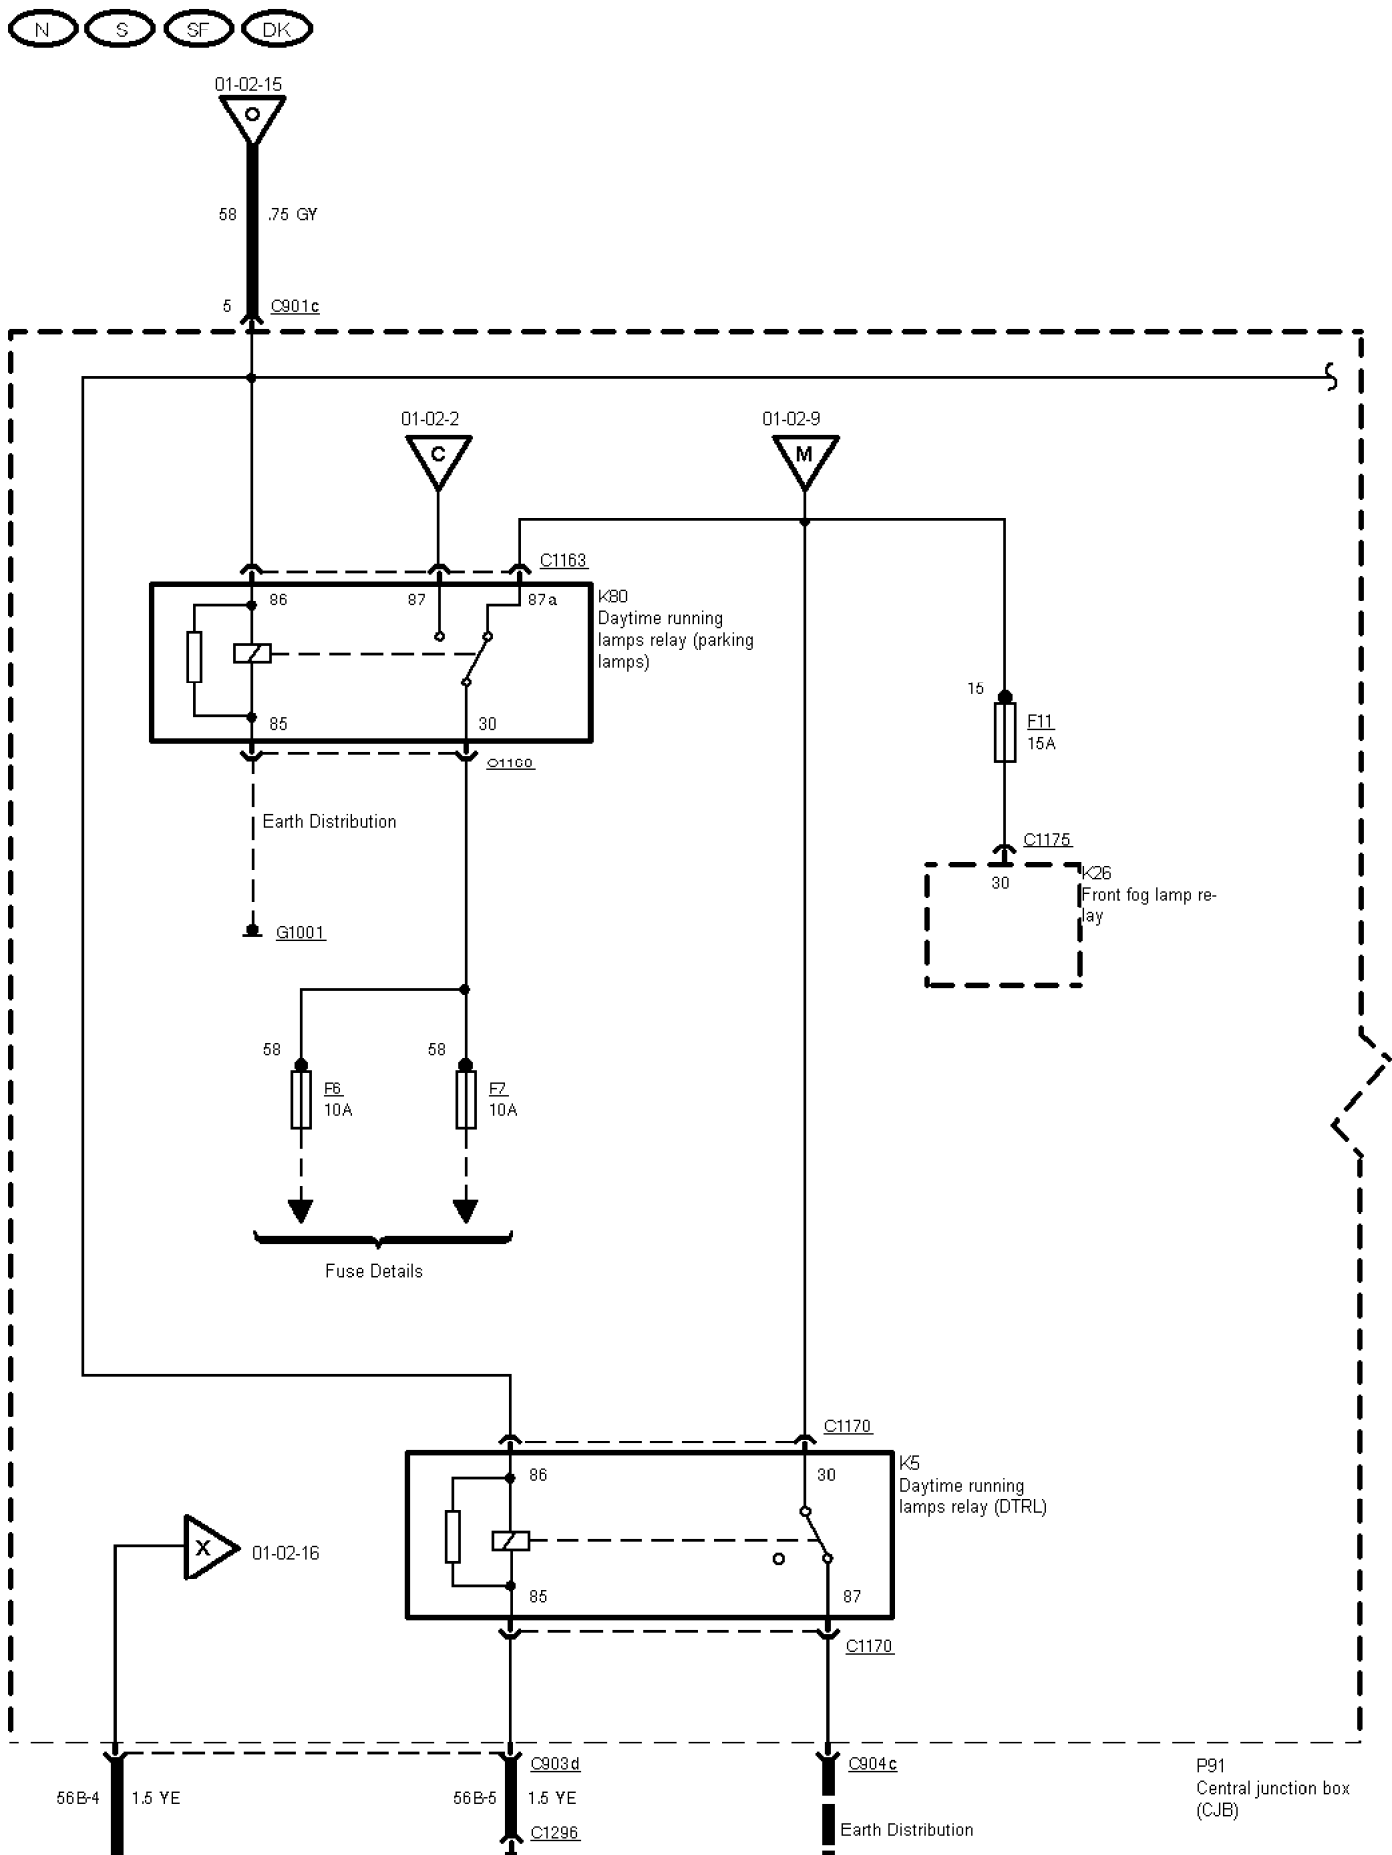




G1001

01-02-020 , Power Distribution , Before 95, RS Cosworth before 95 1/2


N S SF DK


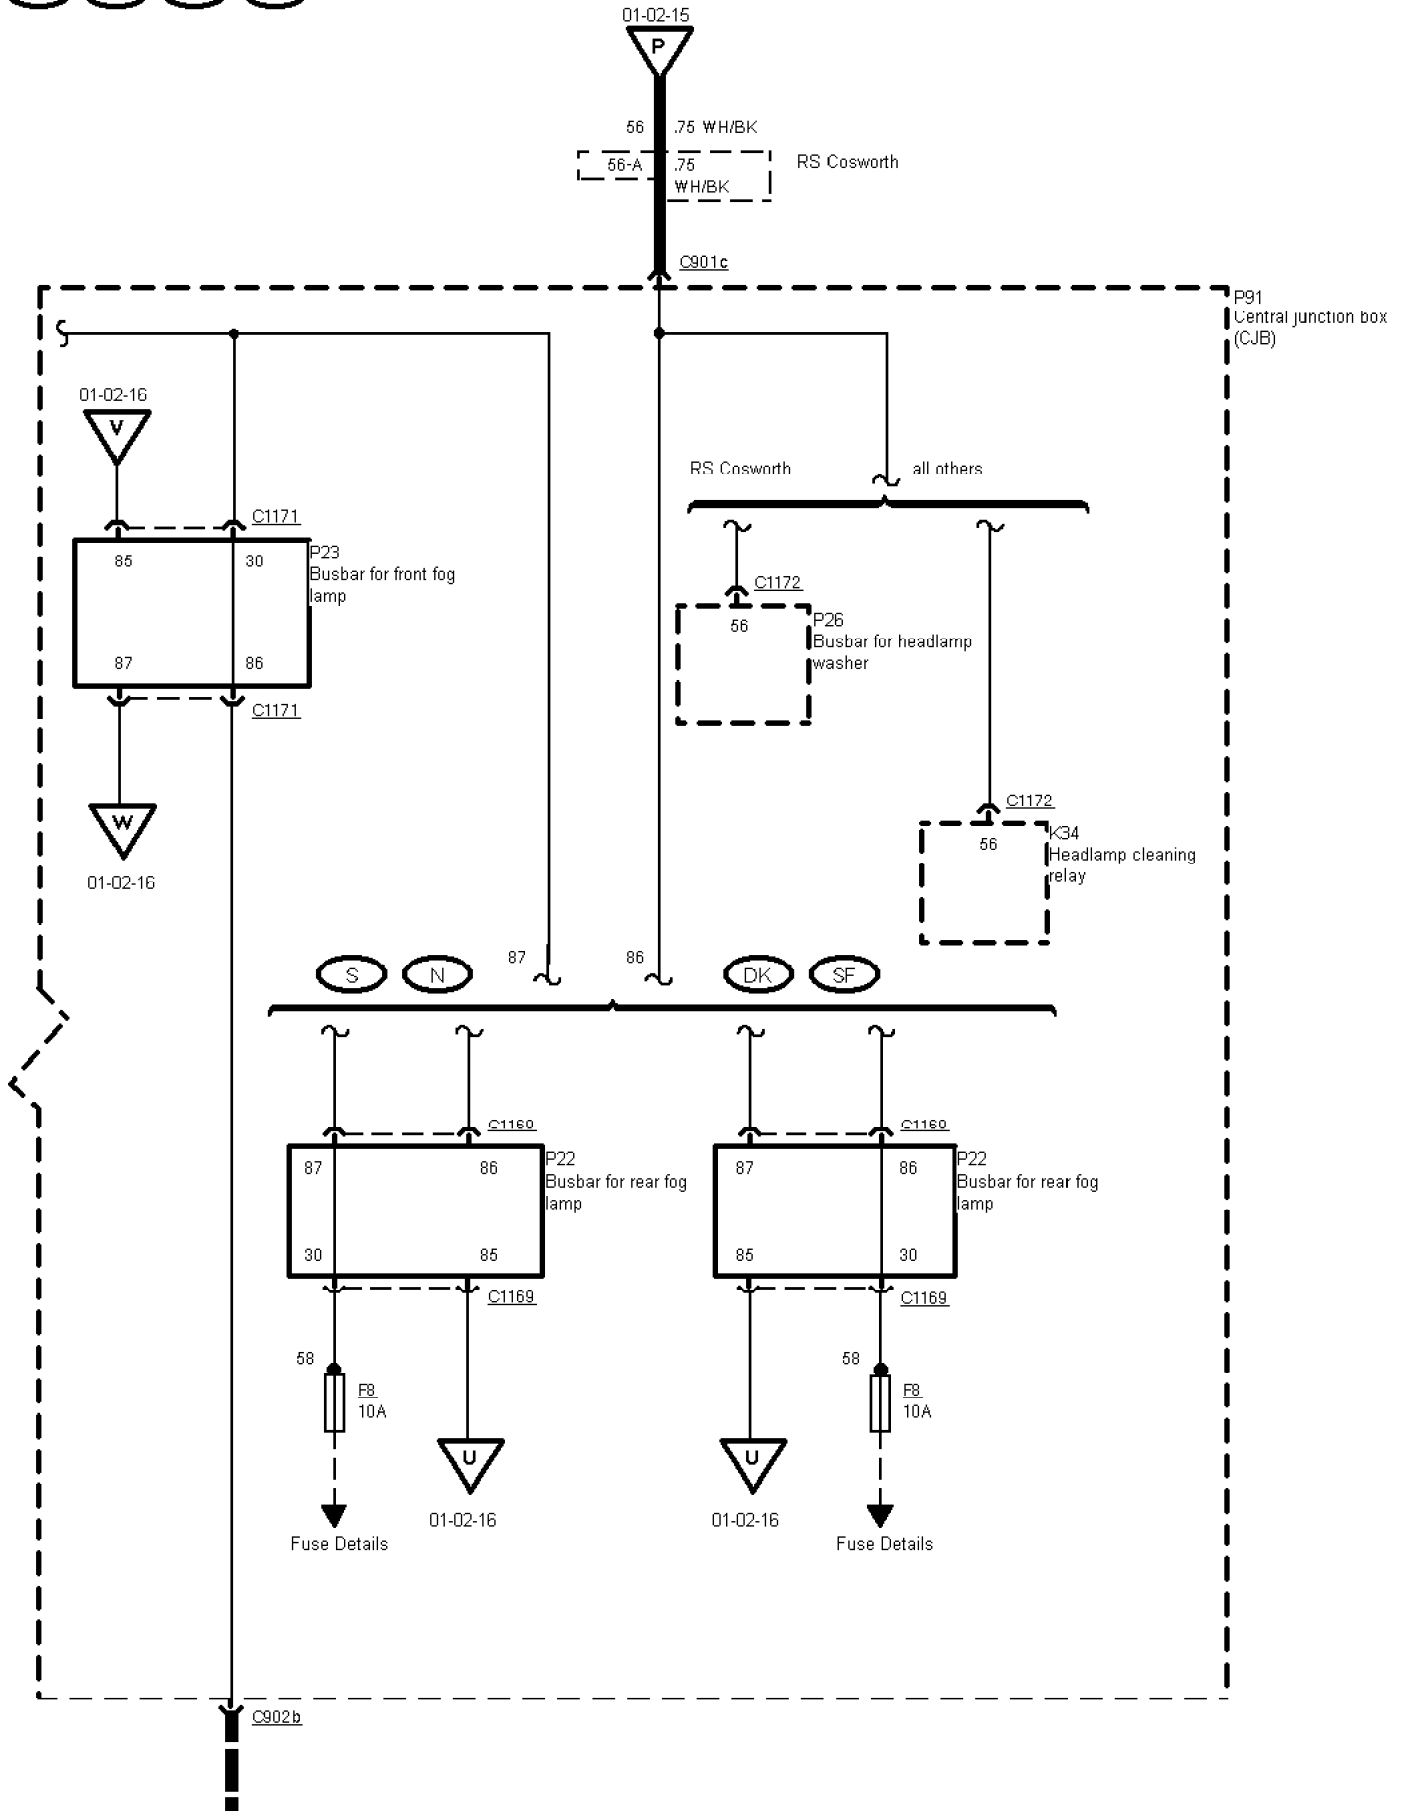





Fog Lamps

  01-02-021 , Power Distribution , Before 95, RS Cosworth before 95 1/2 Right-hand-drive vehicles

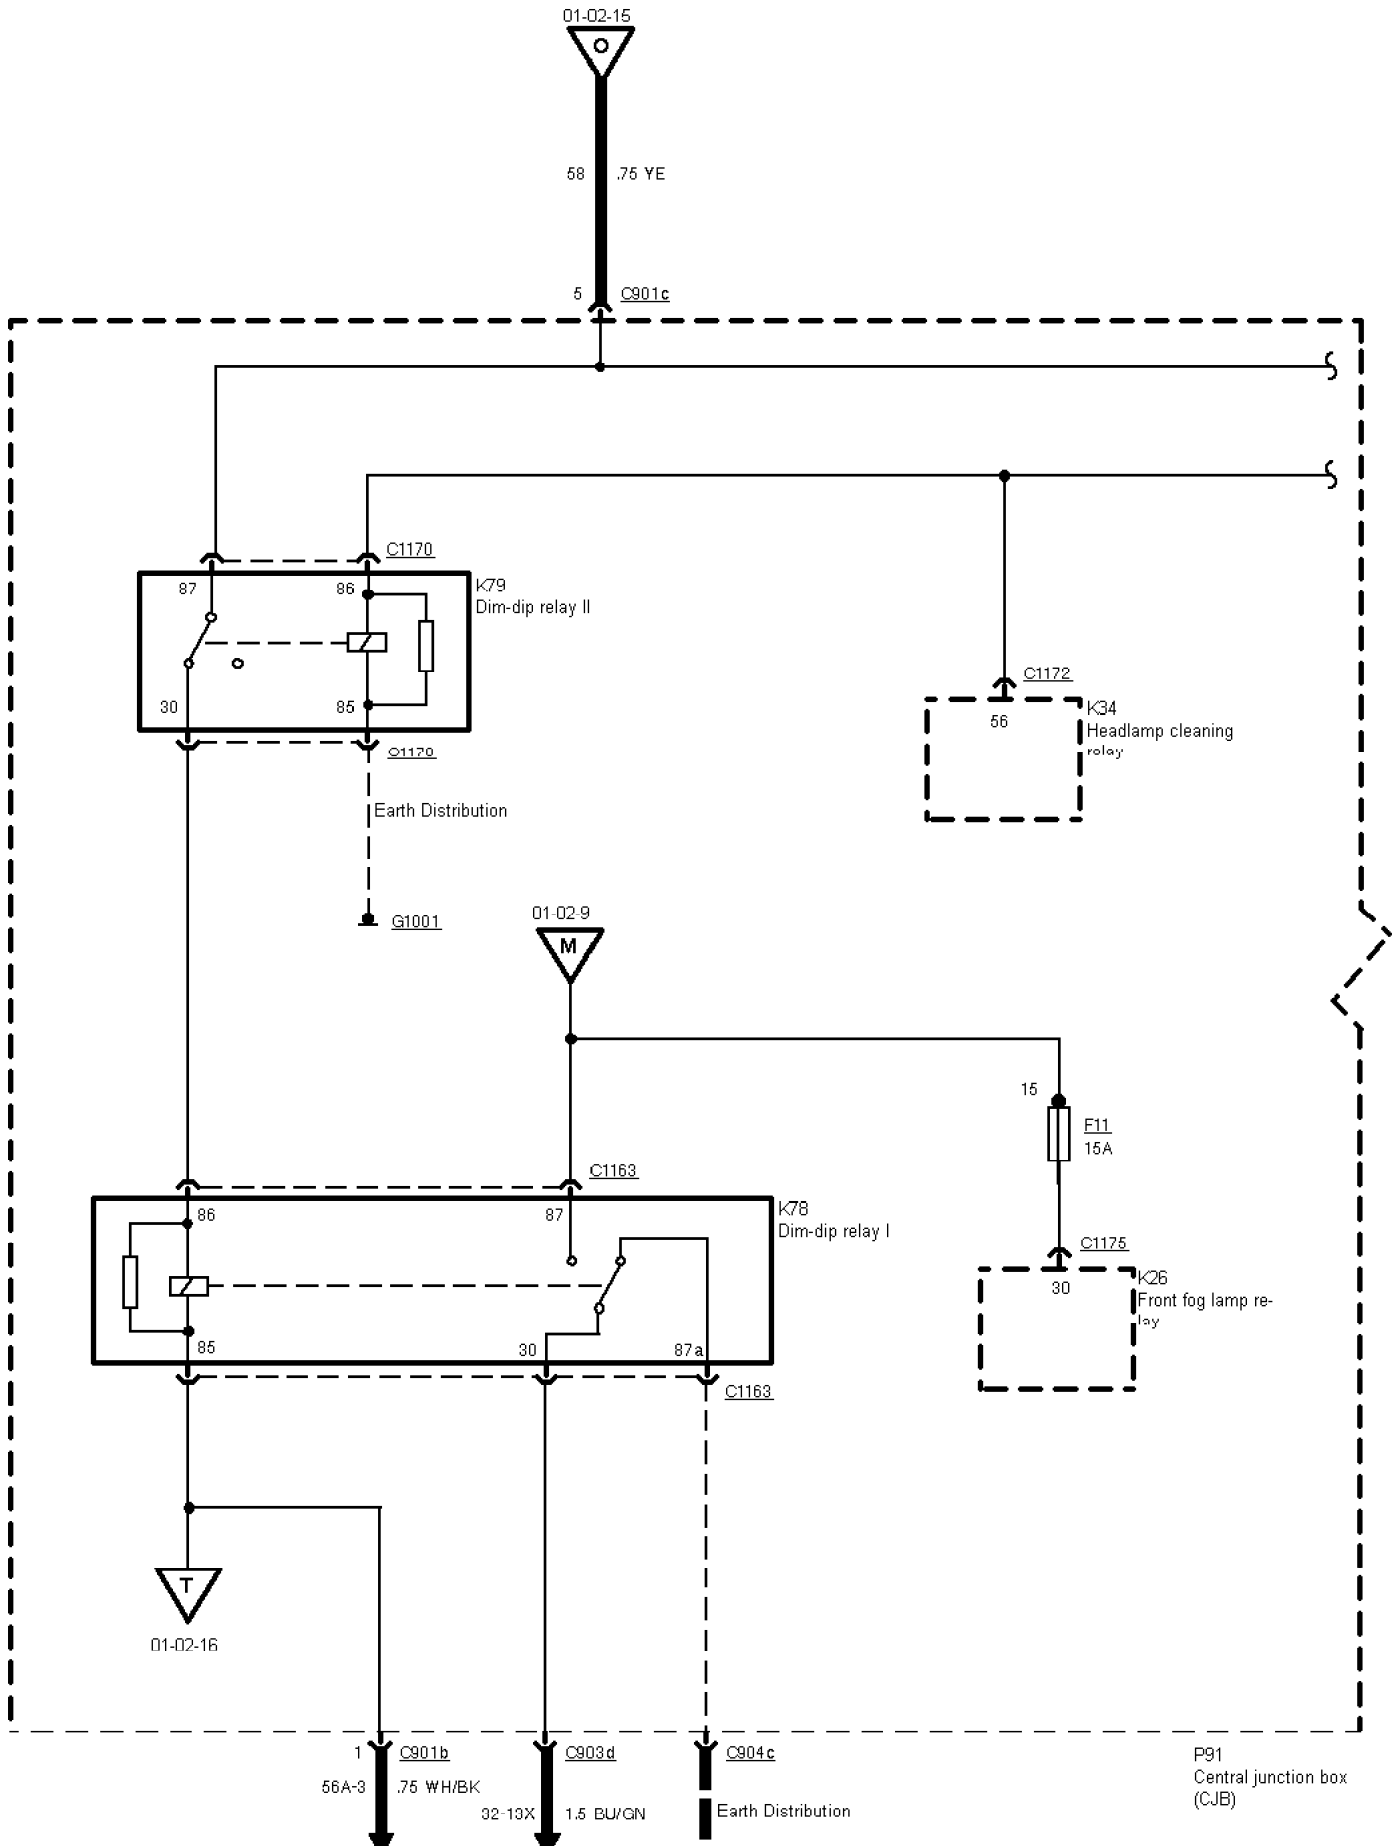




01-02-022 , Power Distribution , Before 95, RS Cosworth before 95 1/2 Right-hand-drive vehicles

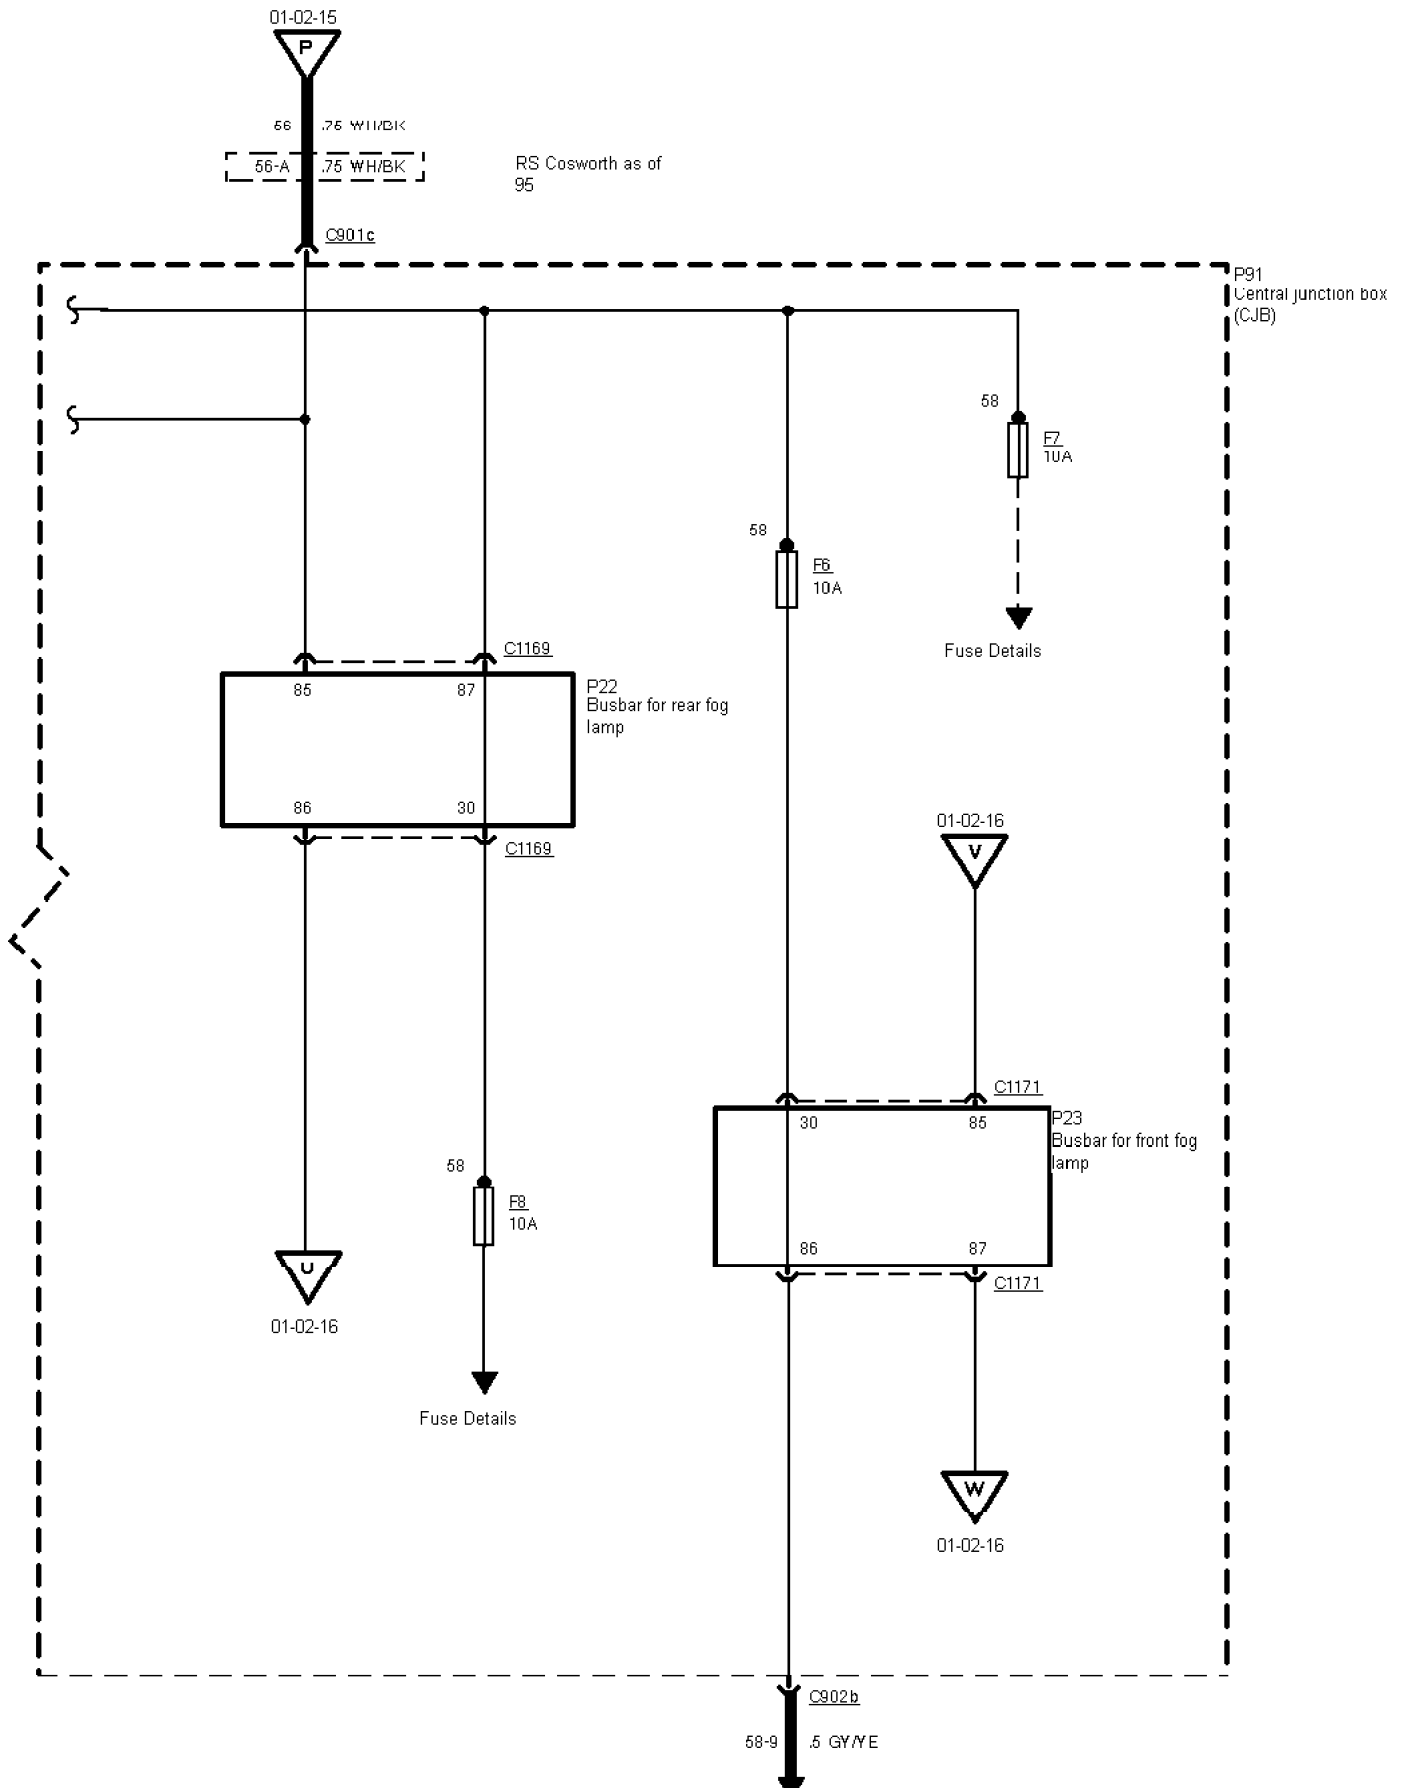


▼
Fog Lamps


01-02-023 , Power Distribution , Before 95, RS Cosworth before 95 1/2 Light switch

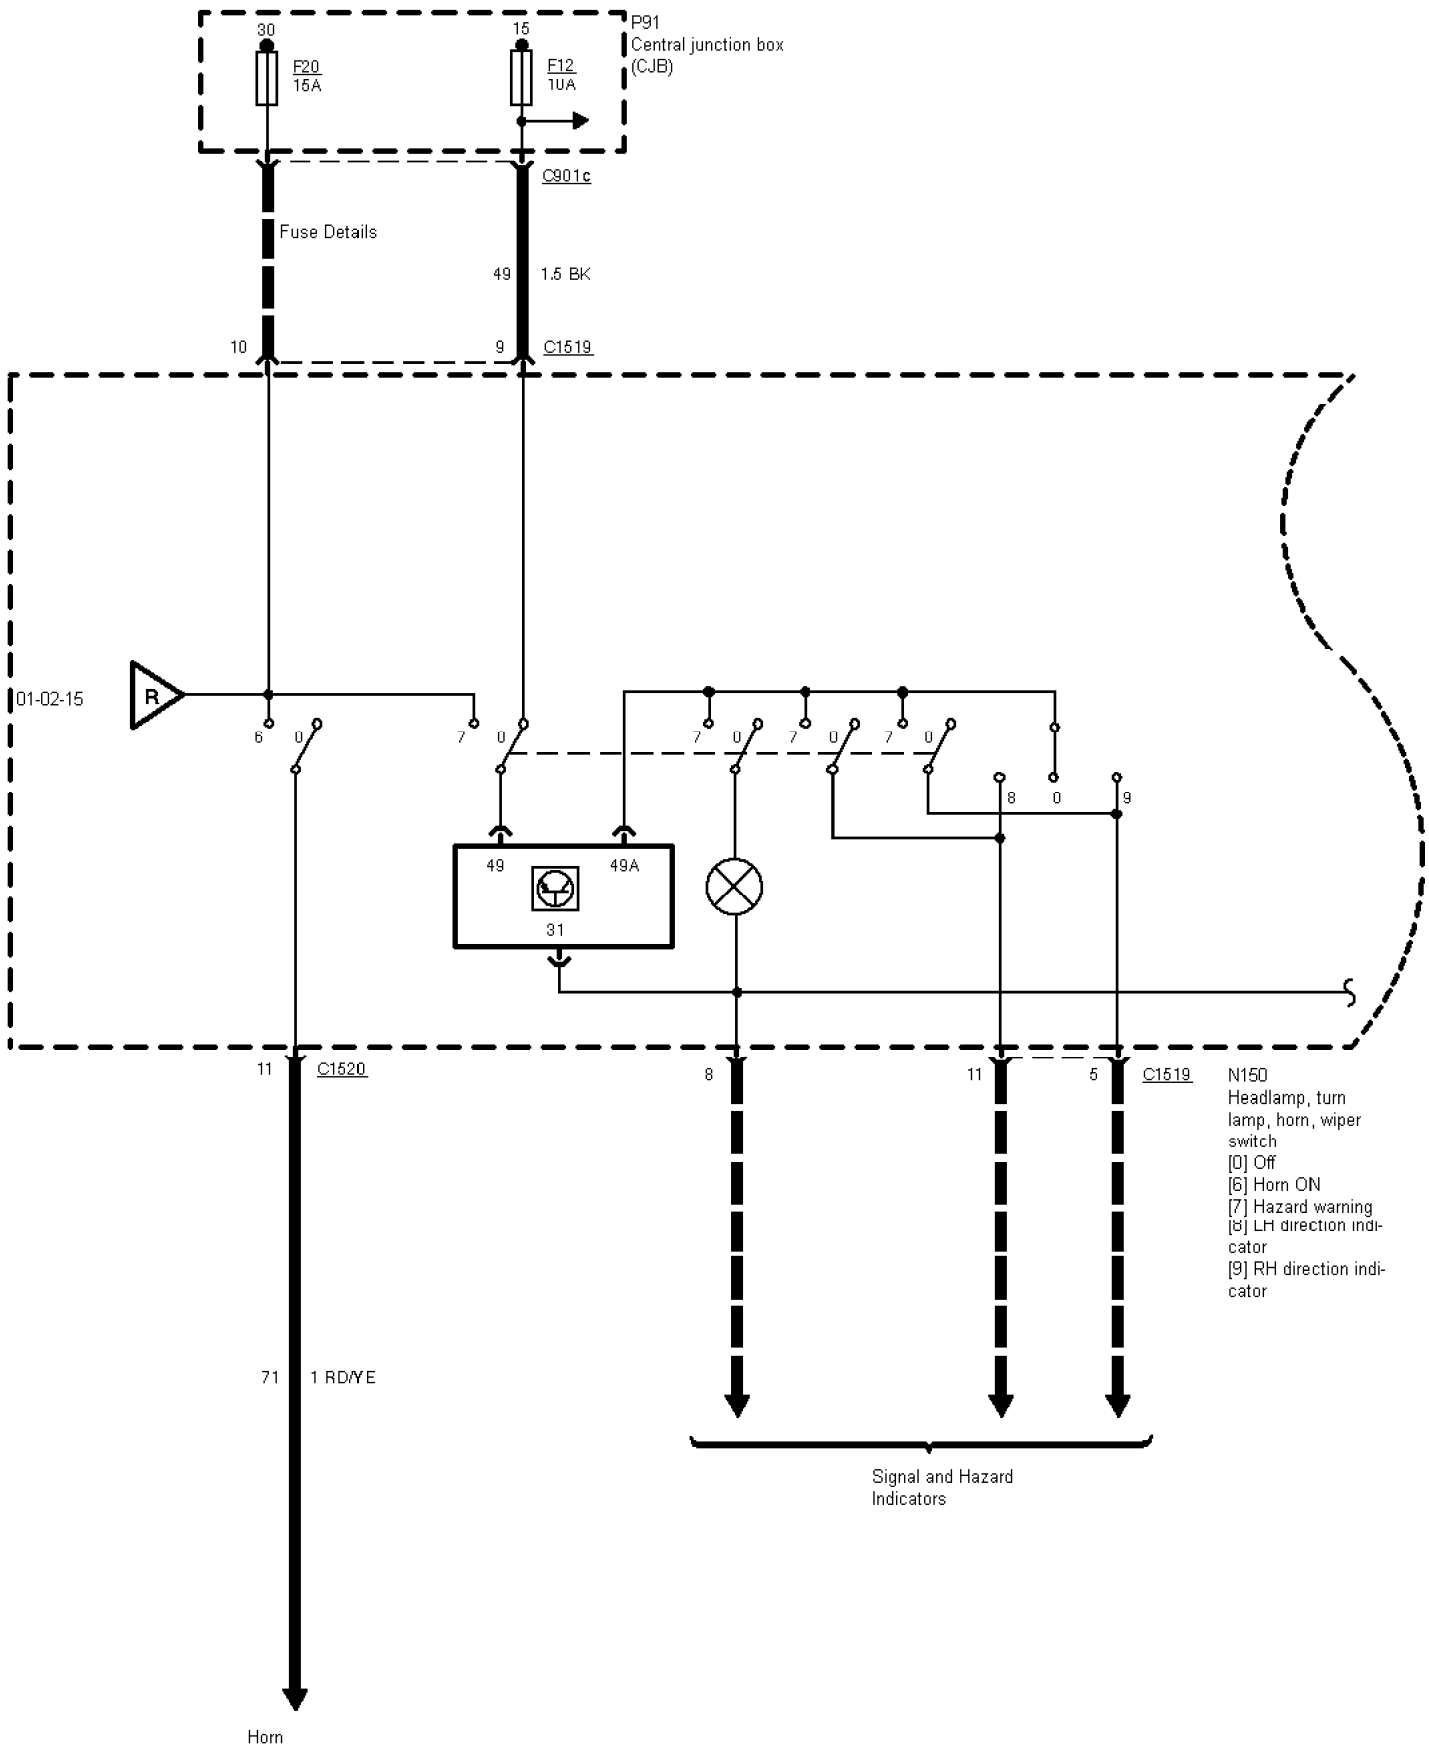

01-02-024 , Power Distribution , Before 95, RS Cosworth before 95 1/2 Light switch

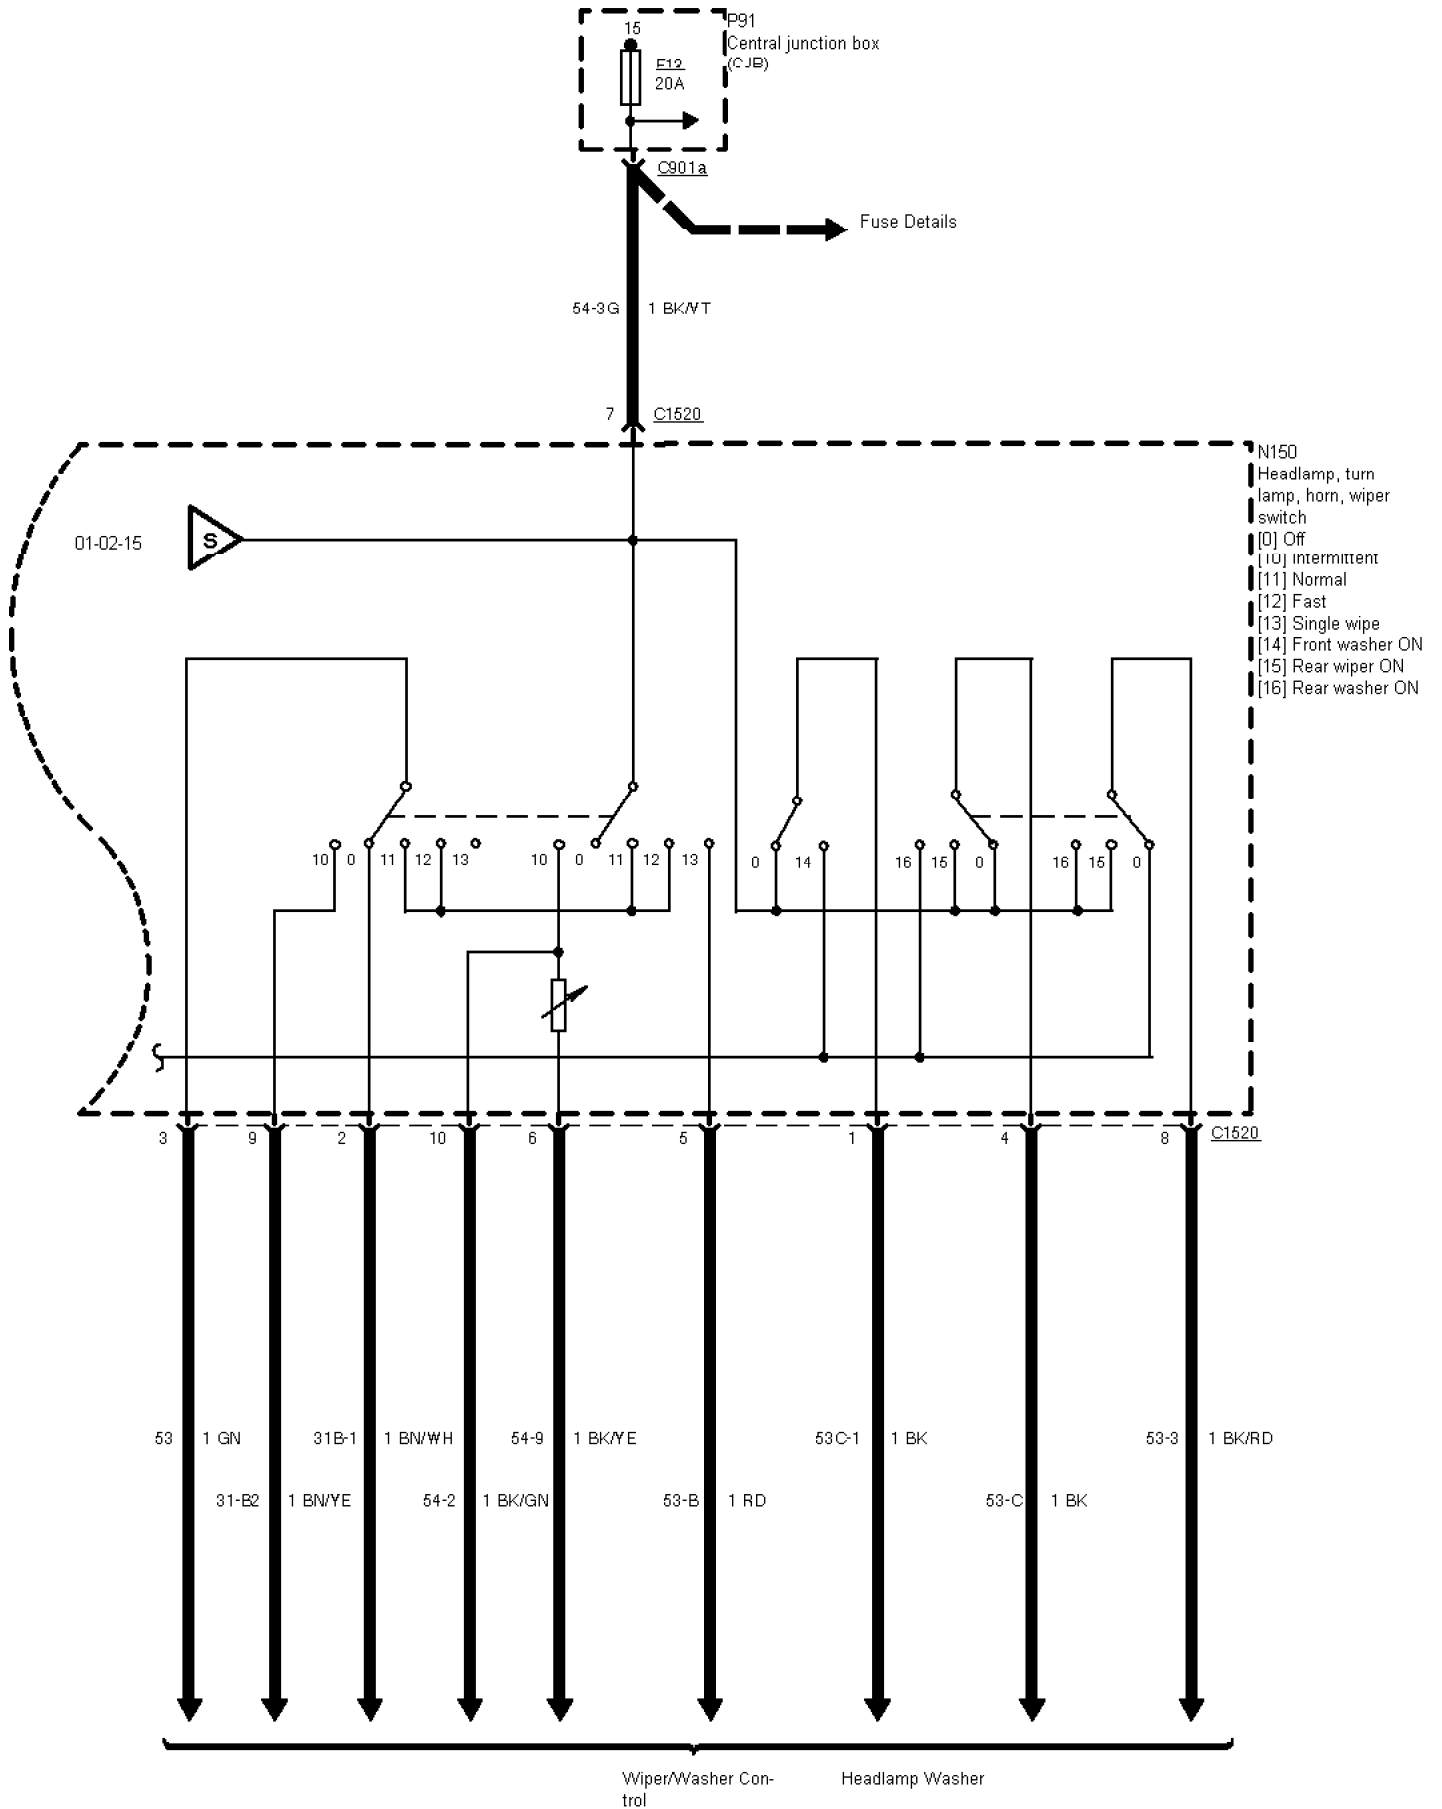


01-02-025 , Power Distribution , As of 95 without RS Cosworth

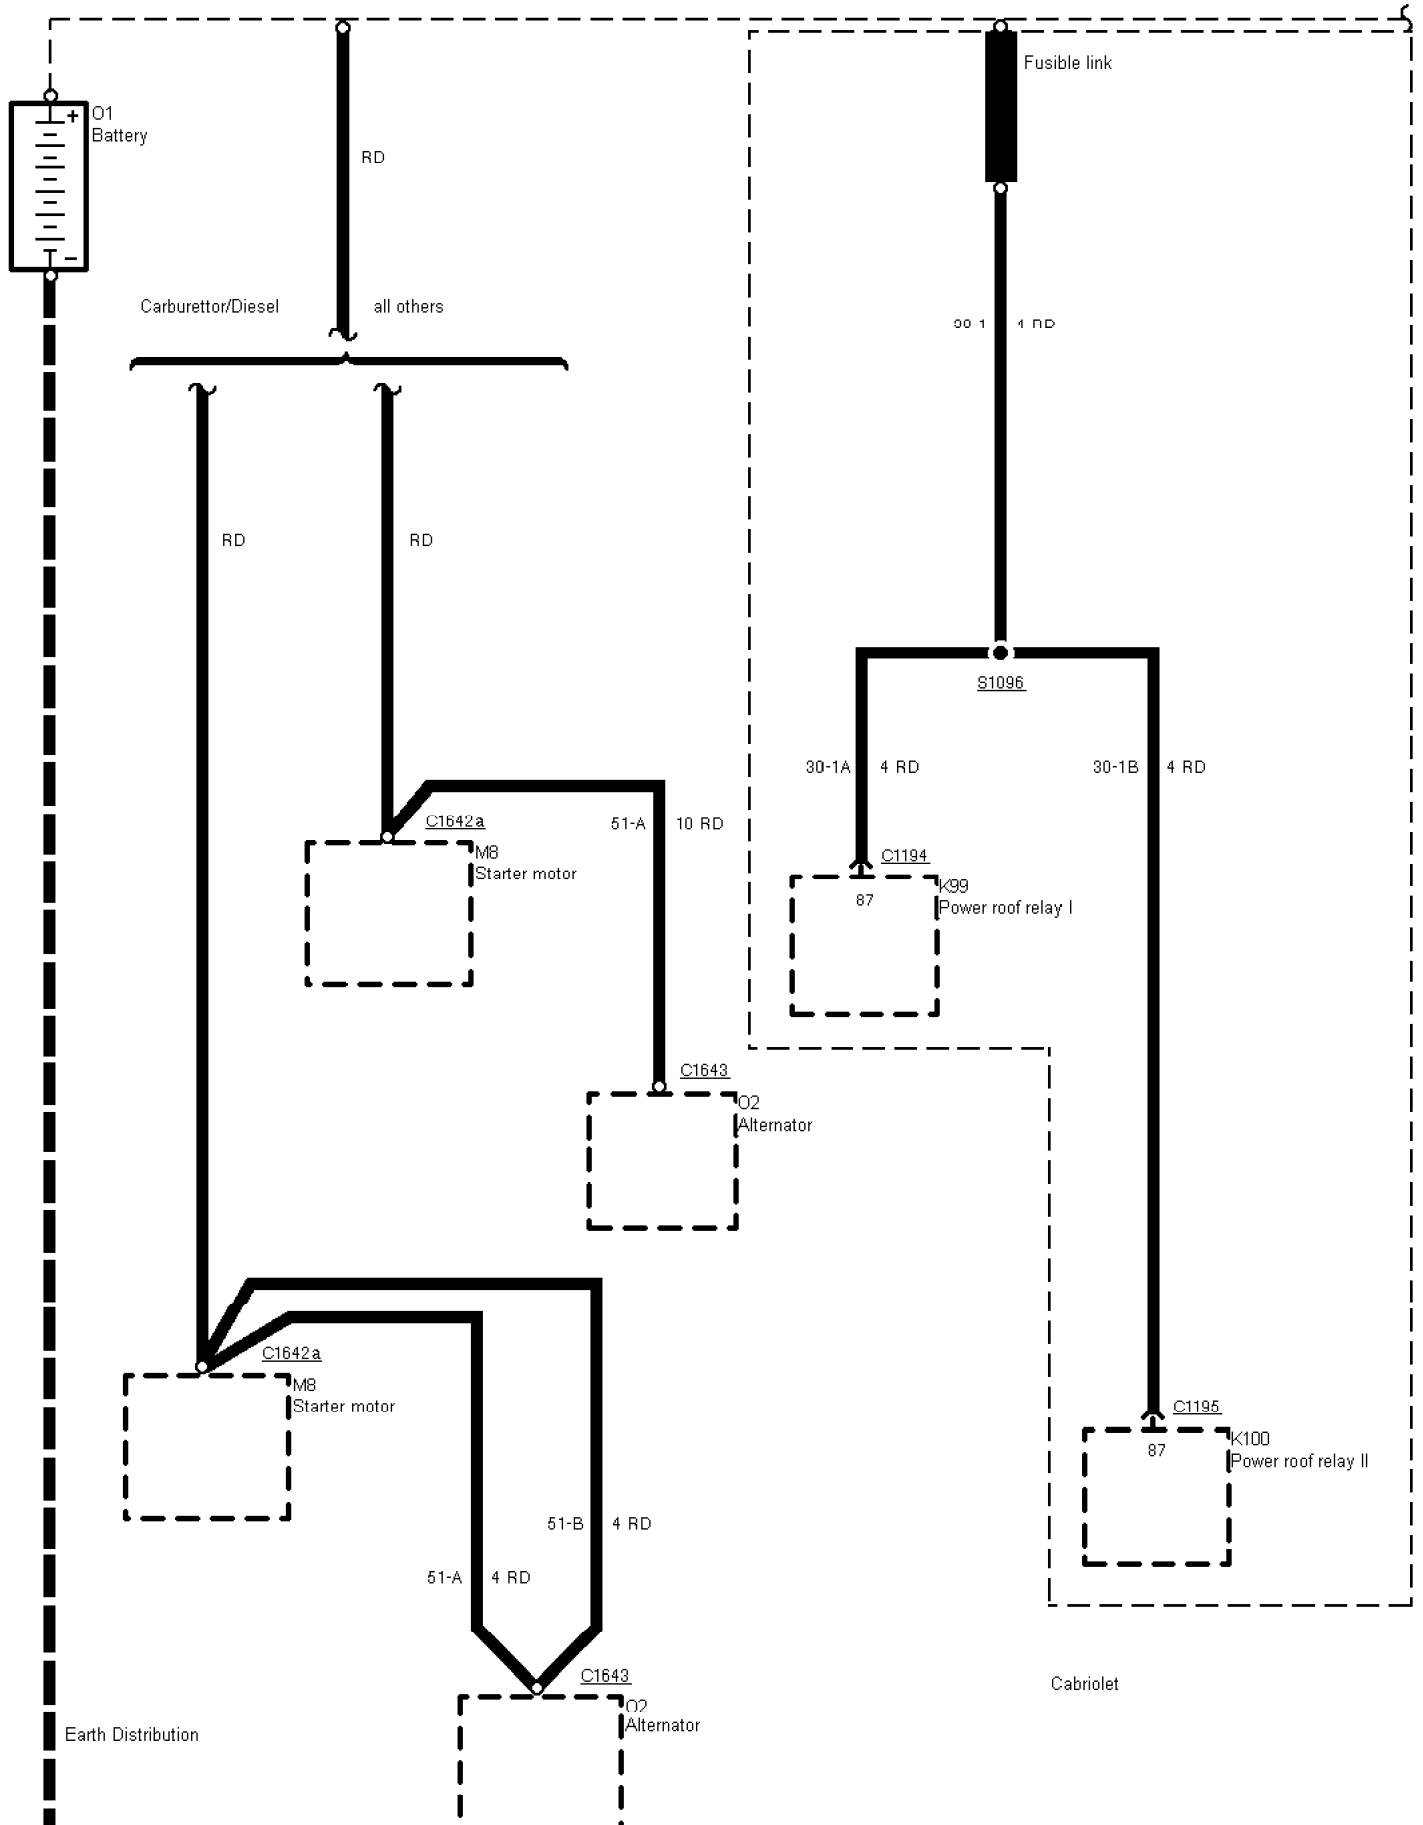





G1004

01-02-026 , Power Distribution , As of 95 without RS Cosworth

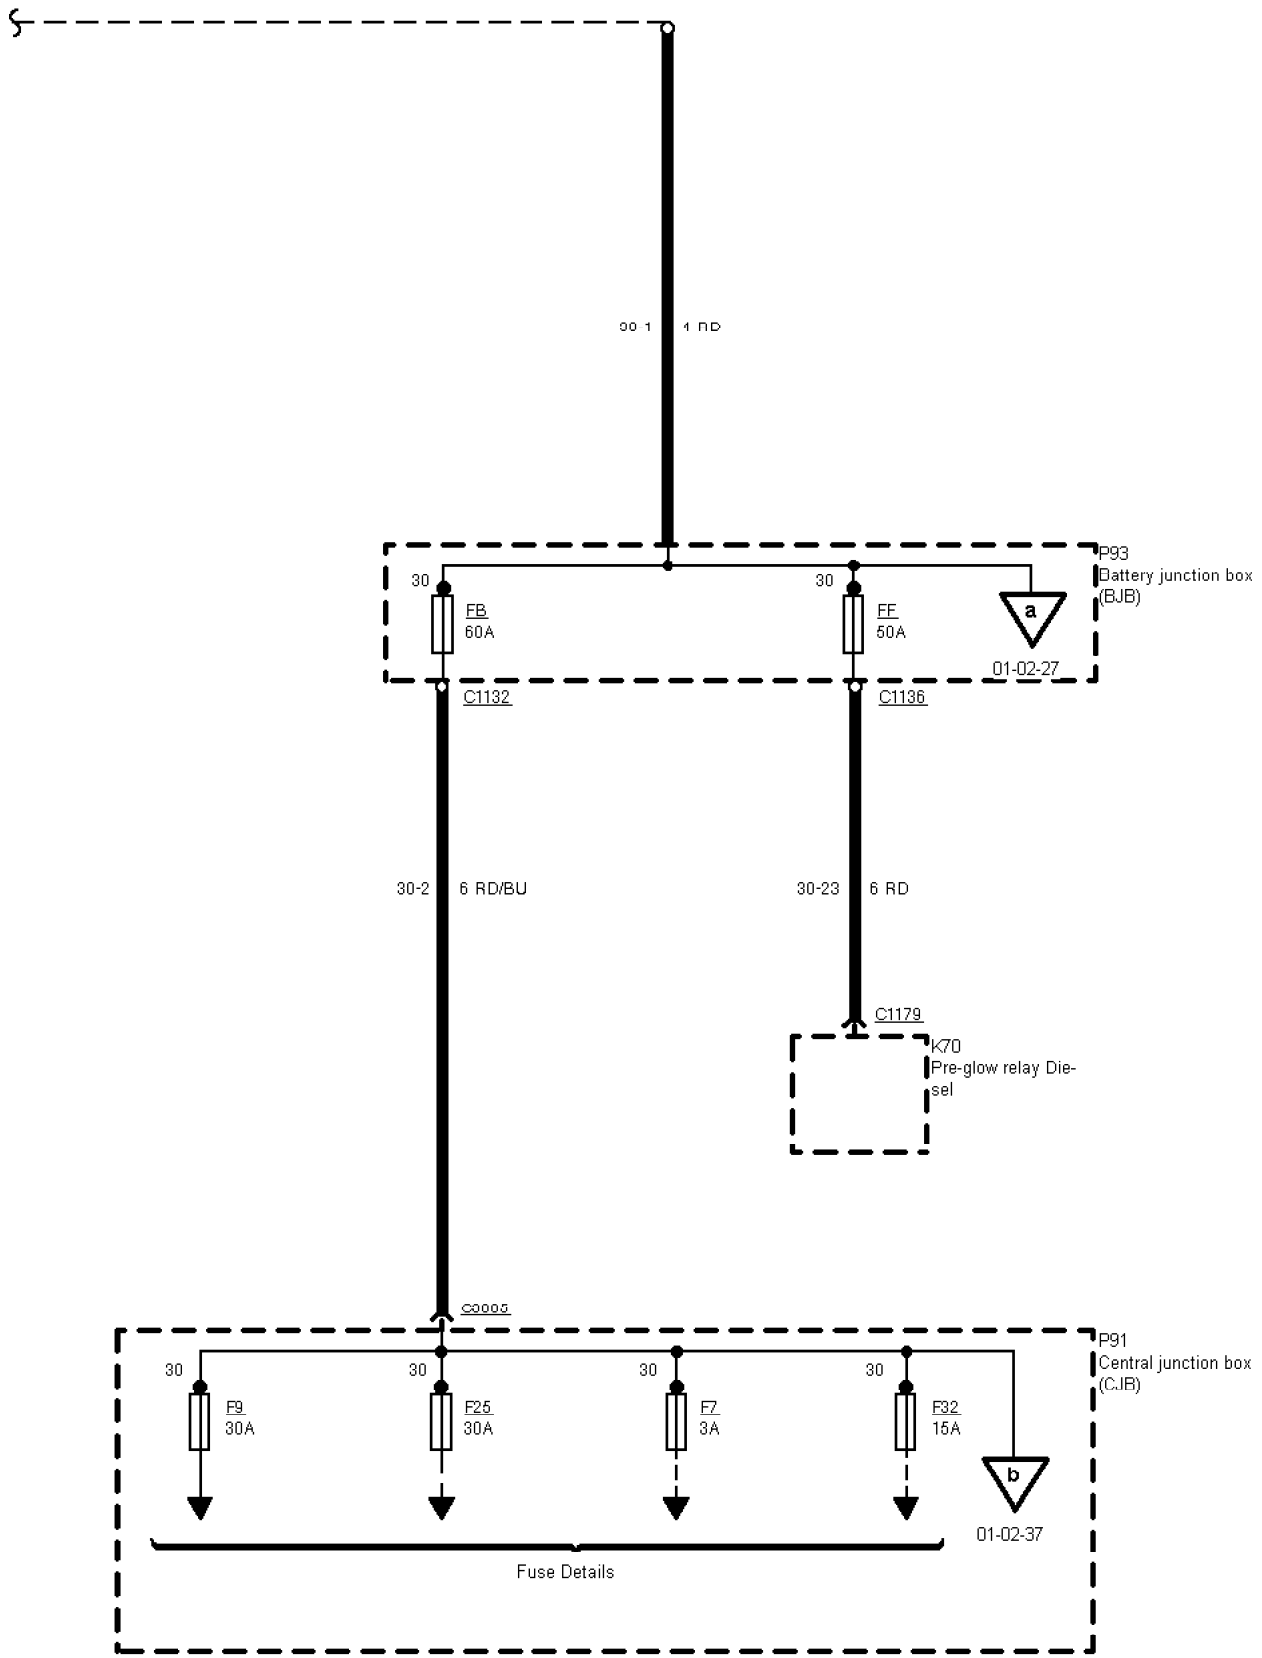


01-02-027 , Power Distribution , As of 95 without RS Cosworth

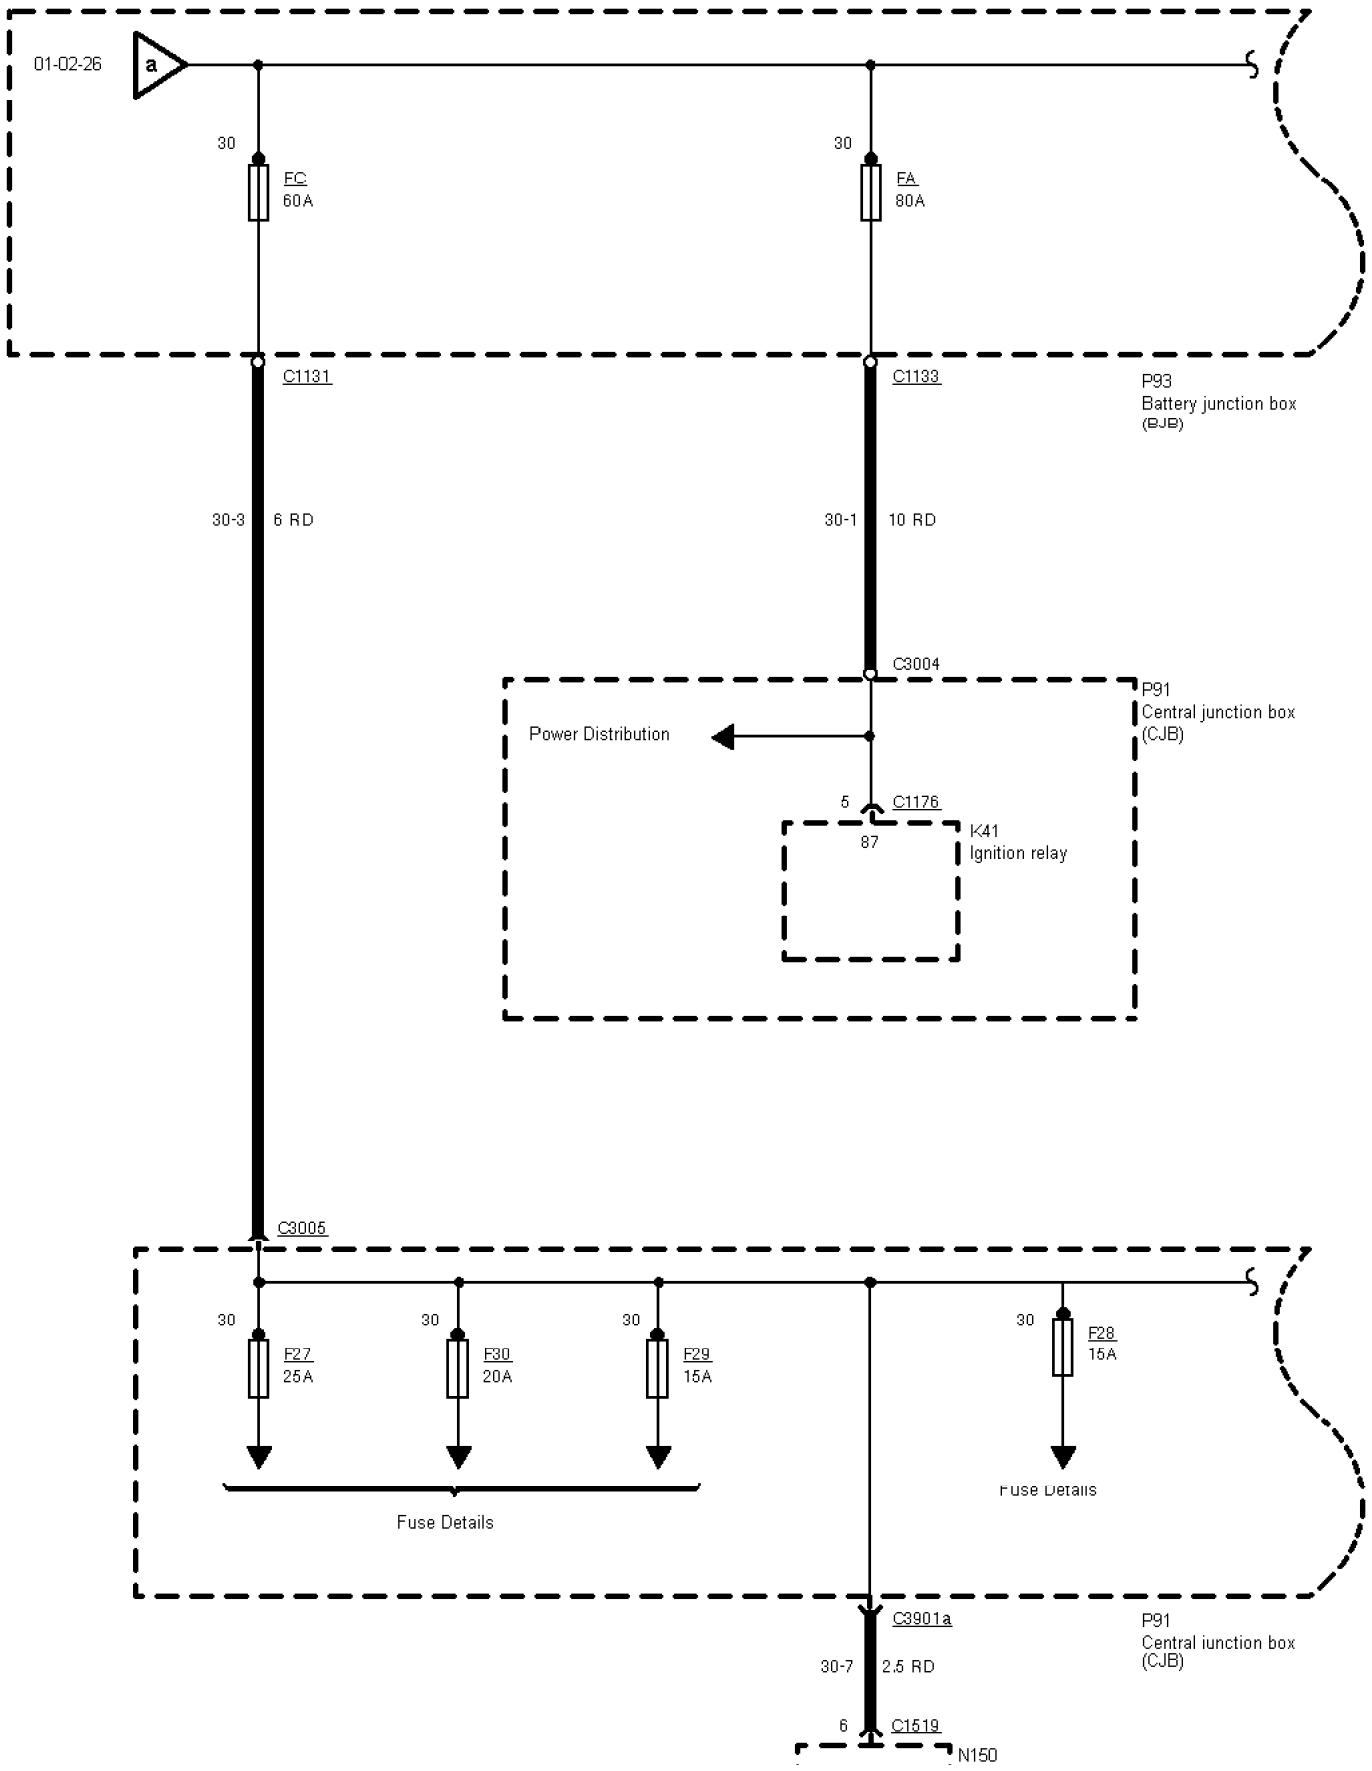

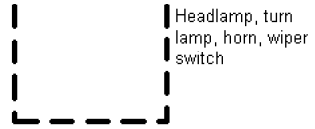


01-02-028 , Power Distribution , As of 95 without RS Cosworth


- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

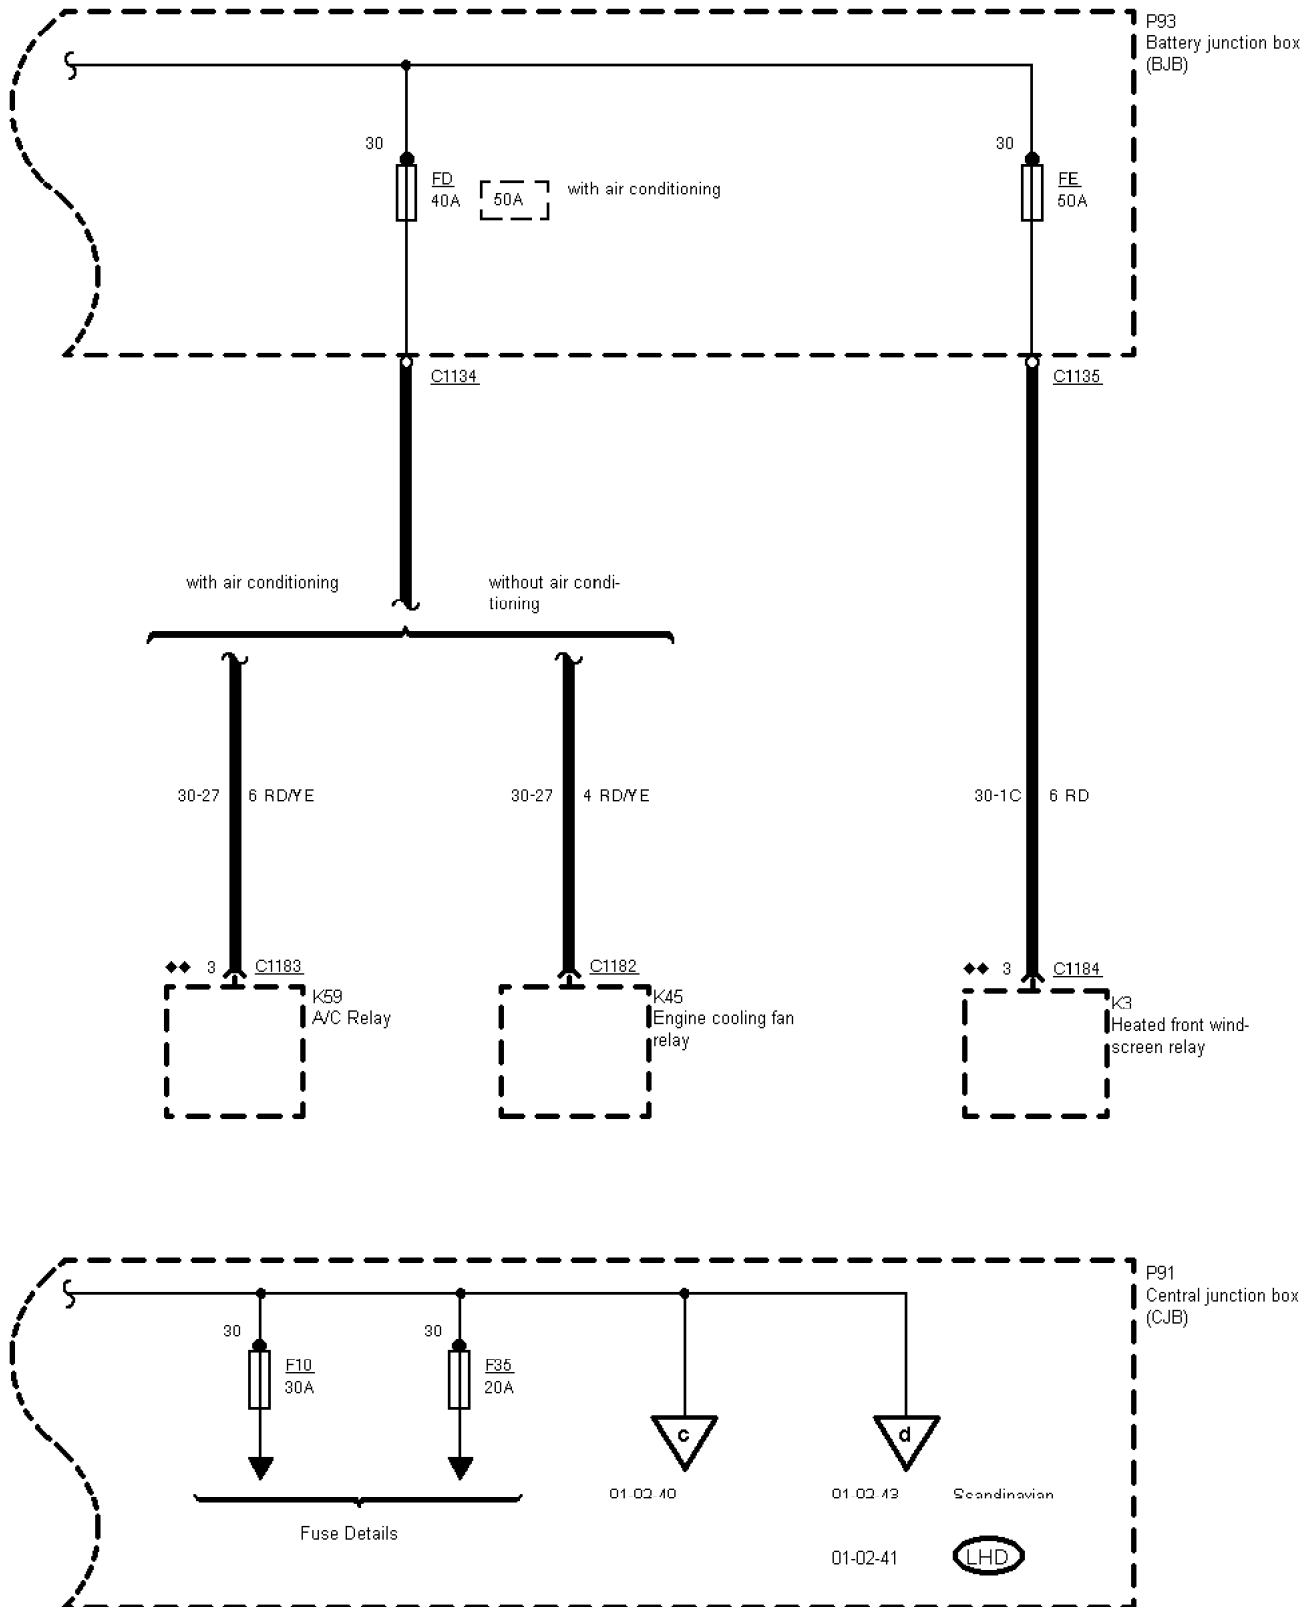

01-02-029 , Power Distribution , As of 95 without RS Cosworth

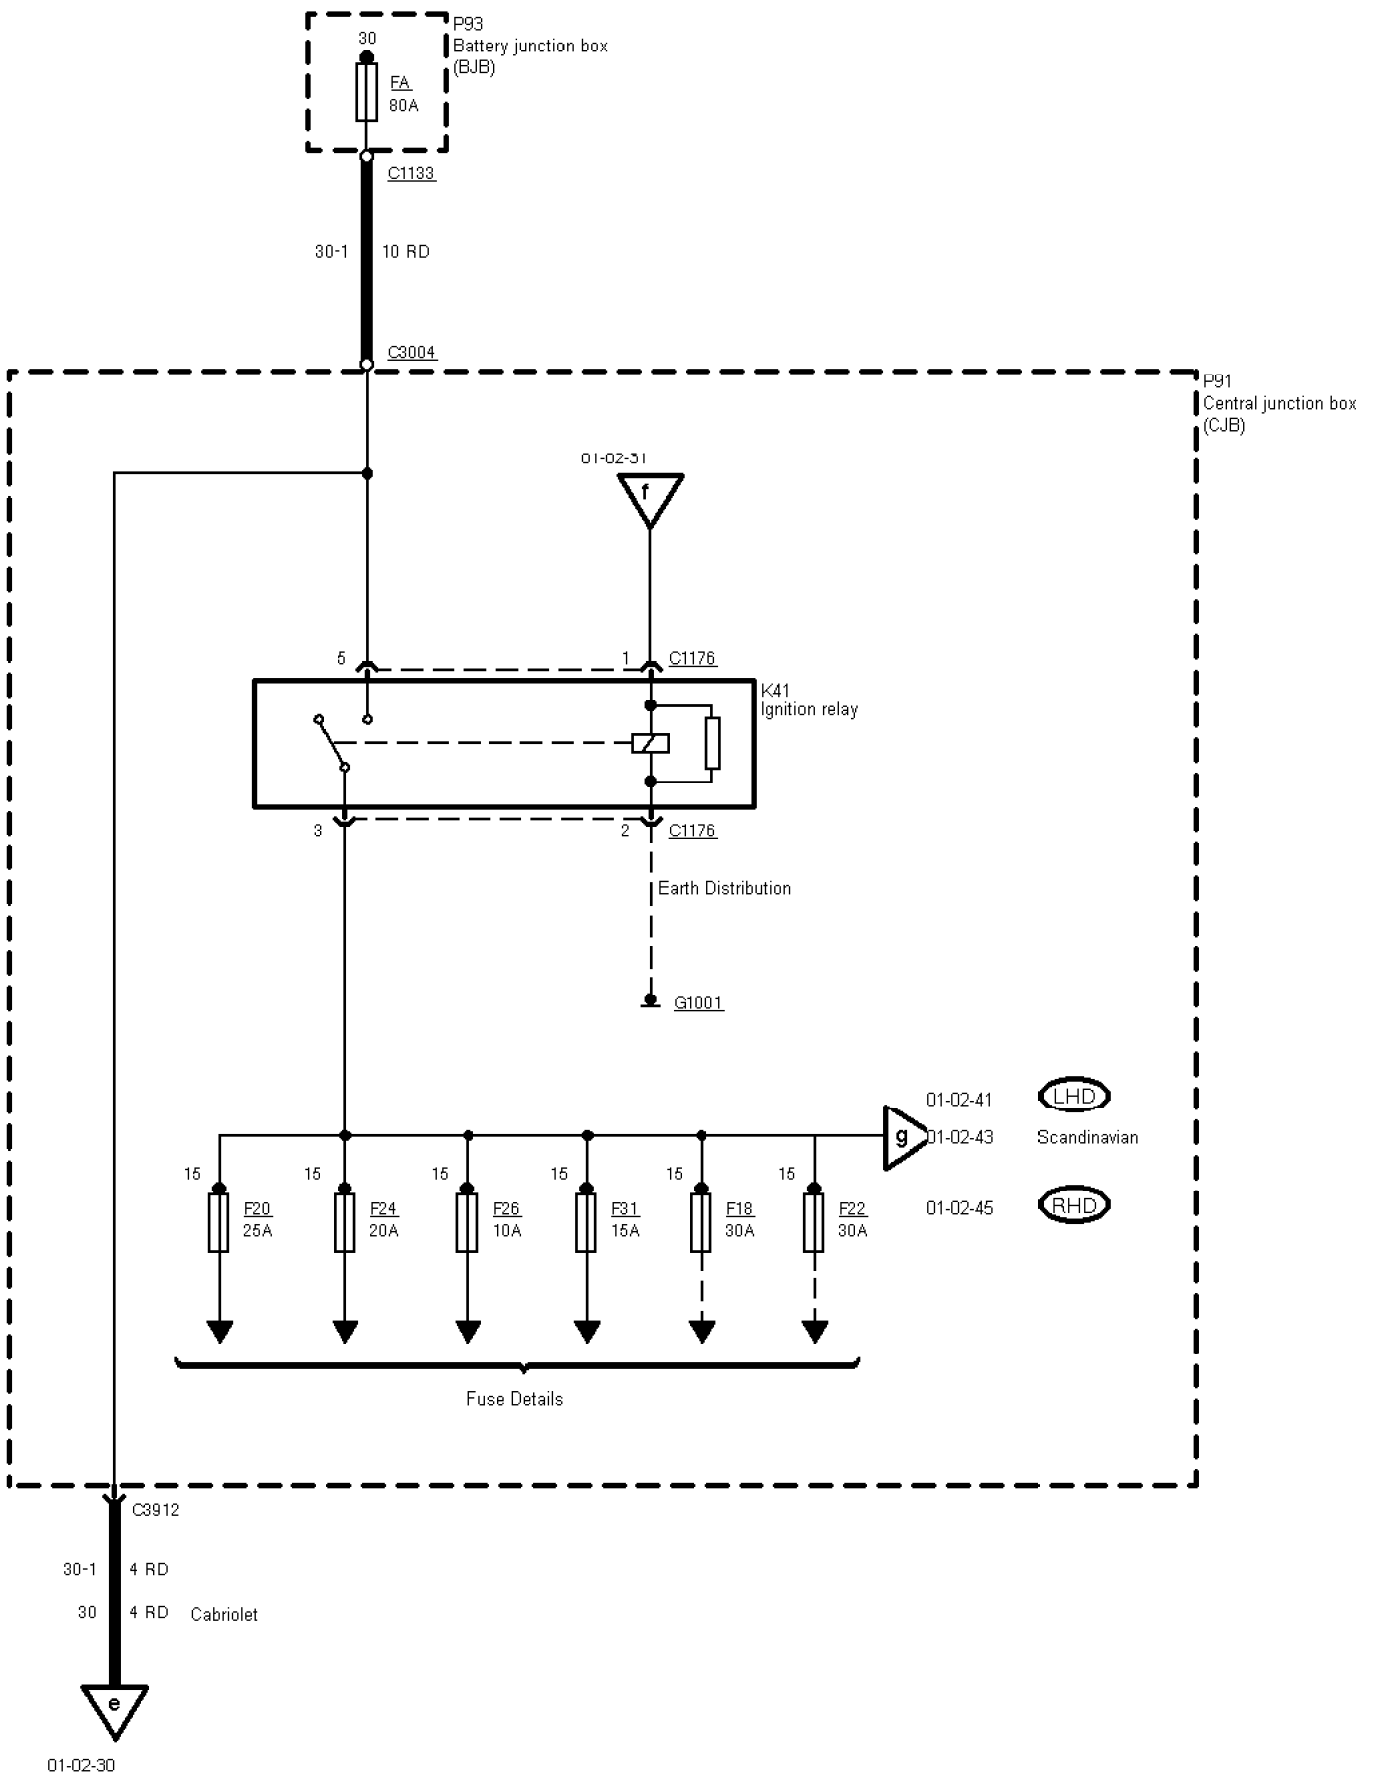


01-02-030 , Power Distribution , As of 95 without RS Cosworth Ignition switch

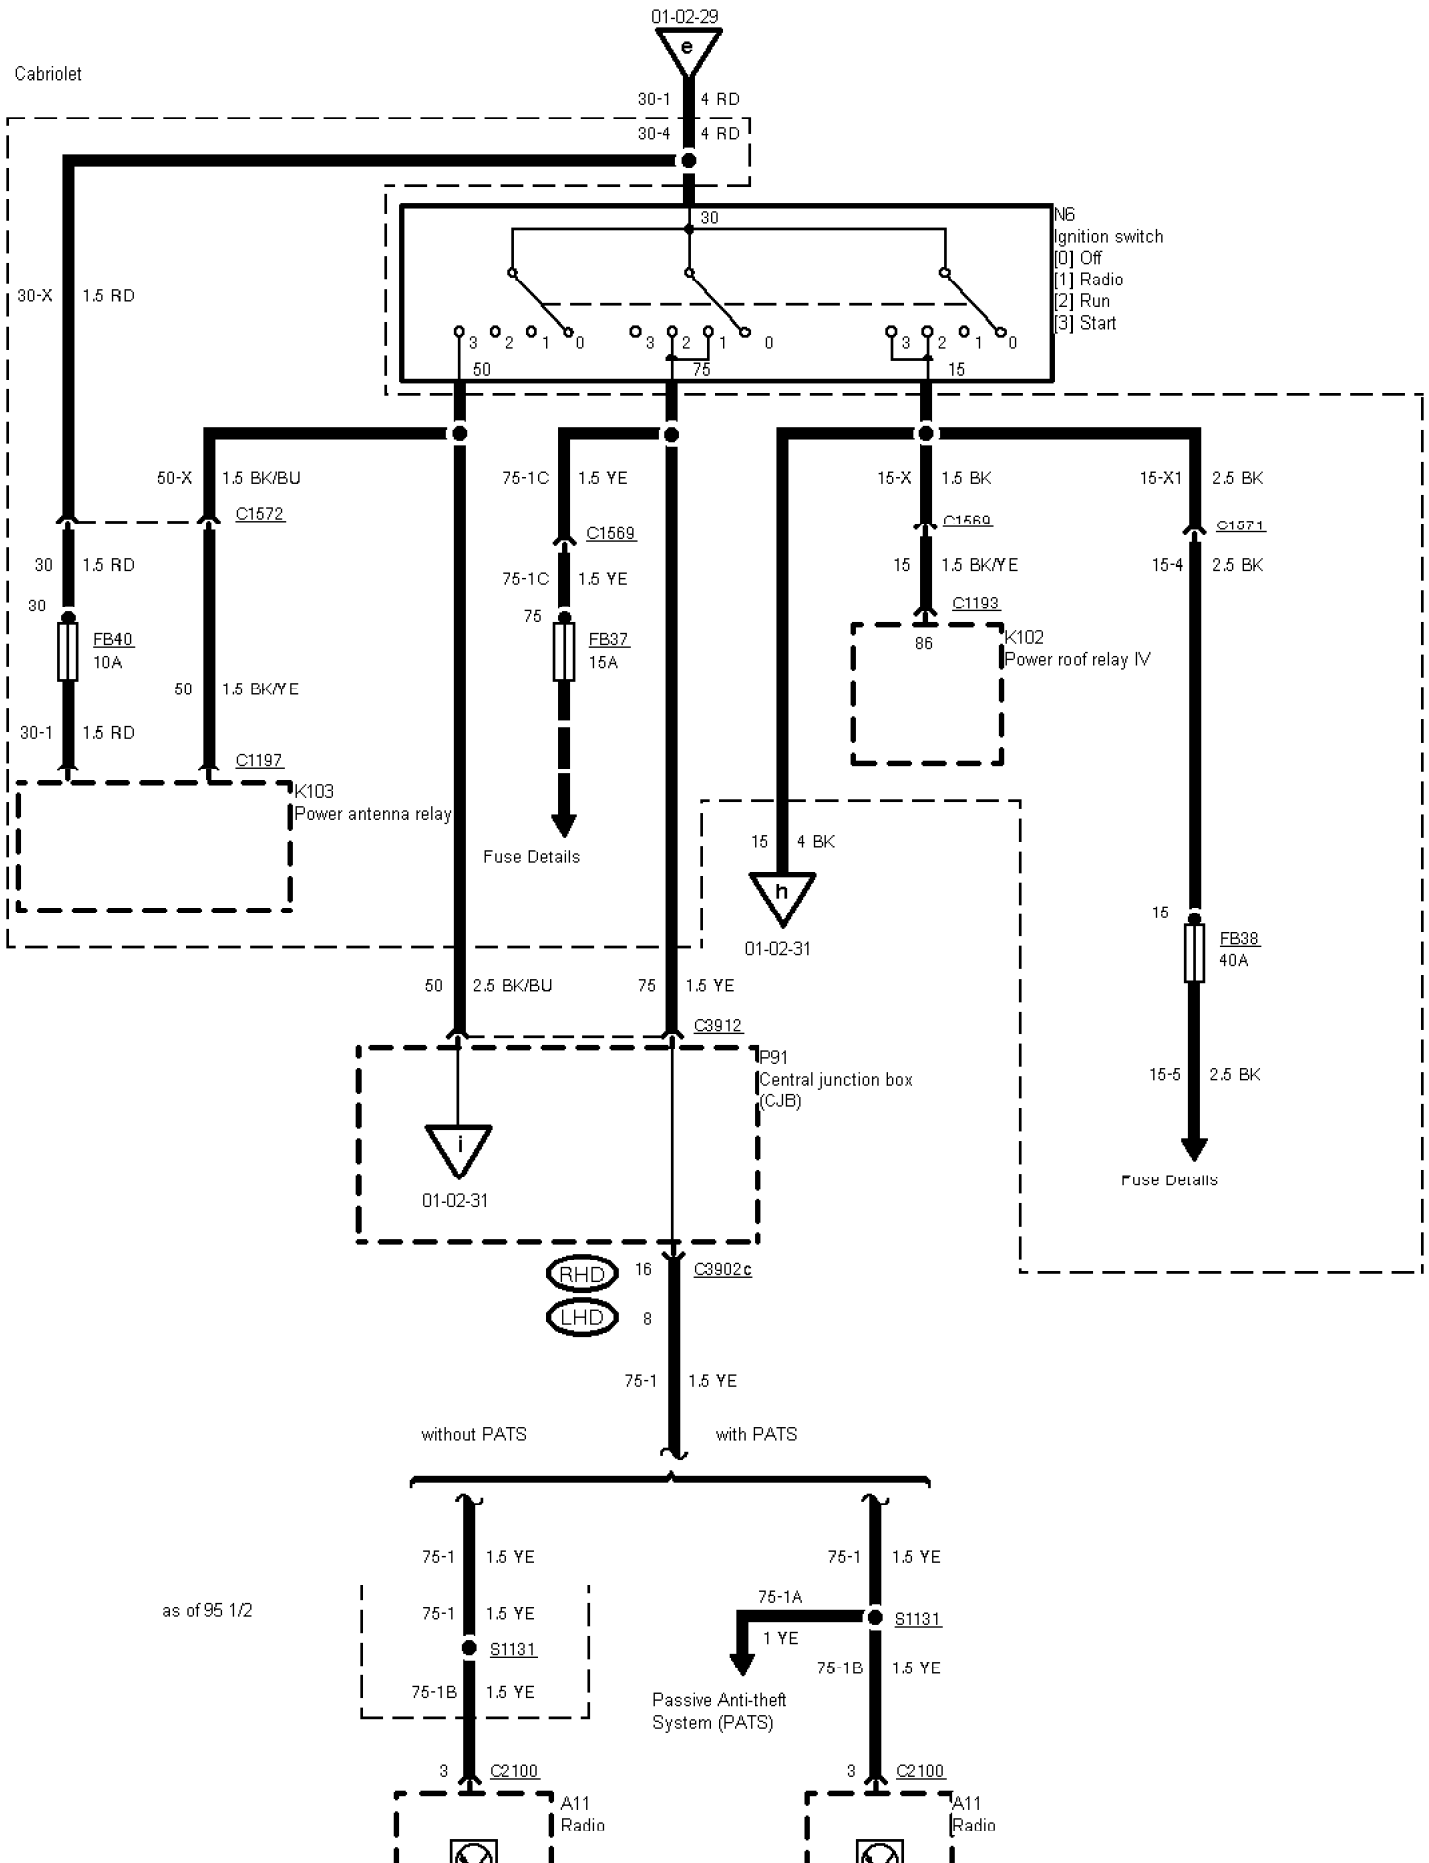




01-02-031 , Power Distribution , As of 95 without RS Cosworth

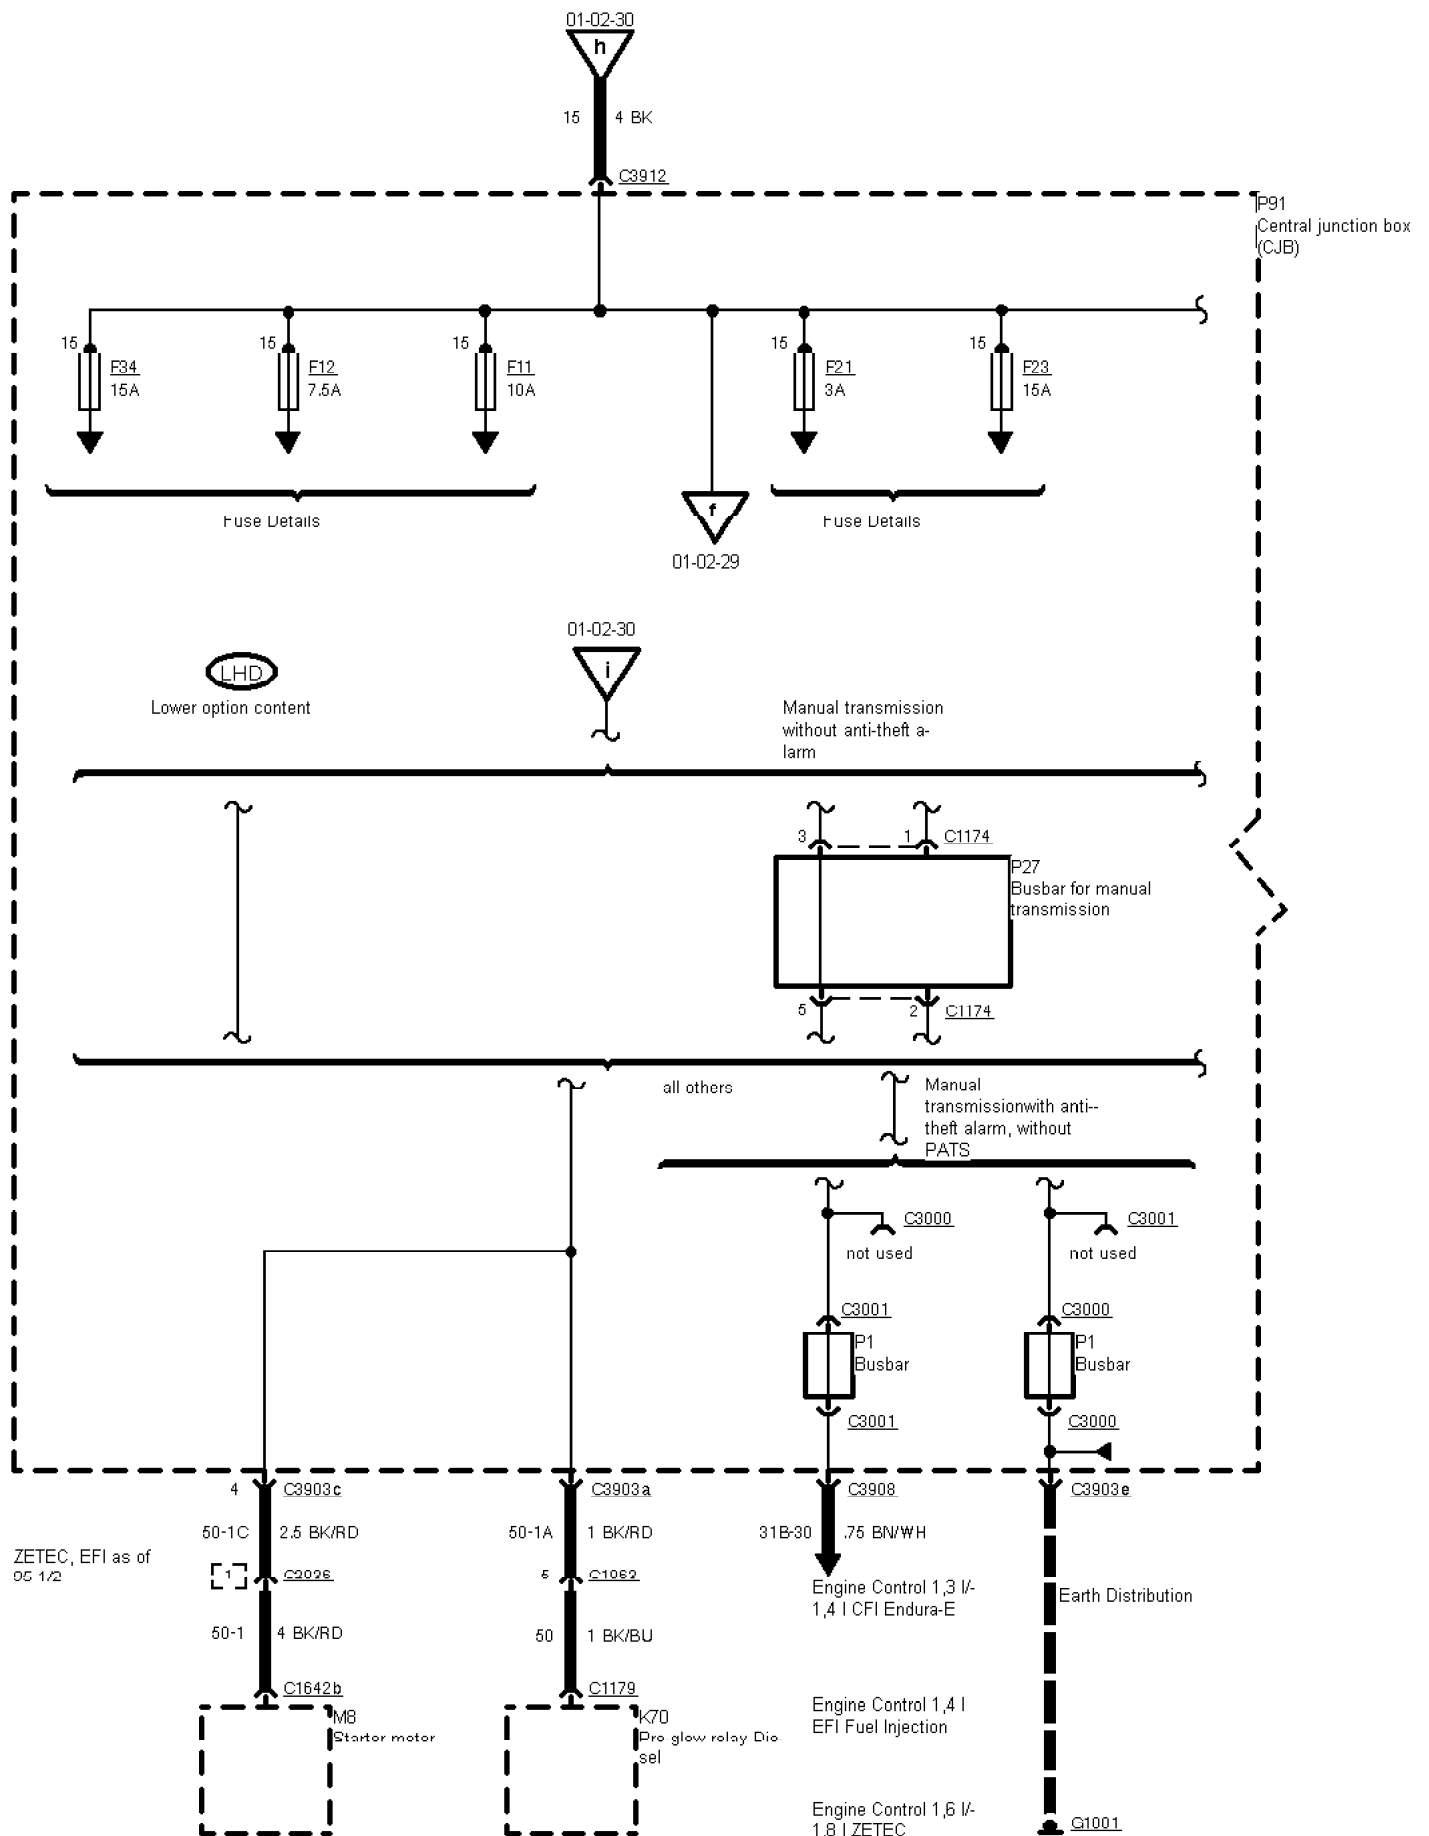


01-02-032 , Power Distribution , As of 95 without RS Cosworth

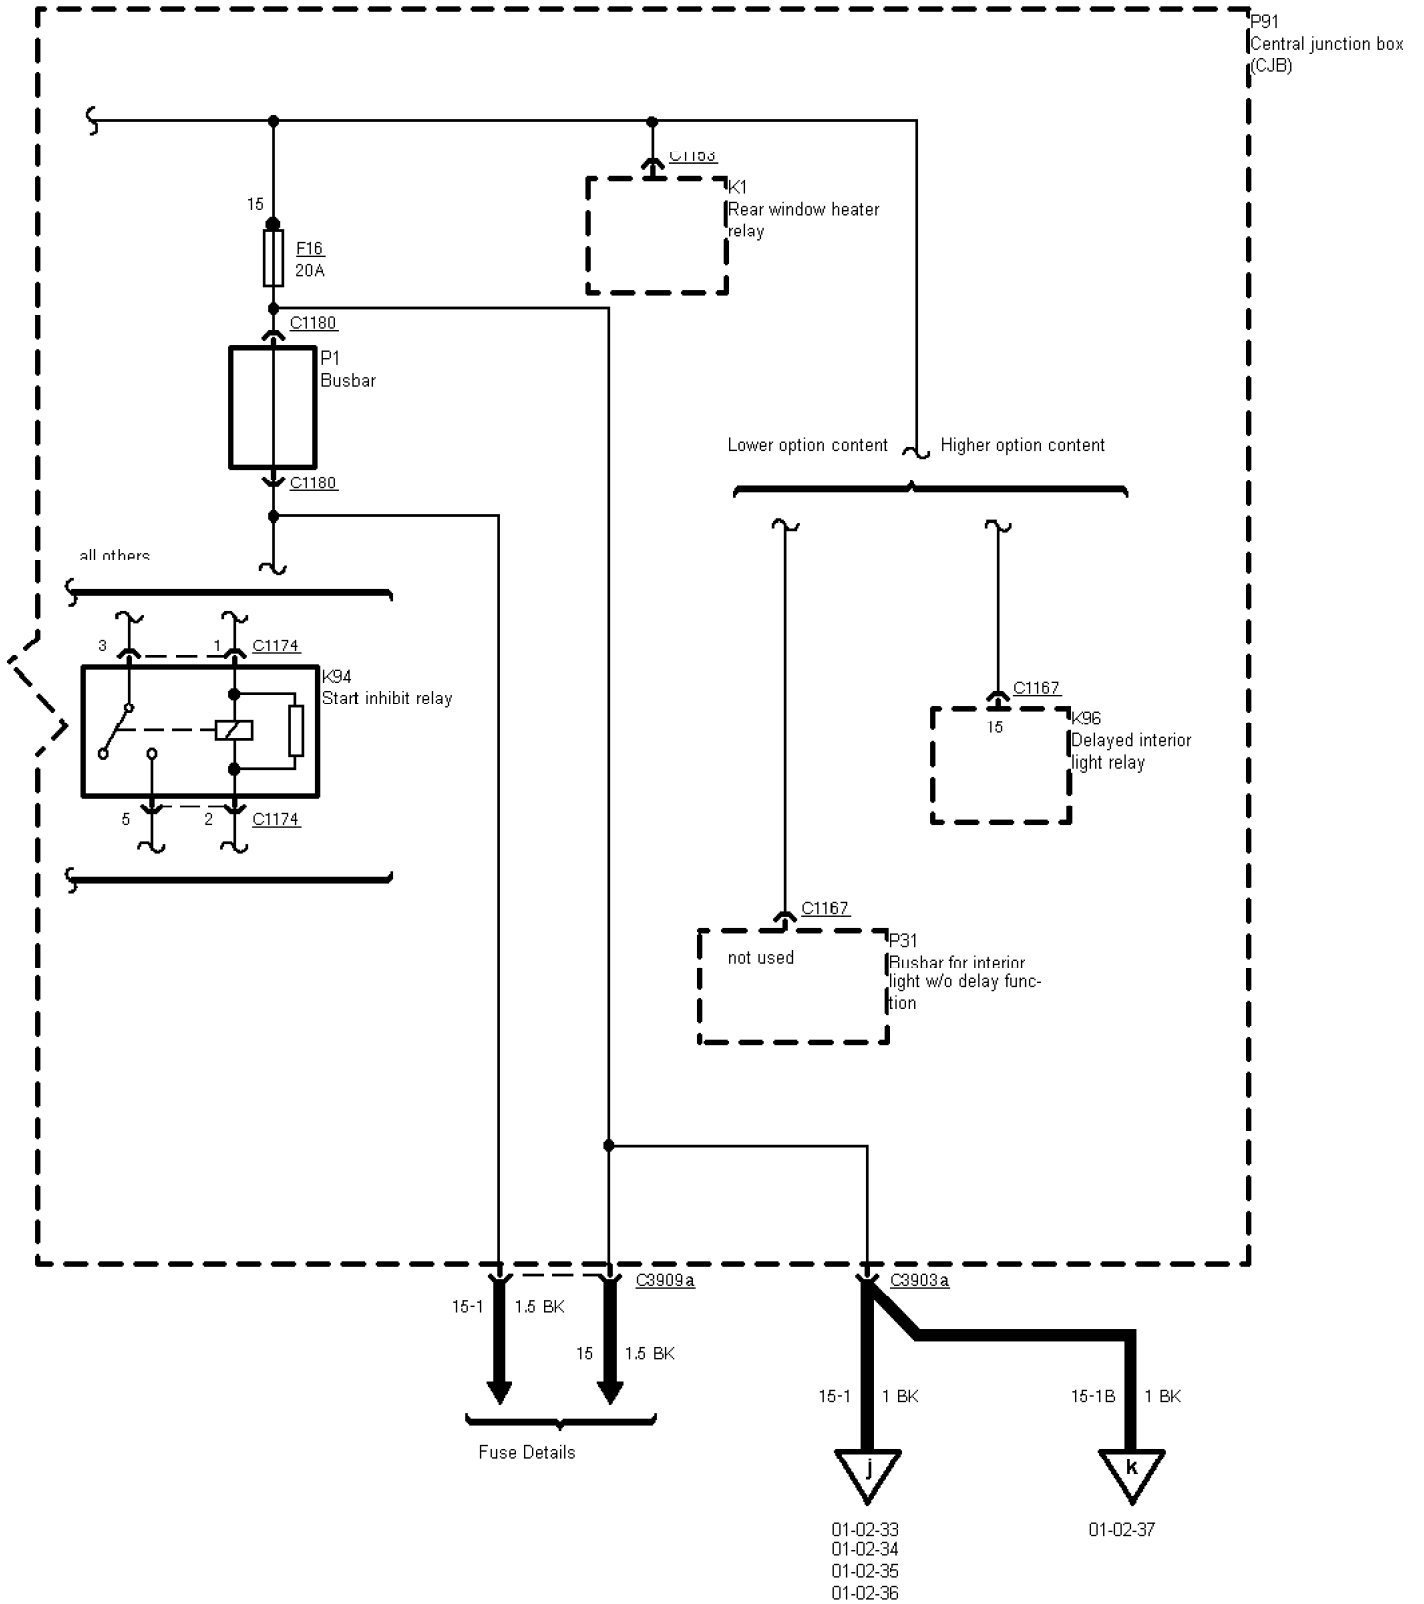


01-02-033 , Power Distribution , As of 95 without RS Cosworth

Engine Control Manual
Transmission 1,3/
1,4/1,6 I, Carburetor

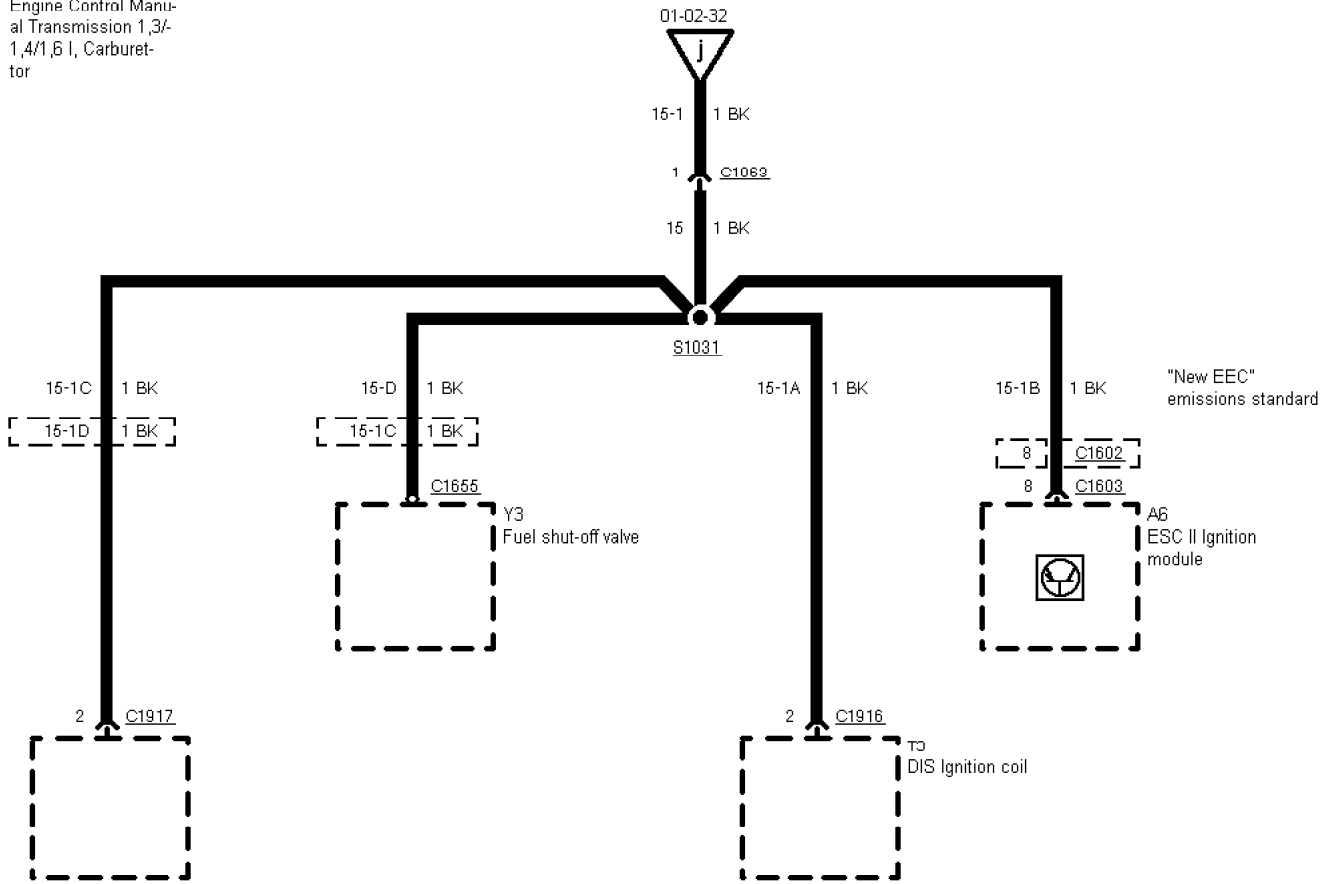

As of 95 without RS Cosworth

Engine Control 1,6
Automatic Transmission,
Carburettor

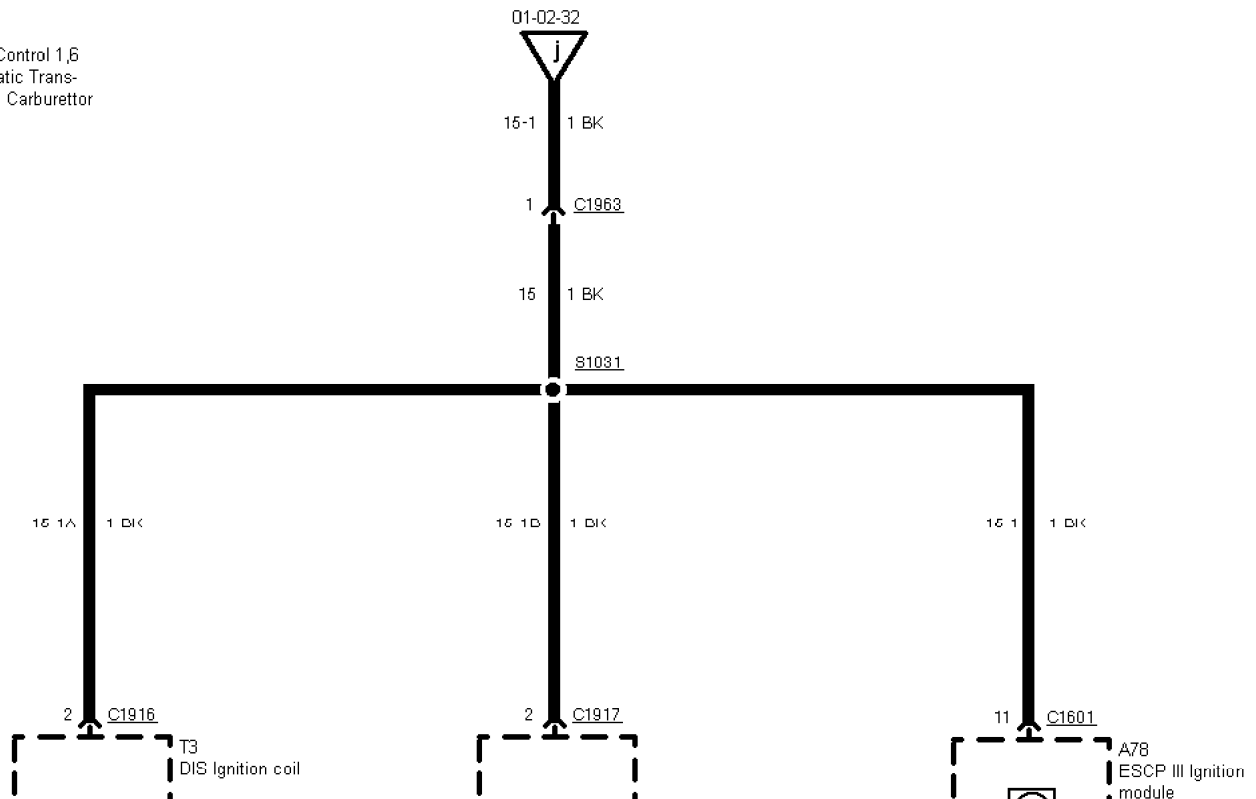




01-02-034 , Power Distribution , As of 95 without RS Cosworth

Engine Control 1,3
 I/1,4 I CFI Endura--
 E


◆ → 95
 ◆◆ 95 → 95 ½
 ◆◆◆ 95 ½ →

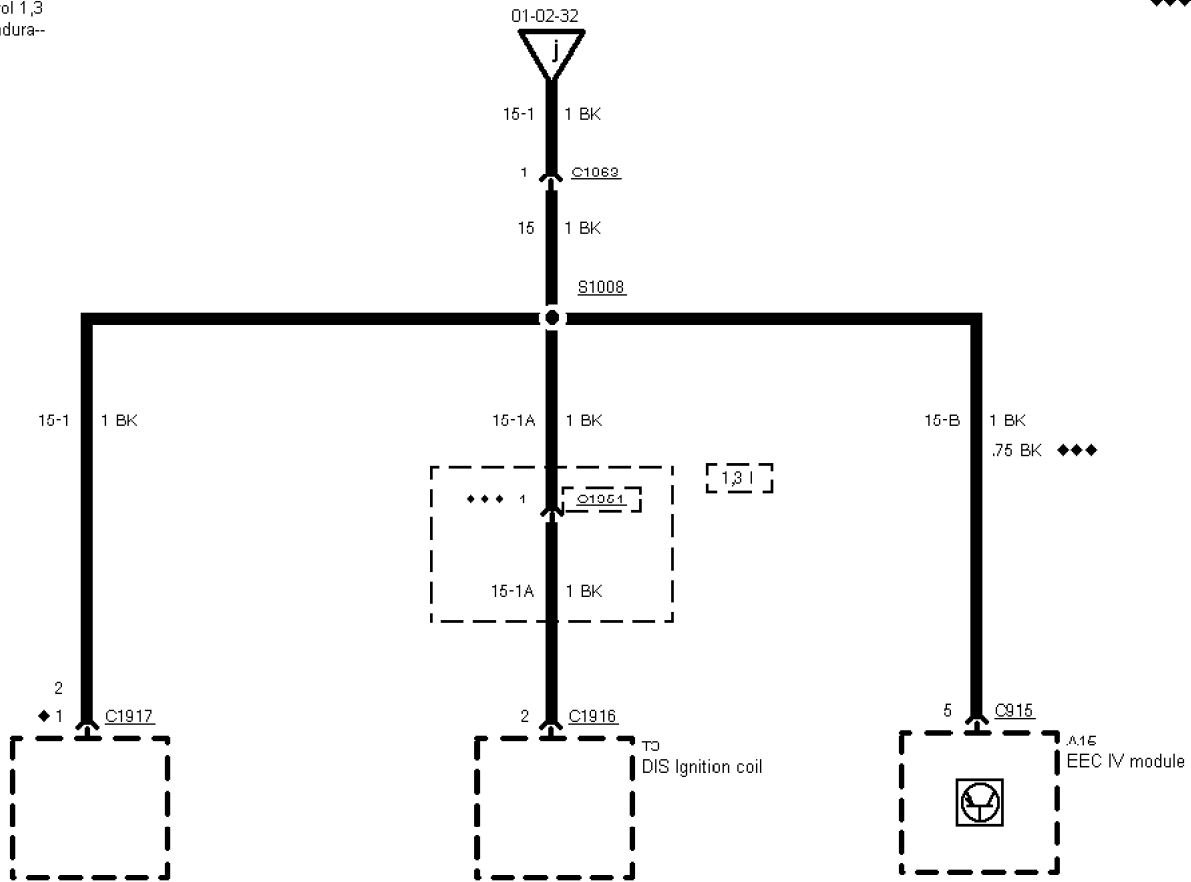

As of 95 without RS Cosworth

Engine Control 1,4
 I EFI Fuel Injection

Engine Control 1,6
 I/1,8 I ZETEC

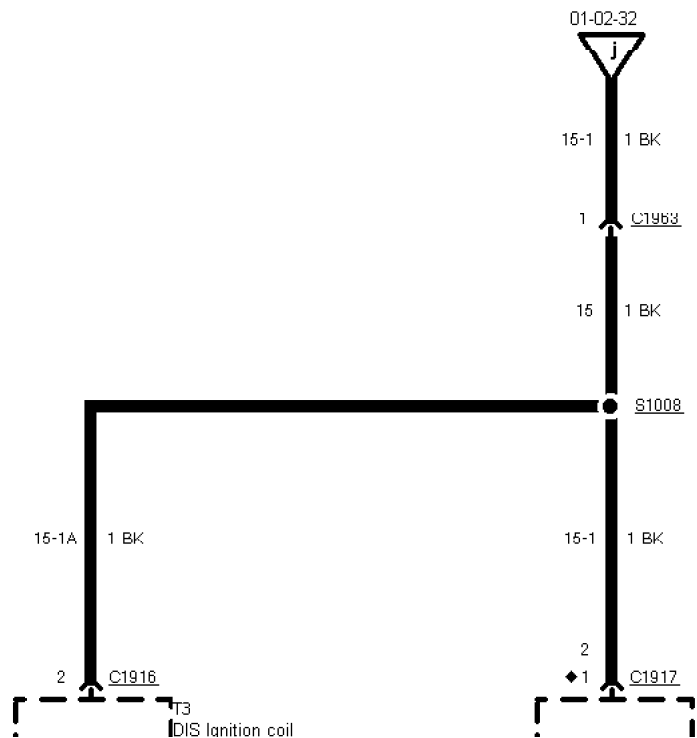




01-02-035 , Power Distribution , As of 95 without RS Cosworth


Engine Control 2,0
I EFI


- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

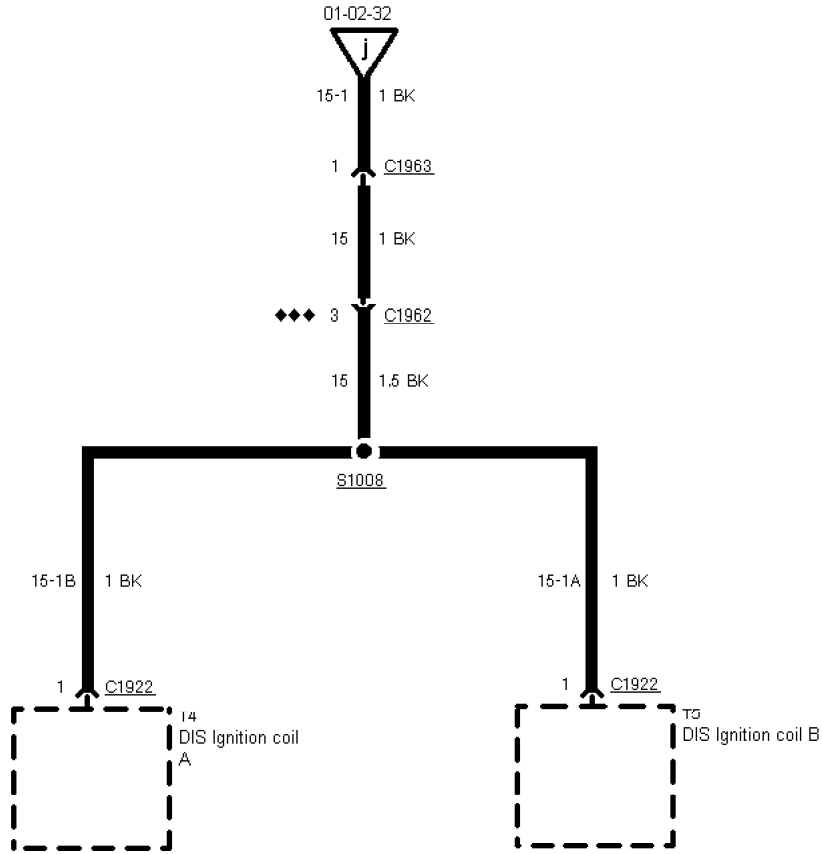

As of 95 without RS Cosworth

Engine Control 1,8
I Diesel

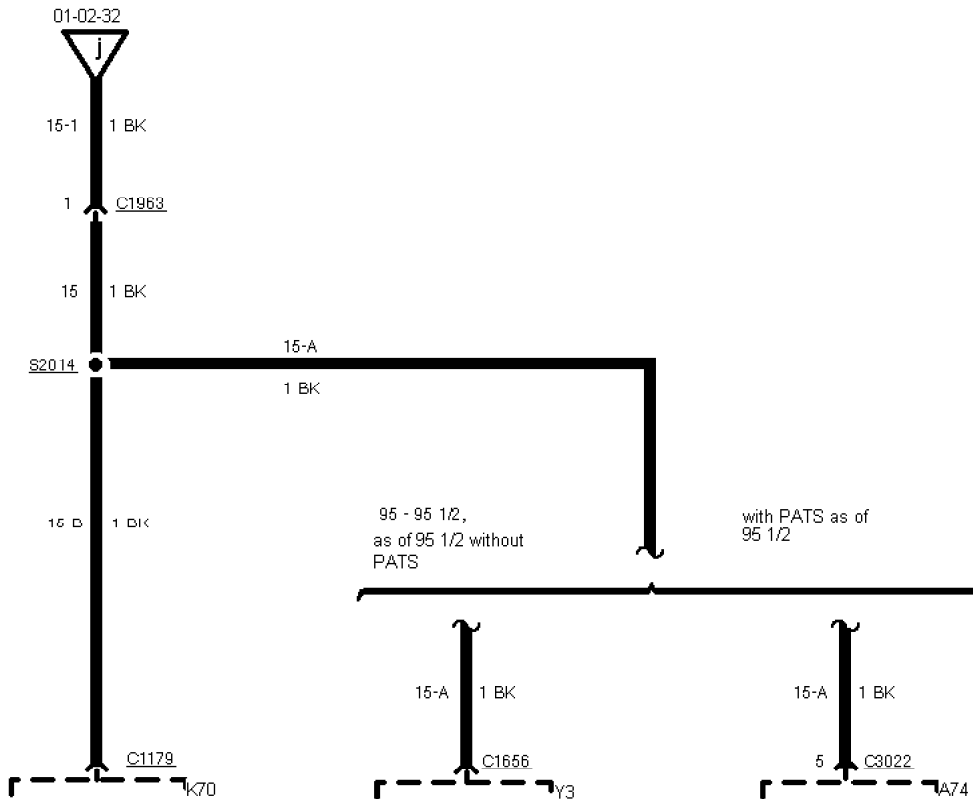


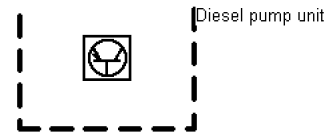

01-02-036 , Power Distribution , As of 95 without RS Cosworth


Engine Control 1,8
I Turbo Diesel


- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

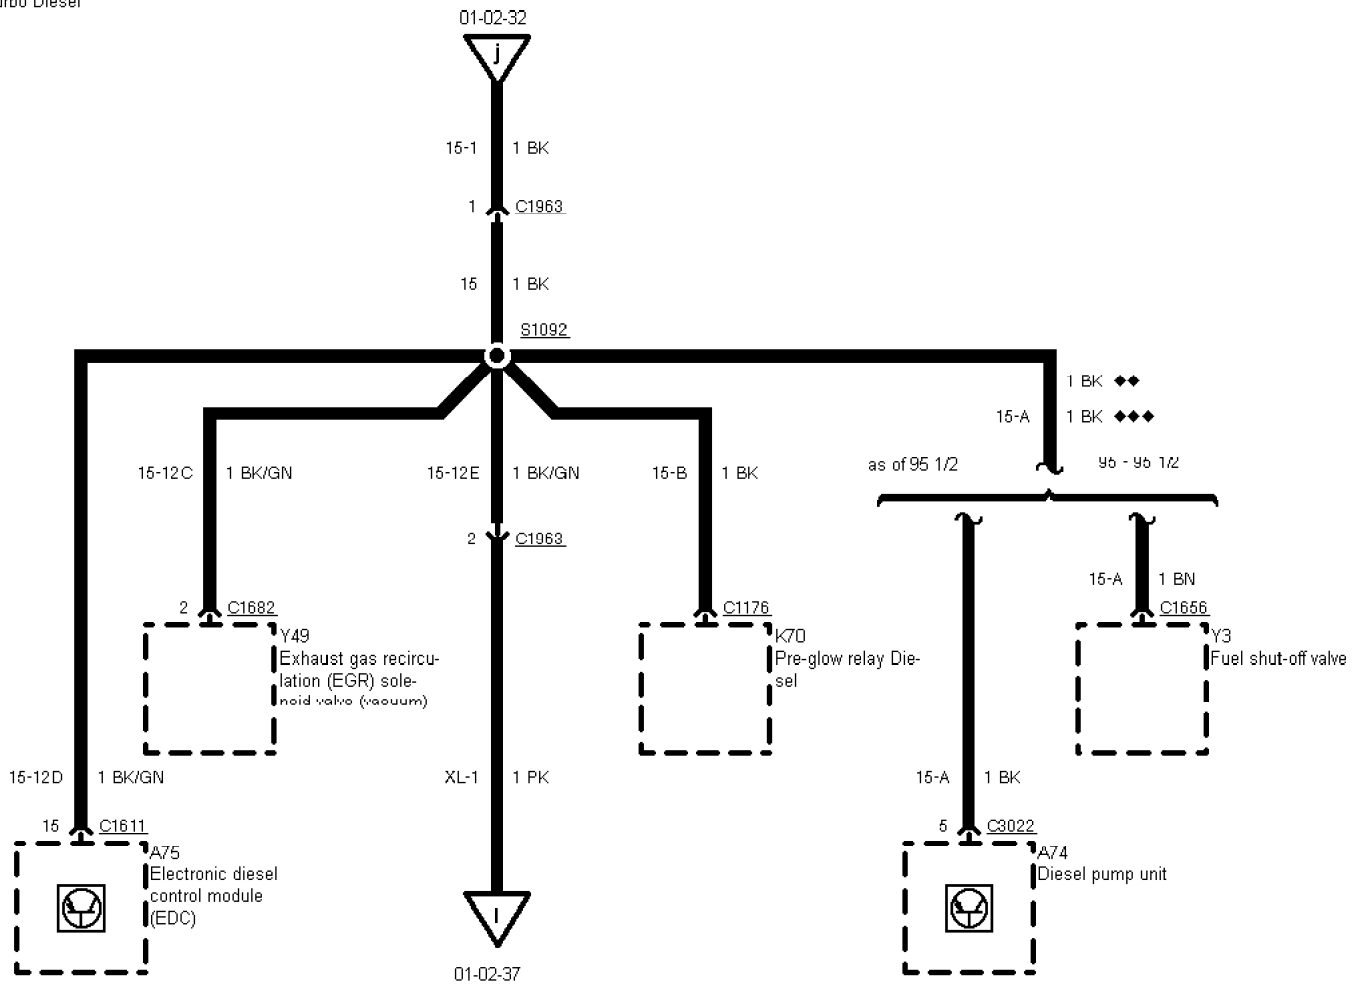

As of 95 without RS Cosworth

 
Engine Control 1,6
I Automatic Transmission, Carburettor

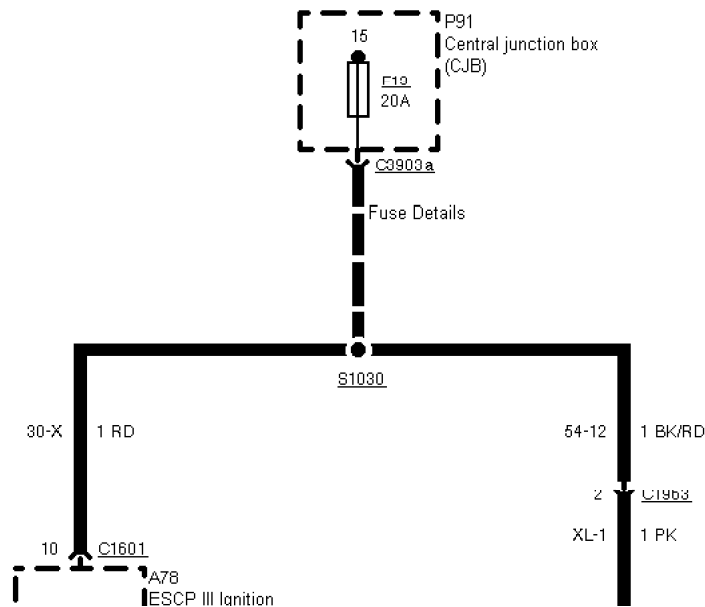




01-02-37

01-02-037 , Power Distribution , As of 95 without RS Cosworth

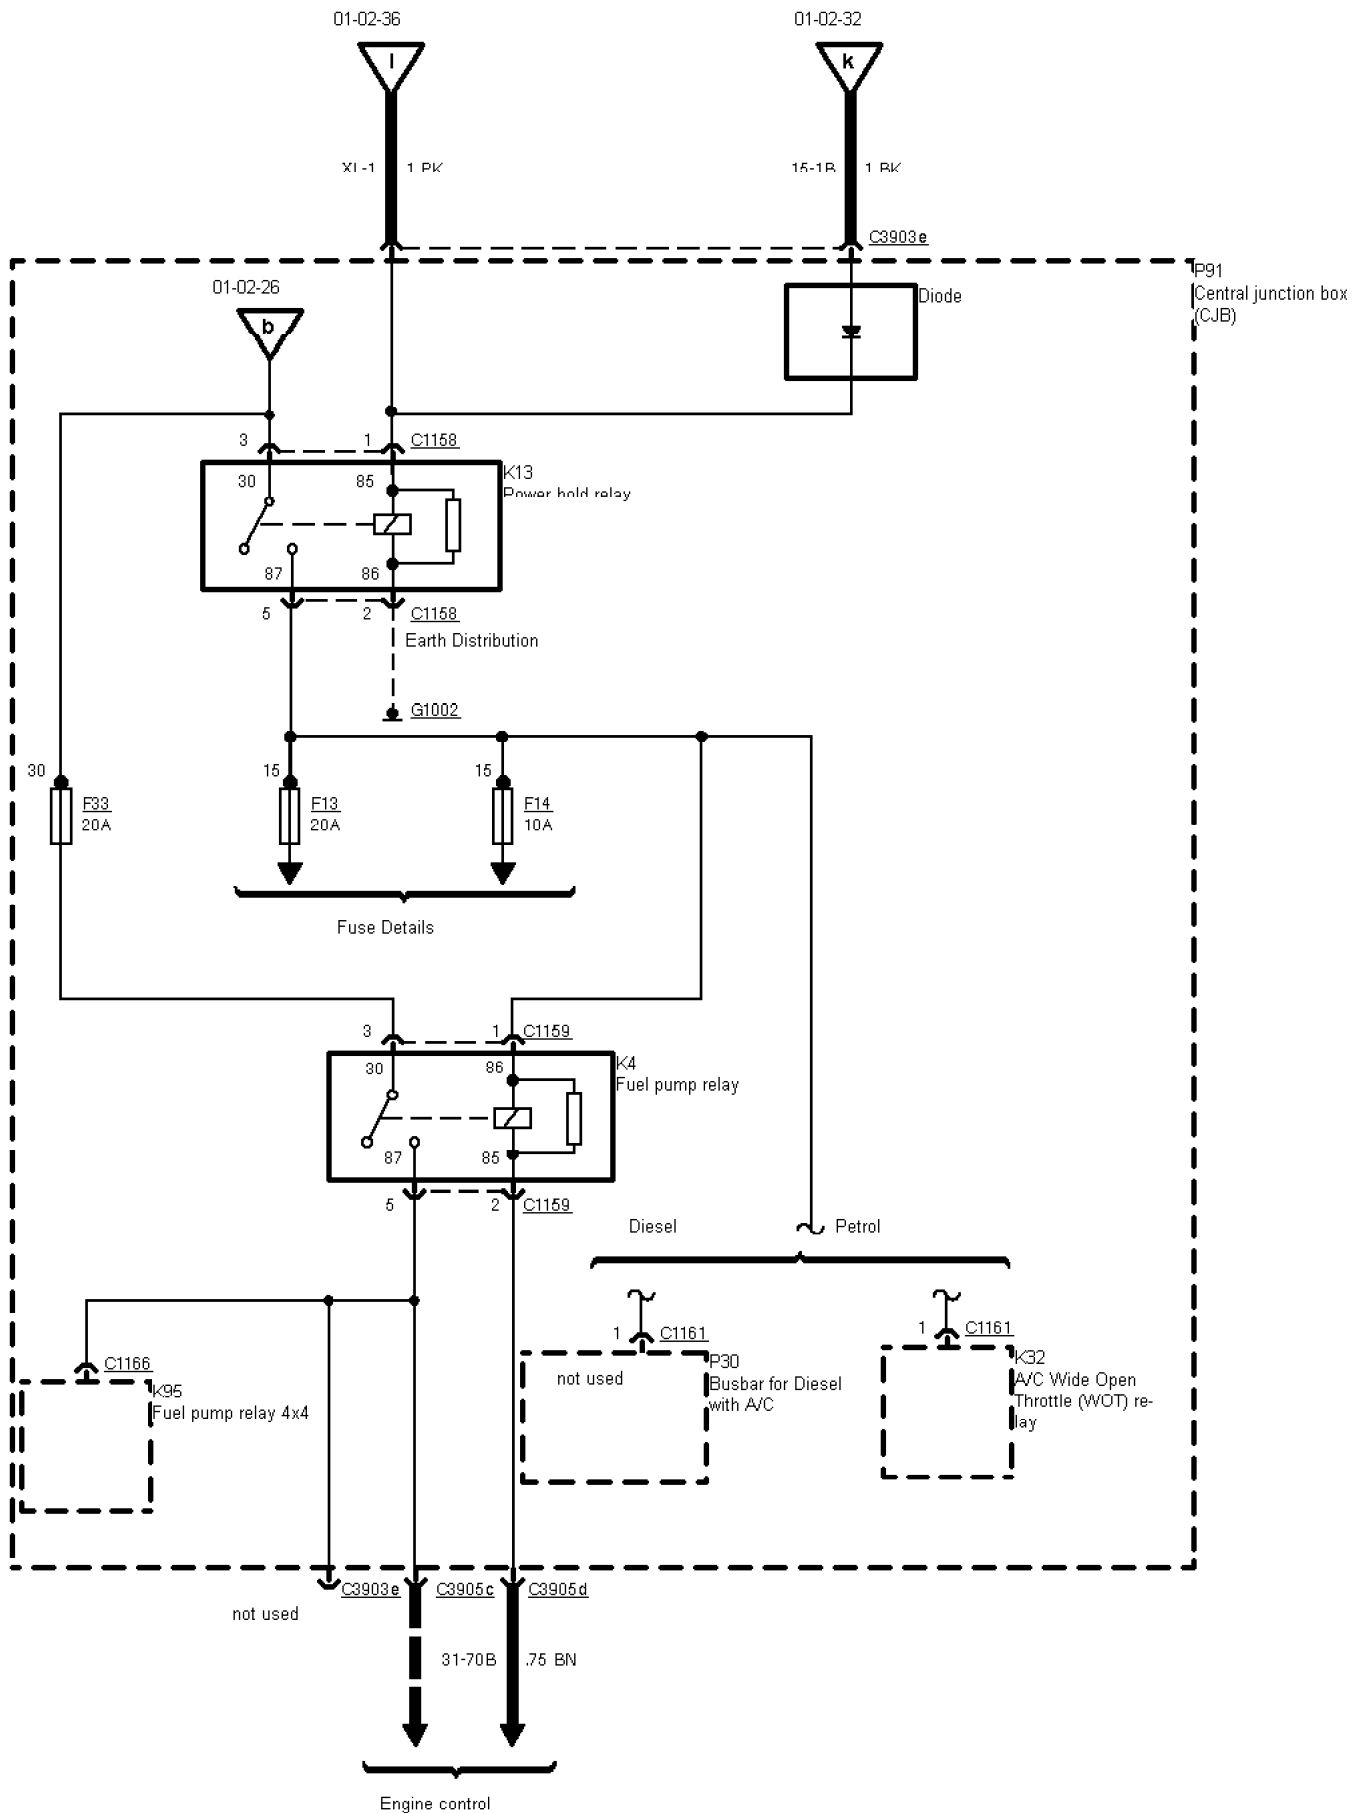


01-02-038 , Power Distribution , As of 95 without RS Cosworth Light switch

- ◆ → '95
- ◆◆ 95 → '95 ½
- ◆◆◆ '95 ½ →

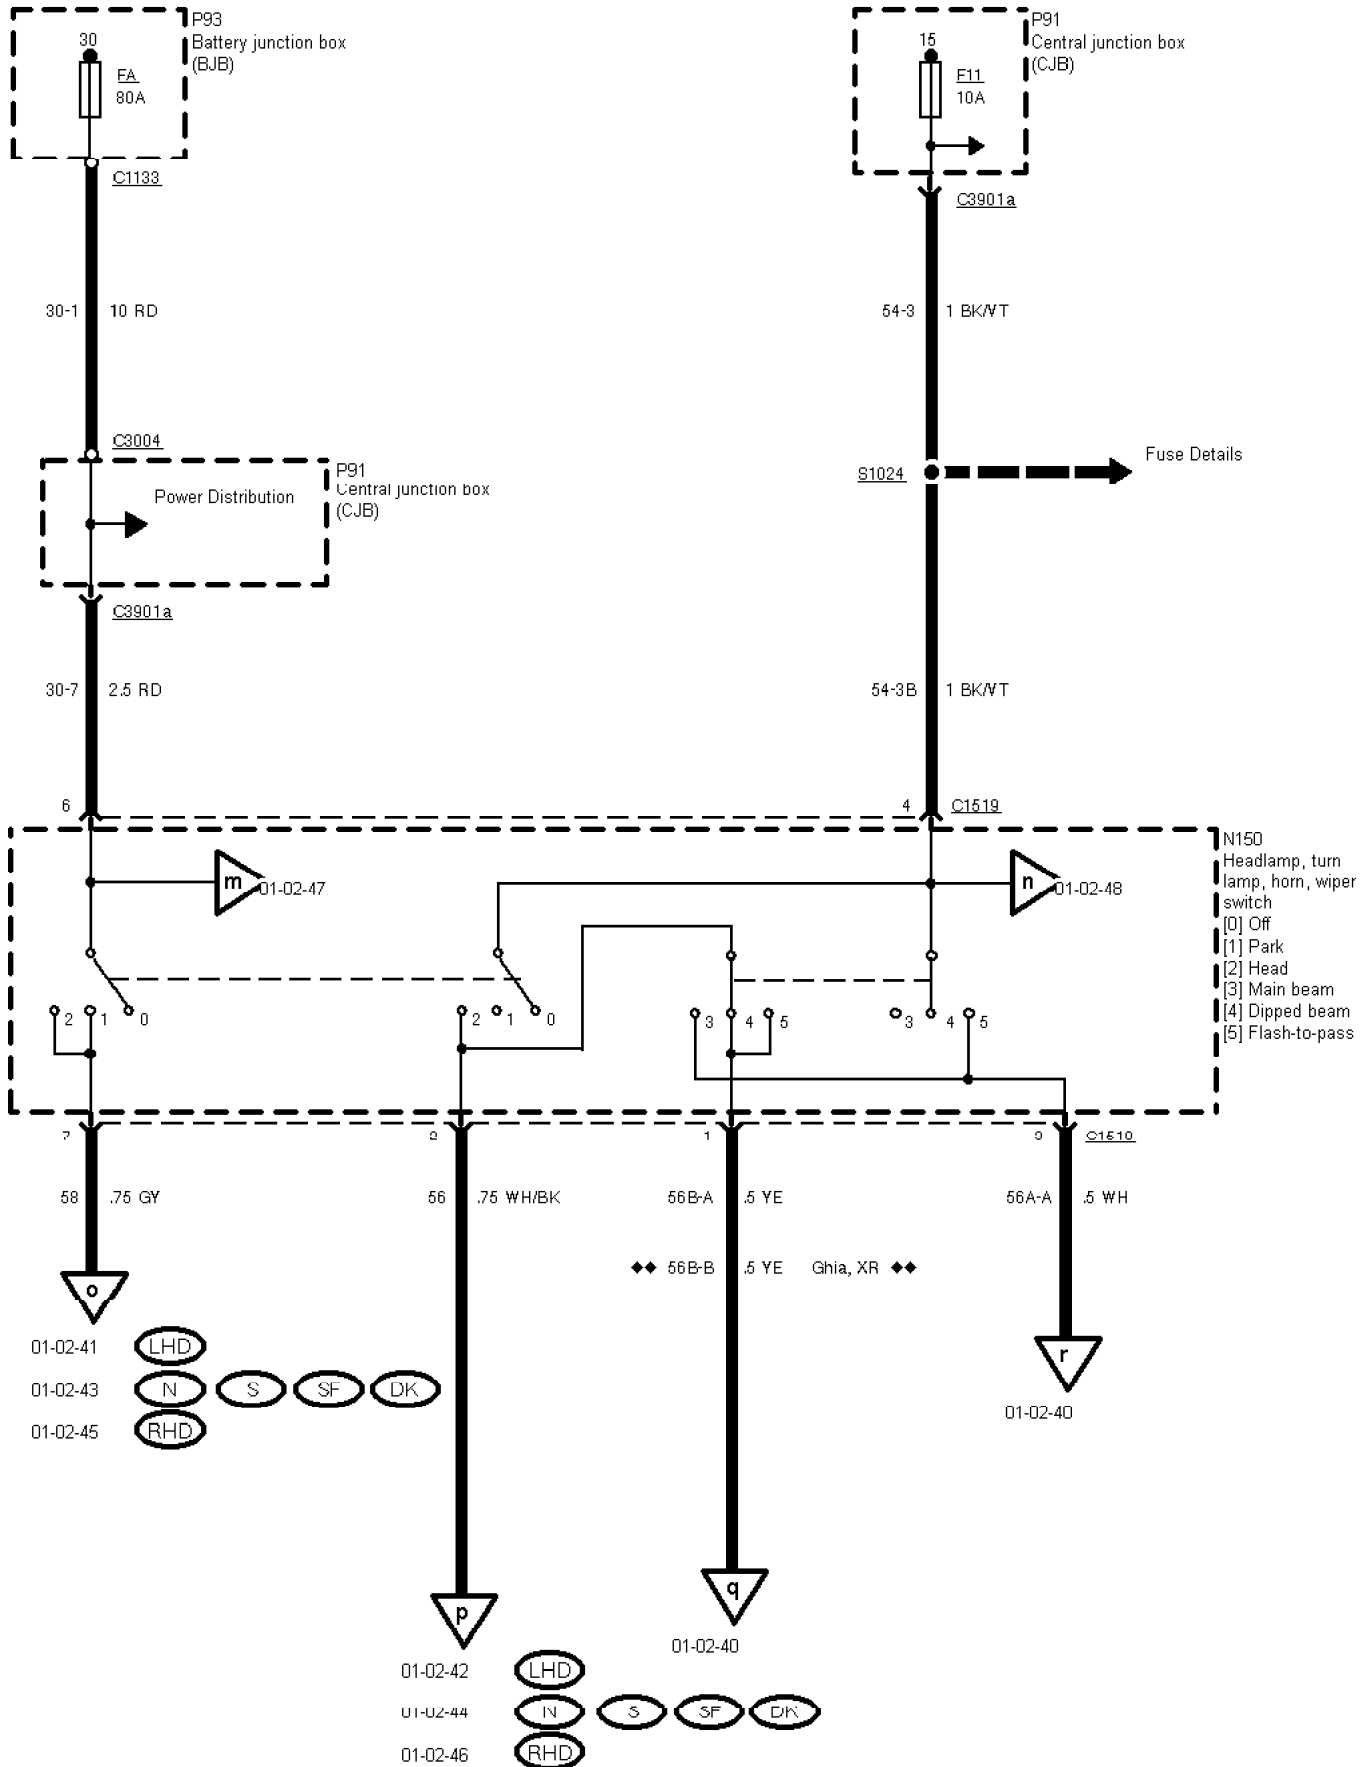


01-02-039 , Power Distribution , As of 95 without RS Cosworth

- ◆ → 95
- ◆◆ 95 → 95 ½
- ◆◆◆ 95 ½ →

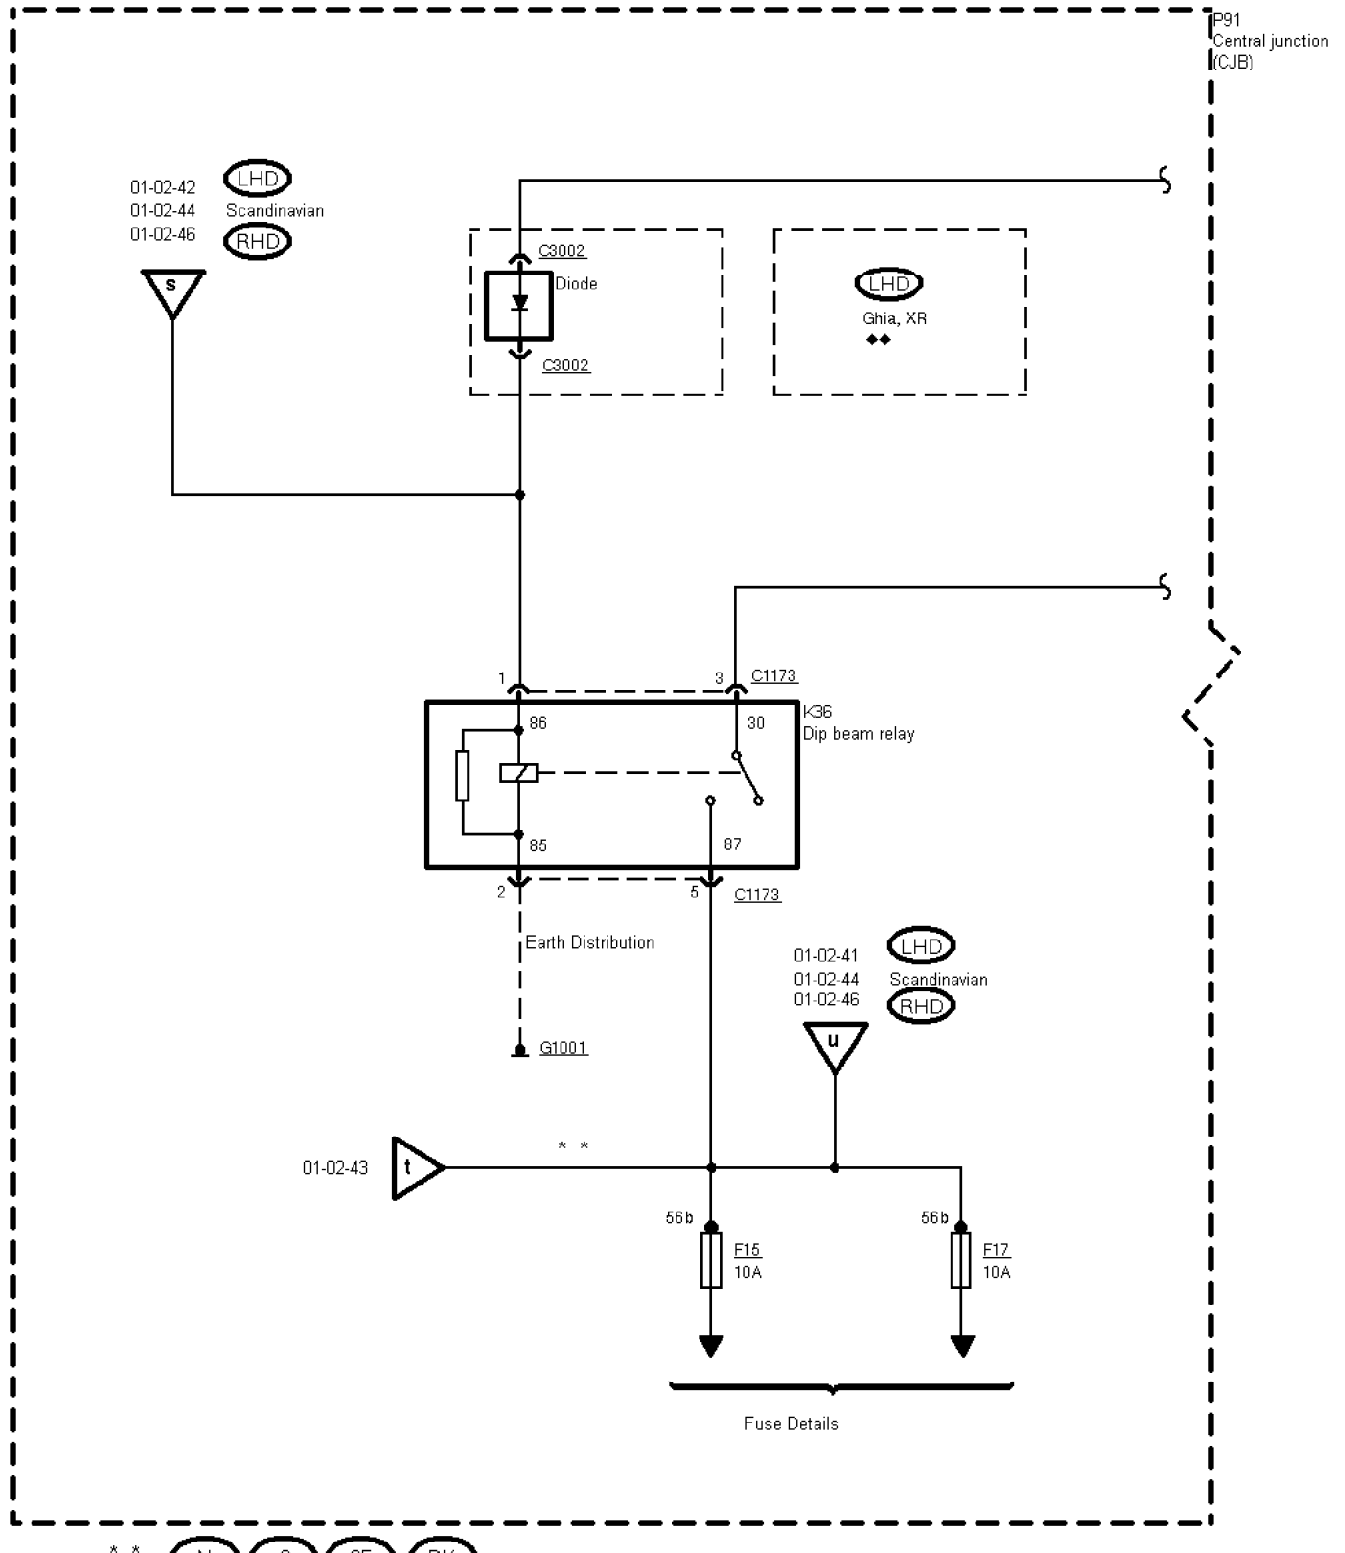

01-02-040 , Power Distribution , As of 95 without RS Cosworth

- ◆ → 95
- ◆◆ 95 → 95 ½
- ◆◆◆ 95 ½ →

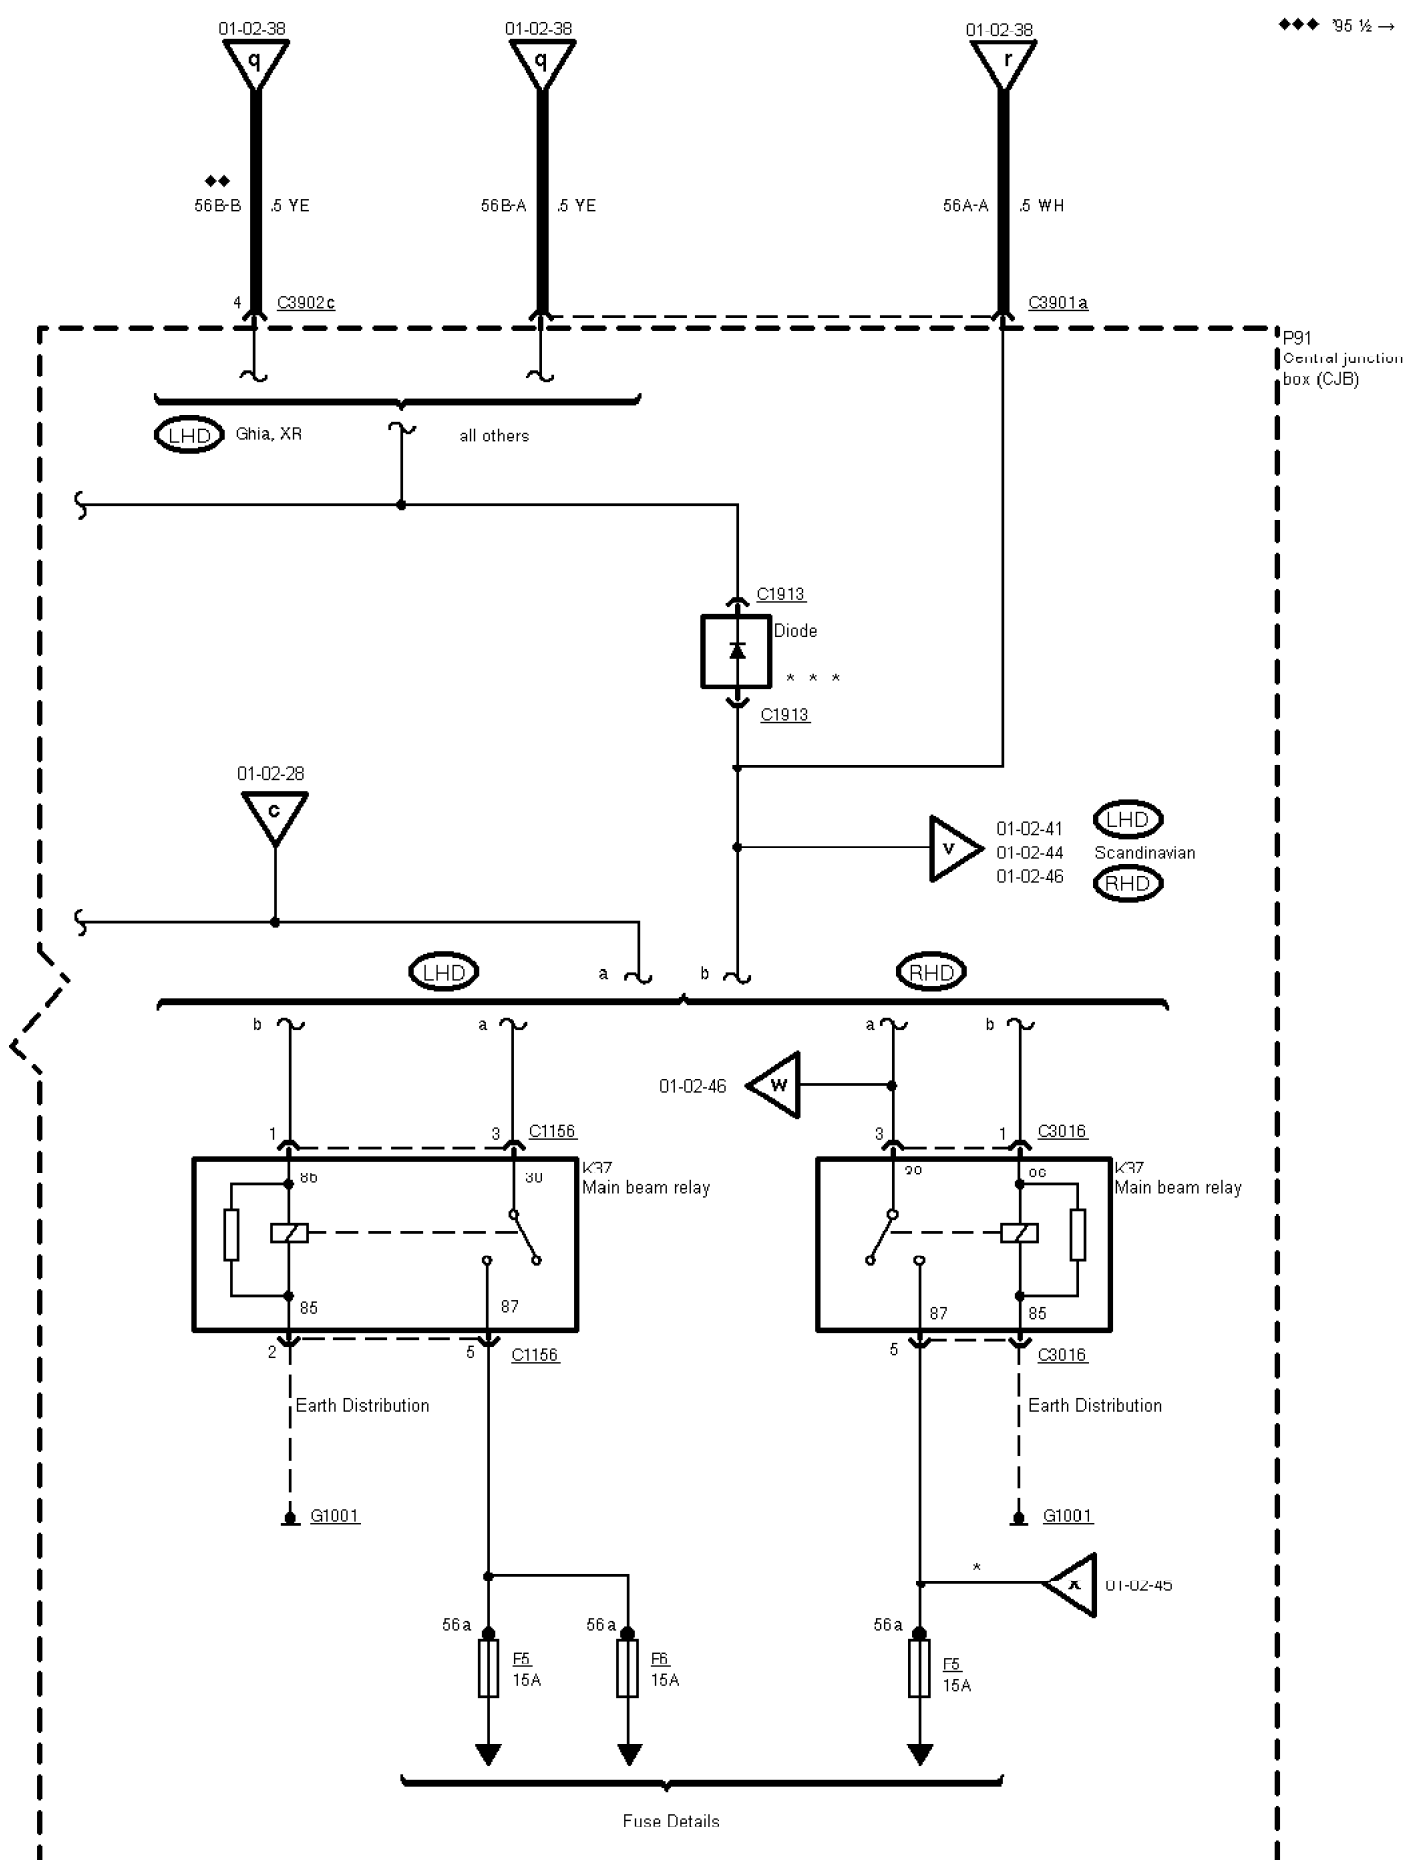

*

RHD

*


*

*

Higher option content


01-02-041 , Power Distribution , As of 95 without RS Cosworth Left-hand-drive vehicles

01-02-042 , Power Distribution , As of 95 without RS Cosworth Left-hand-drive vehicles

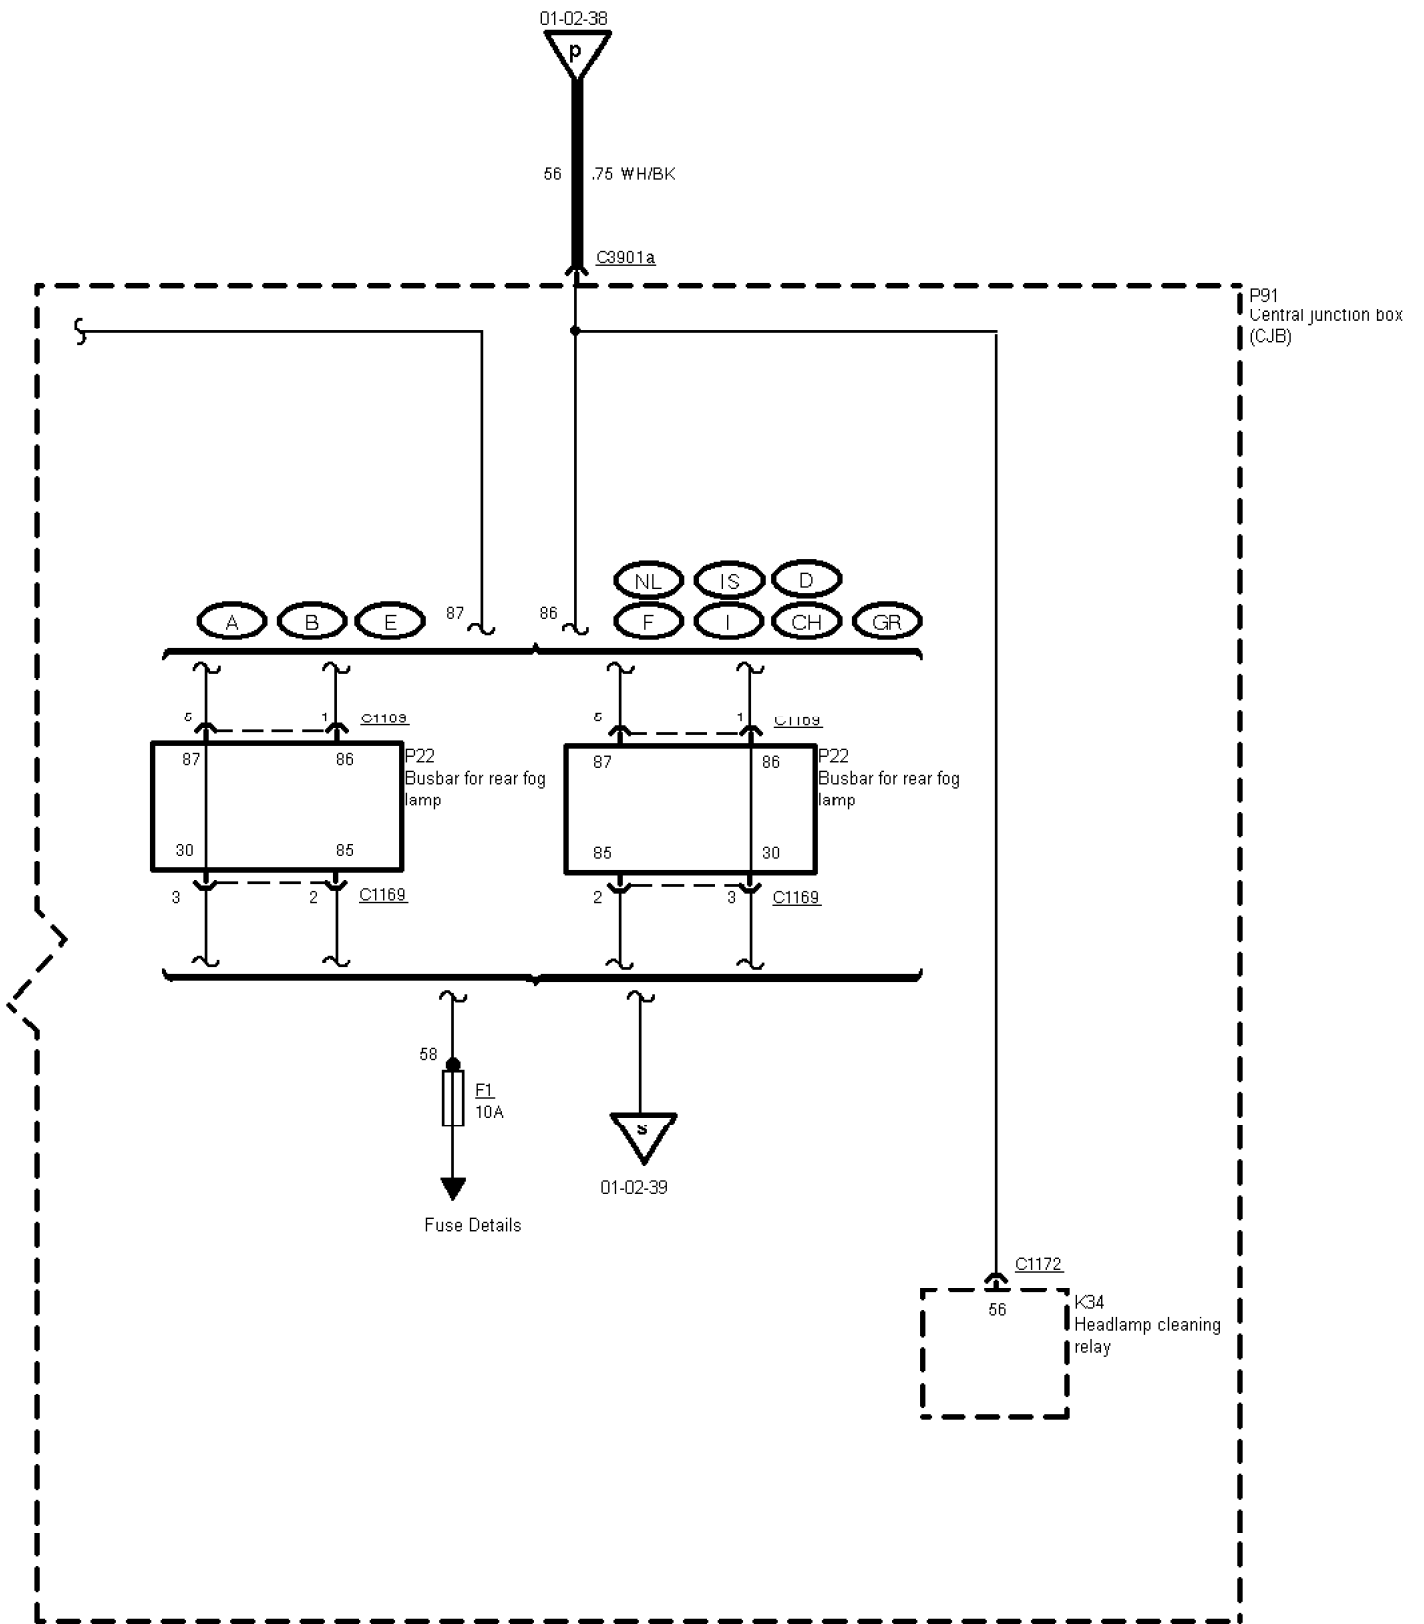

01-02-043 , Power Distribution , As of 95 without RS Cosworth

N S SF DK

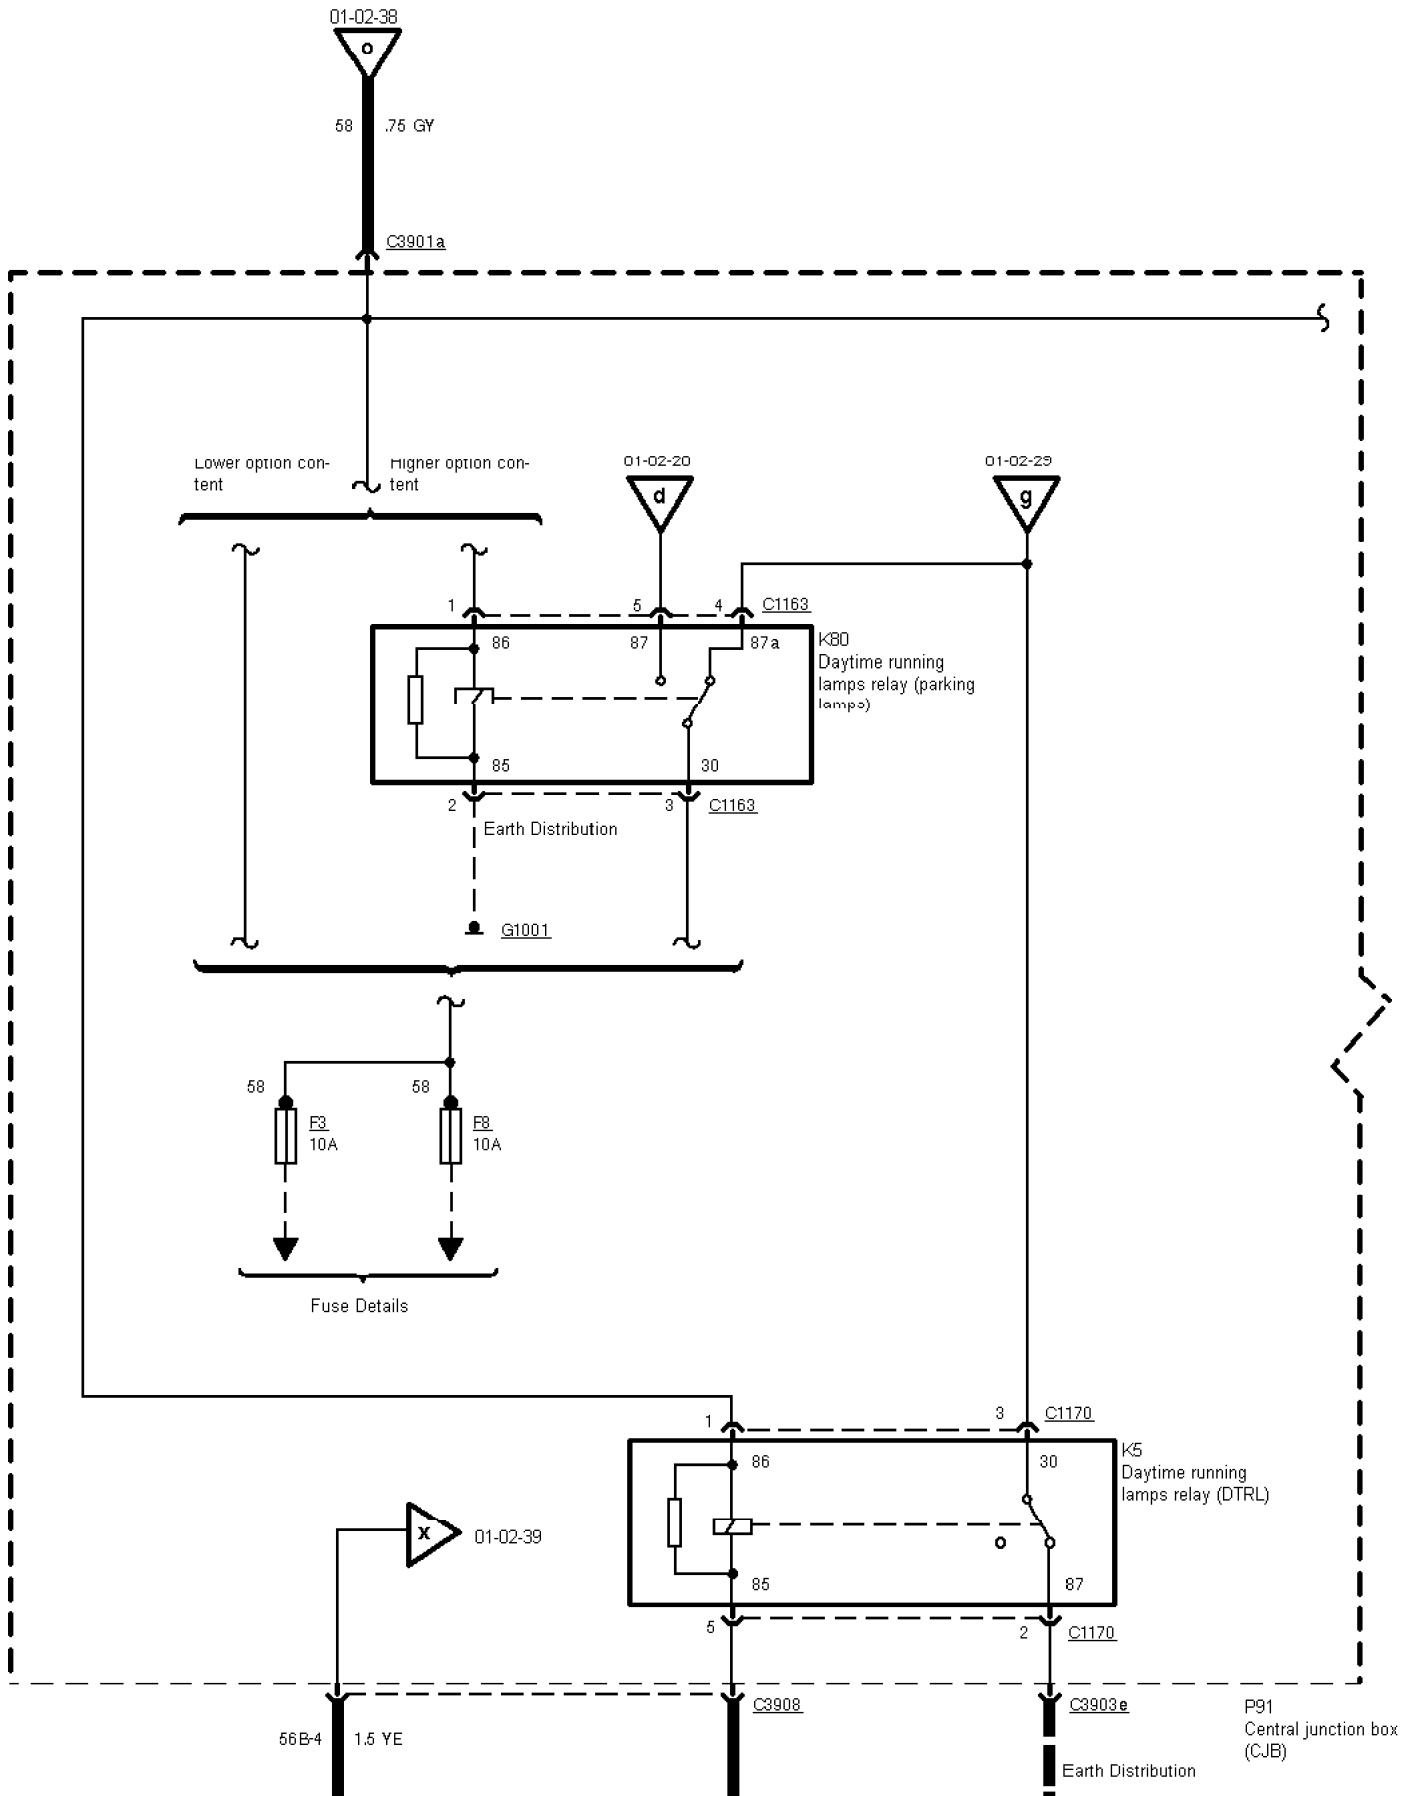



G1001

01-02-044 , Power Distribution , As of 95 without RS Cosworth

N S SF DK


01-02-38
P

56 .75 WH/BK


C3901a

P91
Central junction box
(CJB)

01-02-40
V

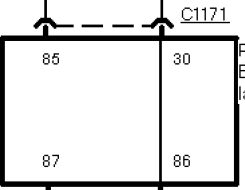

01-02-39
U



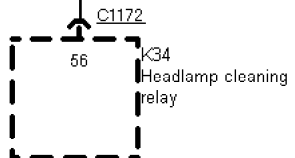


S N

87

86

 DK SF

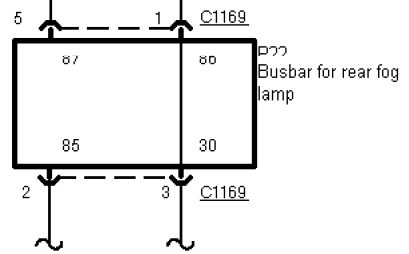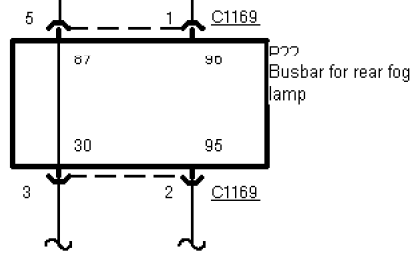

Fuse Details


01-02-39
S

5
C3902c



Fog Lamps


01-02-045 , Power Distribution , As of 95 without RS Cosworth Right-hand-drive vehicles

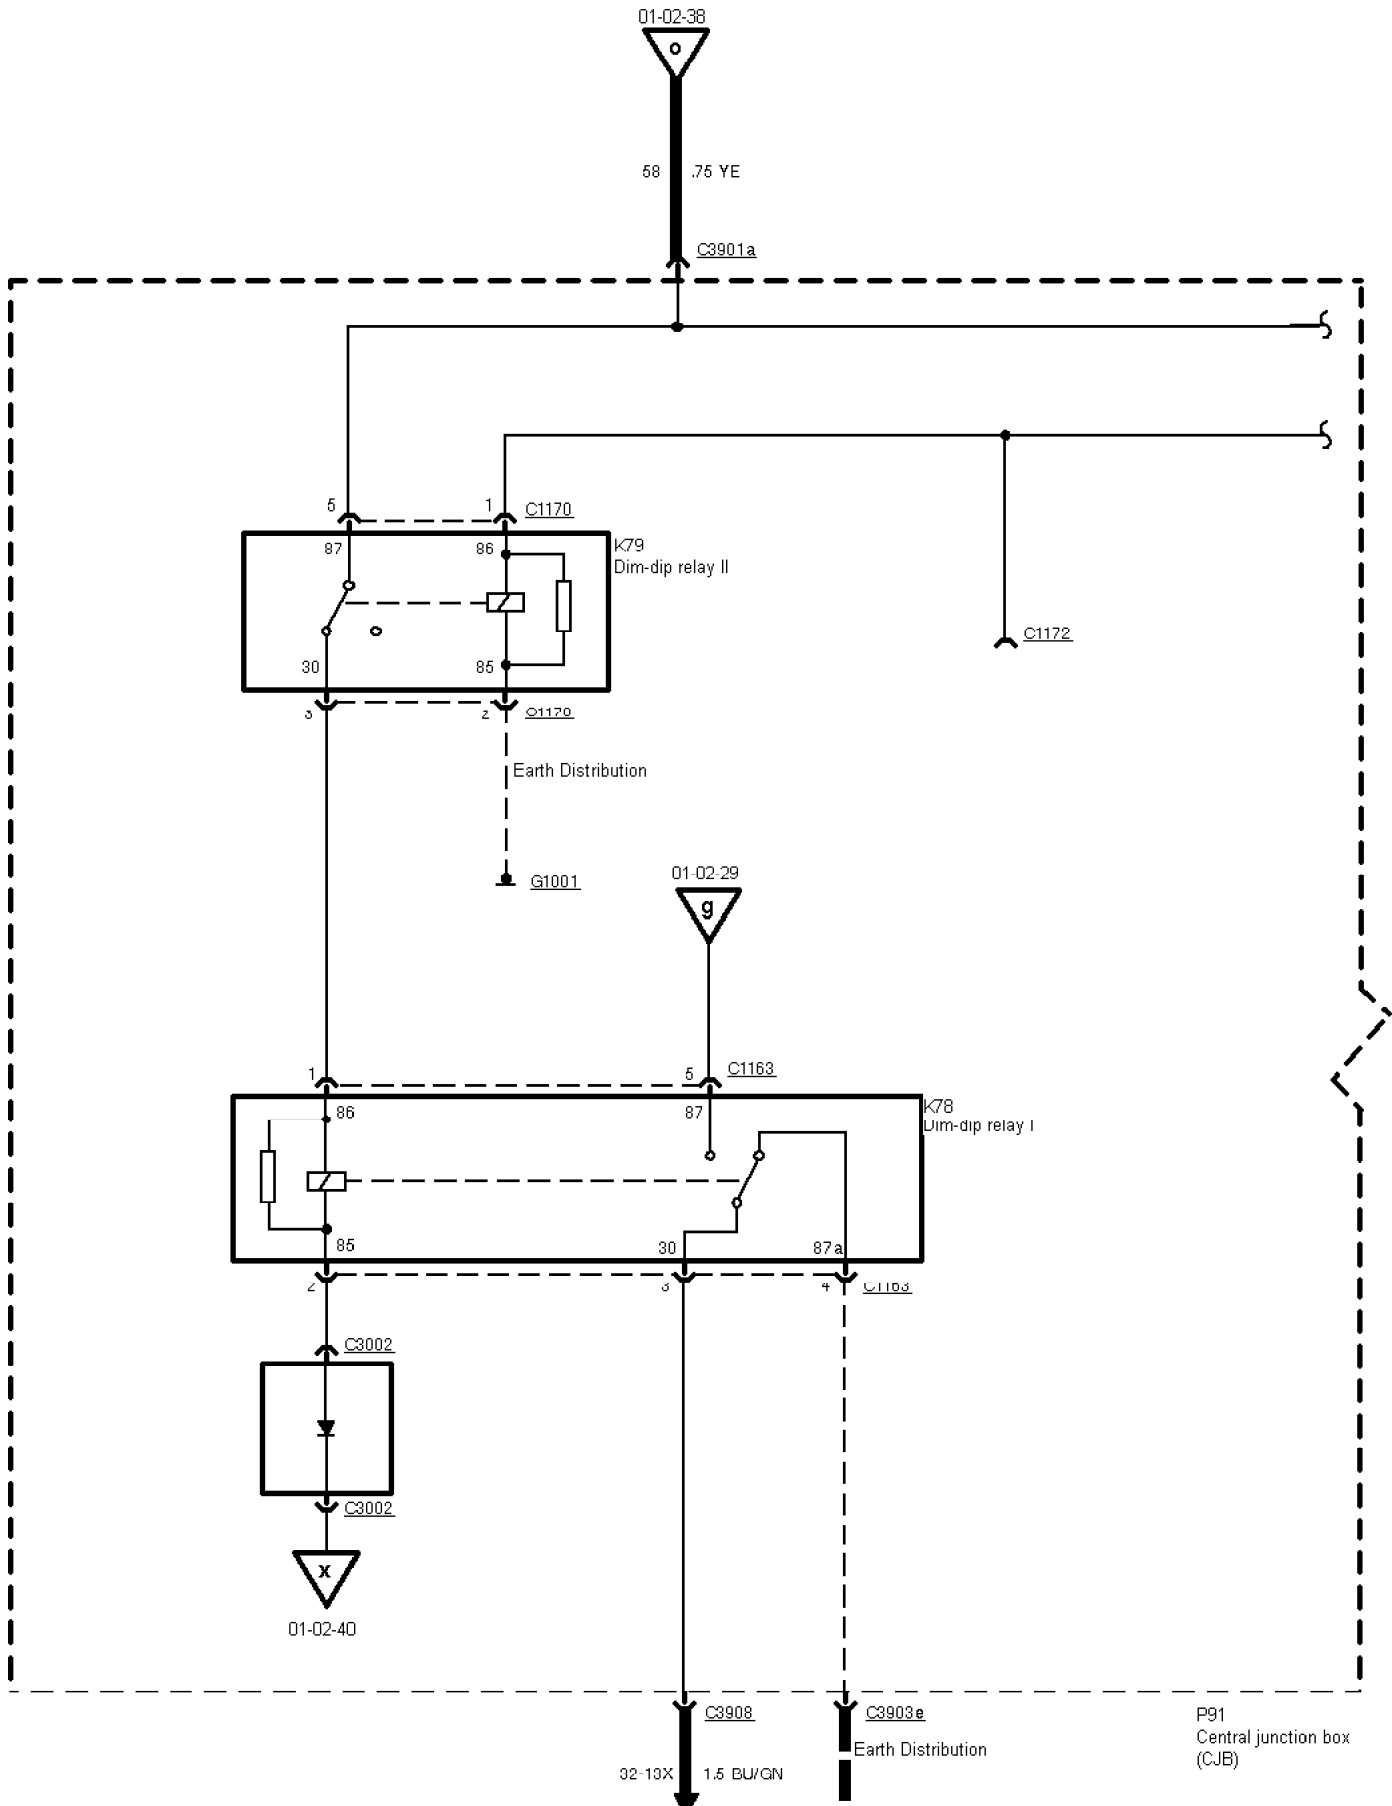

▼
Headlamps RHD




01-02-046 , Power Distribution , As of 95 without RS Cosworth Right-hand-drive vehicles

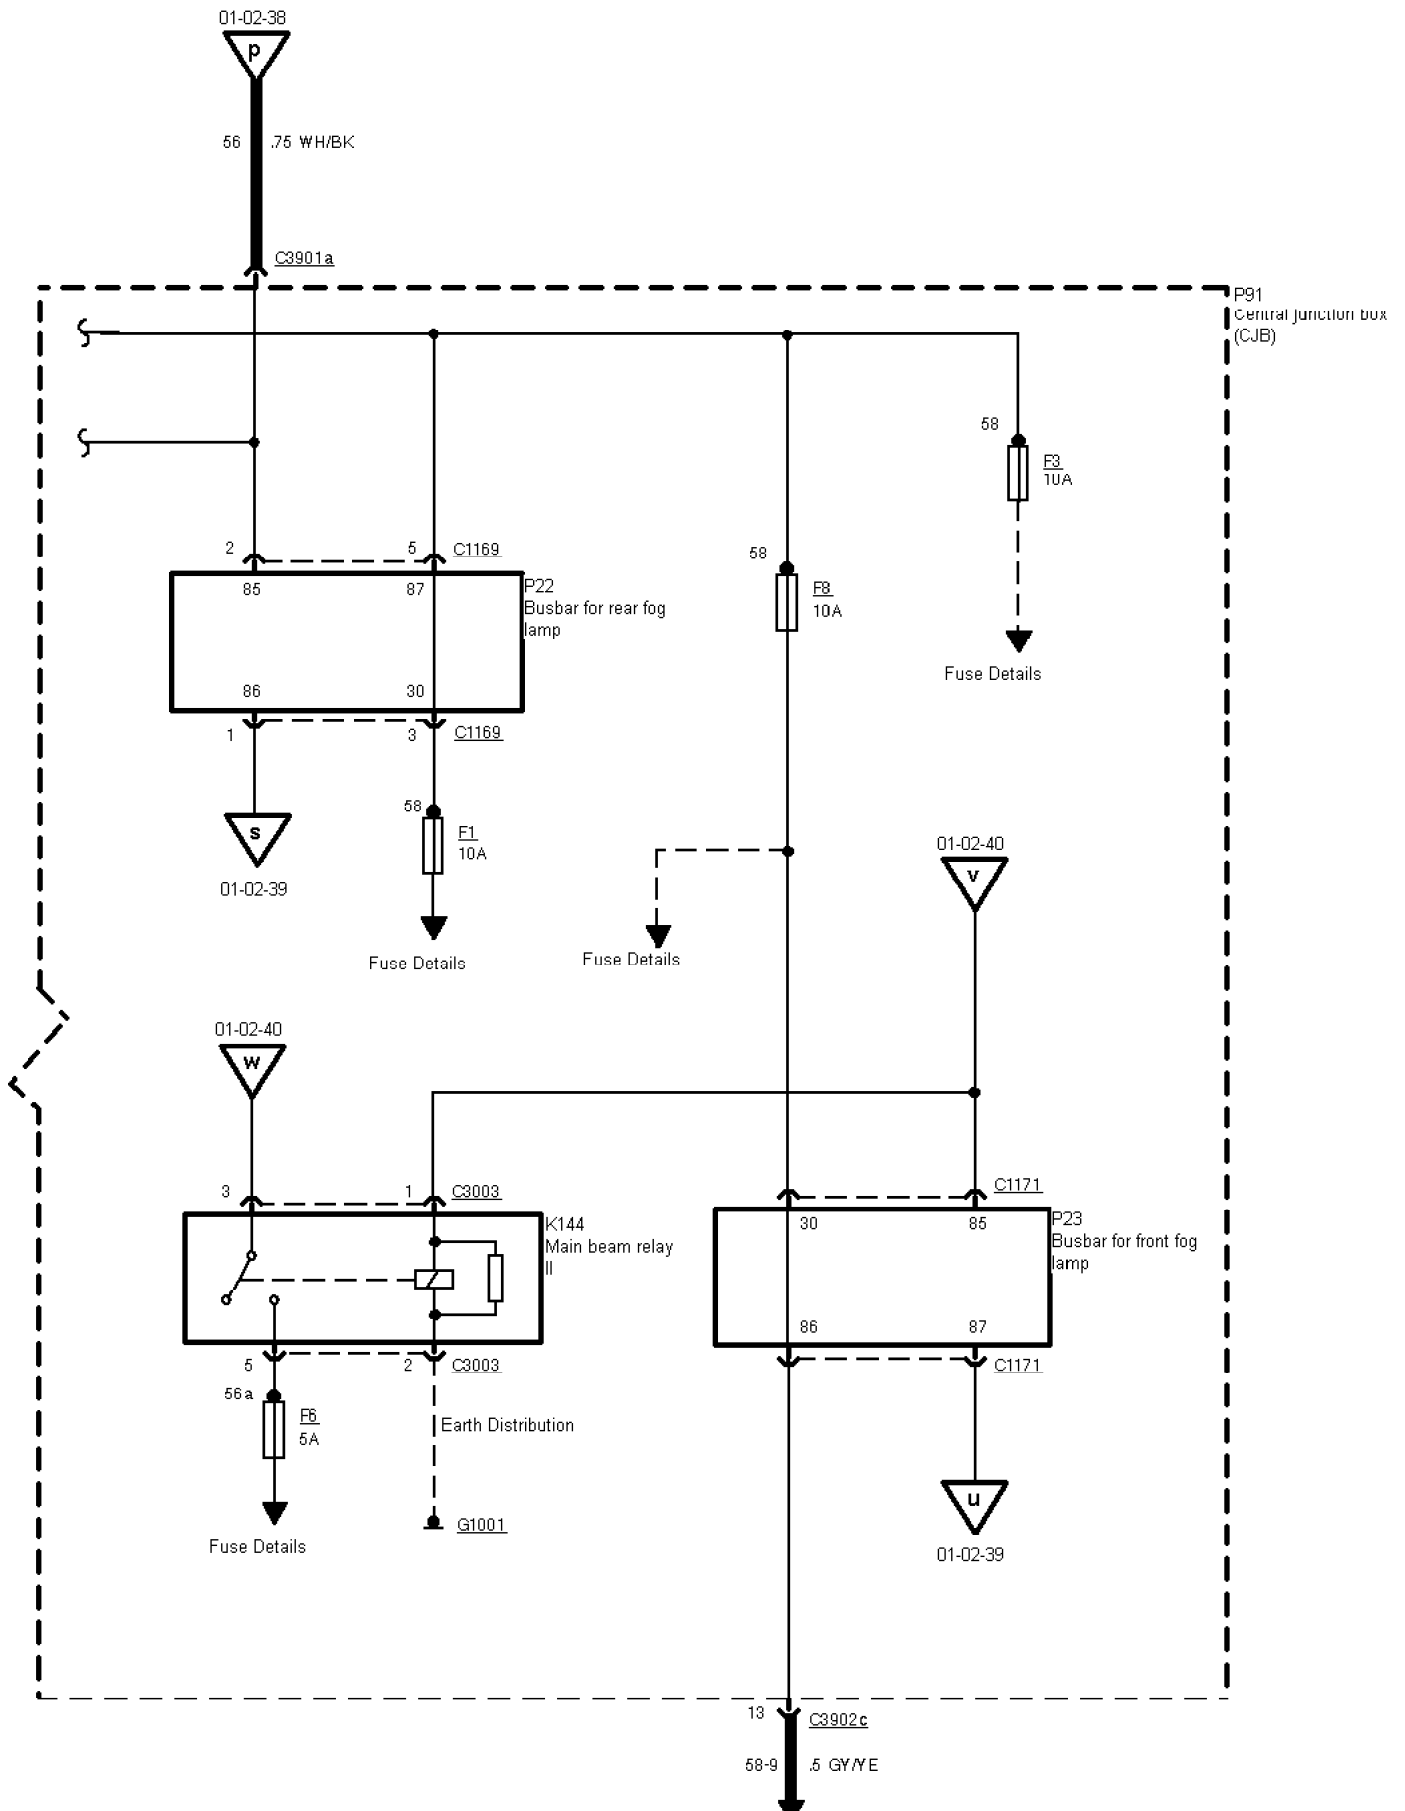

▼
Fog Lamps

01-02-047 , Power Distribution , As of 95 without RS Cosworth Light switch

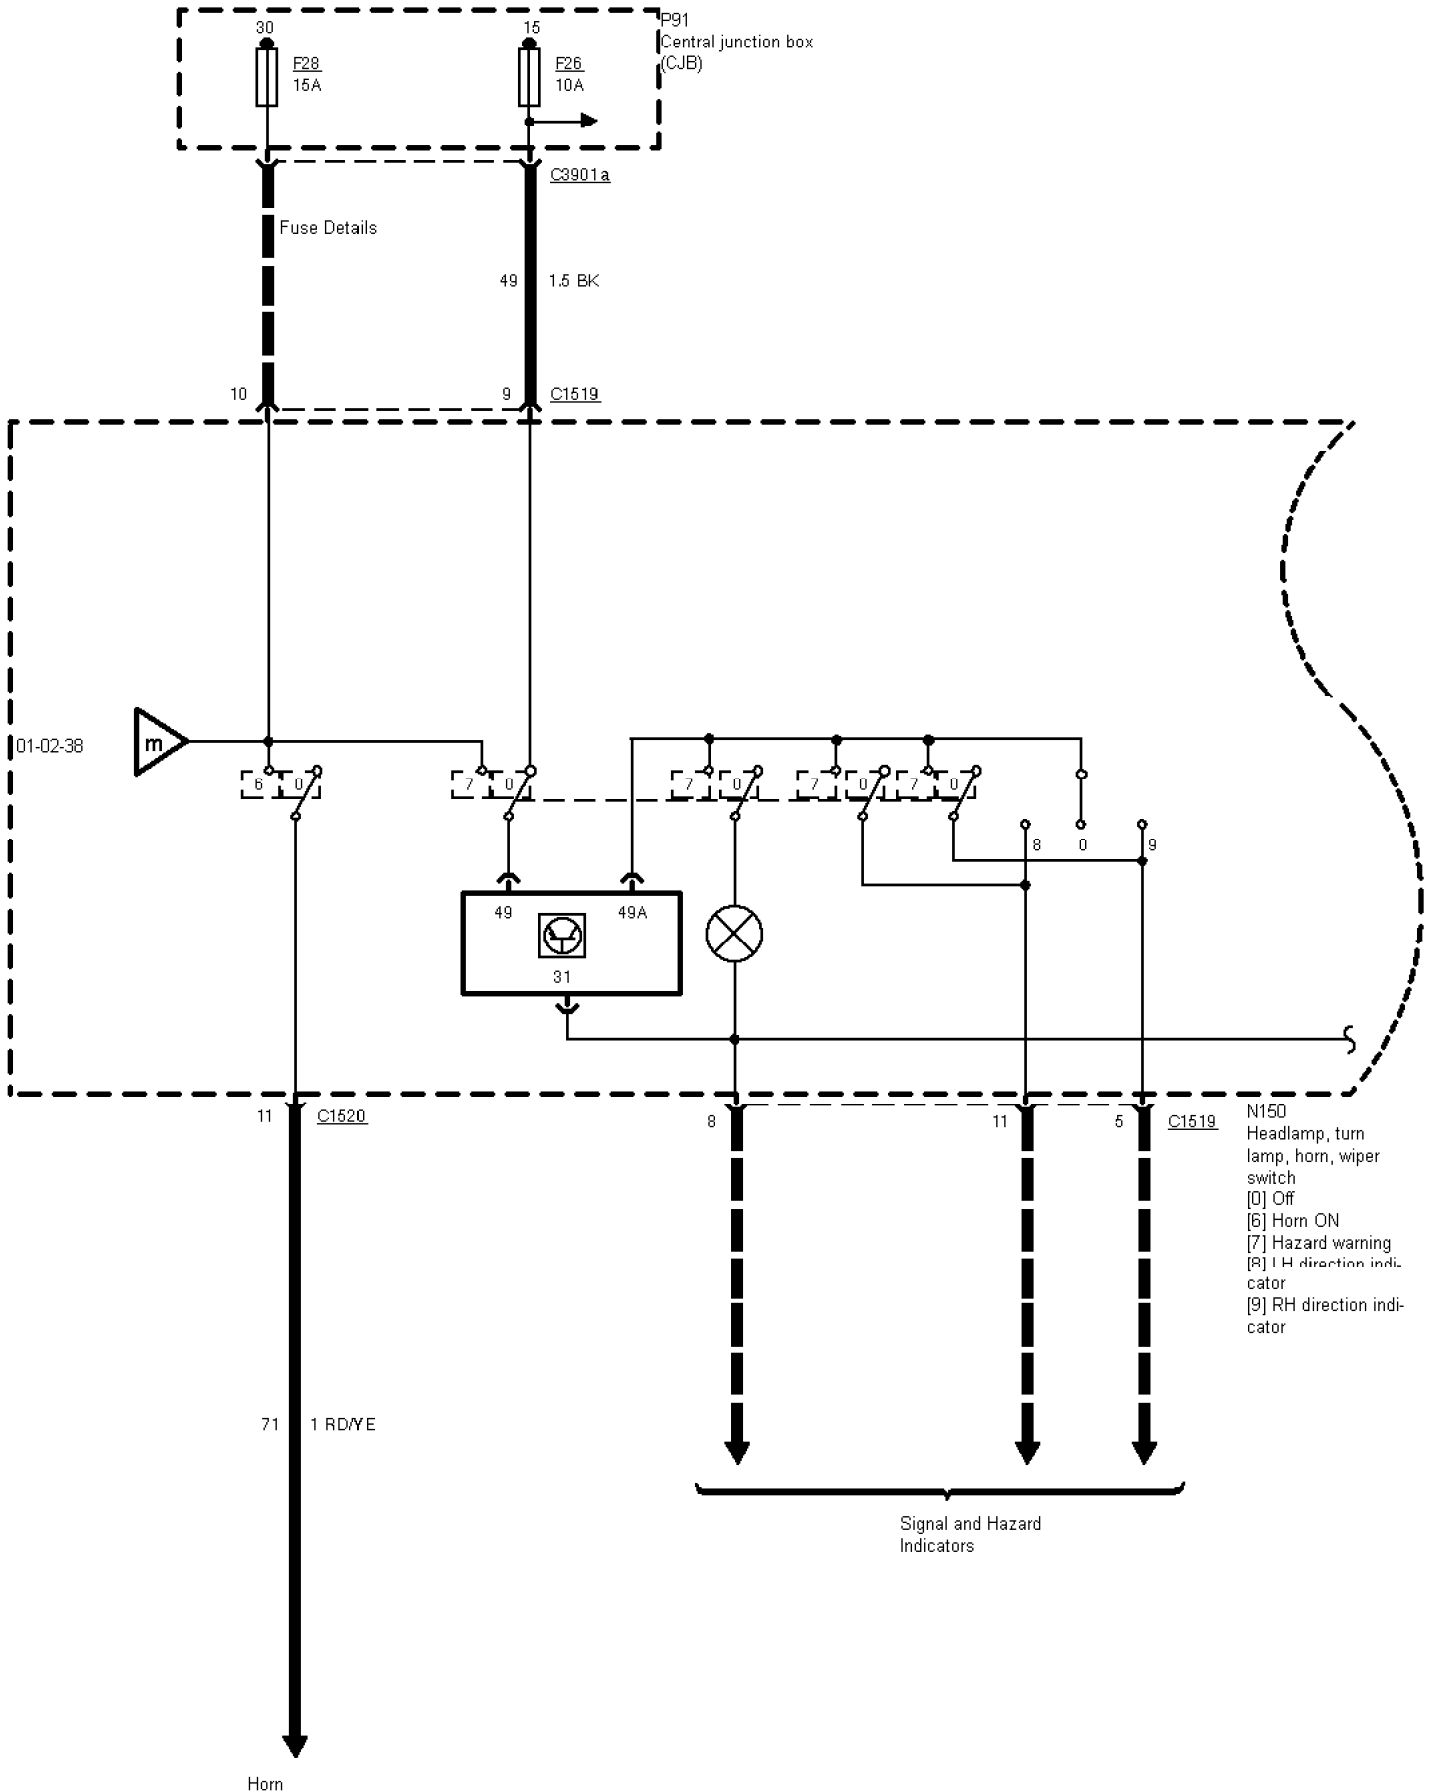

01-02-048 , Power Distribution , As of 95 without RS Cosworth Light switch

