


## Wiring diagram for vehicles with 4x4 drive

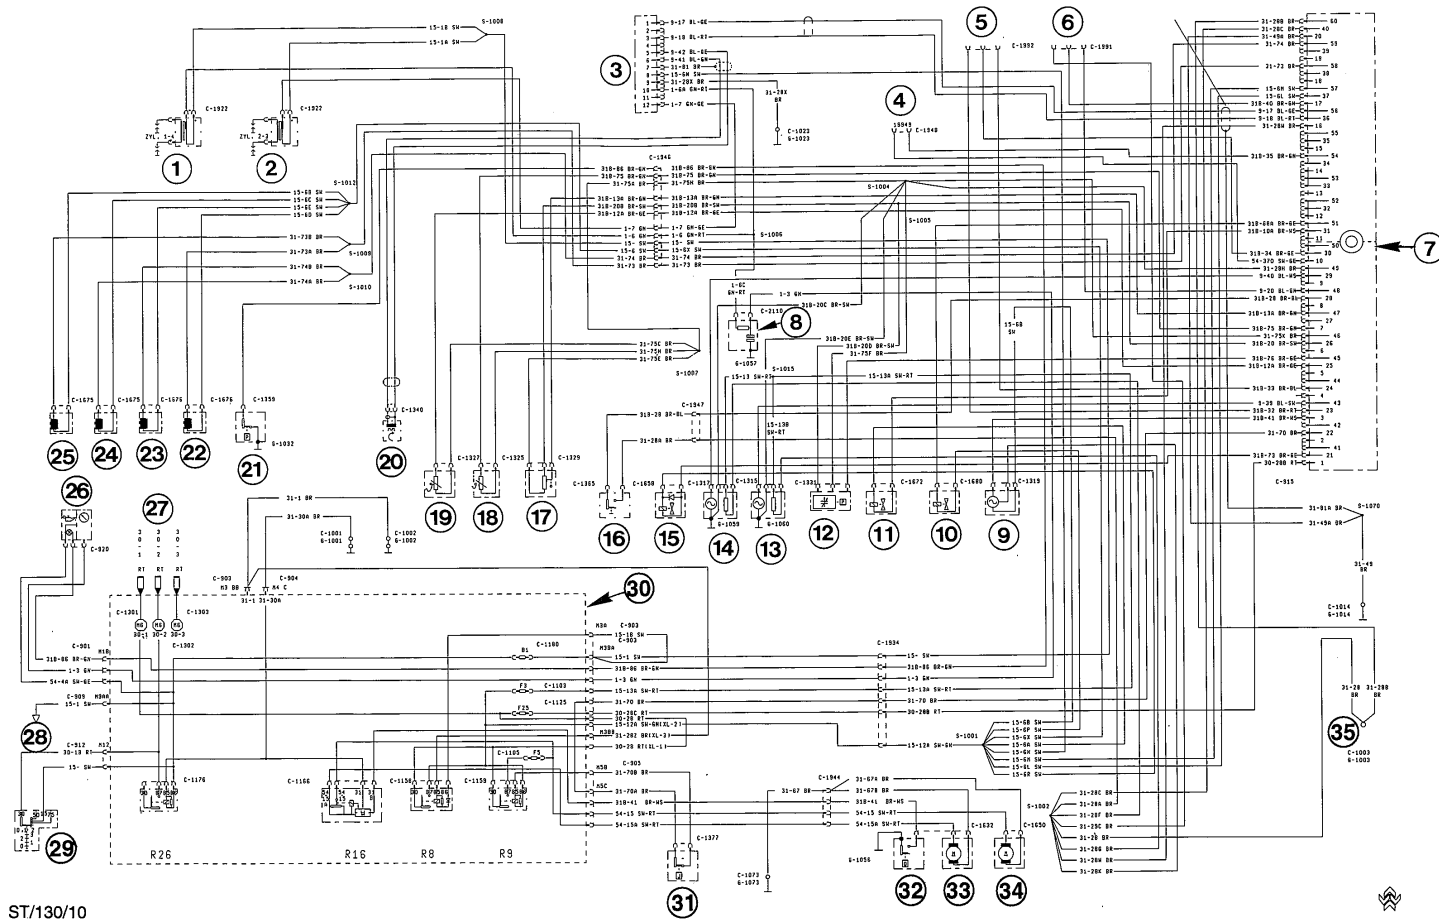

ST/130/10

- |                                 |  |                         |                                |
|---------------------------------|--|-------------------------|--------------------------------|
| 1 Ignition coil A               | 11 Canister purge valve                    | 21 Oil pressure switch  | 31 Inertia switch              |
| 2 Ignition coil B               | 12 Manifold absolute pressure (MAP) sensor | 22 Injector valve 4     | 32 Tanksender II 4x4           |
| 3 E-DIS module                  | 13 Lambda sensor II (HEGO)                 | 23 Injector valve 3     | 33 Fuel pump 4x4               |
| 4 A/C blower motor feed loom    | 14 Lambda sensor I (HEGO)                  | 24 Injector valve 2     | 34 Fuel pump                   |
| 5 Octane adjust and idle adjust | 15 Idle speed valve                        | 25 Injector valve 1     | 35 Battery                     |
| 6 Diagnostic connector          | 16 Power steering pressure switch          | 26 Instrument cluster   |                                |
| 7 EEC IV module                 | 17 Throttle positions sensor (TPS)         | 27 Power feed           | R 8 EEC IV power relay         |
| 8 Filter                        | 18 Engine temperature sensor               | 28 To anti-theft module | R 9 Fuel pump relay            |
| 9 Speed sensor                  | 19 Air charge temperature (ACT) sensor     | 29 Ignition switch      | R 16 Fuel pump 4x4 delay relay |
| 10 Secondary air valve          | 20 Crank position sensor (CPS)             | 30 Central electric box | R 26 Ignition switch relay     |