


## Headlining (Saloon) - Renew (43 612 0)

### Remove




**CAUTION:**  
Disconnect the battery negative lead.

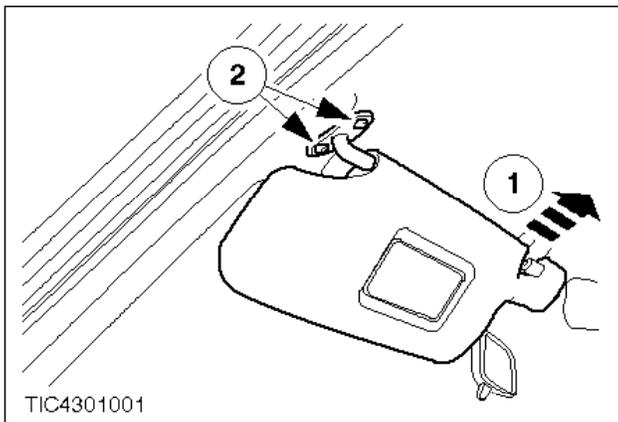


## Sun Visor - Remove (43 633 0)

1. Remove the left and right-hand sun visors (four screws).
  - 1 Detach the sun visor from its retaining clip.
  - 2 Remove the two retaining screws.

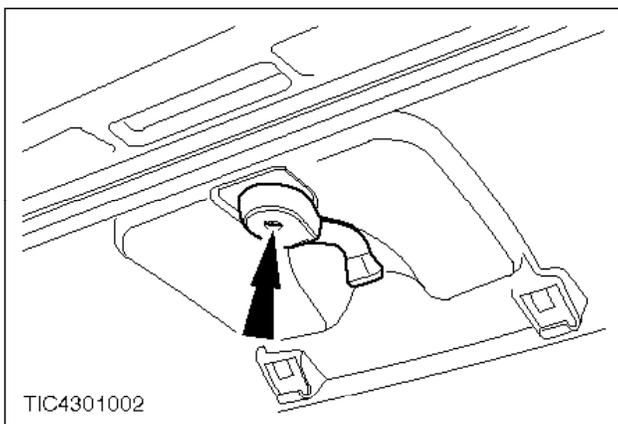

## Vehicles with manually operated sliding roof


2. Remove the sliding roof handle (one screw).

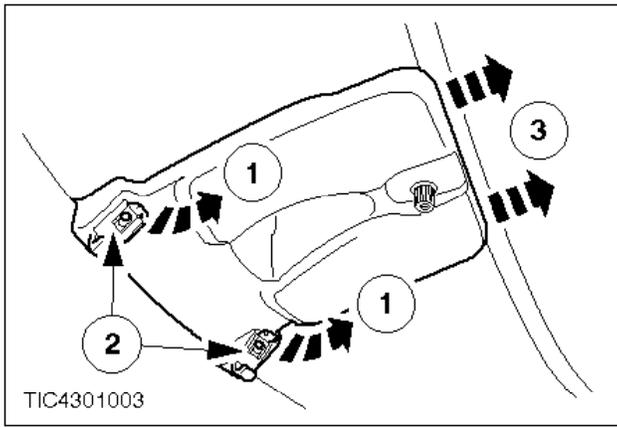

- ⌚ 3. Remove the overhead console (two screws and two clips).
- 1 Carefully prise open screw covers.
  - 2 Remove the two screws.
  - 3 Move the panel rearwards to disengage the clips.


#### Vehicles with electrically operated sliding roof

4. Remove the sliding roof motor (refer to «[Operation Number 33 786 0](#)»).

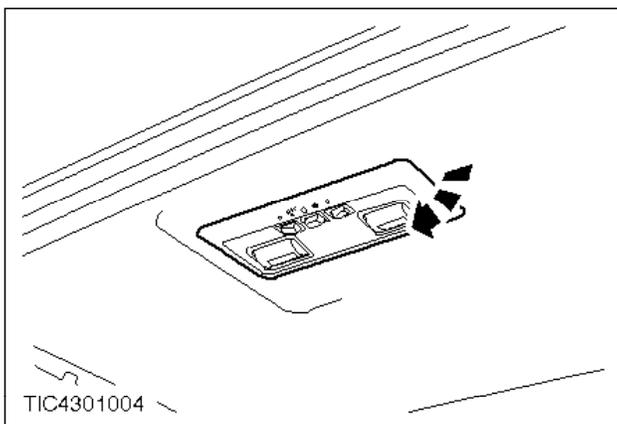

#### Lamp - Interior - Remove (33 112 0)

- ⌚ 5. Remove the interior lamp.
- Carefully detach the interior lamp from the headlining.

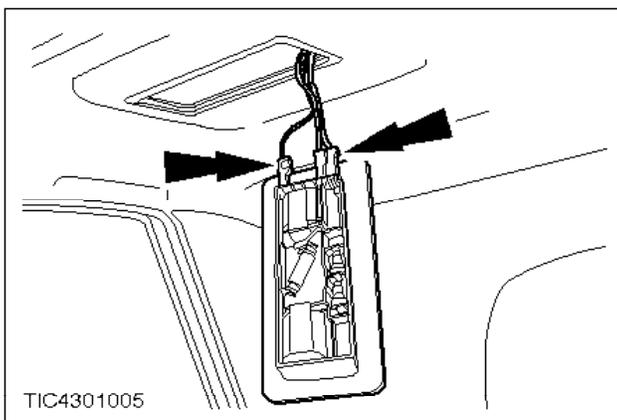




**CAUTION:**


**When disconnecting the multiplugs do not pull on the wiring; pull on the multiplug body.**

- 6. Disconnect the multiplugs and remove the interior lamp assembly.

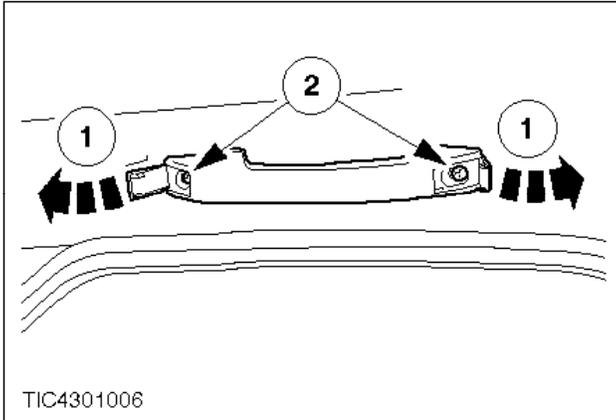


**Handle - Passenger Assist - Remove (43 655 0)**

- 7. Remove the three passenger assist handles.
  - 1 Carefully prise open the screw covers.
  - 2 Remove the passenger assist handle (two screws).

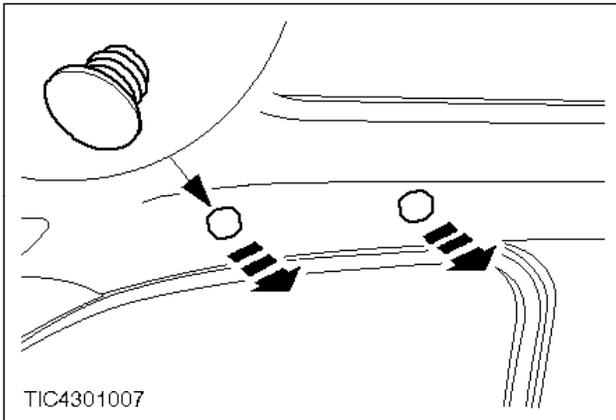


- 8. Remove the two blanking plugs from the headlining above the driver door.
- 9. Remove the left and right-hand A-pillar trim panels (refer to [«Operation Number 43 616 0»](#)).
- 10. Remove the left and right-hand B-pillar trim panels (refer to [«Operation Number 43 617 0»](#)).

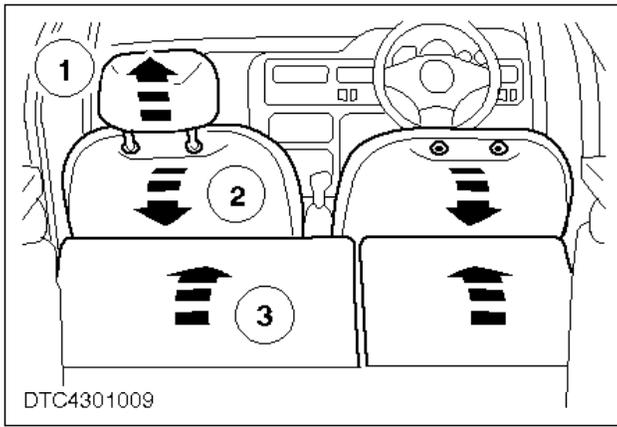

- 11. Remove the head restraints from the front seats (and rear head restraints when fitted). Lower the seat backs and remove the parcel shelf to facilitate headlining removal.

- 1 Remove the head restraints.
- 2 Lower the front seat backs.
- 3 Lower the rear seat backs and remove the parcel shelf.


- 12. Remove the left and right-hand C-pillar trims (refer to «[Operation Number 43 618 0](#)»).

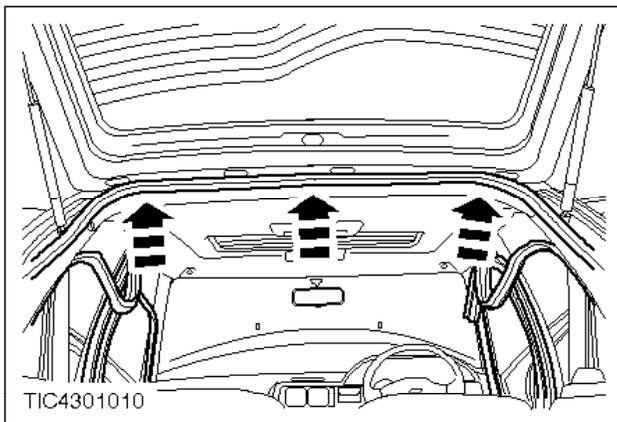

Note:

The tailgate weatherstrip should be positioned outside the aperture to facilitate removal of the headlining.


- 13. Locally detach the door and tailgate weatherstrips.

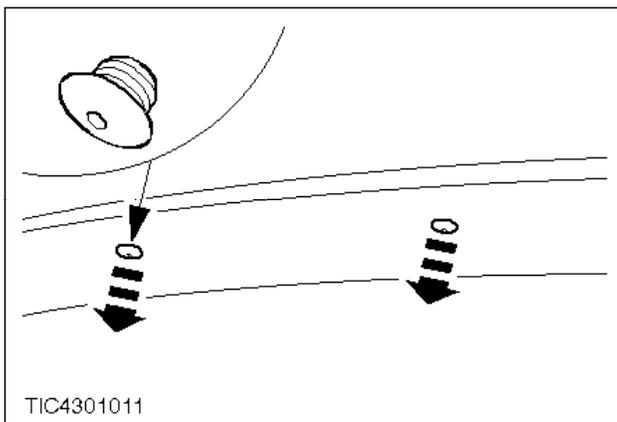


Note:

With the help of another technician, support the headlining.

- 14. Remove the two rear headlining retaining clips.

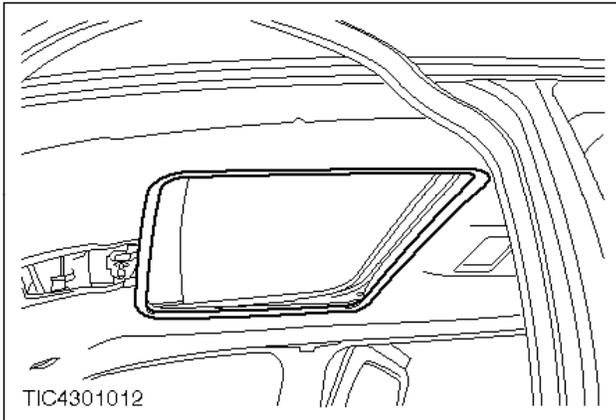

- 15. Remove the sliding roof surround.

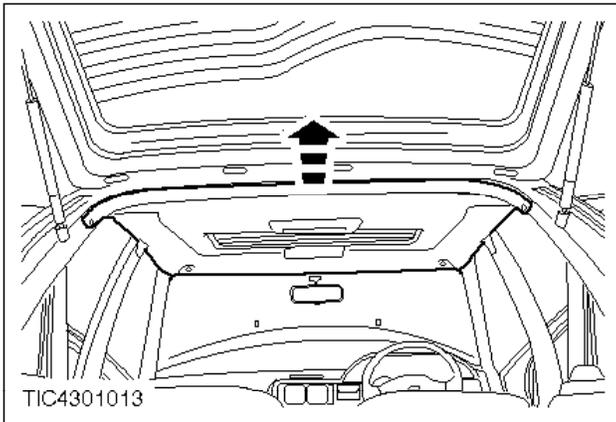

### 3 and 5 door variants only




#### CAUTION:

Care should be taken to prevent soiling of the headlining during handling and storage.

Note:

On 4-door variants the headlining can be removed through a rear door aperture.

- 16. Carefully remove the headlining through the rear of the vehicle.

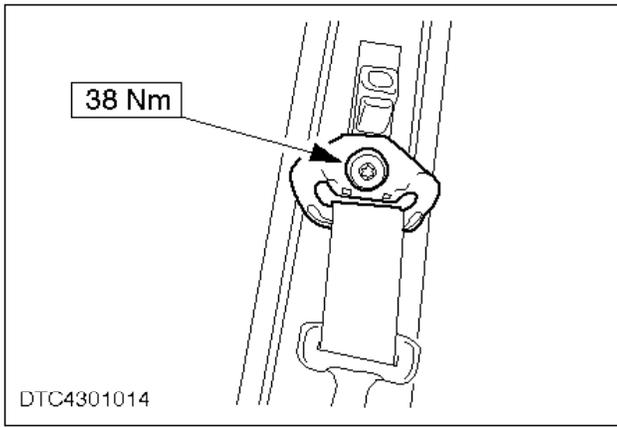

## Install

- 17. Refit the components in reverse order.  
Handle - Passenger Assist - Install (43 655 0)  
Lamp - Interior - Install (33 112 0)  
Sun Visor - Install (43 633 0)

