


## Arm Assembly - Lower - Right-hand Side - Remove And Install (14 707 0)

### Remove

1. Slacken the wheel nuts, raise the vehicle and remove the front road wheel.

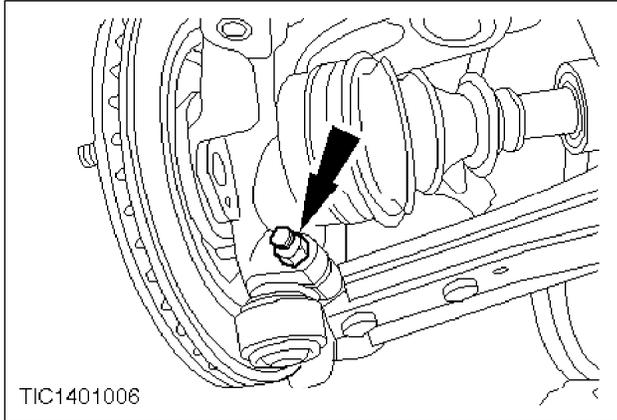


2. Remove the lower arm to spindle carrier pinch bolt and nut.


**Note:**

When the lower arm is separated from the spindle carrier the ball joint seal should be wrapped in a cloth to protect it.

3. Disconnect the lower arm from the spindle carrier.

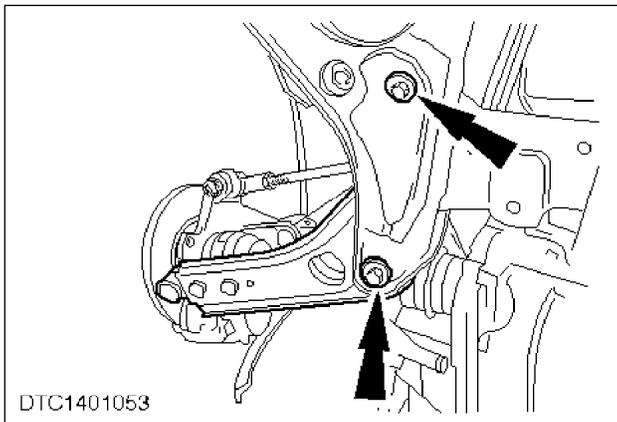


4. Remove the lower arm (two nuts and bolts).

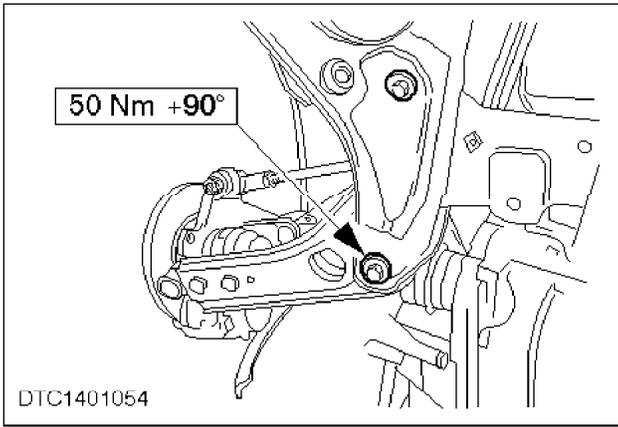


## Install

- 5. Refit the components in reverse order.

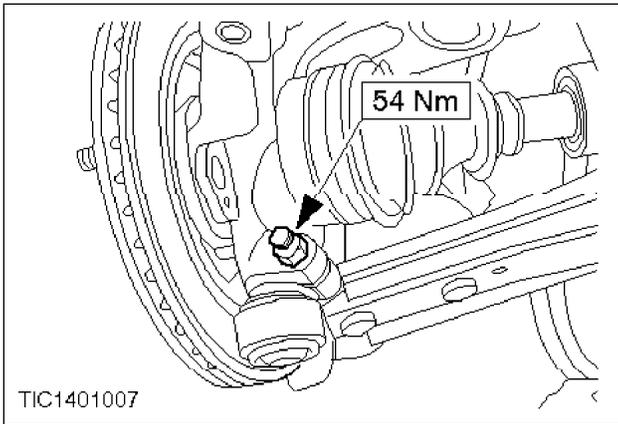

6

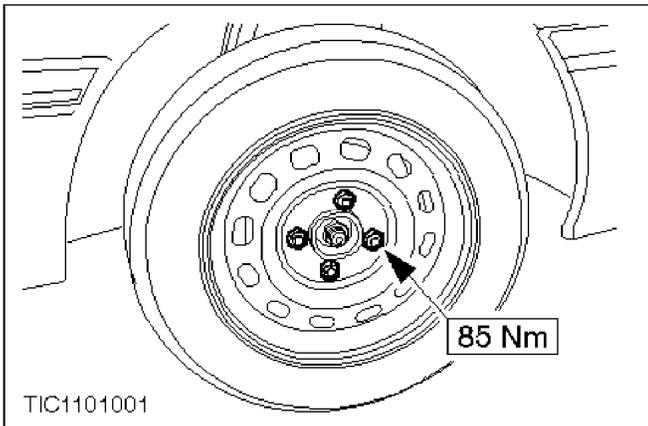

7

---