


Wheel Bearing - Front Inner And Outer - Renew (Hub Or Spindle Carrier Assembly Removed) (14 411 4)

Special Tools




1403801

14-038-01 Thrust pad, wheel hub

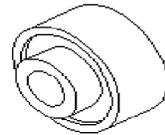


14040

14-040 Installer, wheel bearing

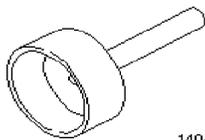


14046

 14-046 Installer, oil seal



T115091

15-091 Separator

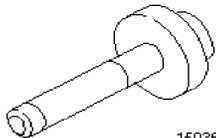


15036

15-036 Installer, rear wheel hub oil sea



15064

15-064 Adaptor for 15-035, bearing cones

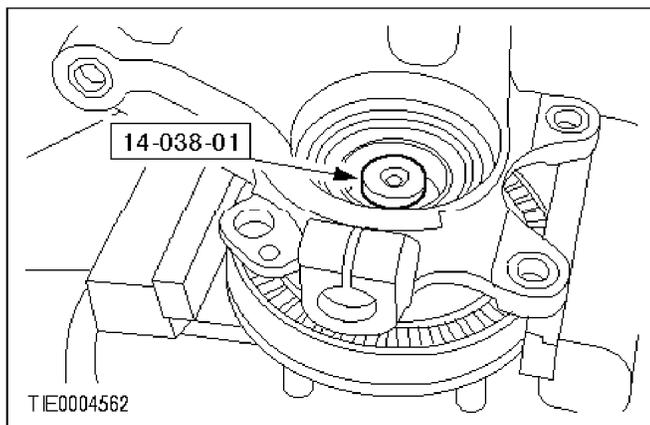


Remove




CAUTION:

Support the spindle carrier in a vice and protect the anti-lock brake (ABS) sensor ring from damage.


1. Remove the spindle carrier from the hub using a suitable drift.

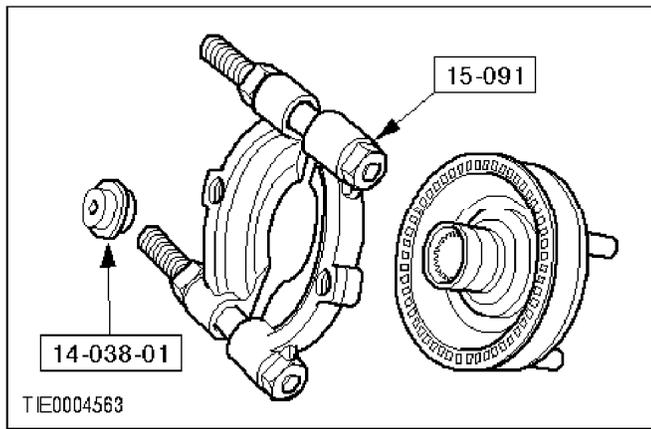


- 2. Remove the inner race.

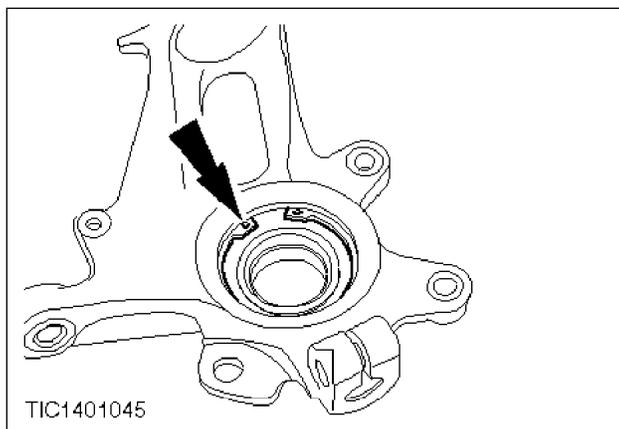

- 3. Remove the bearing snap ring.
- 4. Remove the ABS sensor ring, (refer to [Operation Number 12 717 0](#))

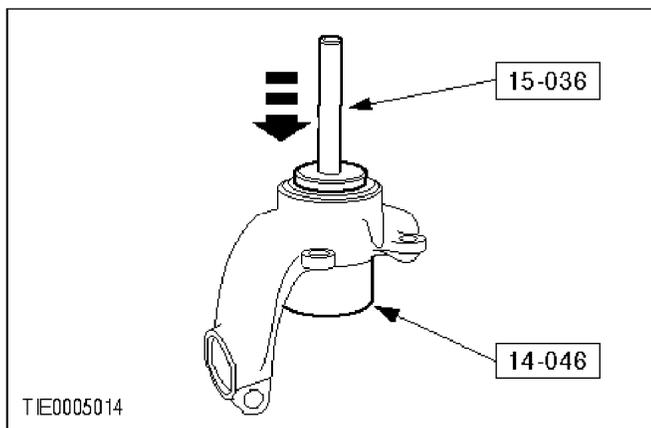


- 5. Remove the bearing assembly.

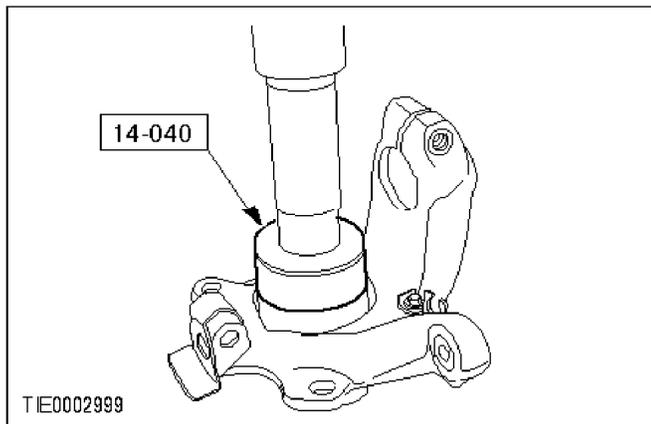


Install

6. Fit the new bearing assembly.

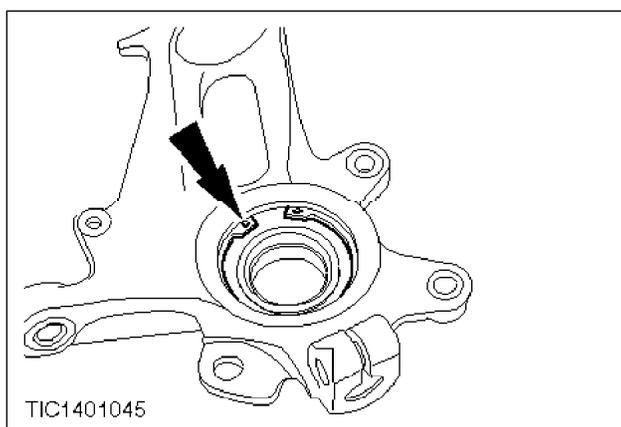

7. Refit the bearing snap ring.
8. Install the ABS sensor ring, (re«[Operation Number 12 787 0](#)»)

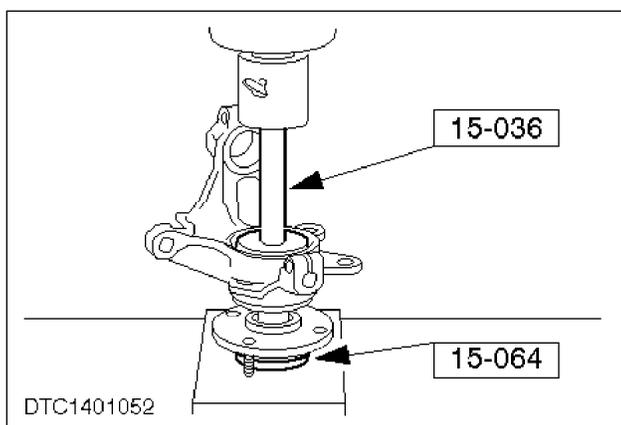

9. Refit the spindle carrier to the hub.