

Filler Pipe - Fuel Tank (Four-Wheel Drive Variants) - Remove And Install (23 572 0)



WARNING:


THIS PROCEDURE INVOLVES FUEL HANDLING. BE PREPARED FOR FUEL SPILLAGE AT ALL TIMES AND ALWAYS OBSERVE FUEL HANDLING PRECAUTIONS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN PERSONAL INJURY.

Note:


It will be necessary to raise the vehicle in order to carry out this procedure.

Remove


1. Remove the fuel tank (refer to «[Operation Number 23 554 0](#)»).

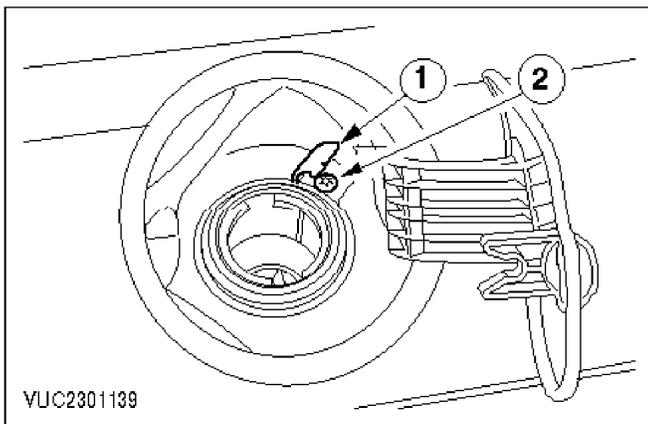


2. Remove the fuel tank filler pipe top retaining screw.
 - 1 Lift the cover.
 - 2 Remove the screw.
3. Slacken the rear road wheels.
4. Raise the vehicle.
5. Remove the rear road wheels.

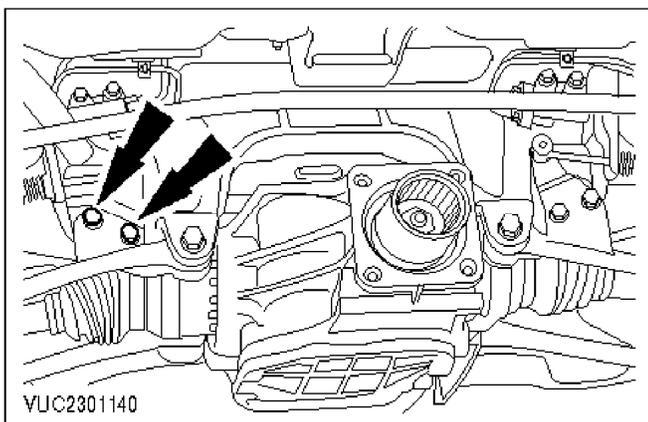


- 6. Remove the load apportioning bracket bolts.

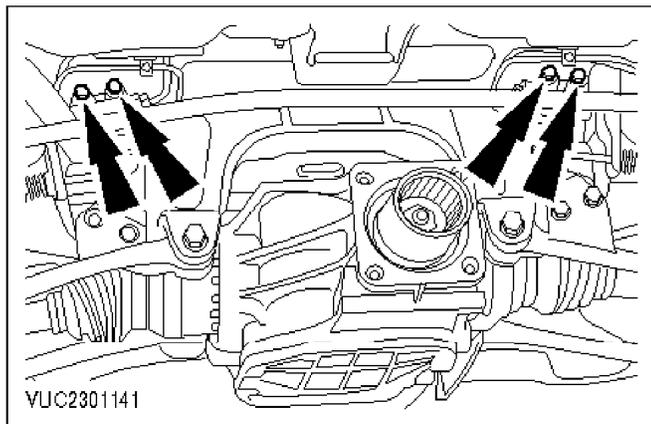


- 7. Partially remove the right-hand load apportioning valve (LAV).

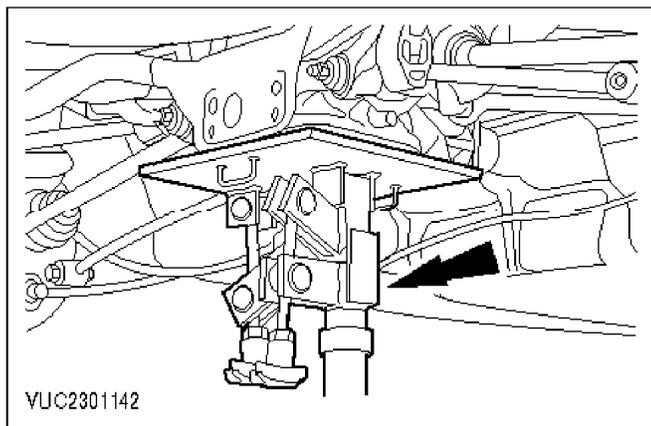


- 8. Support the rear axle.

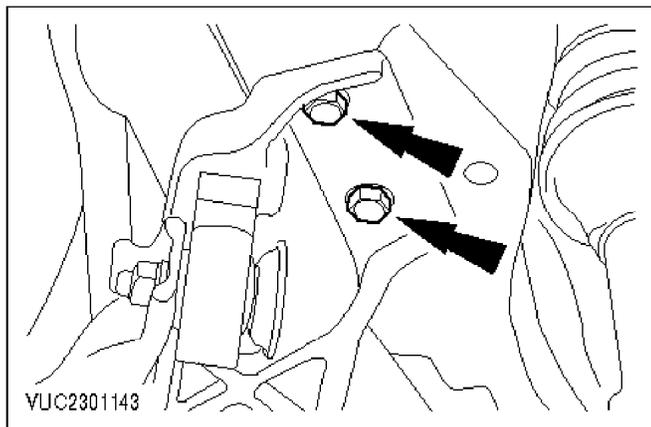

- 9. Remove the rear axle bolts.

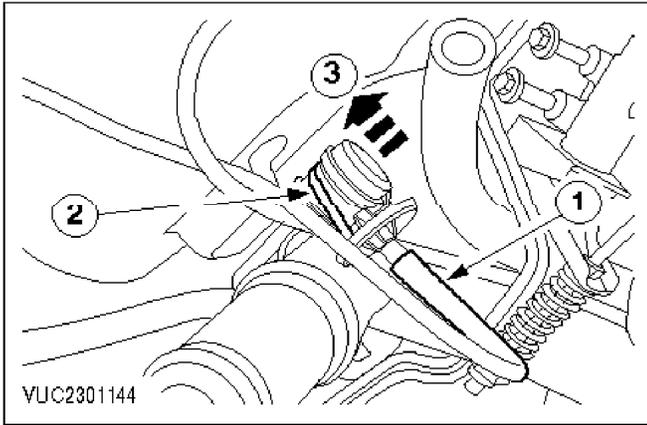


- 10 Detach the EVAP valve.
 - 1 Detach the vacuum pipe.
 - 2 Cut the cable tie.
 - 3 Detach the valve.

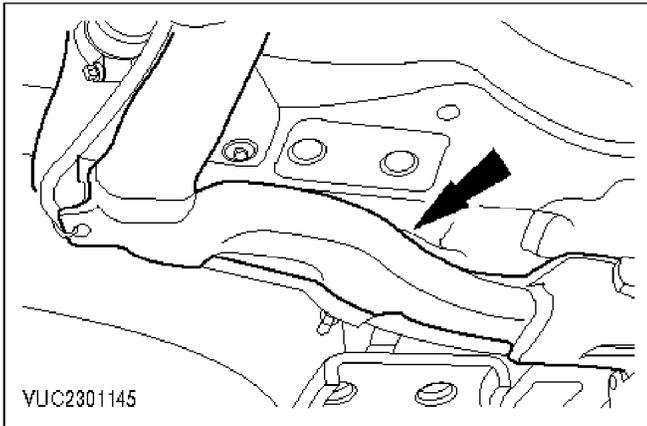

- 11 Remove the filler pipe.

Install

- 12 Fit the filler pipe.
- 13 Fit the EVAP valve.

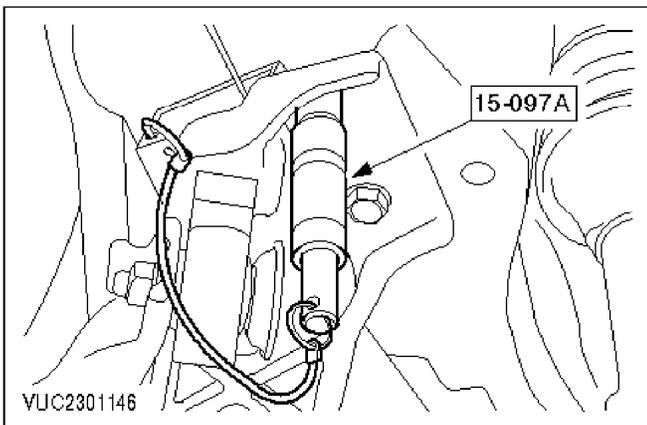

- 14 Align the rear axle.

15. Refit the remaining components in reverse order.
