 



Fluid Cooler - Power Steering - Remove And Install (13 444 0)

Special Tools



13015

13-015 Expander, Teflon seal

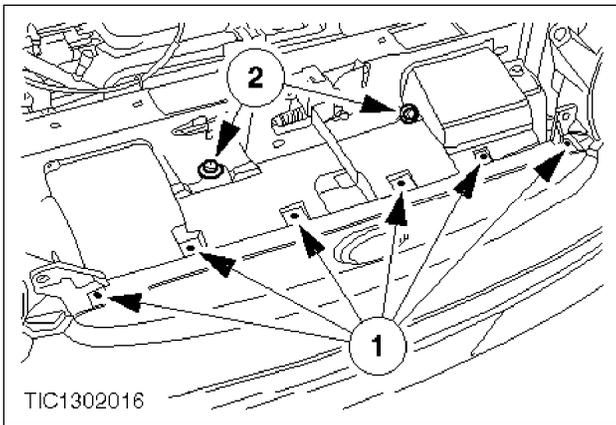


Remove




CAUTION:
Disconnect the battery negative lead.

- 1. Remove the crossmember and radiator grilles.
 - 1 Remove the six crossmember grille retaining screws.
 - 2 Remove the two remaining radiator grille retaining screws.

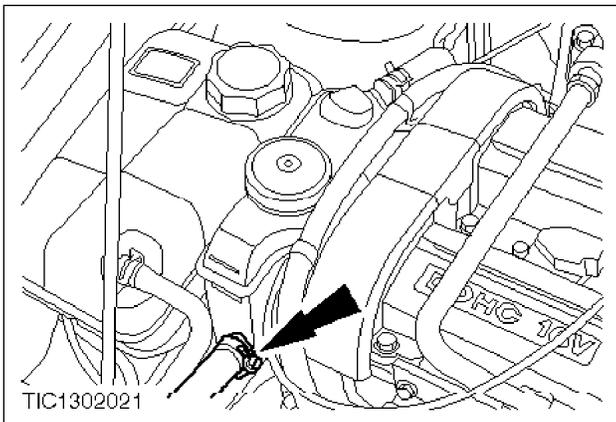


- 2. Disconnect the fluid cooler hose from the power steering fluid reservoir.

Allow the fluid to drain into a suitable container.

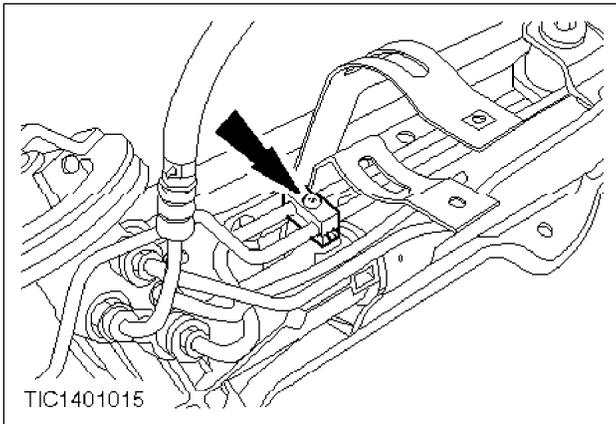


- 3. Disconnect the power steering gear pipes from the clamp (one screw).

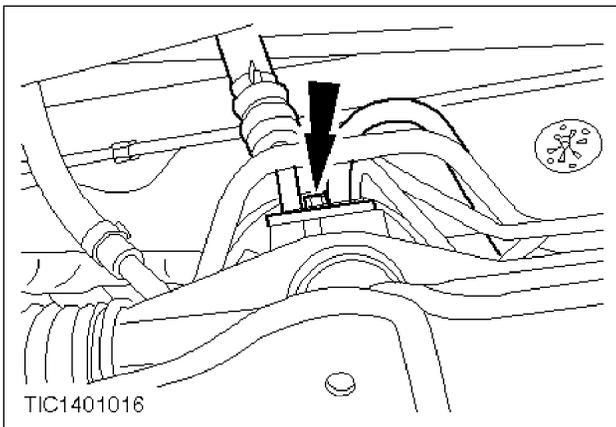

Vehicles with TRW steering gear


- 4. Remove the pipe clamp plate bolt and disconnect the fluid cooler pipe from the steering gear body.

Allow the fluid to drain into a suitable container.

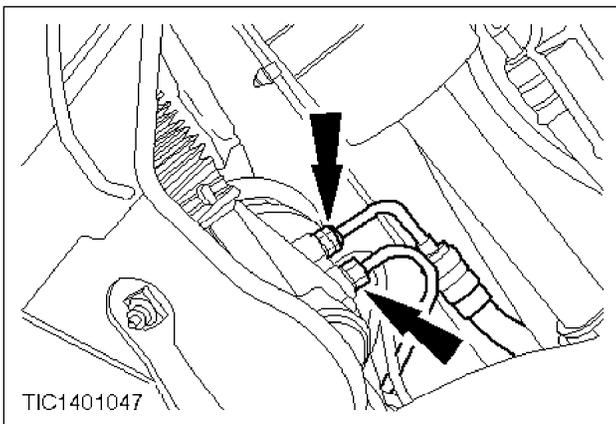


Vehicles with Wuefrath steering gear

- 5. Disconnect the fluid cooler pipe unions from the steering gear valve body.
 - Allow the fluid to drain into a suitable container.

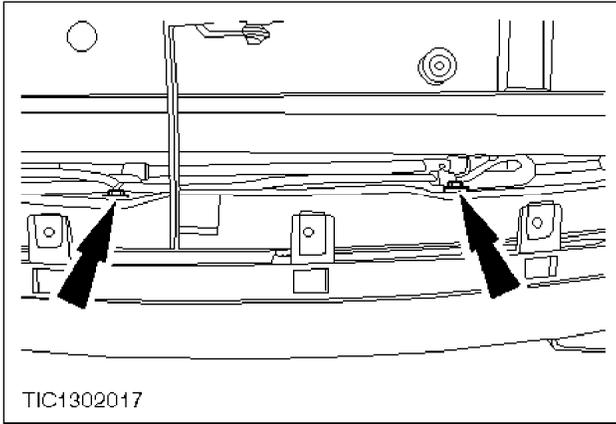


All vehicles

- 6. Remove the fluid cooler (two bolts).

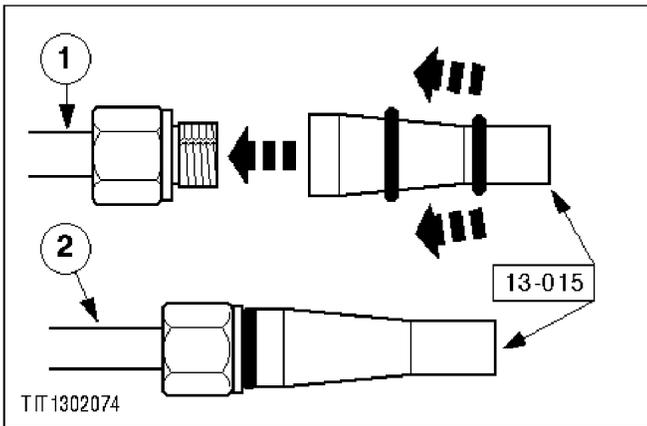


Install

- 7. When necessary, renew the union sealing rings.
- 8. Refit the components in reverse order.

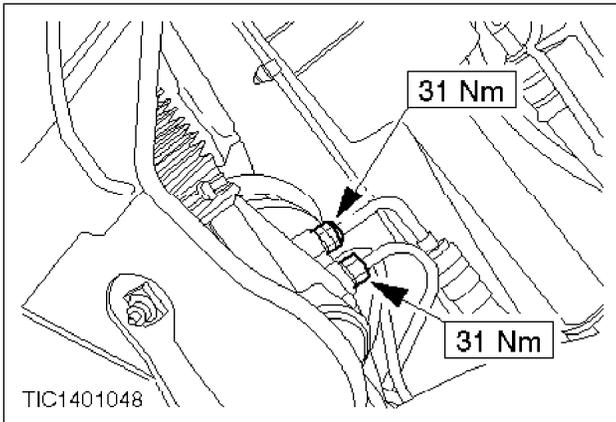

Vehicles with Wuefrath steering gear



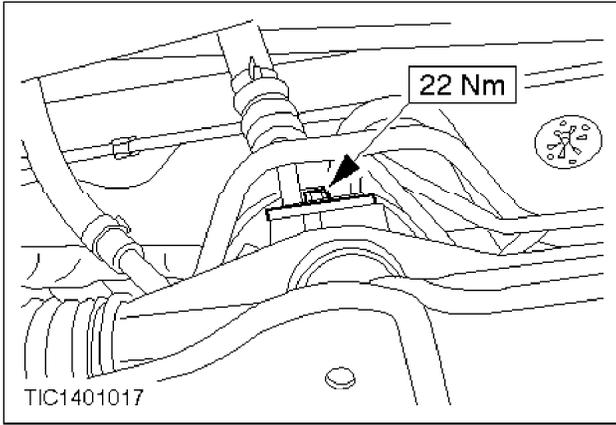

Vehicles with TRW steering gear



9. Bleed the power steering system (r«[Operation Number 13 4](#)» 1»
-