
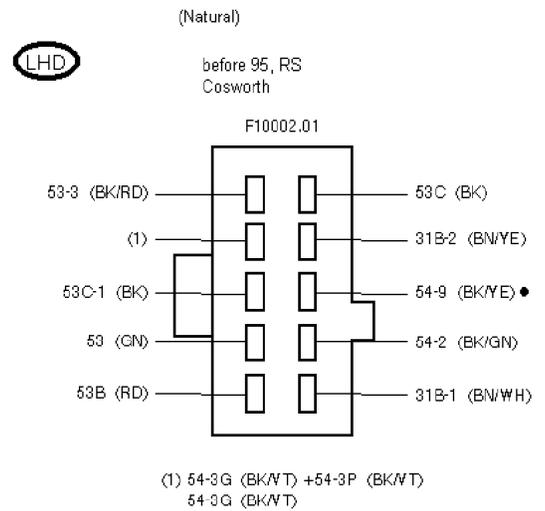


C901a - P91 Central junction box (CJB)

C901a

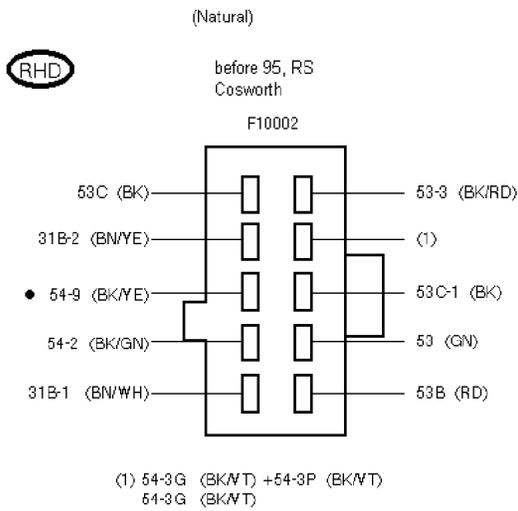


C901b - P91 Central junction box (CJB)

C901b


RHD

before 95, RS
Cosworth

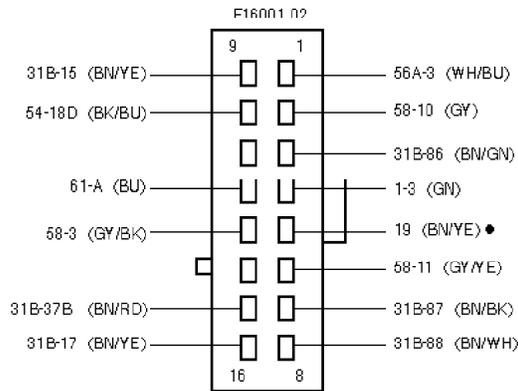

LHD

before 95, RS
Cosworth

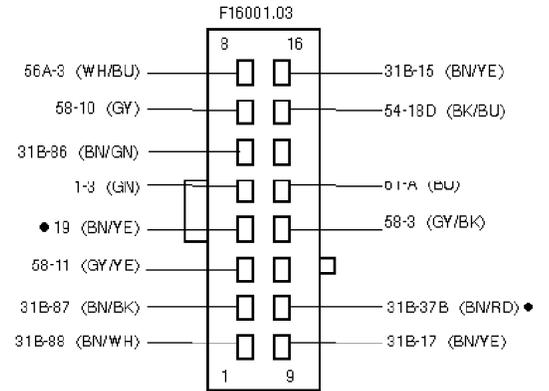


C901c - P91 Central junction box (CJB)

C901c


RHD

before 95, RS
Cosworth

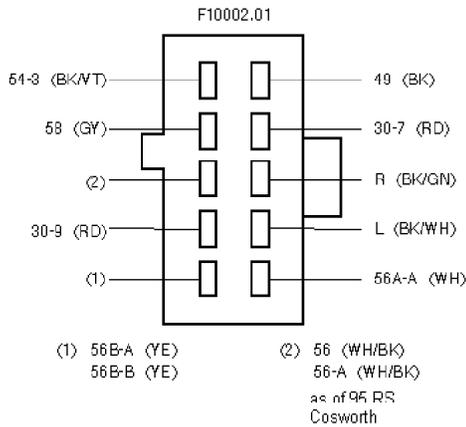

LHD


before 95, RS
Cosworth

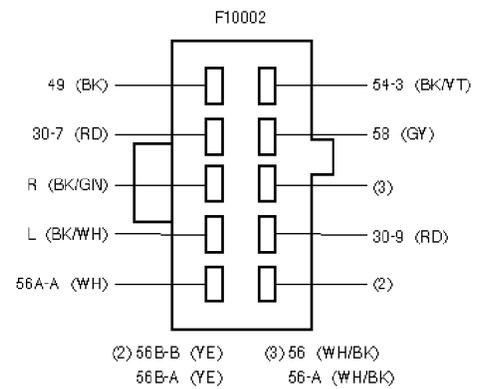

C902a - P91 Central junction box (CJB)

before 95, RS
Cosworth


RHD

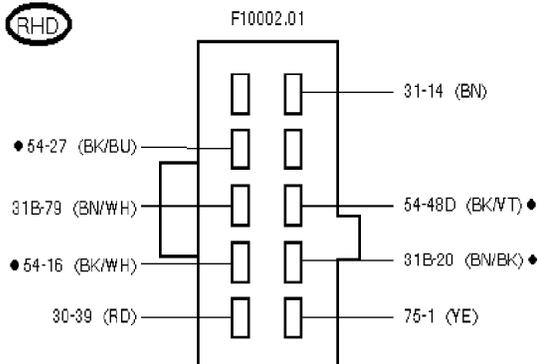


C902a

before 95, RS
Cosworth


LHD

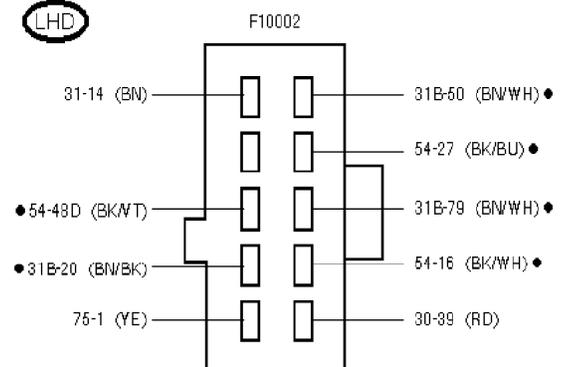

C902b - P91 Central junction box (CJB)

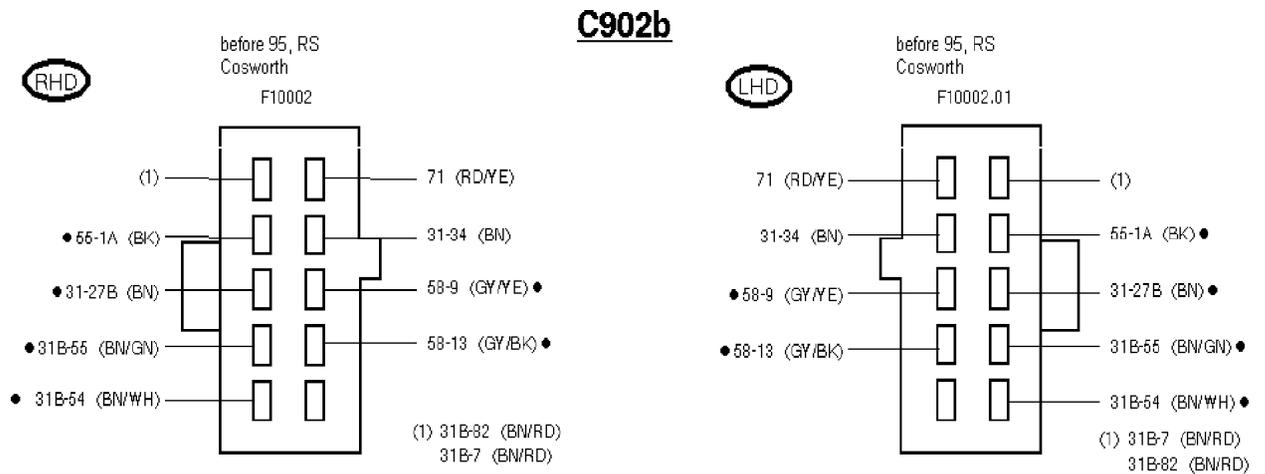


C902c - P91 Central junction box (CJB)

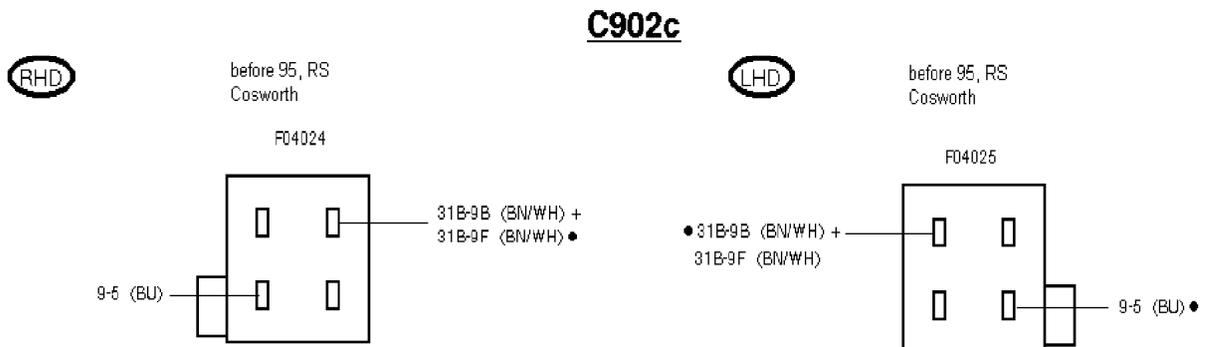


C902d - P91 Central junction box (CJB)

C902d

RHD

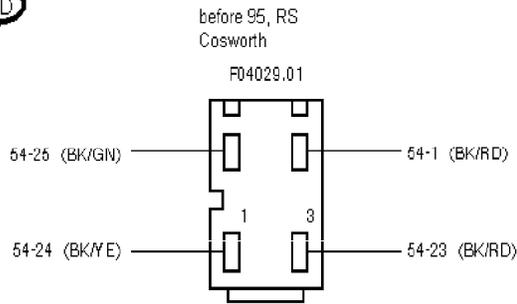


LHD

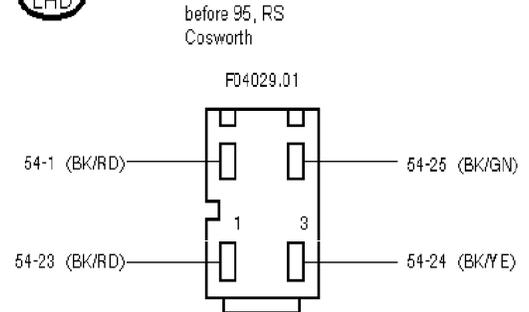


C903a - P91 Central junction box (CJB)

RHD

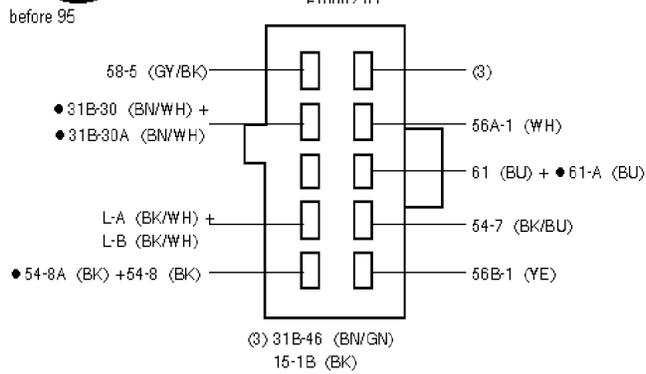


C903a


LHD

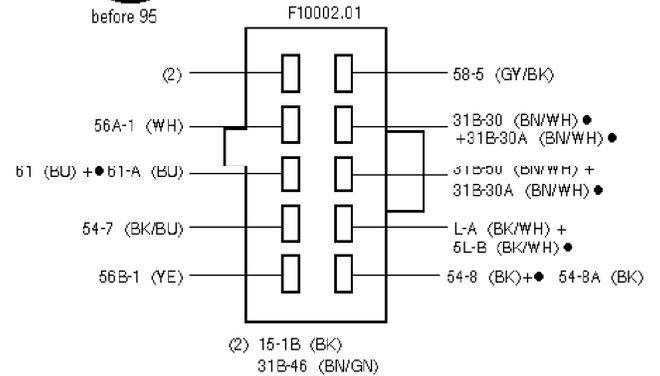

RHD

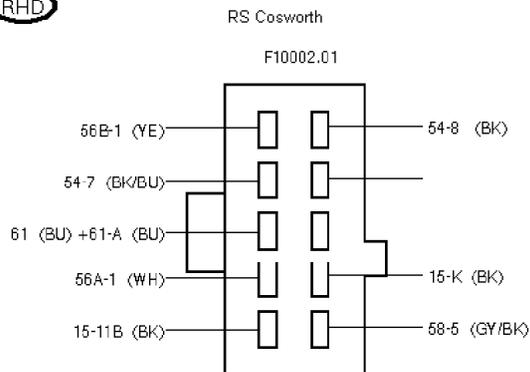


LHD

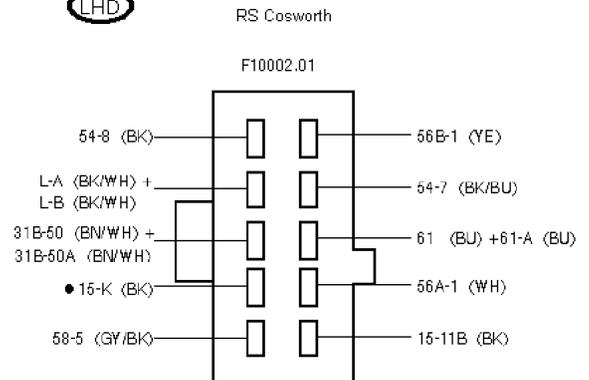

C903b - P91 Central junction box (CJB)

RHD


before 95

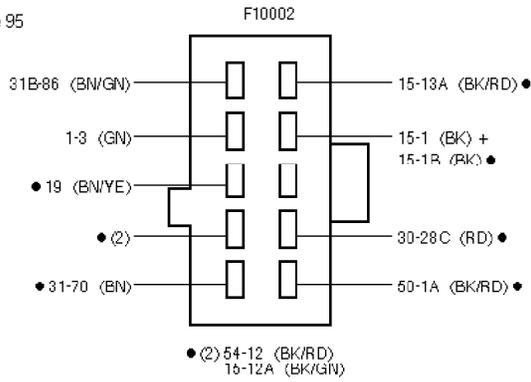

C903b


LHD

before 95

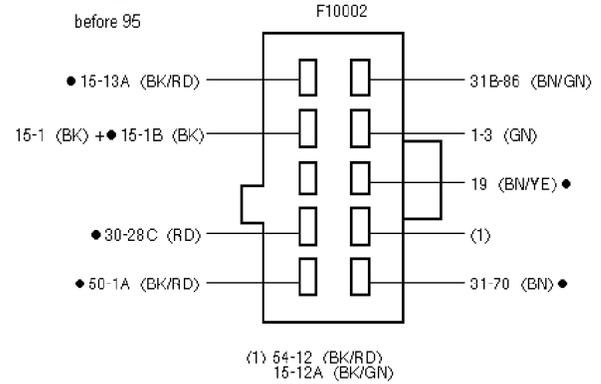


RHD

RS Cosworth

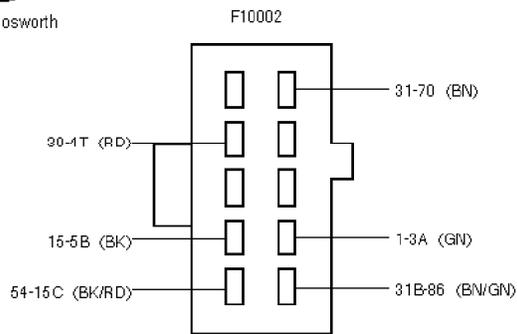

LHD

RS Cosworth

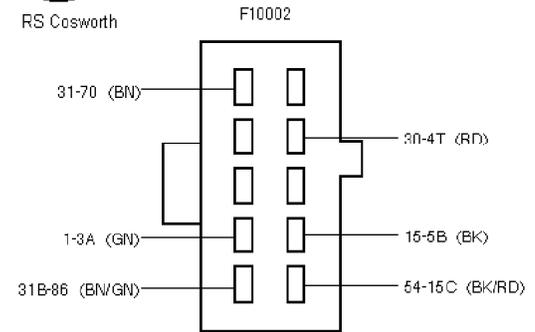


C903c - P91 Central junction box (CJB)

C903c


RHD

before 95

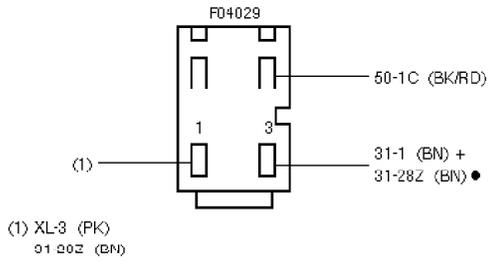


LHD

before 95

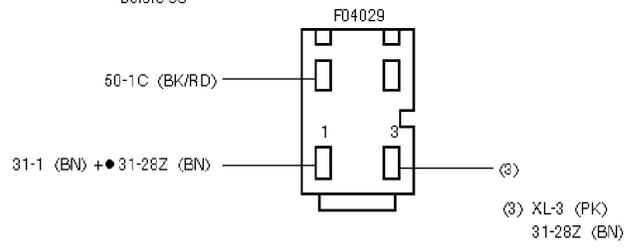


RHD

RS Cosworth

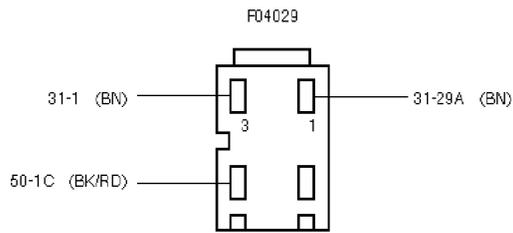

LHD

RS Cosworth

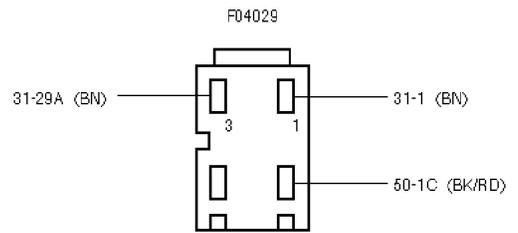


C903d - P91 Central junction box (CJB)


C903d




before 95

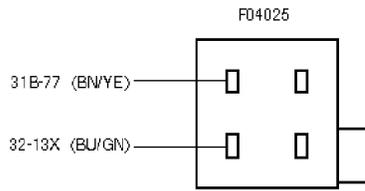


before 95

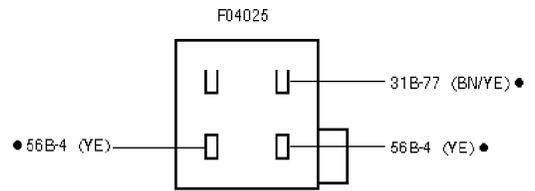

RS Cosworth

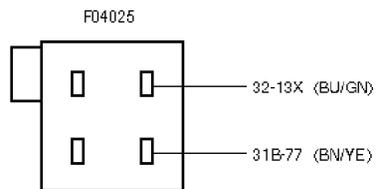


RS Cosworth

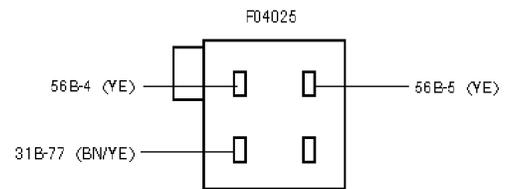

C903e - P91 Central junction box (CJB)




before 95

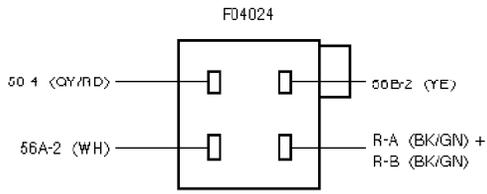


C903e




before 95

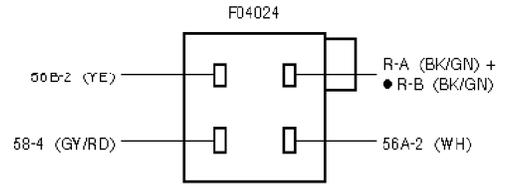

RS Cosworth

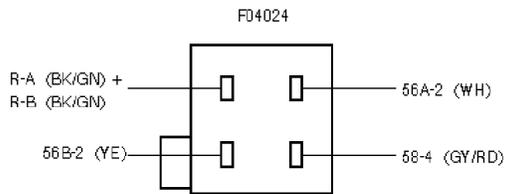

RS Cosworth

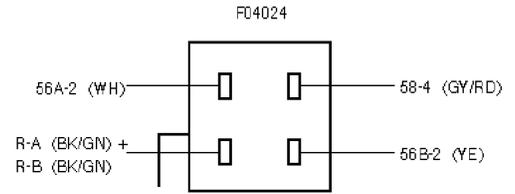


C904a - P91 Central junction box (CJB)

RHD

before 95

F05049

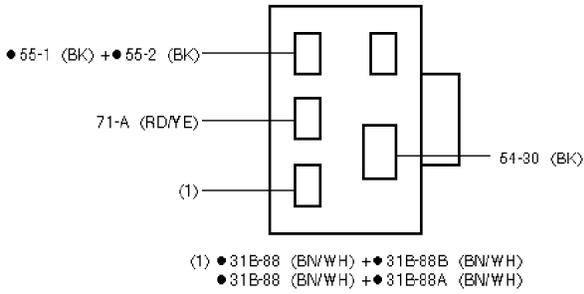


C904a

LHD

before 95


F05049

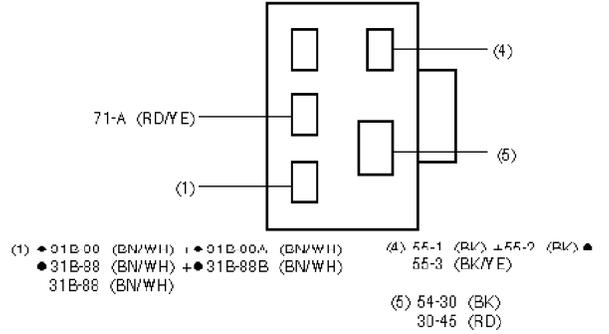

RHD

RS Cosworth


F05049

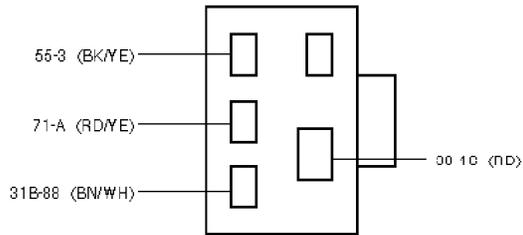

LHD

RS Cosworth


F05049

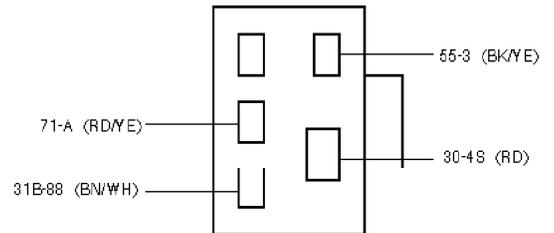

C904b - P91 Central junction box (CJB)

RHD


before 95

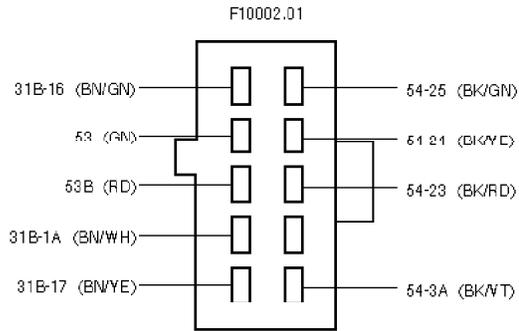

C904b


LHD

before 95

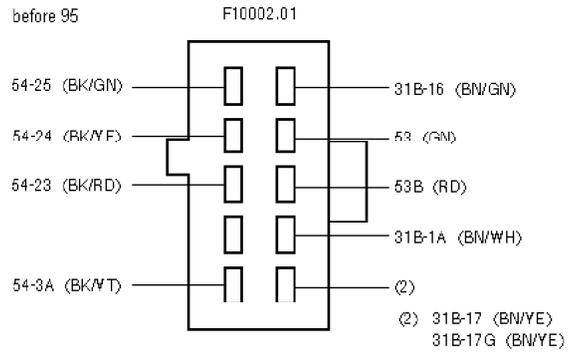


RHD

RS Cosworth

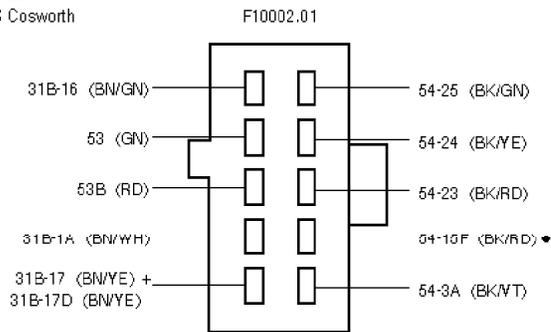

LHD


RS Cosworth

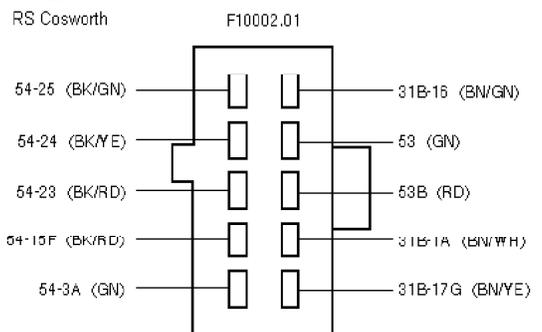

C904c - P91 Central junction box (CJB)

RHD


before 95

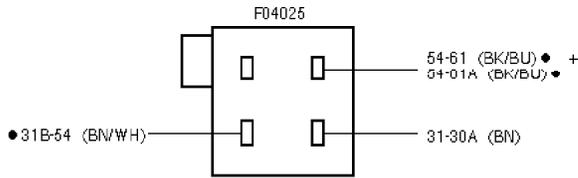

C904c


LHD

before 95

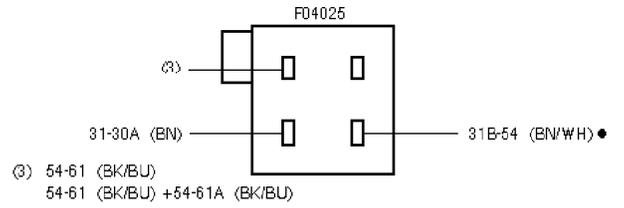


RHD

RS Cosworth

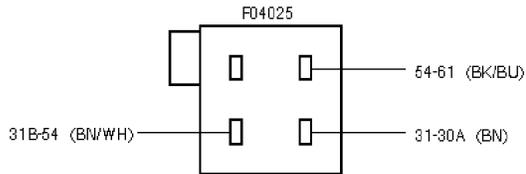

LHD


RS Cosworth

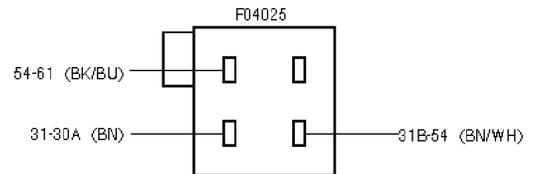

C904d - P91 Central junction box (CJB)




before 95

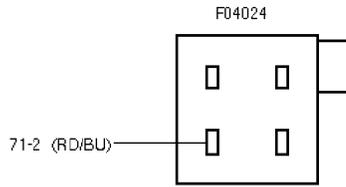


C904d




before 95

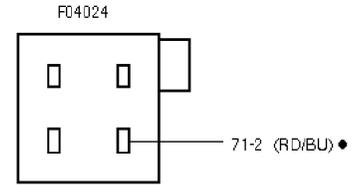

RS Cosworth

 

RS Cosworth

 


C904e - P91 Central junction box (CJB)

RHD

before 95

F05050

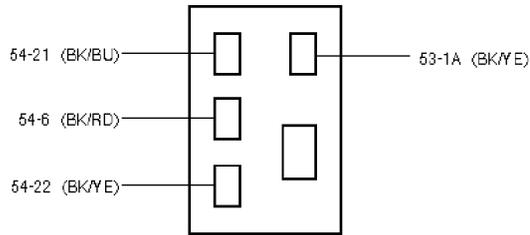


C904e

LHD

before 95


F05050

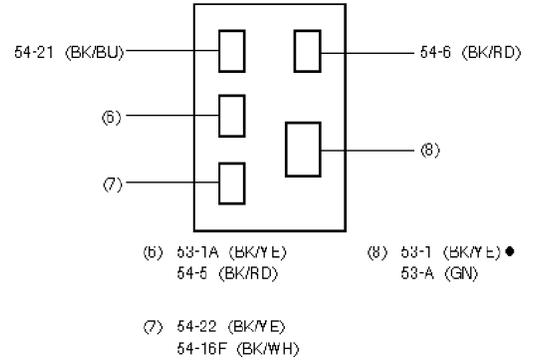

RHD

RS Cosworth


F05050

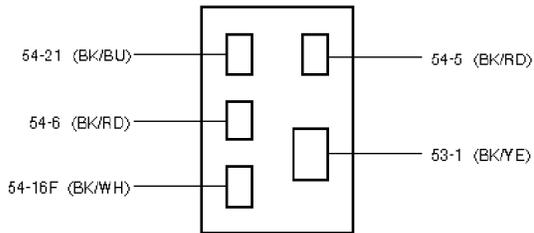

LHD

RS Cosworth


F05050

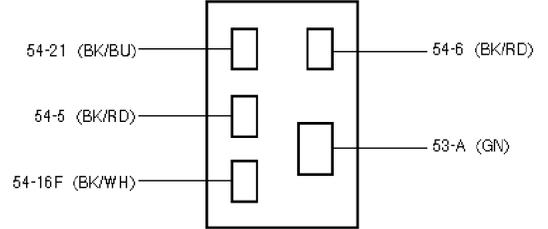


C905a - P91 Central junction box (CJB)

C905a

RHD

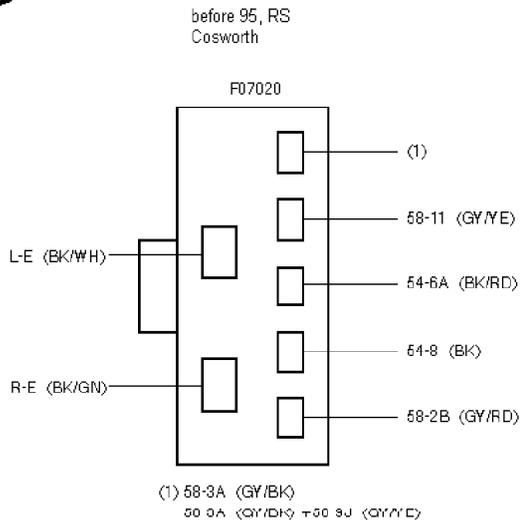


LHD

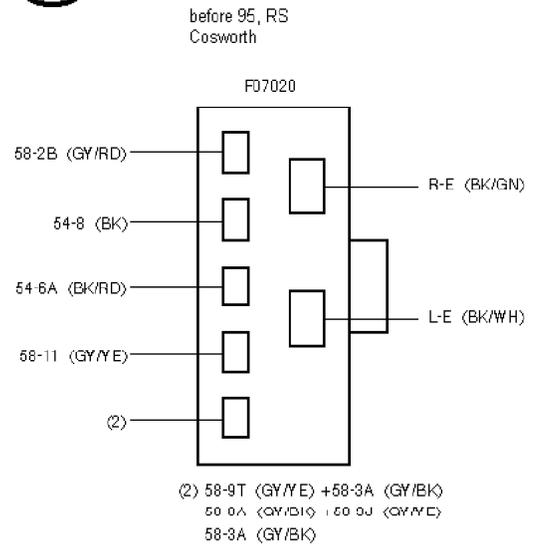


C905b - P91 Central junction box (CJB)

C905b

RHD

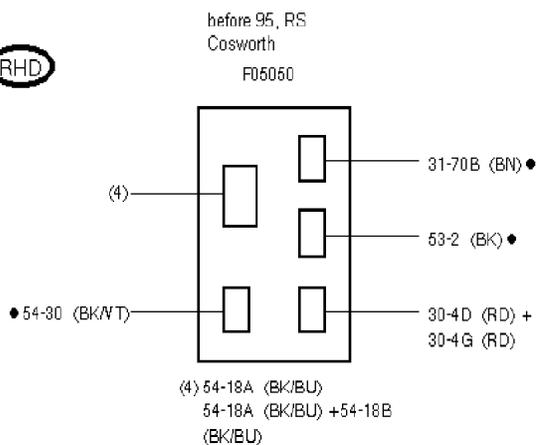


LHD

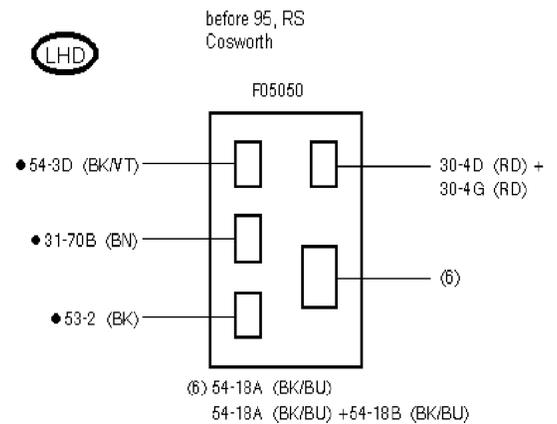

C905c - P91 Central junction box (CJB)


C905c

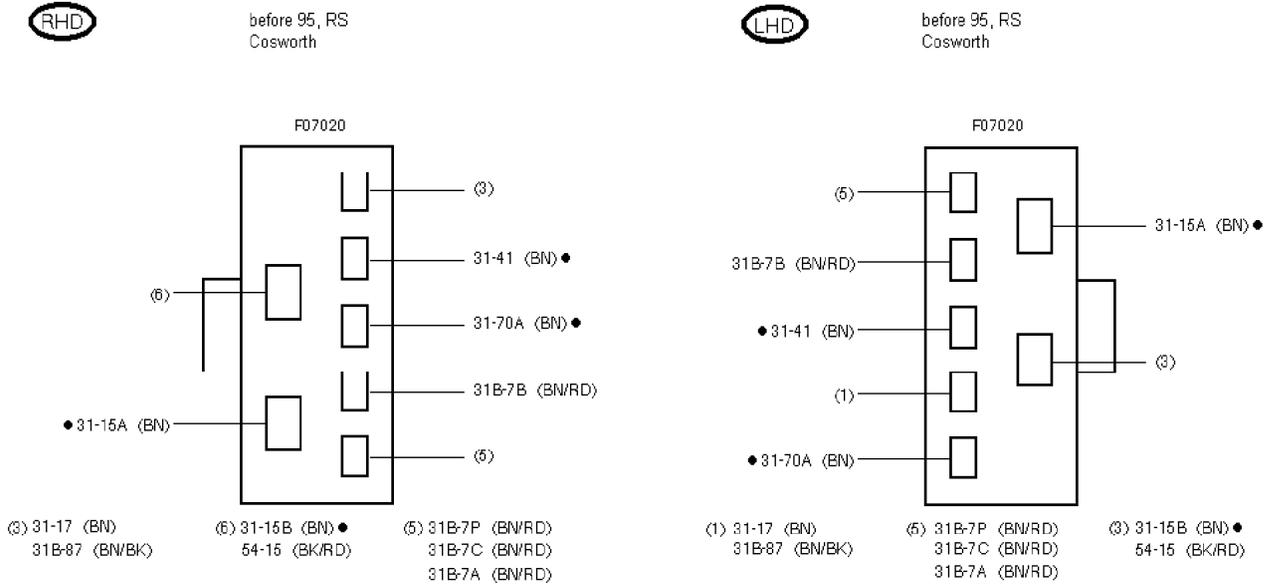

C905d - P91 Central junction box (CJB)

RHD


before 95, RS
Cosworth
F05049

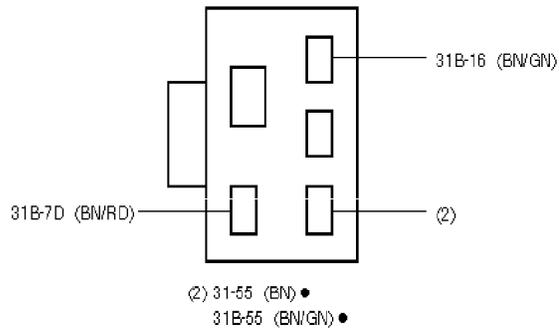

C905d

LHD


before 95, RS
Cosworth
F05049

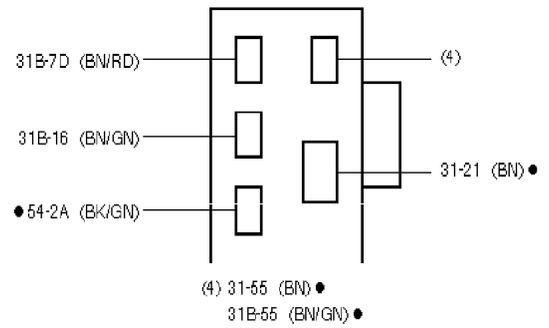

C907 - P91 Central junction box (CJB)

C907

before 95, RS
Cosworth
F05052

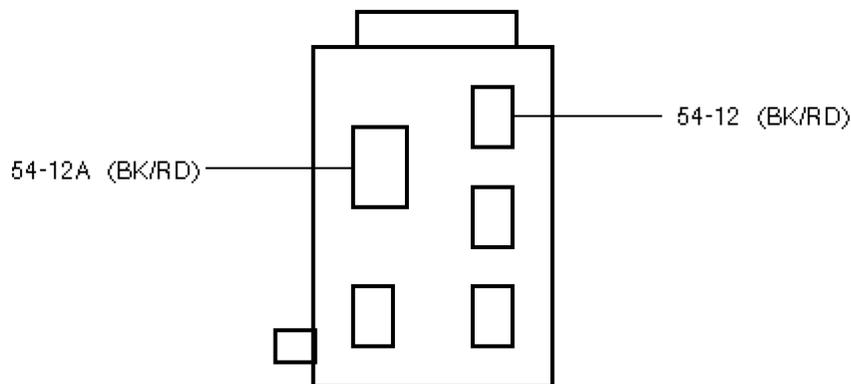


C908 - P91 Central junction box (CJB)

C908

before 95, RS
Cosworth


F04025

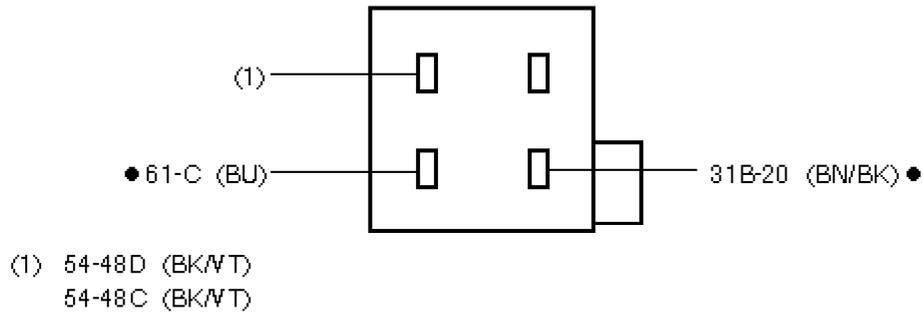

C909a - P91 Central junction box (CJB)

C909a


before 95, RS
Cosworth

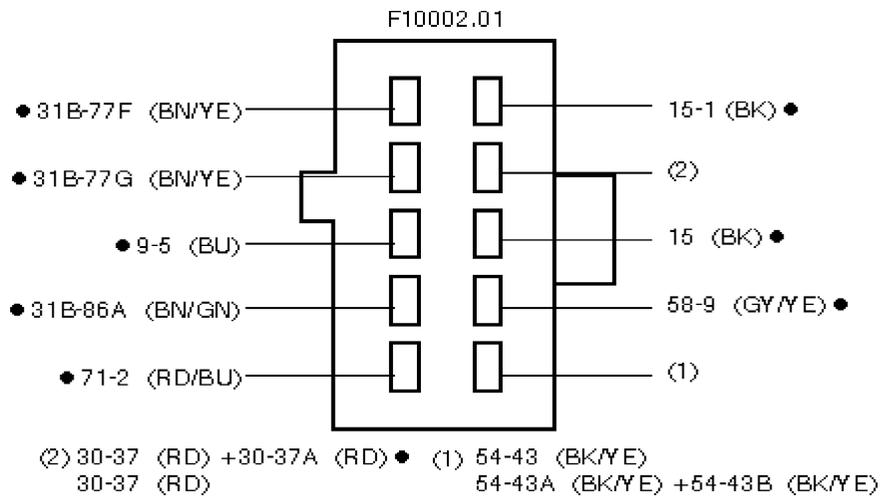



C909b - P91 Central junction box (CJB)

C909b



before 95, RS
Cosworth

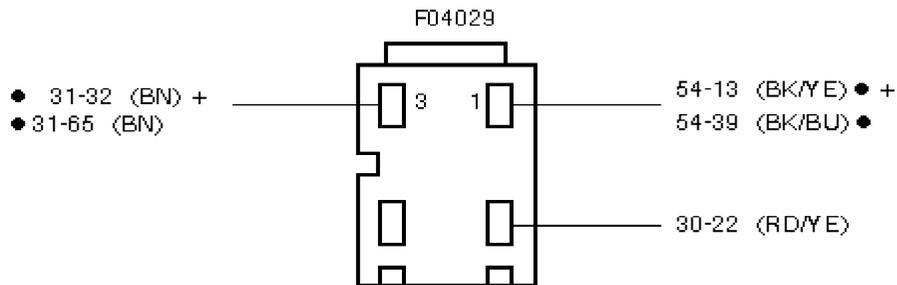

C910 - P91 Central junction box (CJB)

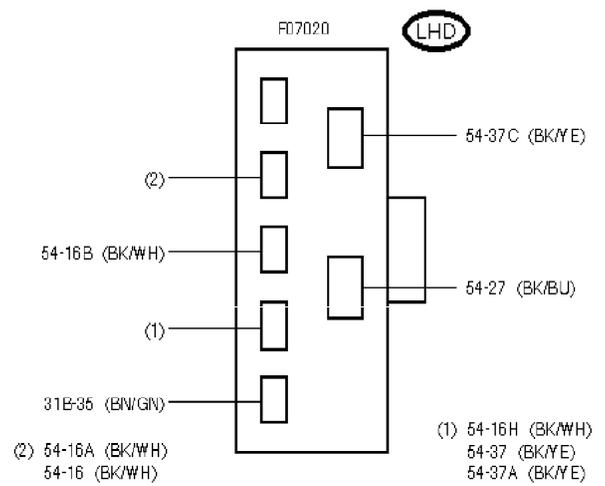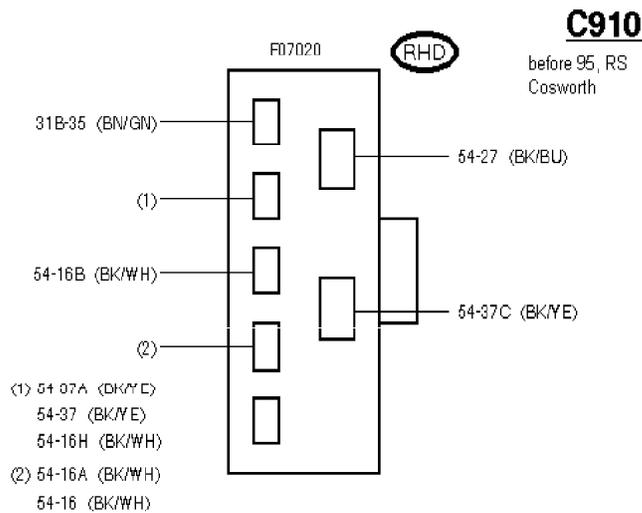

C911 - P91 Central junction box (CJB)

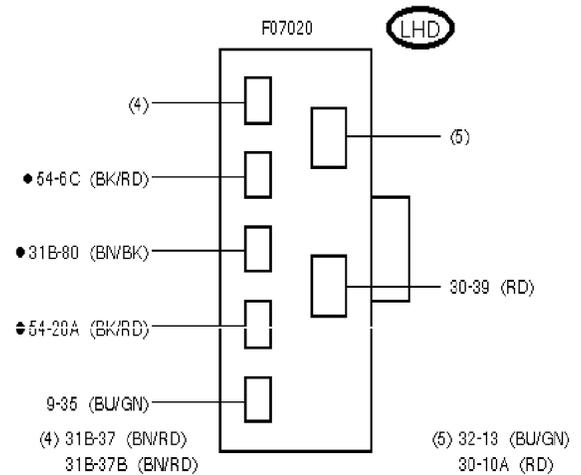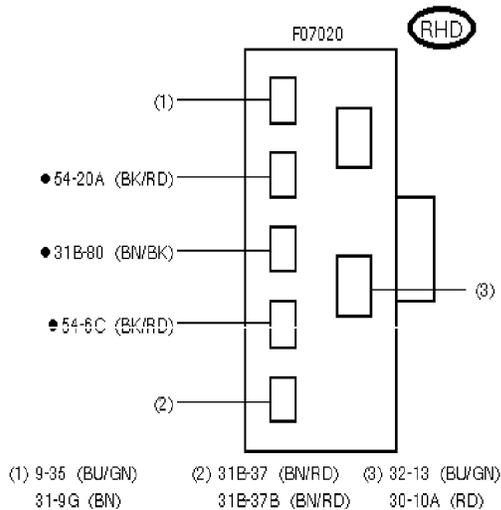


C912 - P91 Central junction box (CJB)

C912

before 95, RS
Cosworth


F04029

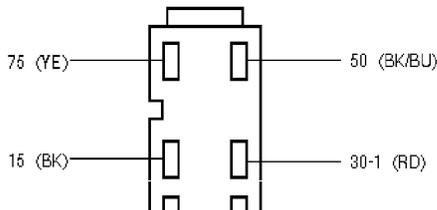

C915 - A15 EEC IV module

C915 (Grey)

 
F60001



(1) 20-28B (BN) 30-28C (RD)	(21) 31B-73 (BN/YE) 34-6 (WH/RD)	(41) 31-7 (WU/BL) ● 31-1C (BN) ●
(2)	(22) 31-70 (BN) 31-5 (BN)	(42) 31B-32 (BN/RD) ● 31C-4 (BN/YE) ●
(3) 31B-41A (BN/WH) 31B-34 (BN/YE)	(23) 31B-32 (BN/RD) ●	(43) 9-39 (BU/BK) ●
(4) 1-3 (GN) ● 31B-41A (BN/WH) ●	(24) 31B-33 (BN/BU) 9-45 (BU/RD)	(44) 9-40 (BU/WH) ●
(5) 15-B (BK) ● 31-15 (BN) ●	(25) 31B-12A (BN/YE)	(45) 31B-76 (BN/YE) ● 31-1A (BN) ●
(6)	(26) 31B-20 (BN/BK)	(46) 31-75K (BN) 31B-7 (BN/RD)
(7) 31B-75 (BN/GN) ●	(27)	(47) 31B-13A (BN/GN)
(8)	(28) 31B-28 (BN/BU) ●	(48) 9-20 (BU/GN)
(9) 31B-14A (BN/RD) ●	(29) 9-40 (BU/WH) ● 31B-35 (BN/RD) ●	(49) 31-28H (BN) ● 31-28F (BN) ● 9-64 (BU/YE) ●
(10) 54-37D (BN/YE) ●	(30) 31B-34 (BN/YE) ● 31B-30A (BN/WH) ● 31B-30 (BN/WH) ●	(50) 31B-9E (BN/WH) ●
(11) 31B-10A (BN/WH) ● 1-3 (GN) ●	(31) 31B-10A (BN/WH) ● 31B-78 (BN/WH) ●	(51) 31B-68A (BN/YE) ● 31C-1 (BN/BK) ●
(12) 31-29 (BN/RD) ● 31-74 (BN)	(32)	(52) 31-29 (BN/RD) ●
(13)	(33)	(53) 31B-97 (BN/BU) ● 31-70 (BN) ●
(14) 31B-68A (BN/YE) ●	(34)	(54) 31B-35 (BN/GN) ● 31C-3 (BN/GN) ●
(15) 31C-1 (BN/BK) ● 31-73 (BN) ●	(35) 31C-4 (BN/YE) ● 31B-10A (BN/WH) ● 31B-35 (BU/GN) ●	(55) 9-42B (BU/YE) ● 9-42 (BU/YE) ● 9-42A (BU/YE) ●
(16) 31-28W (BN) ●	(36) 9-15 (BU/RD) ●	(56) 9-17A (BU/YE) ● 9-17 (BU/YE) ● 9-41B (BU/GN)
(17) 31B-40 (BN/GN)	(37) 15-6L (BK)	(57) 15-6M (BK)
(18) 9-71 (BU/YE) ● 31B-73B (BN/YE) ●	(38) 31-1F (BN) ●	(58) 31-73 (BN) ● 1-6 (GN/RD) ● 31B-98 (BN/RD) ●
(19) 9-72 (BU/GN) ●	(39) 31C-3 (BN/GN) ● 31-5A (BN) ●	(59) 31-74 (BN) ● 1-7 (GN/YE) ● 31B-97 (BN/RD) ●
(20) 31-49 (BN) 31-49A (BN)	(40) 31-28C (BN)	(60) 31-28B (BN)

C916 - A7 ABS Control module


C916

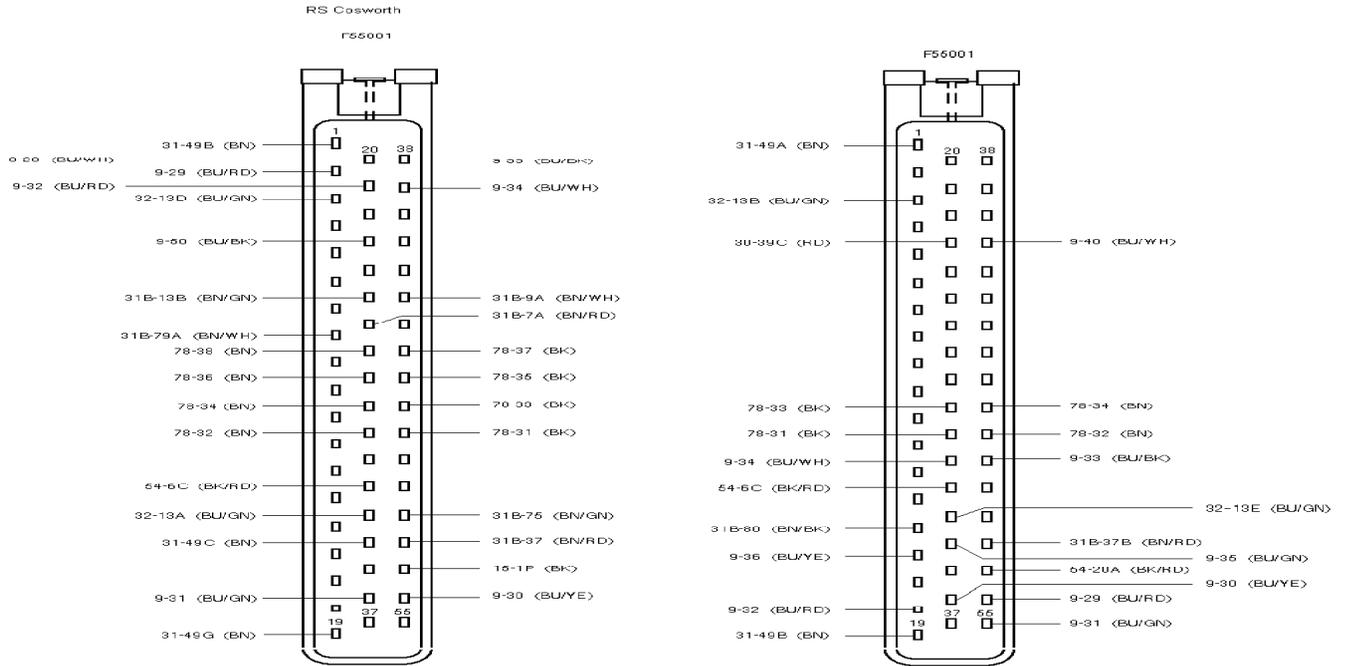

C920a - A70 Instrument cluster

C920a

before 95 1/2

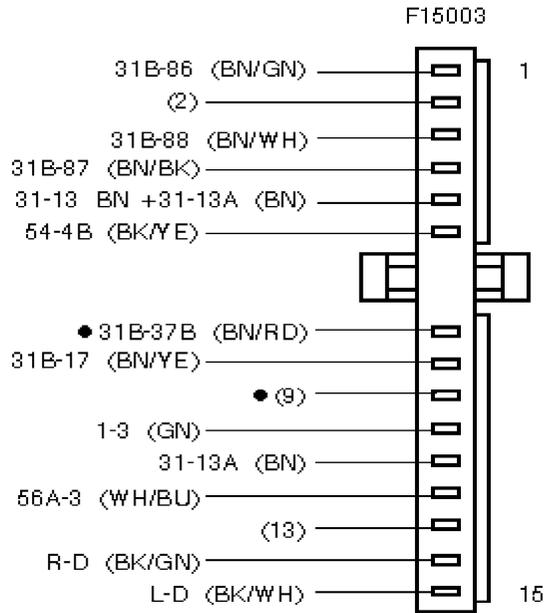

(2) 61-B (BU)
61-A (BU)


(9) 31B-92 (BN/WH)
31B-93 (BN/WH)

(13) 58-9K (GY/YE)
58-10A (GY)

C920b - A70 Instrument cluster


C920b

before 95 1/2

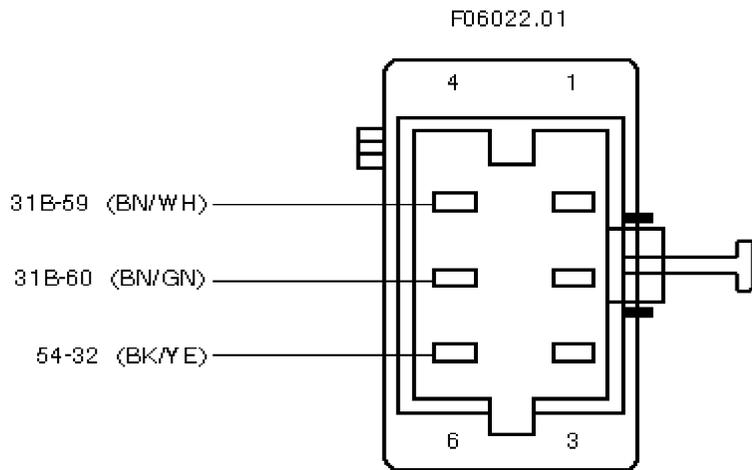


C1152 - K11 Intermittent wiper relay, front

C1152

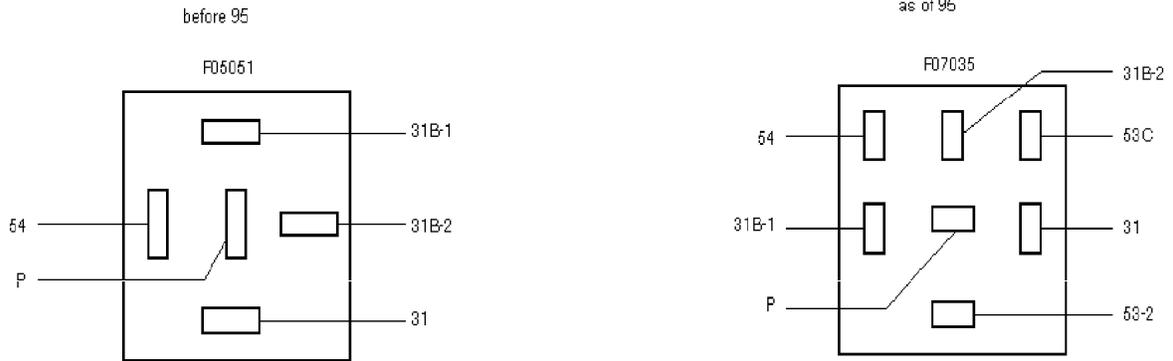

C1153 - K1 Rear window heater relay


C1153

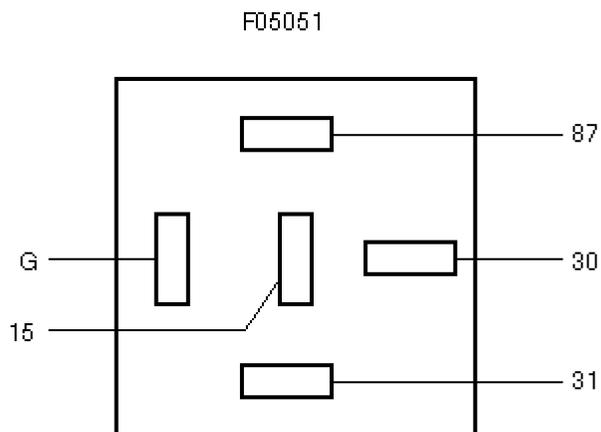

C1154 - K18 ABS Main relay, K104 Voltmeter relay

C1154

F05051

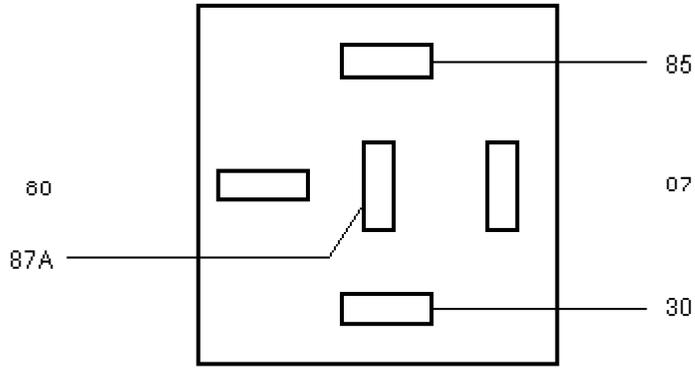


RS Cosworth

C1155 - K25 ABS Pump relay

C1155

FD4056

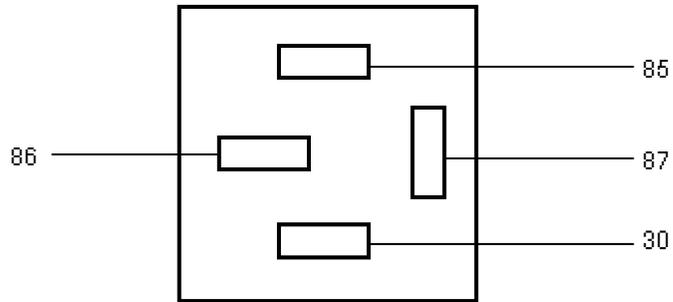


C1156 - K37 Main beam relay

LHD

C1156


before 95

F04056

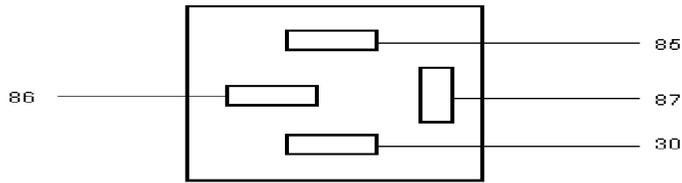

as of 95


F04057

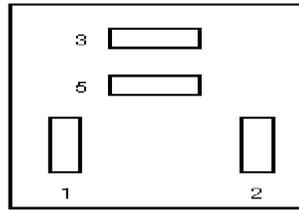

RHD

before 95


F05051

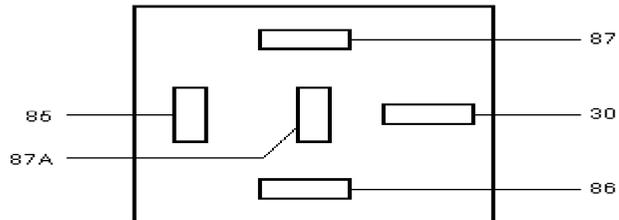


C1157 - K9 Intermittent wiper relay, rear, P25 Busbar for rear window wiper relay

C1157

before 95

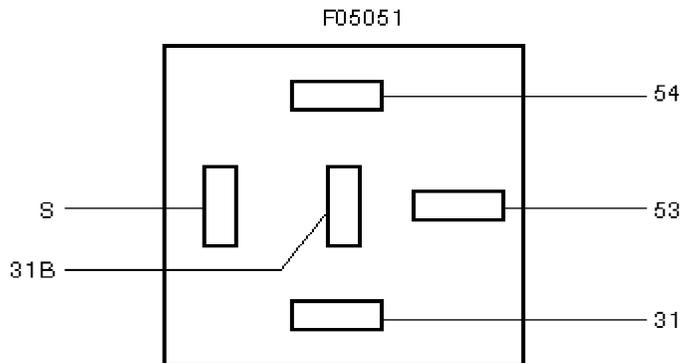

as of 95

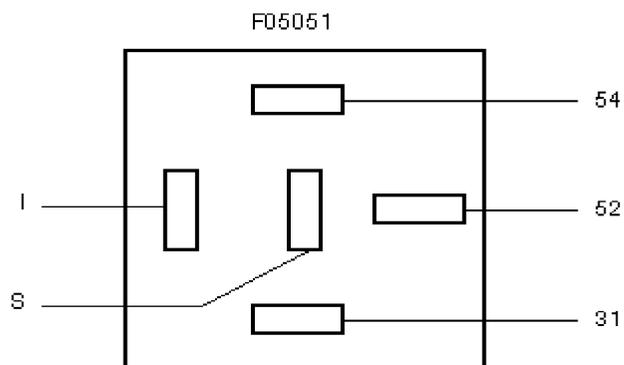

K9

Higher option con-
tent

P25


Lower option con-
tent

C1158 - K13 Power hold relay

C1158


before 95

F04056

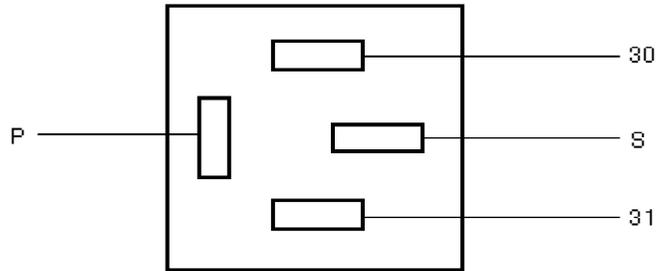

as of 95


F04057

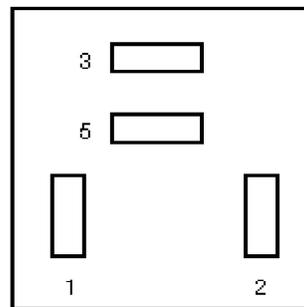

C1159 - K4 Fuel pump relay

C1159


F04057

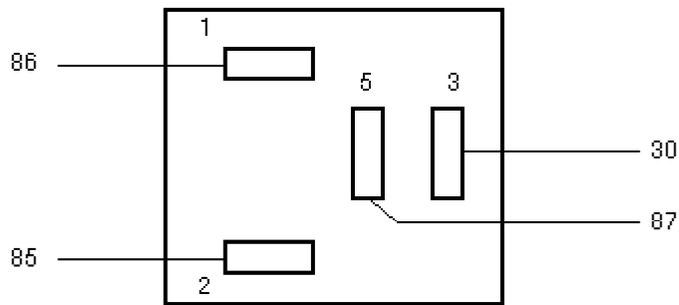

C1160 - K84 Engine run relay

C1160


F04057

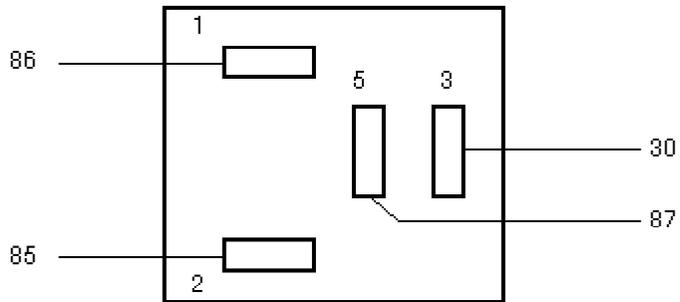

C1161 - K32 A/C Wide Open Throttle (WOT) relay, P30 Busbar for Diesel with A/C

C1161

F04057

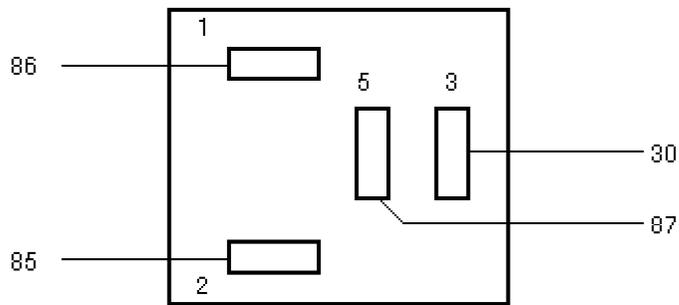


C1162 - K81 Cold advance relay

C1162


before 95

F04057

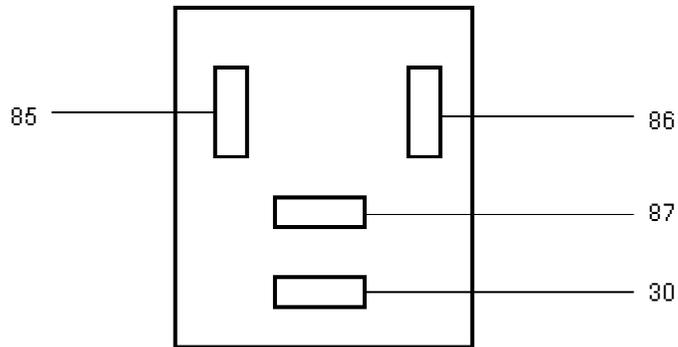

**C1163 - K78 Dim-dip relay I, P24 Busbar LHD, K80 Daytime running lamps relay
(parking lamps)**

C1163

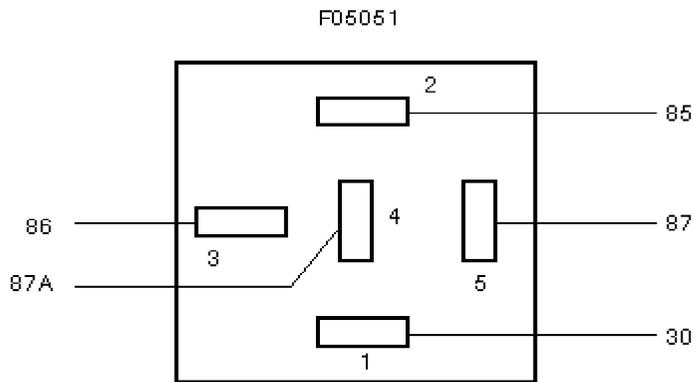

K78

Scandinavian

K80




P24

C1166 - K95 Fuel pump relay 4x4

C1166


F04056

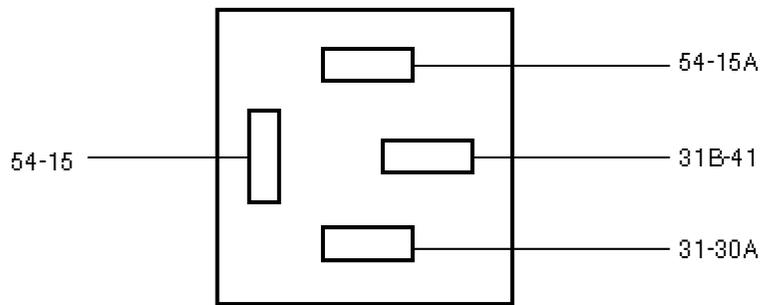

C1167 - K96 Delayed interior light relay, P31 Busbar for interior light w/o delay function

C1167


F05051

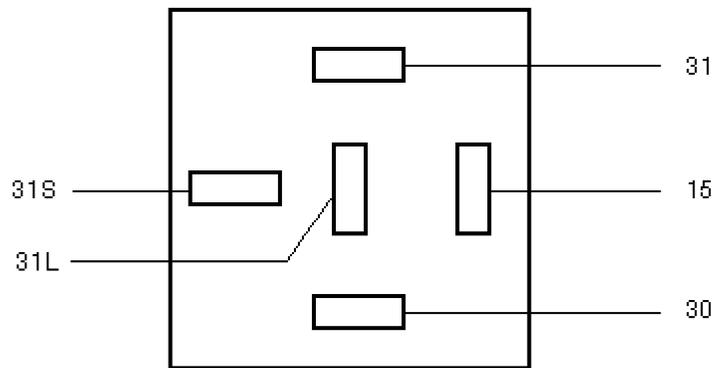

C1169 - P22 Busbar for rear fog lamp

C1169


F04057

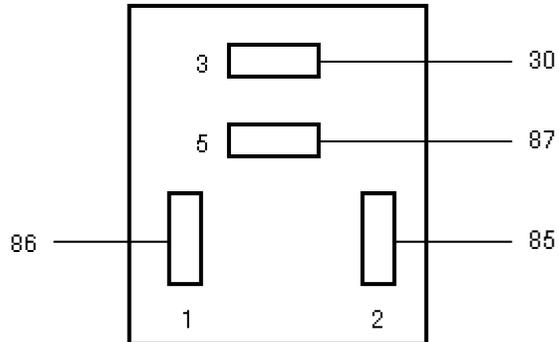

C1170 - K79 Dim-dip relay II, K5 Daytime running lamps relay (DTRL)

C1170

FD4057

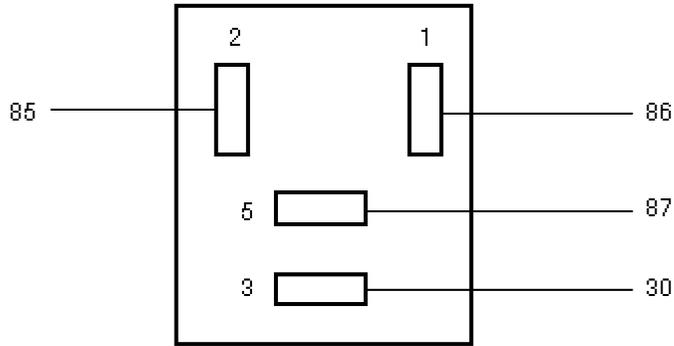

K79

RHD


K5

Scandinavian

C1171 - A82 Front fog lamp module, P23 Busbar for front fog lamp

C1171


F04056

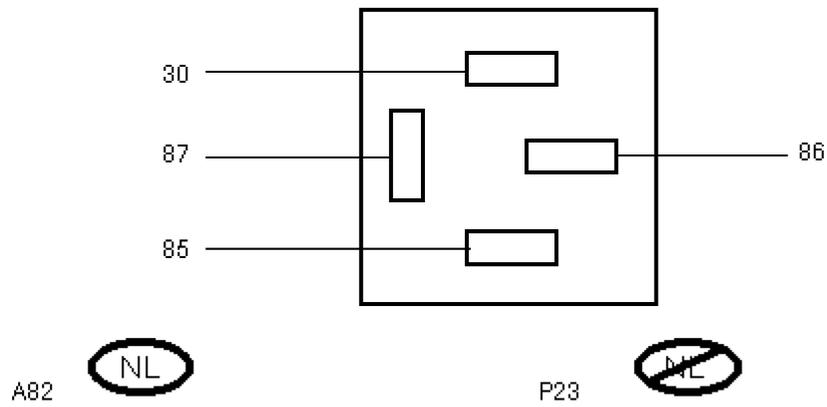

C1172 - K34 Headlamp cleaning relay, P26 Busbar for headlamp washer

C1172


F05051

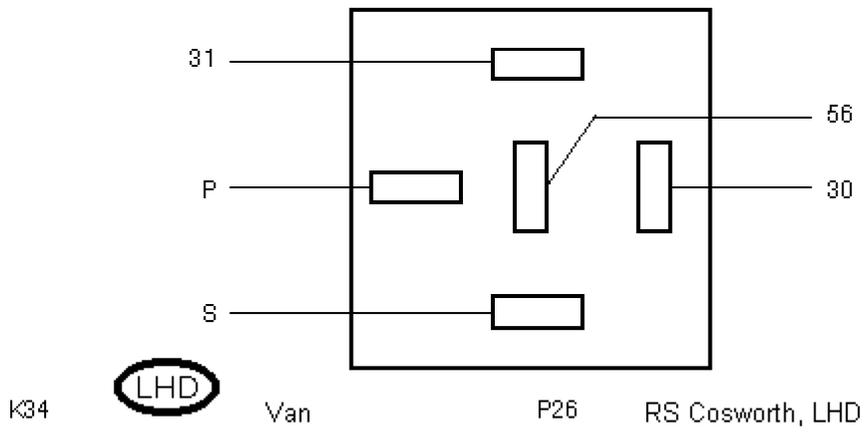

C1173 - K36 Dip beam relay

C1173


FD4057

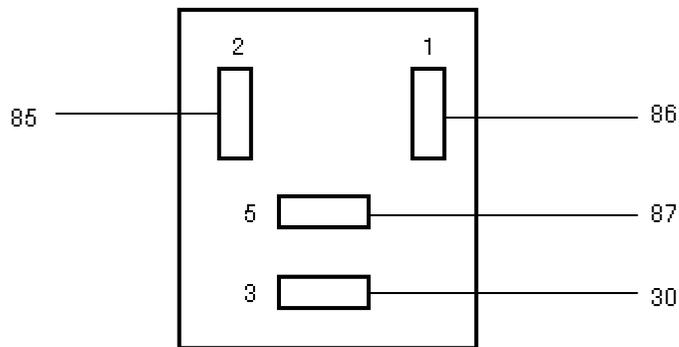

C1174 - K94 Start inhibit relay, P27 Busbar for manual transmission

C1174


F04056

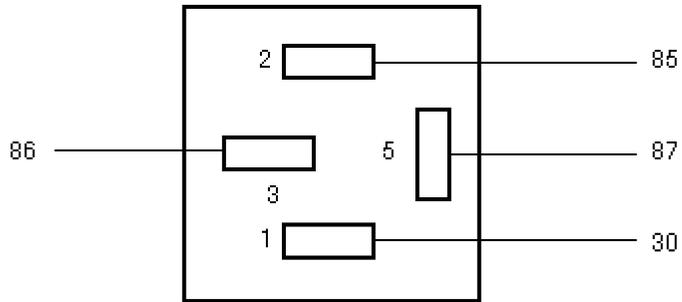

C1175 - K26 Front fog lamp relay

C1175


F04057

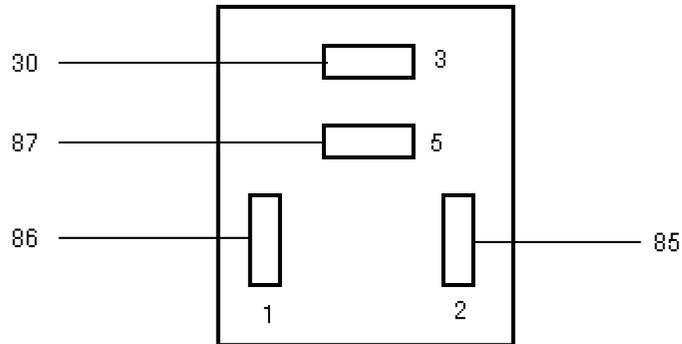

C1176 - K41 Ignition relay

C1176

F04056


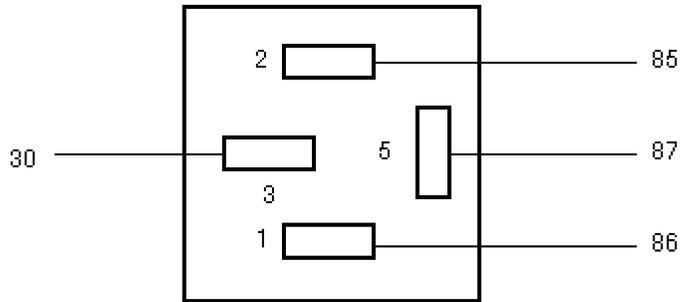


C1179 - K70 Pre-glow relay Diesel

C1179

before 95


as of 95

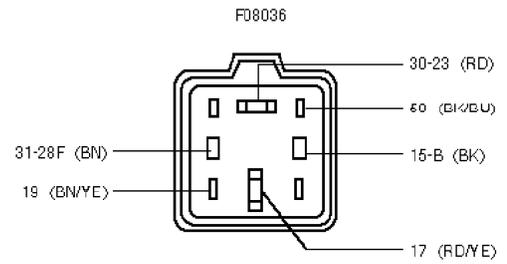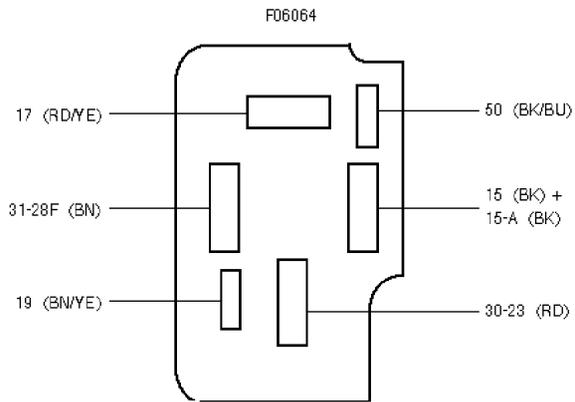

C1182 - K45 Engine cooling fan relay

C1182 (Dark green)


F08025

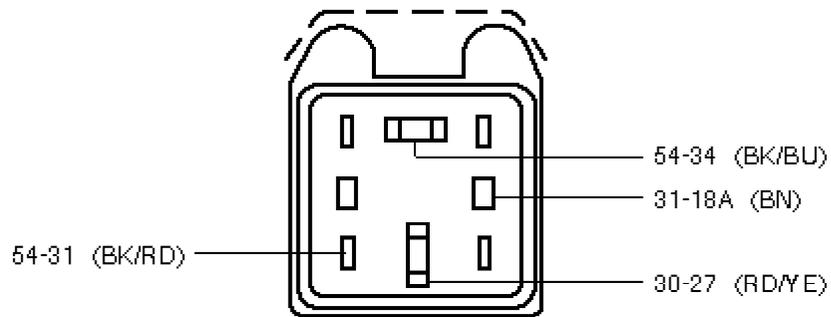

C1183 - K59 A/C Relay

C1183 (Green)

F08036

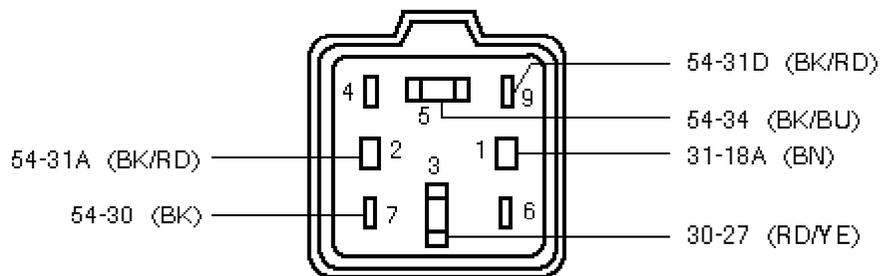


C1184 - K3 Heated front windscreen relay

C1184

F08036

(1) 31B-20 (BN/BK)
54-58 (BK/GN)


(2) 31-20 (BN)
31B-20 (BN/BK)

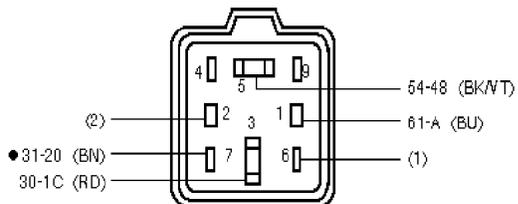

C1192 - K101 Power roof relay III

C1192 (Green)

Cabriolet

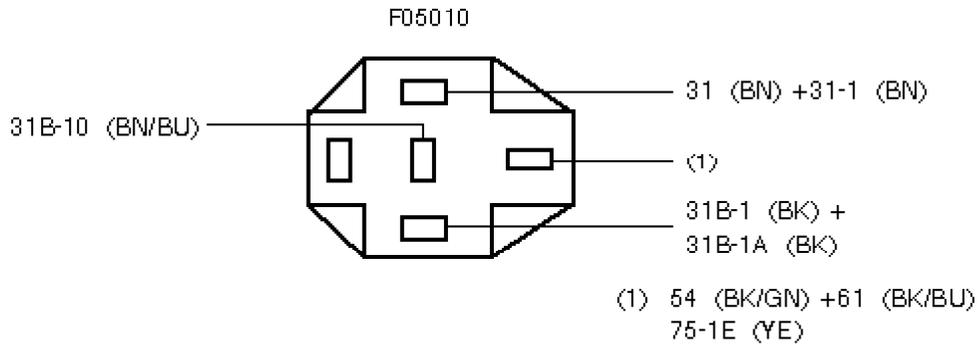


C1193 - K102 Power roof relay IV

C1193 (Yellow)

Cabriolet

F05009

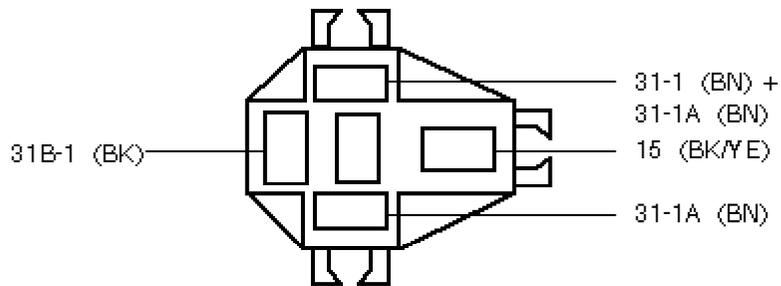


C1194 - K99 Power roof relay I

C1194


Cabriolet before 95

F05010

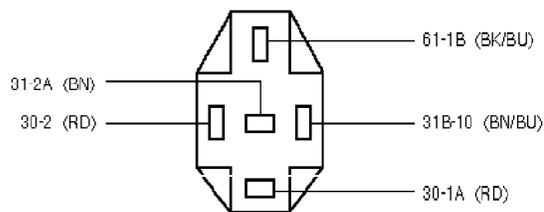


Cabriolet as of 95

F05010

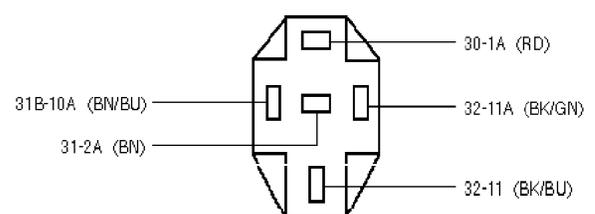


C1195 - K100 Power roof relay II

C1195

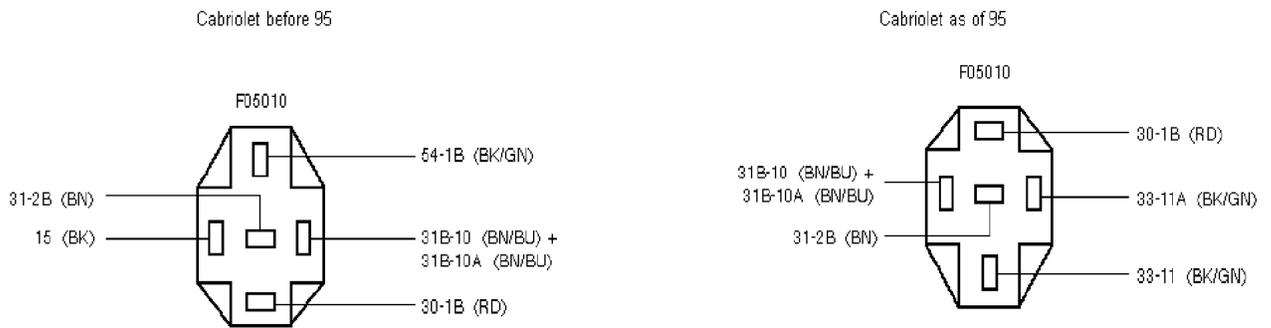


C1197 - K103 Power antenna relay

C1197

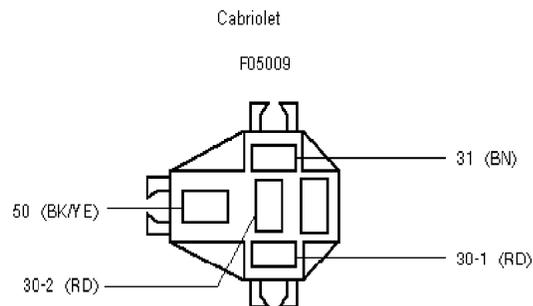


C1198 - K85 Assembly alarm relay - cabriolet

C1198

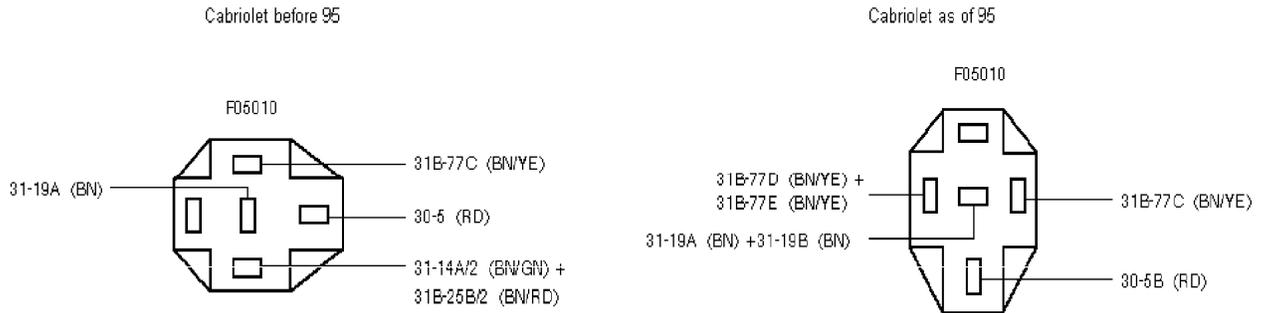

C1199 - K86 Power window adjust relay


C1199

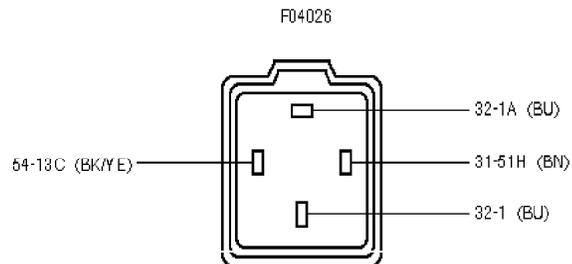


C1205 - E1 LH Headlamp

C1205 (White)

Lower option content, before 95 1/2

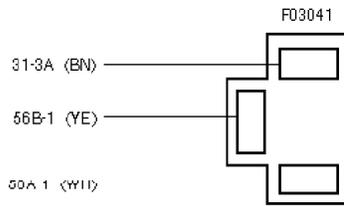


Higher option content, before 95 1/2

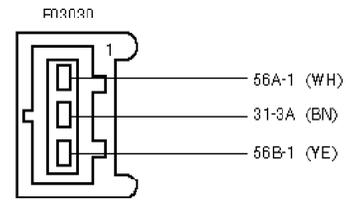

as of 95 1/2


F07017

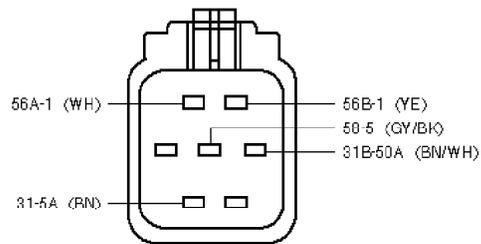

C1206 - E7 RH Headlamp

RHD

Lower option content, before 95 1/2

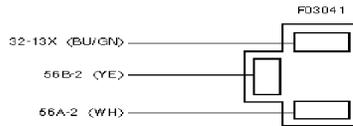


C1206

LHD


(White)

Lower option content, before 95 1/2

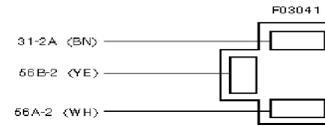

RHD


Higher option content, before 95 1/2

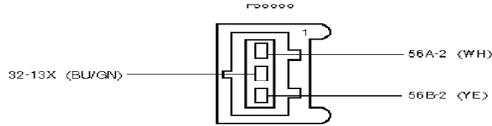

LHD


(White)

Higher option content, before 95 1/2

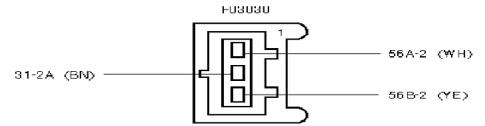

RHD


as of 95 1/2

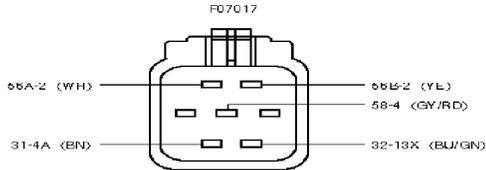

LHD







(White)

as of 95 1/2

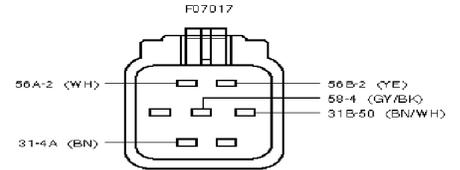

C1214 - E10 Rear lamp assembly right


C1214

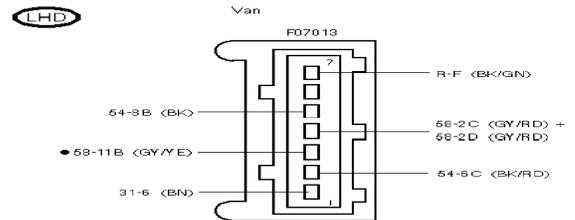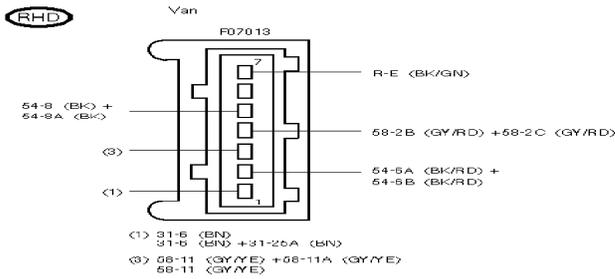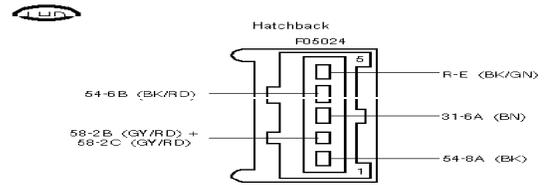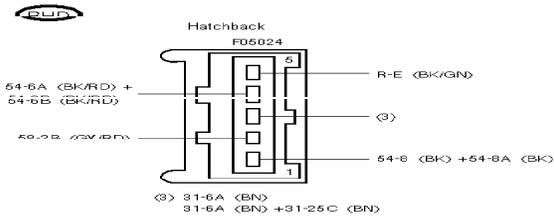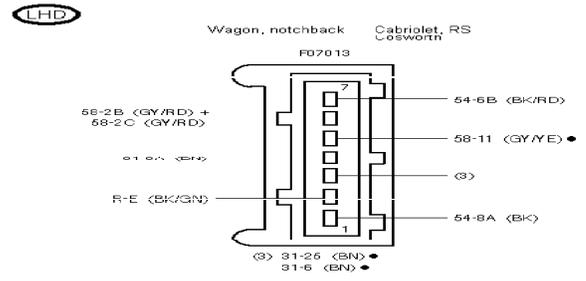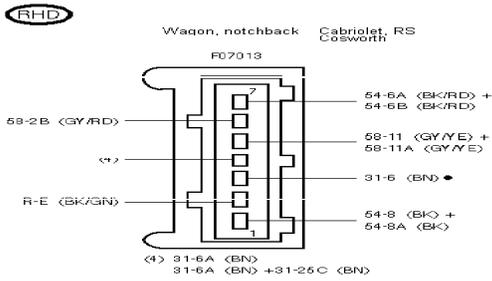


C1215 - E9 Rear lamp assembly LH

C1215


RHD

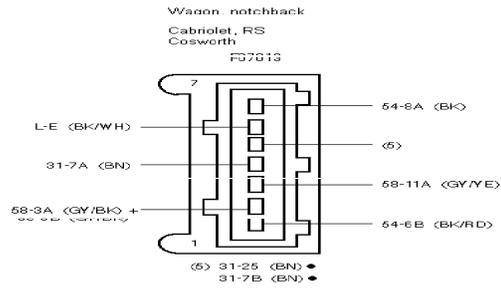


LHD

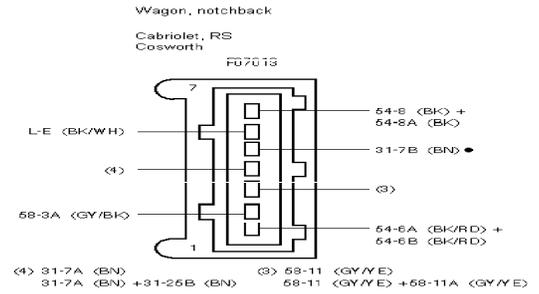


RHD

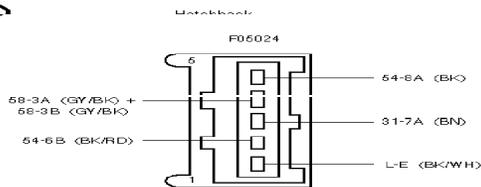


LHD

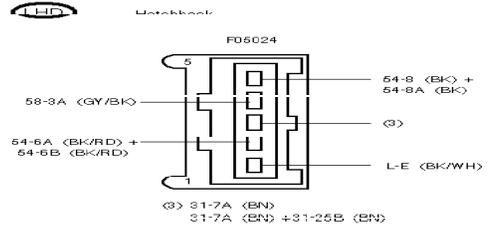

LHD

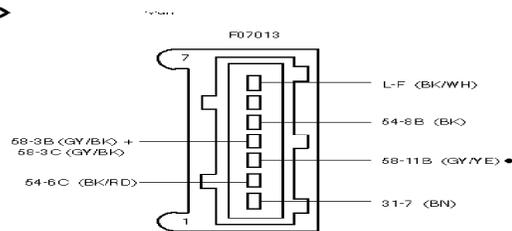


LHD

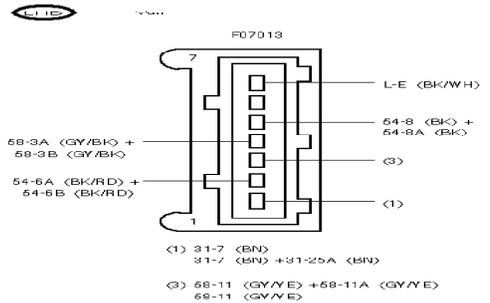

C1224a - E87 Cargo space lamp

C1224a


Van

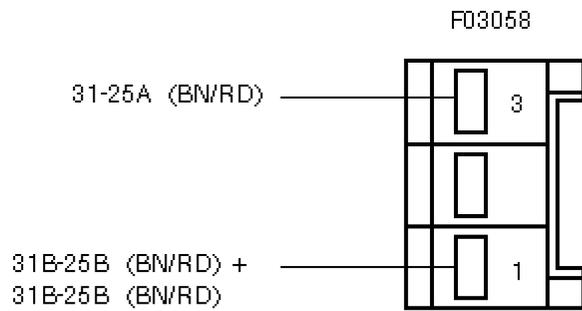

C1226a - E19 Interior lamp rear

C1226a


Wagon

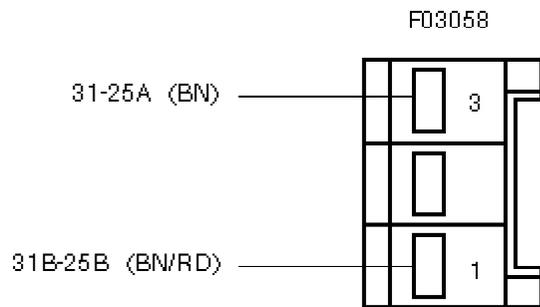

C1224b - E87 Cargo space lamp

C1224b

Van

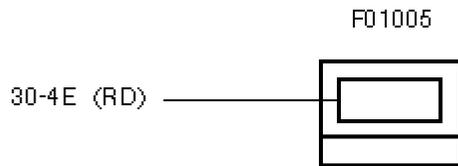

C1226b - E19 Interior lamp rear



C1226b

Wagon



C1292


C1292

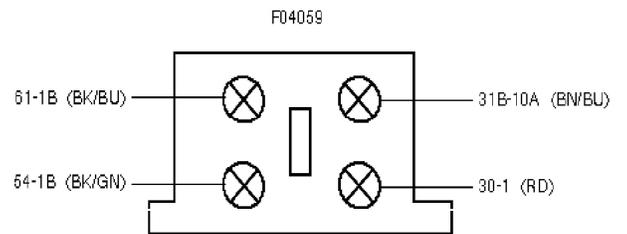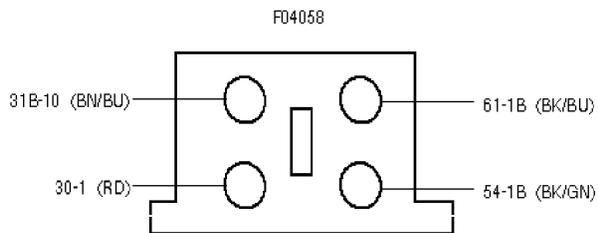

C1300 - N148 Contact plate tailgate

F03060


C1300

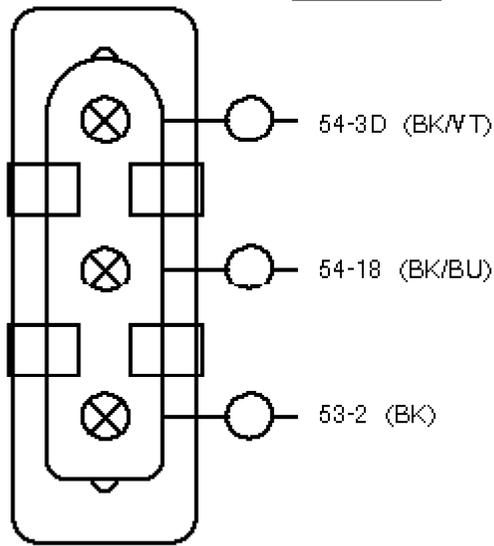

Wagon, hatchback

C1311 - A31 Fuel tank unit


C1311

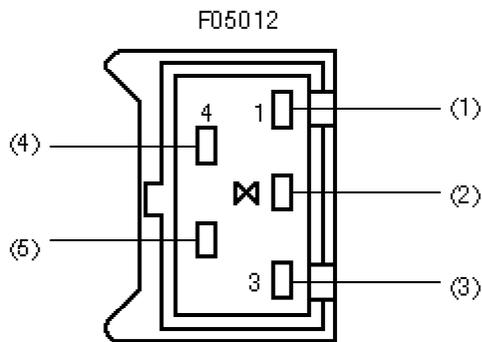


- (1) 31-67A (BN)
31-67 (BN)
31-37B (BN)
- (2) 31B-55 (BN/GN)
31-55 (BN)
31B-55A (BN/GN)
- (3) 54-15 (BK/RD)
31-15 (BN)
54-15B (BK/RD)
- (4) 31-37 (BN)
31-37C (BN)
- (5) 31B-87 (BN/BK)
31-17 (BN)
31B-87A (BN/BK)

C1317 - B59 HEGO 1 sensor

C1317^(White)

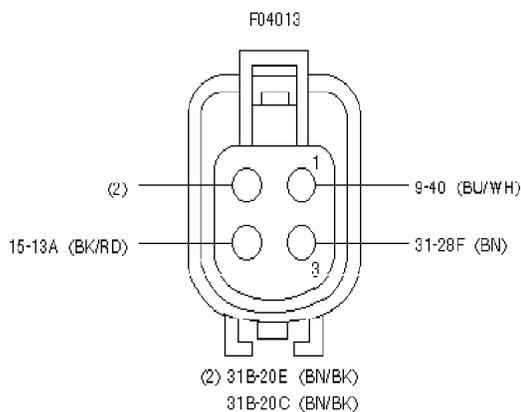


RS Cosworth

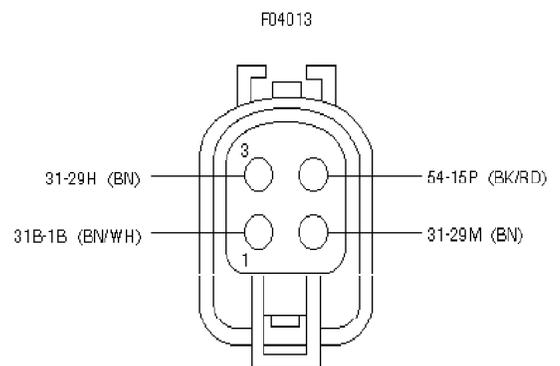

C1318 - B60 HEGO 2 sensor

C1318 (White)

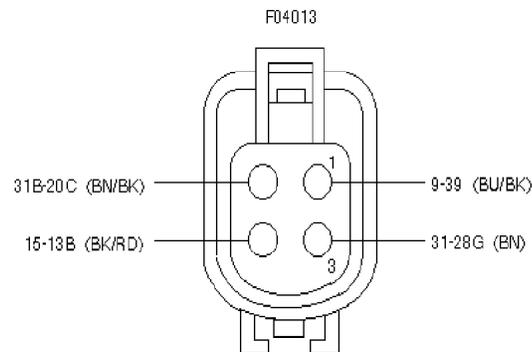



C1319 - B11 Vehicle speed sensor (VSS)

C1319



C1328 - B22 Mass Air Flow (MAF) sensor







C1328

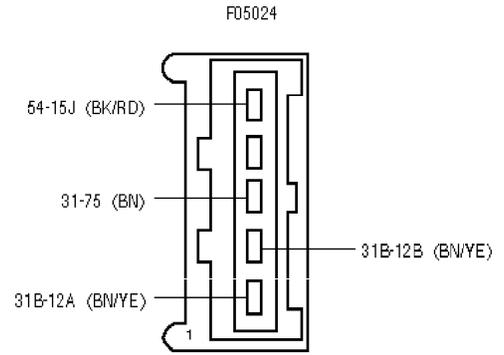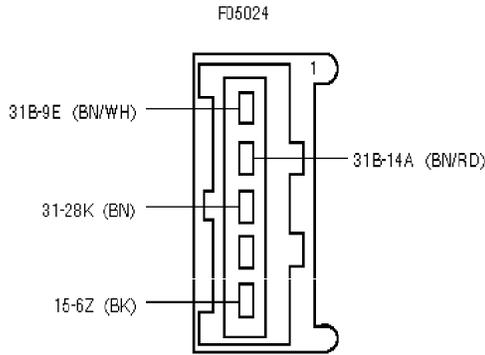

RS Cosworth

C1329 - B8 Throttle Position Sensor (TPS)


C1329

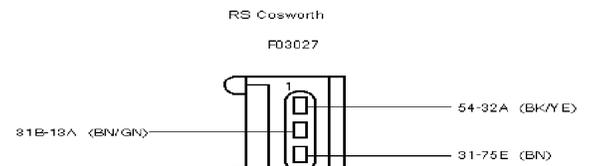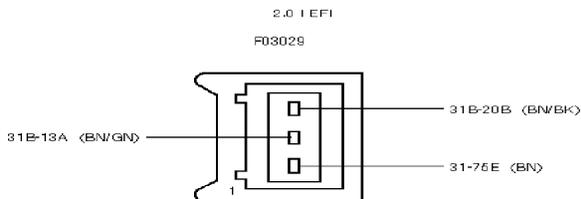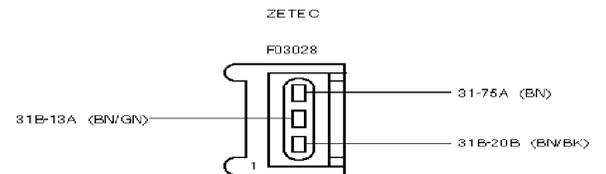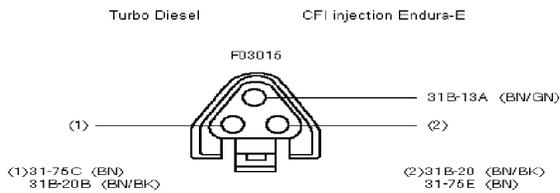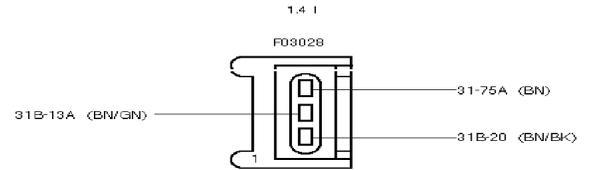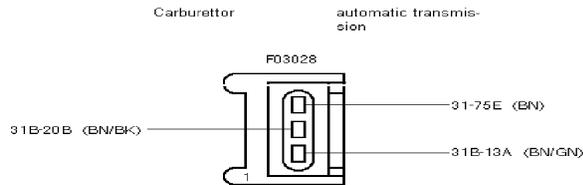

C1331 - B2 Manifold Absolute Pressure (MAP) sensor

C1331


F03013

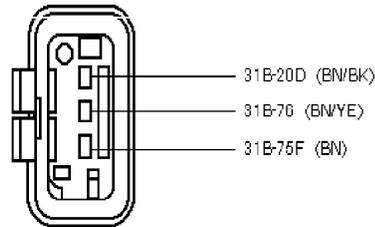


C1342

C1342

F06007

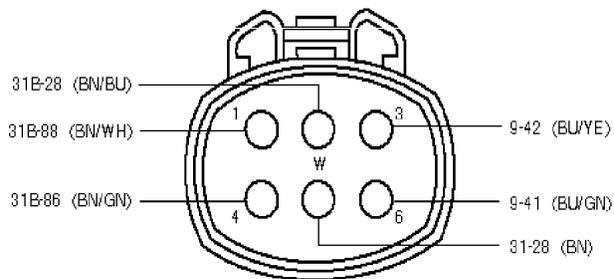


F06008

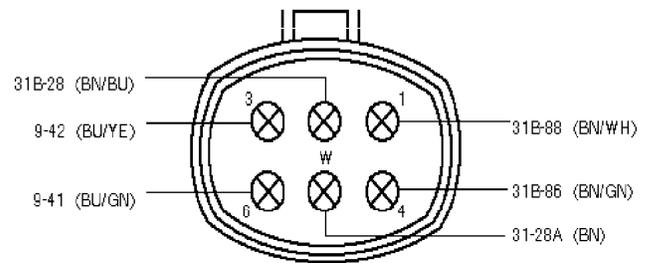

C1343 - B41 Camshaft position sensor

C1343

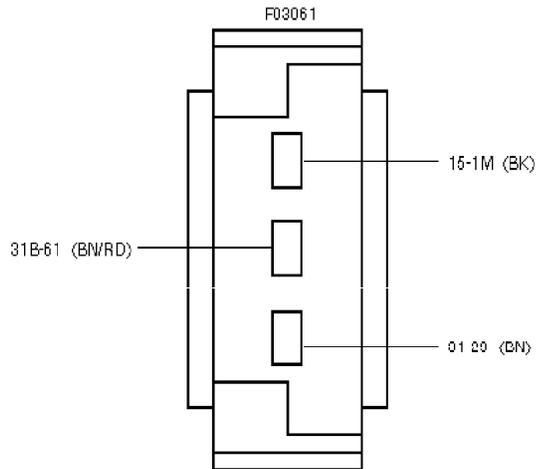

C1344 - B19 Fuel sender


C1344



C1352 - N1 Brake fluid level switch




C1352

F03029

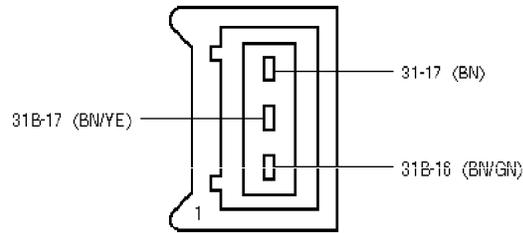



C1353 - N15 Stop lamp switch, N173 ABS Pedal travel sensor/stop lamp switch

C1353

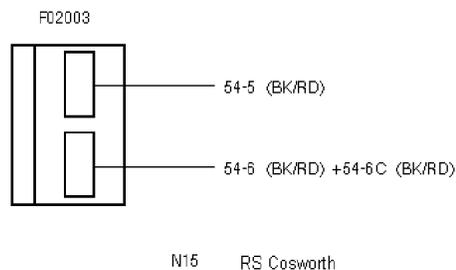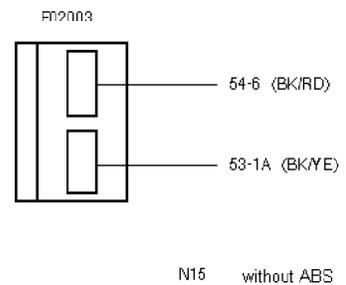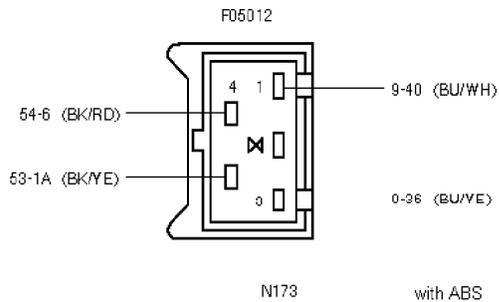


C1357 - N169 Engine cooling fan temperature switch

C1357

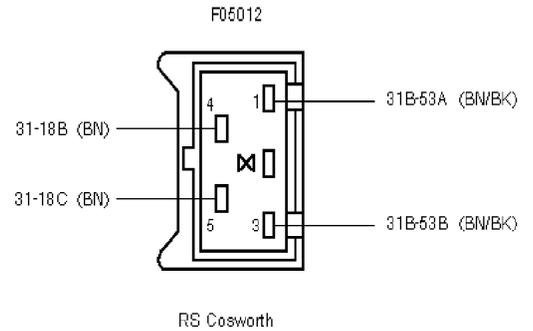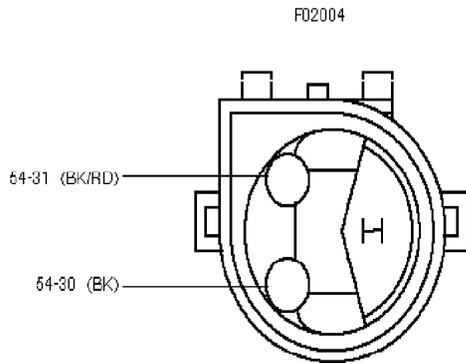

C1358 - N202 A/C Cooling fan temperature switch

C1358


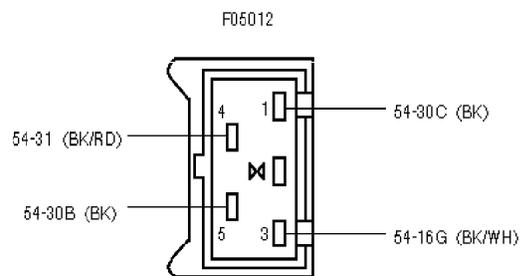


C1360 - N19 Reversing lamps switch

manual transmission, MTX75


C1360

manual transmission, B5

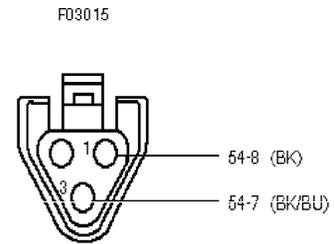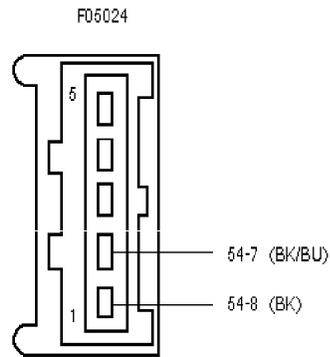


C1361 - N159 De-icing switch

C1361

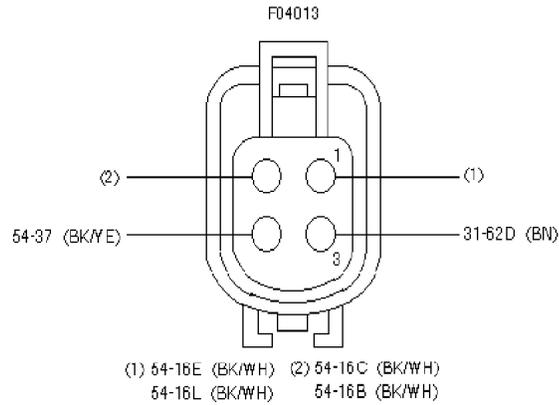


C1362 - N160 A/C Pressure control switch

C1362

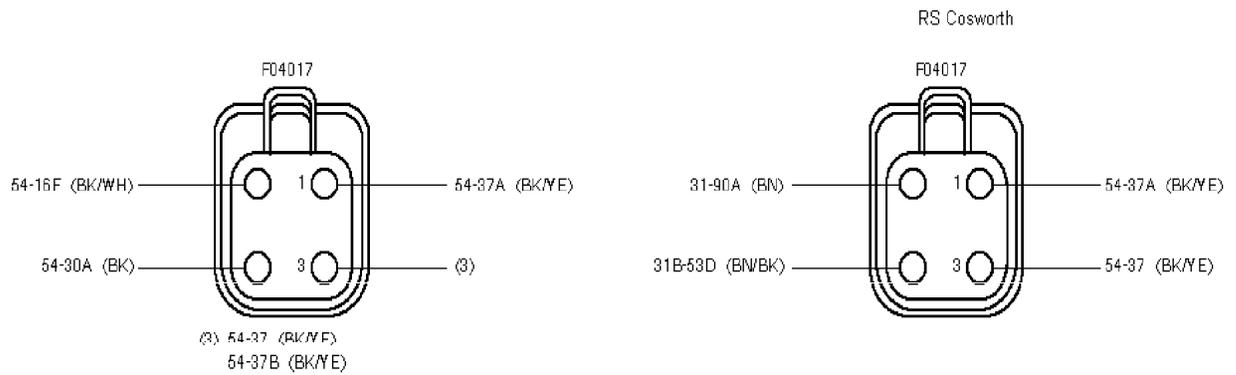

C1367 - N189 Power roof switch


C1367

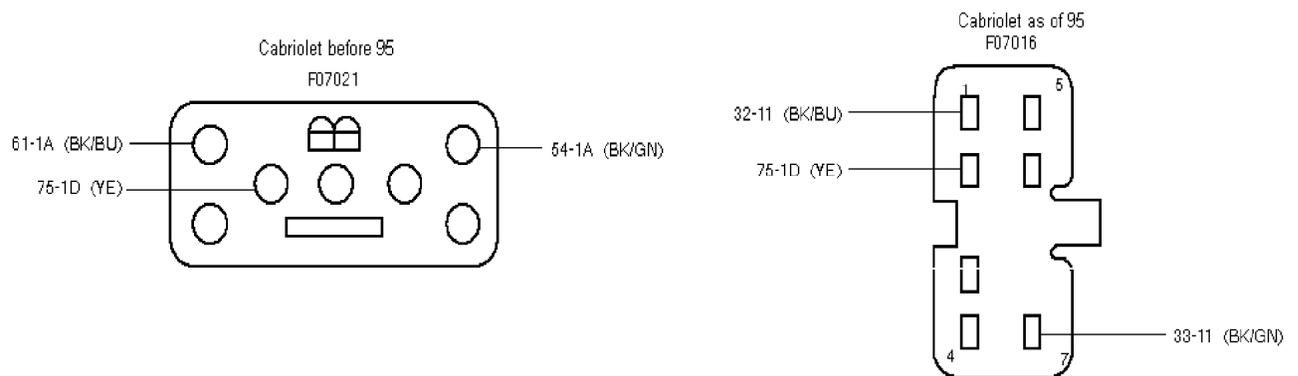


C1377 - N61 Inertia switch

C1377


F03032

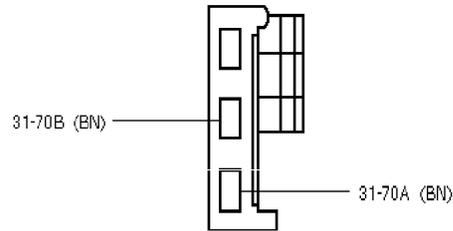

C1415 - A39 Clock

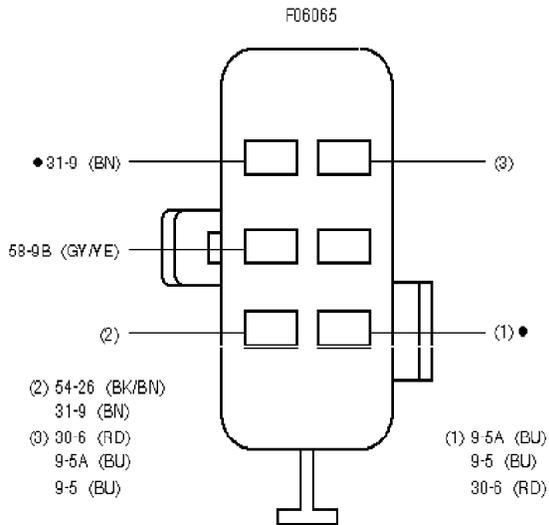


C1415

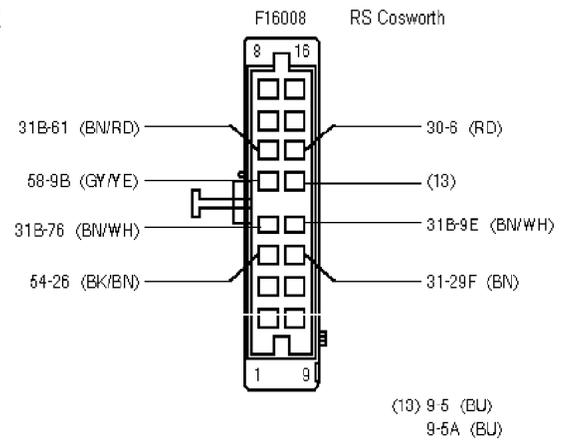

C1422 - N14 Heater blower switch

F06066


C1422

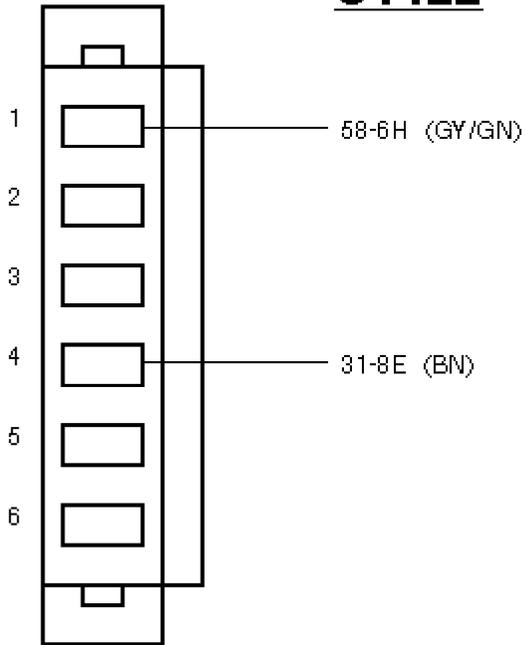

C1502a - N10 Rear window heater switch

C1502a

F04003

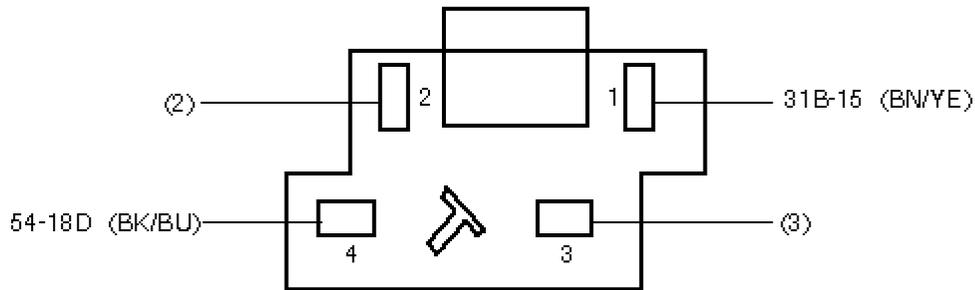


(2) 31-15 (BN) +31-15A (BN)
31-15 (BN) as of 95

(3) 31-15A (BN)
31-15A (BN) +31-15 (BN)

C1500 - N193 Power mirror adjust switch


C1500

F08013

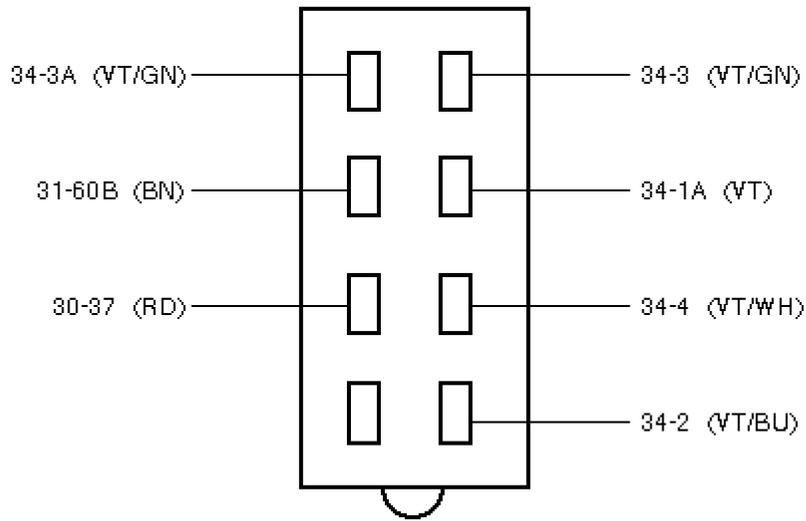

C1502b - N10 Rear window heater switch


C1502b

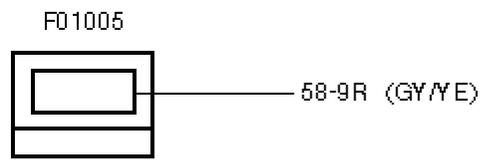

C1503a - N91 Windscreen heater switch


C1503a

F04003

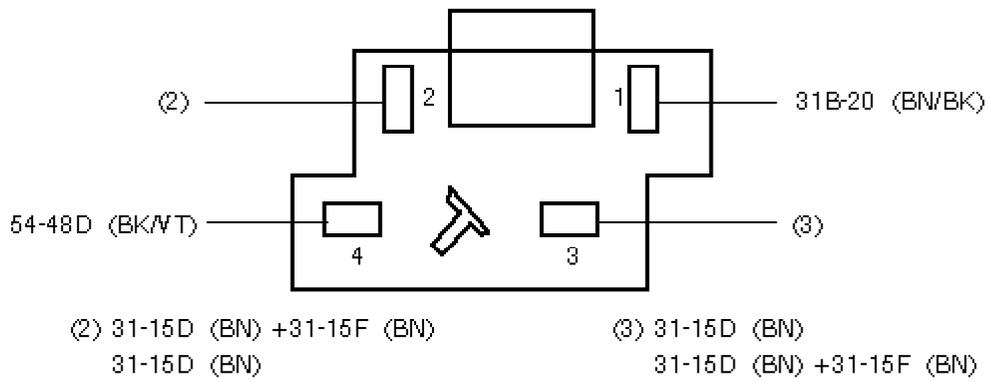


C1503b - N91 Windscreen heater switch

C1503b

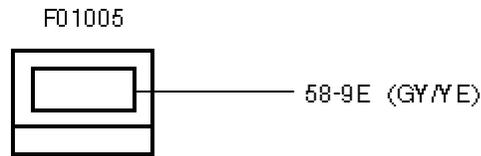


C1504 - N171 Heated seat switch, driver side

C1504

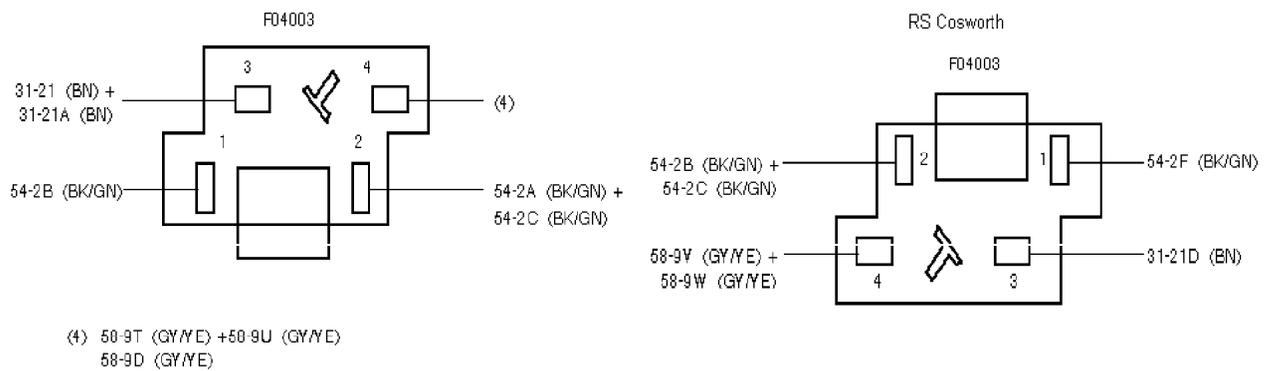

C1505 - N172 Heated seat switch, passenger side


C1505

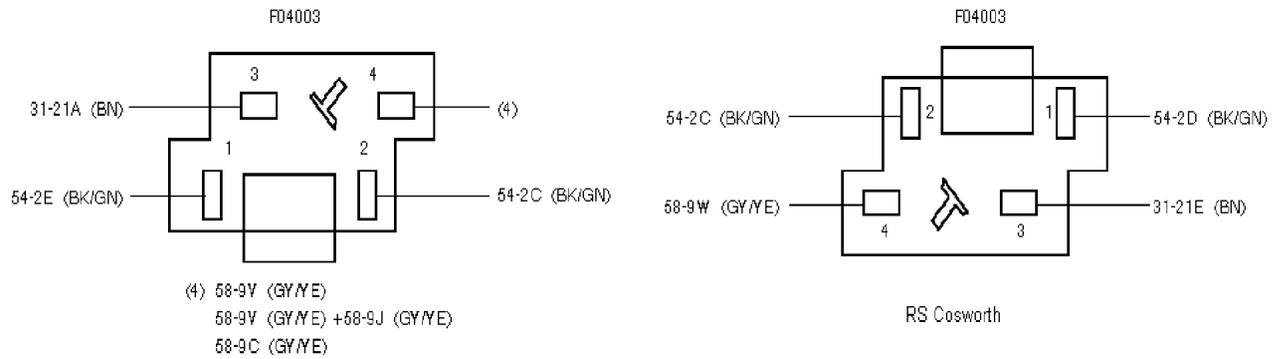


C1506 - N13 Headlamp levelling switch




C1506

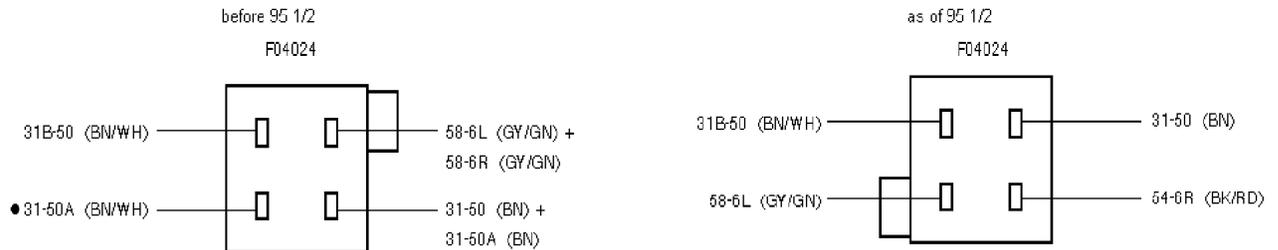


C1507 - N182 Power window switch, driver side front

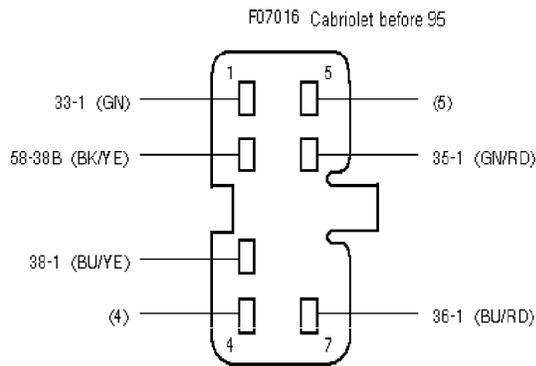


- (4) 31-51E (BN) + 31-51F (BN)
51-51E (BN)
- (5) 58-9D (GY/YE) + 58-9C (GY/YE)
58-9D (GY/YE)

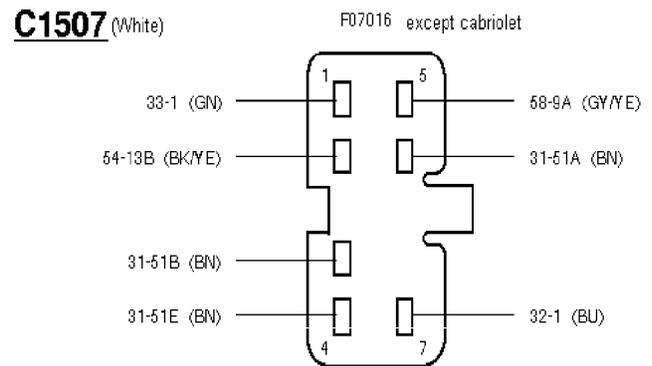

C1508 - N181 Power window switch, passenger side front

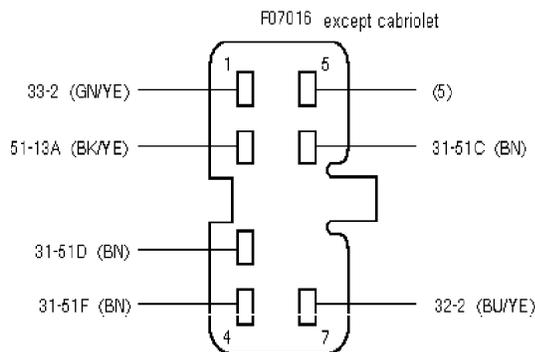


- (5)
58-9A (GY/YE)
58-9B (GY/YE)

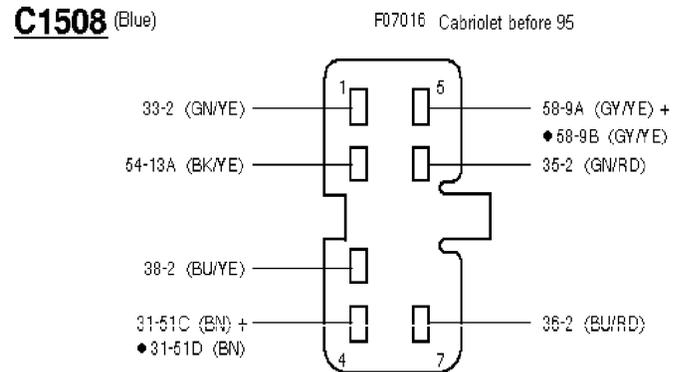

C1514 - N14 Heater blower switch, N73 Heater blower switch


C1514

F08005

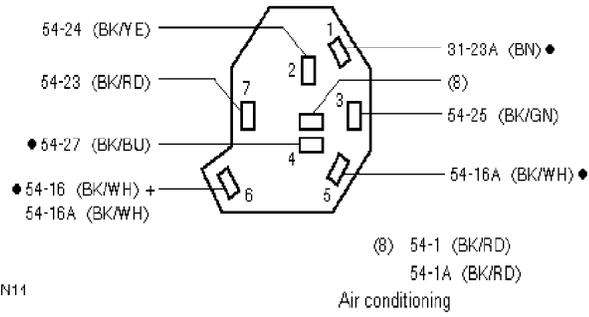

C1519 - N150 Headlamp, turn lamp, horn, wiper switch

C1519

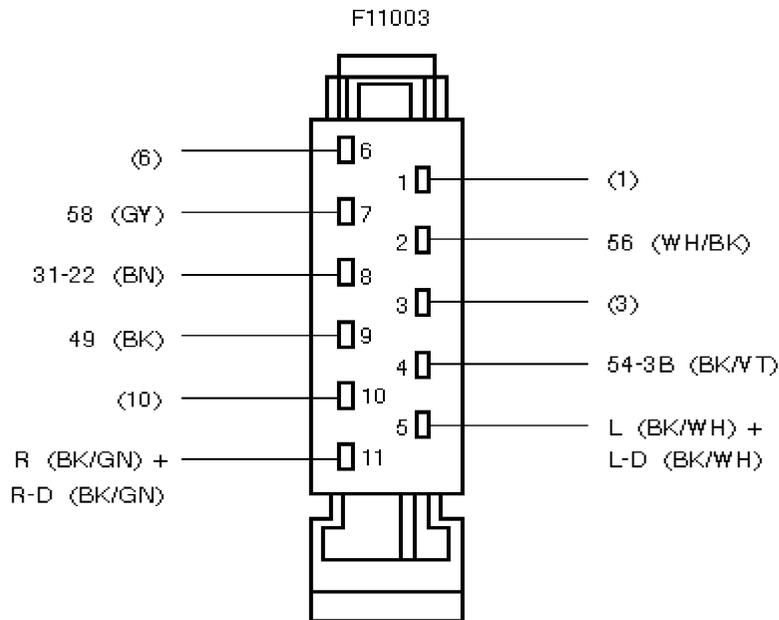

(6) 30-7 (RD)
30-7B (RD) as of 95


(10) 30-9 (RD)
30-9B (RD)

(1) 56B-A (YE)
56B-B (YE)

(3) 56A (WH)
56A-A (WH) as of 95

C1520 - N150 Headlamp, turn lamp, horn, wiper switch

C1520 (White)


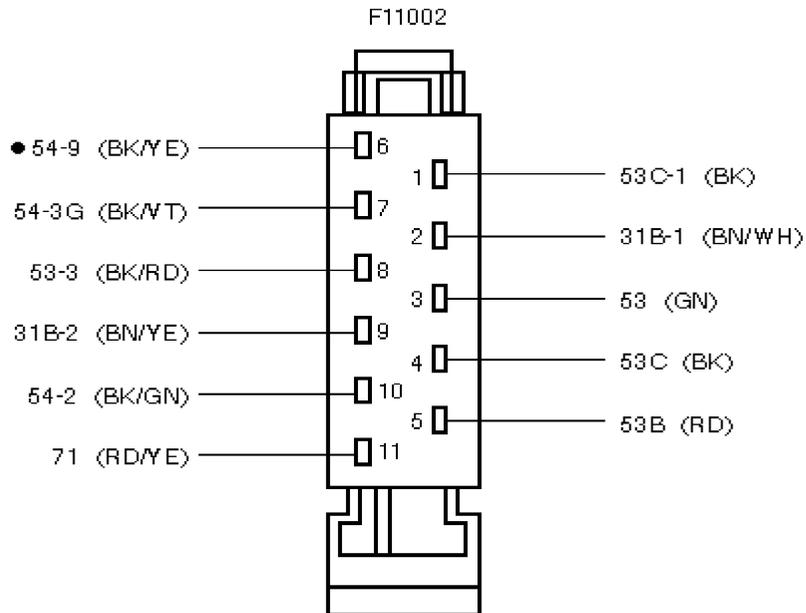


C1540 - N155 Tailgate/decklid release switch

C1540


before 95 1/2

as of 95 1/2

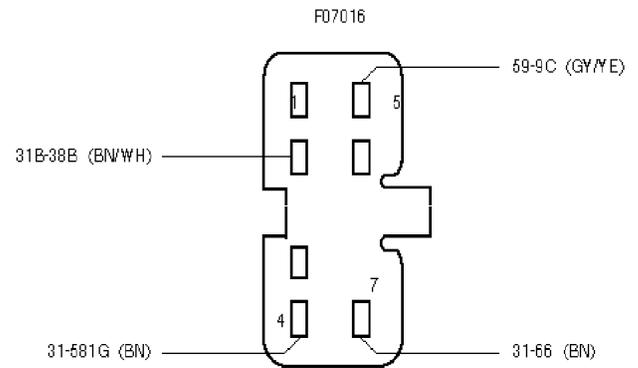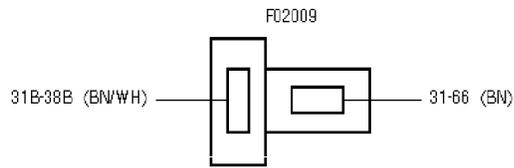


C1542a - N56 Front fog lamp switch

C1542a

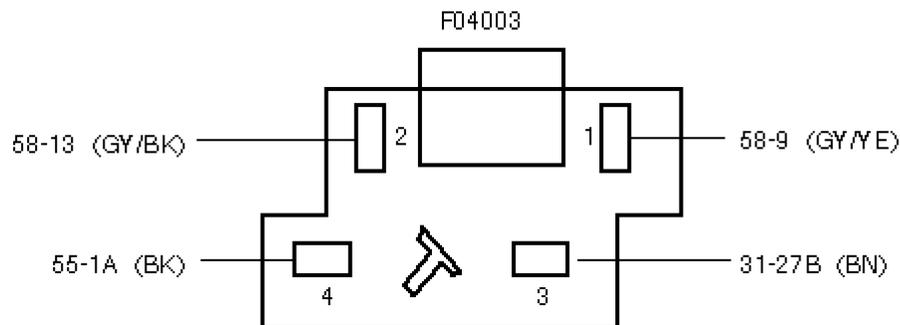


C1542b - N56 Front fog lamp switch

C1542b

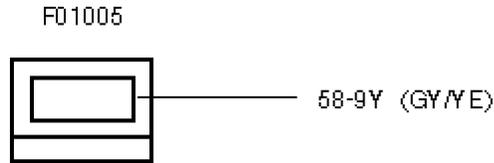

C1544 - N5 Rear fog lamp switch

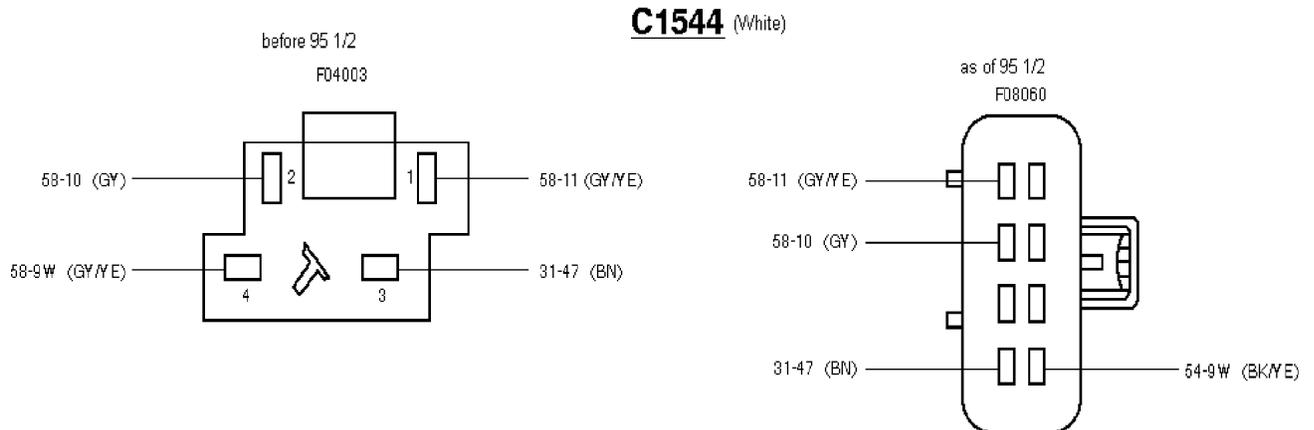


C1555 - N155 Tailgate/decklid release switch

C1555


RS Cosworth

F04042

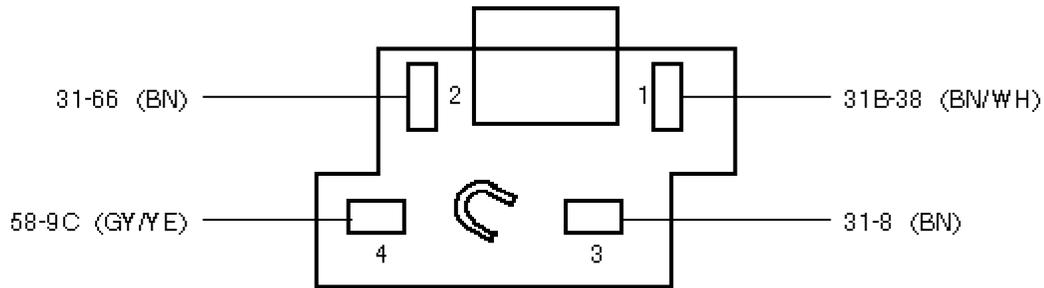


C1556 - N204 Door lock switch, driver side

C1556

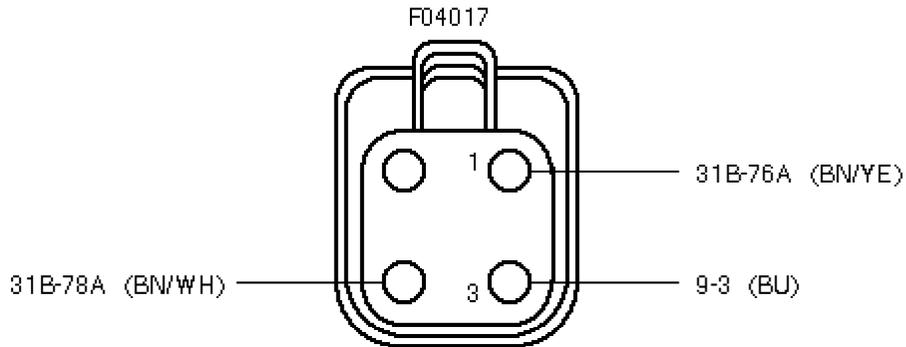


C1558 - N205 Door lock switch, passenger side

C1558

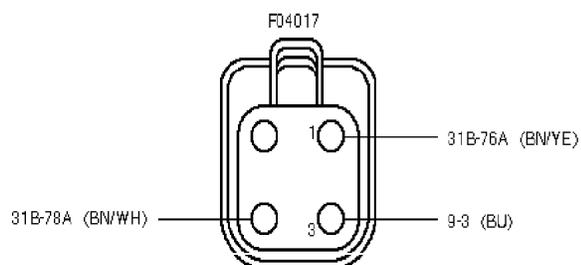


C1560 - N166 Automatic transmission block switch

C1560

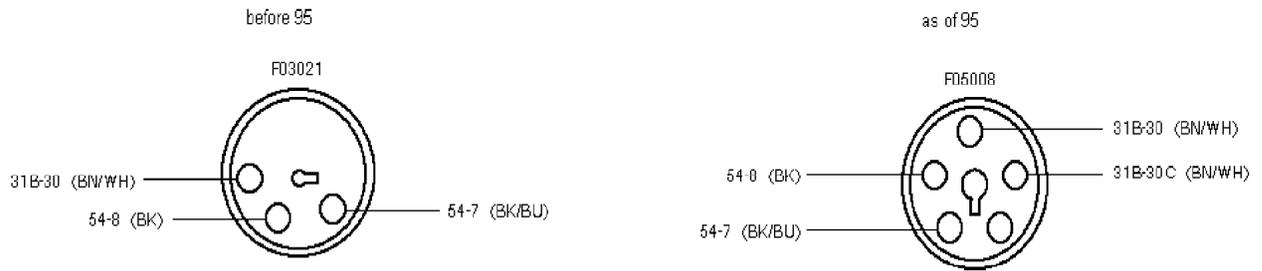



C1570 - N185 Power window inhibitor switch

C1570

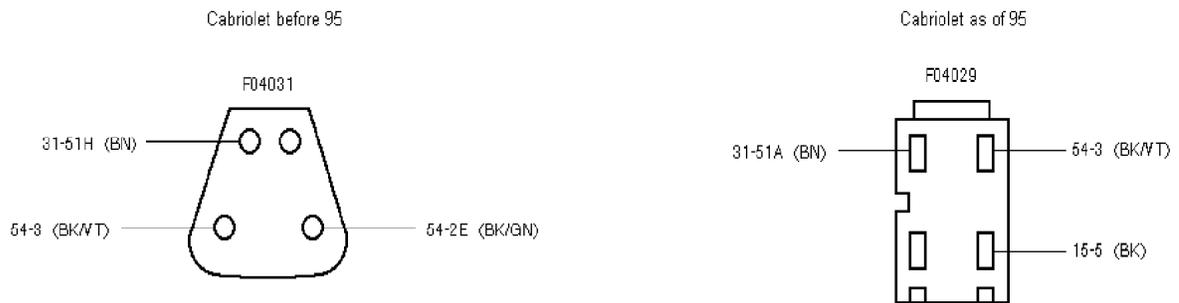


C1572

C1572 (Black)

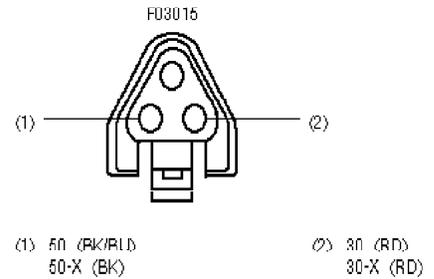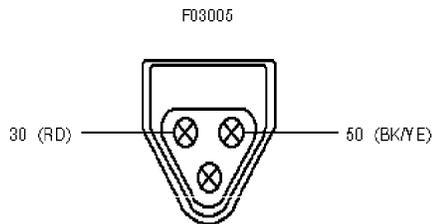


C1601 - A78 ESCP III Ignition module


C1601

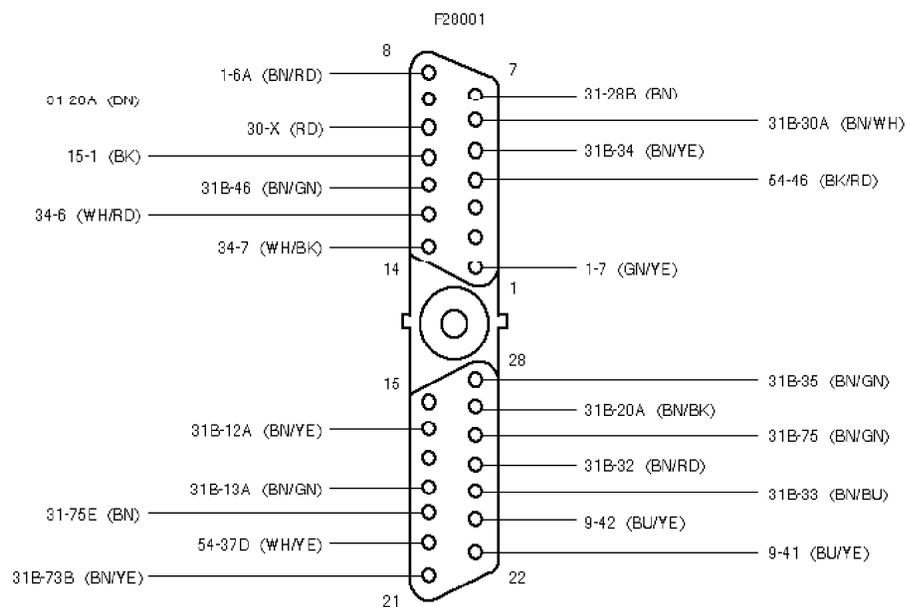

C1602

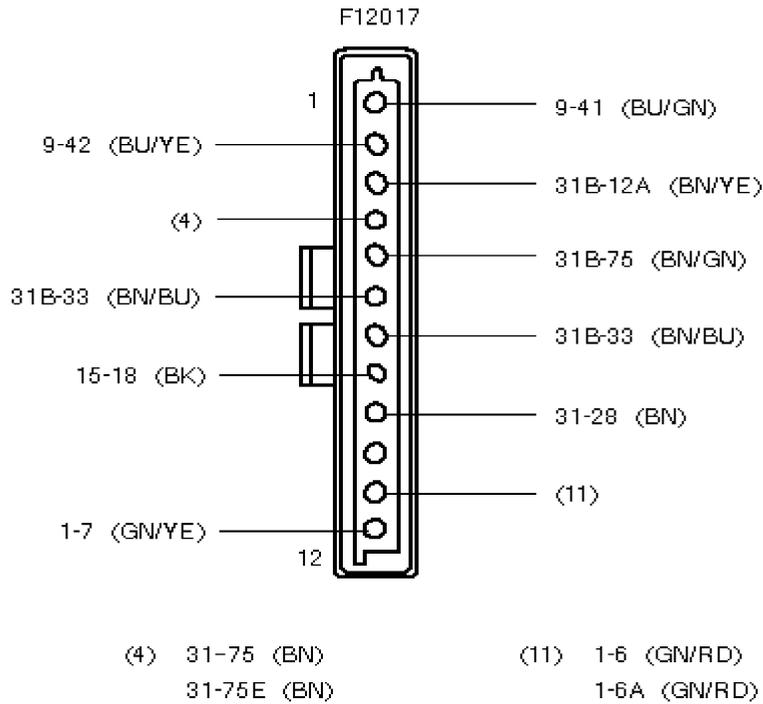


C1603

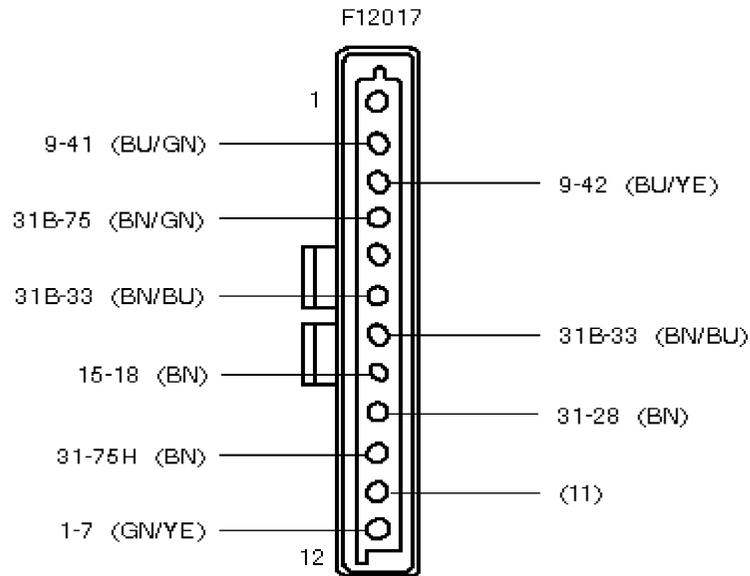

(11) 1-6 (GN/RD)
1-6A (GN/RD)


C1606 - A23 Electronic DIS module

C1606

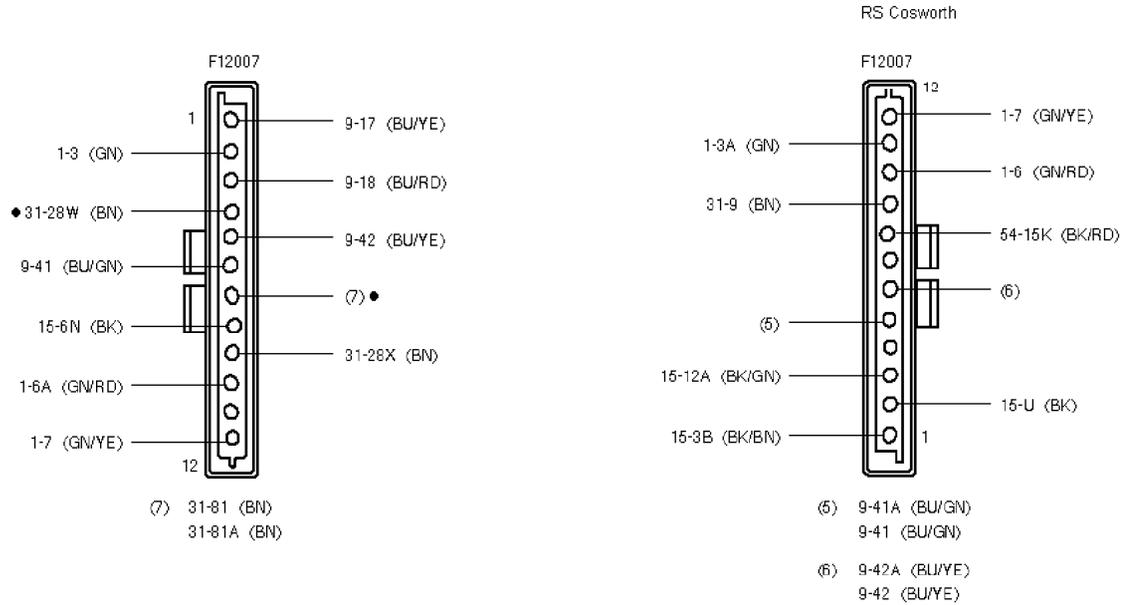


C1609 - A36 Auxiliary warning module


C1609

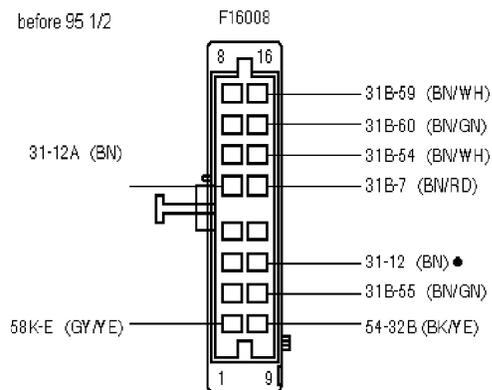

C1610a

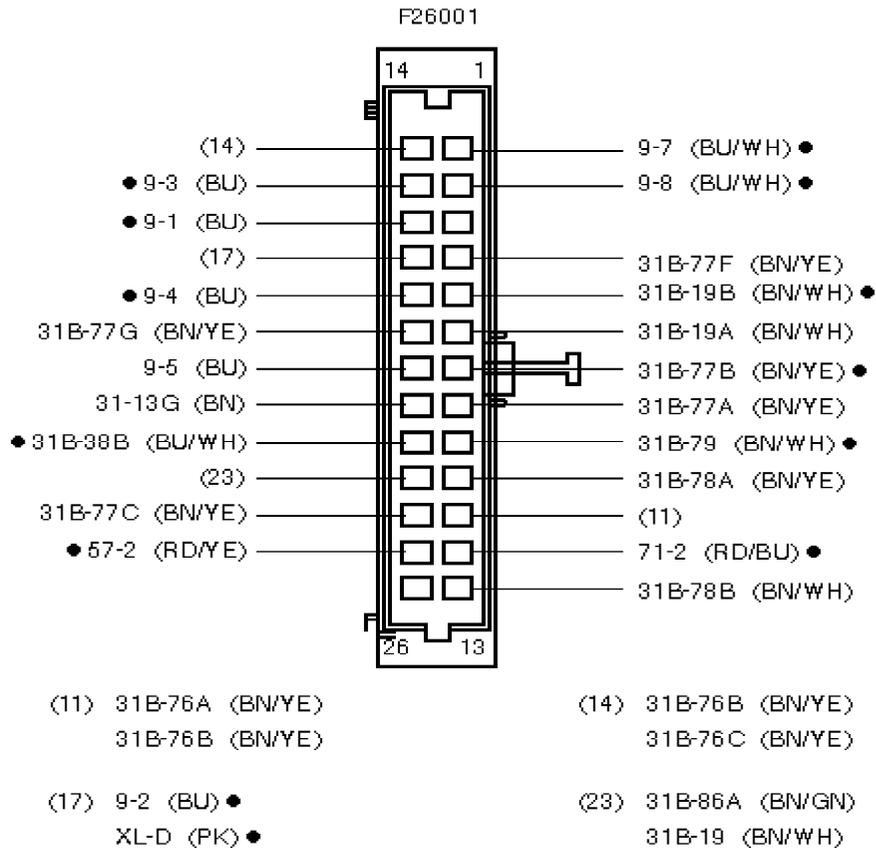

C1610b

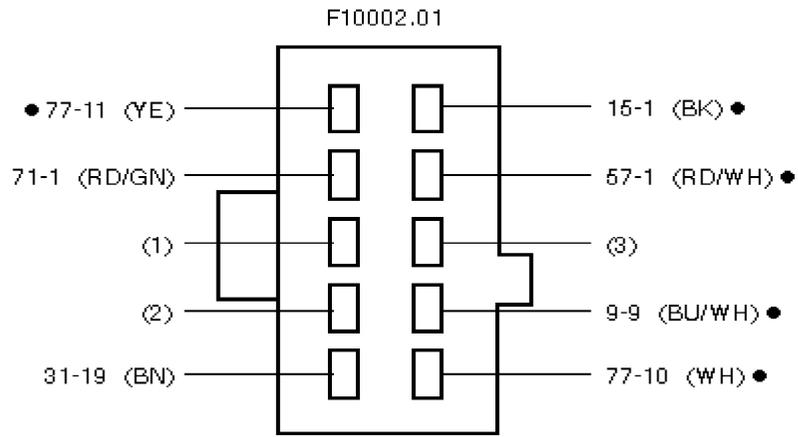


- | | |
|--------------------|---------------|
| (1) 30-22E (RD/YE) | (3) 15-1 (BK) |
| 30-22 (RD/YE) | 15-3 (BK) |
| (2) 15 (BK) | |
| 15-3A (BK) | |

C1611 - A75 Electronic diesel control module (EDC)

C1611


F15005

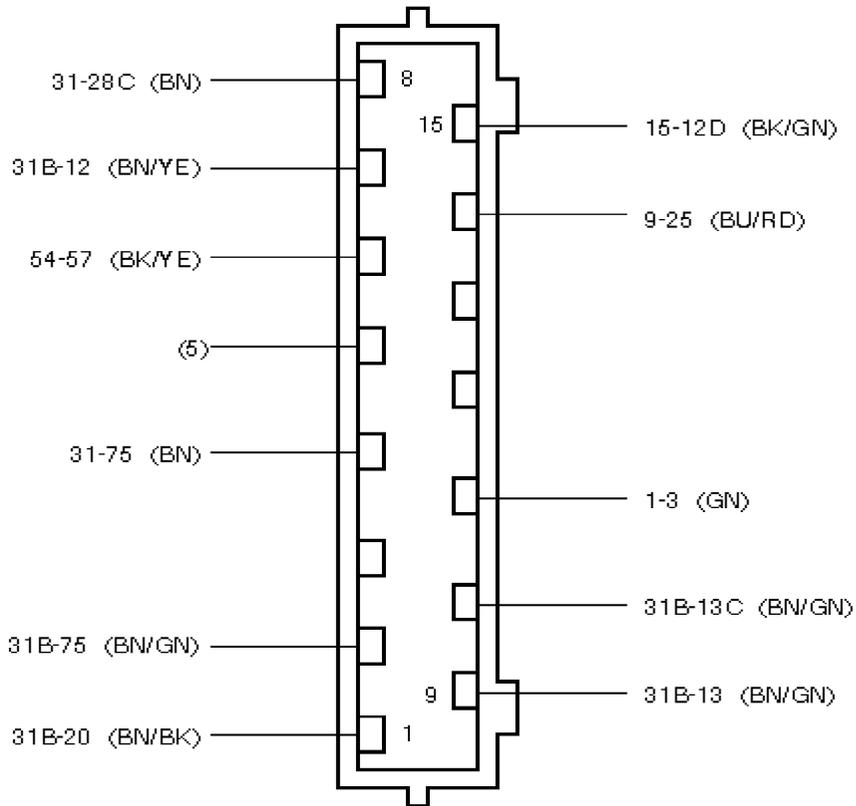

(5) 9-20 (BU/GN)
9-20 (BU/GN) +9-20A (BU/GN)



C1632 - A32 Additional fuel tank unit

C1632

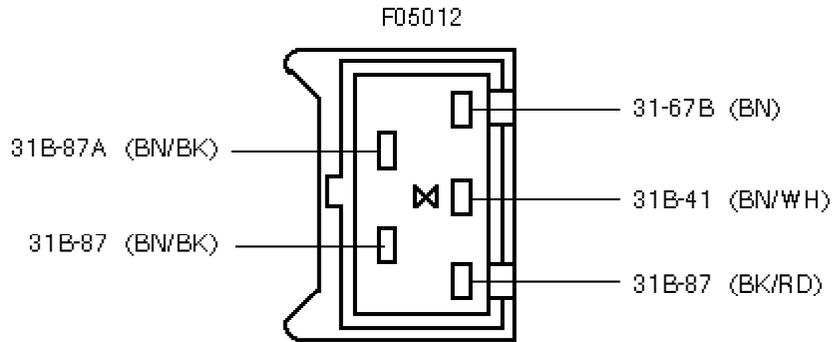

C1629 - M3 Heater blower motor


C1629

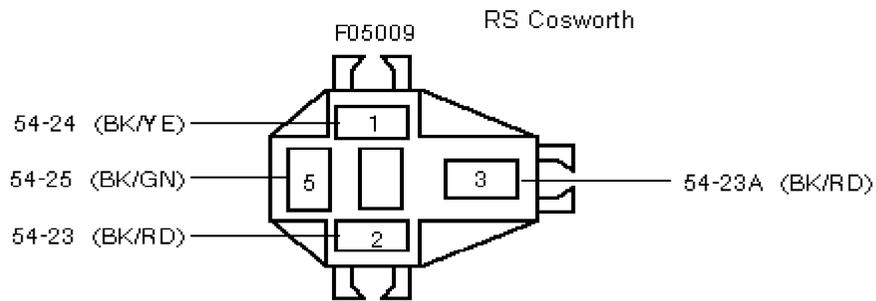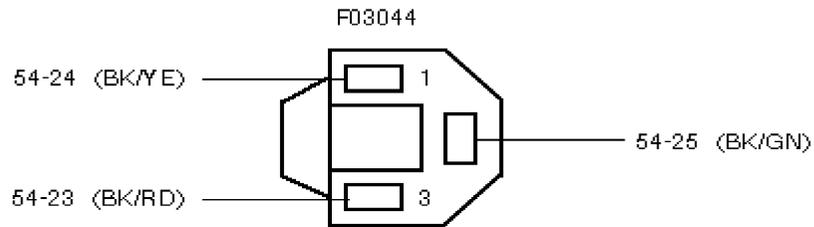

C1635 - M46 Windscreen wiper motor

C1635

F05020

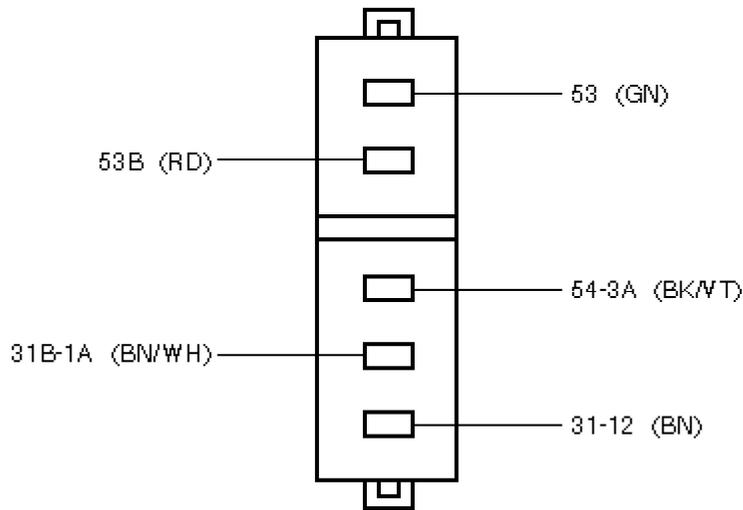


C1637 - M1 Headlamp alignment motor, left



C1637

before 95 1/2


F09030

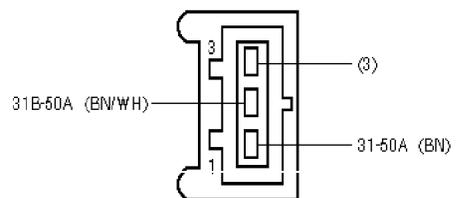

(3) 56B-1A (YE)
58-5B (GY/BK)


C1638 - M4 Headlamp alignment motor, right

LHD C1638

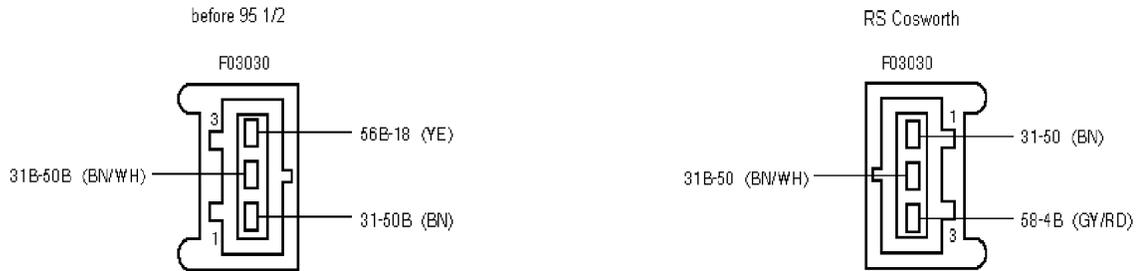


C1640 - M70 Throttle control motor


C1640

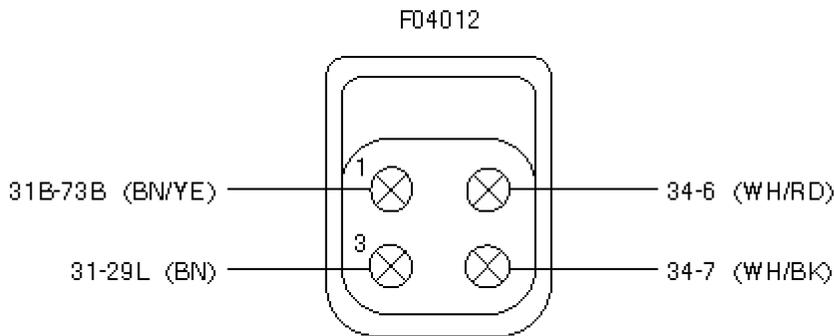

C1648


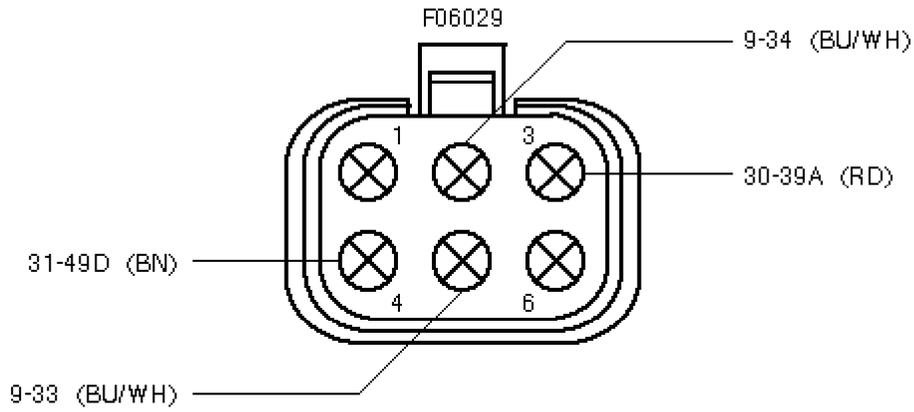


C1649


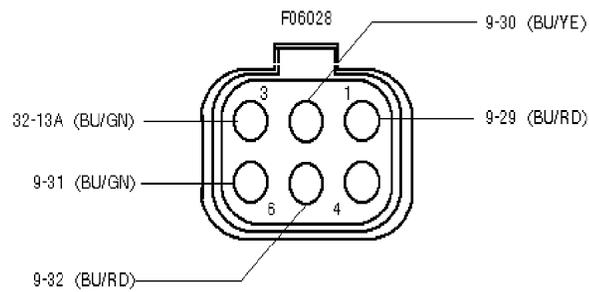


C1651

Cabriolet before 95

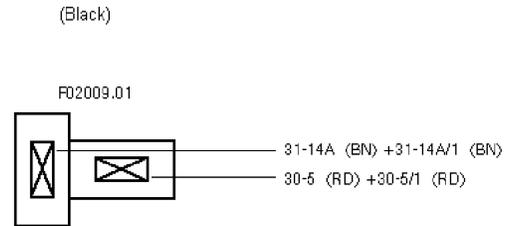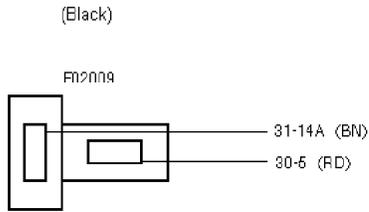


Cabriolet as of 95

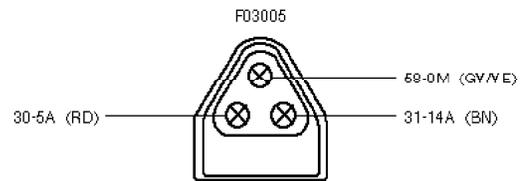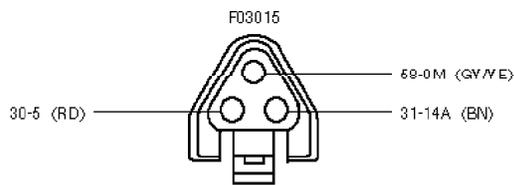

C1916


F03045

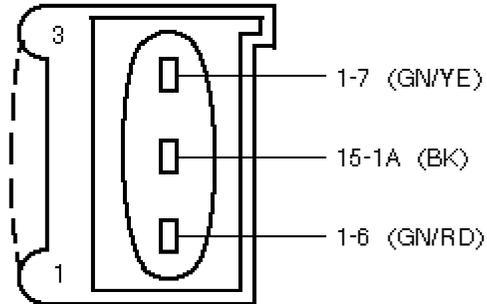

C1922 - P6 Octane adjust plug, P21 Idle adjust plug


C1922

2,0 | EFI

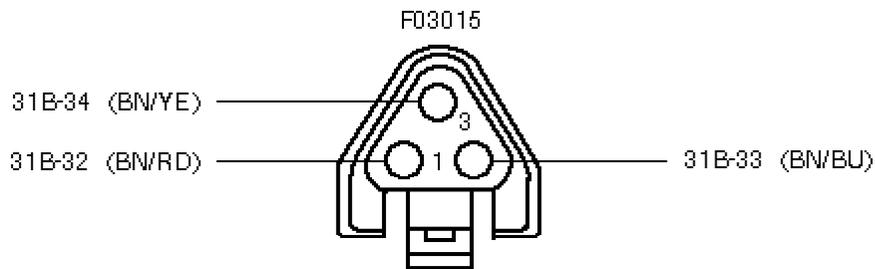


C1940 - D16 ABS Test connector

C1940

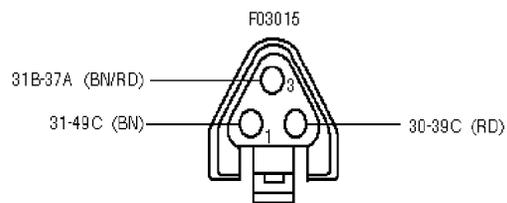



RS Cosworth

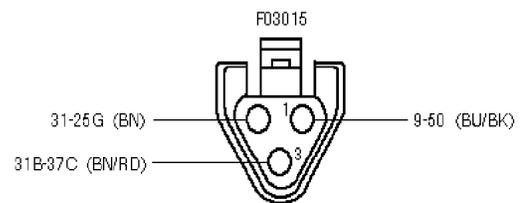



C1944

C1944

before 95

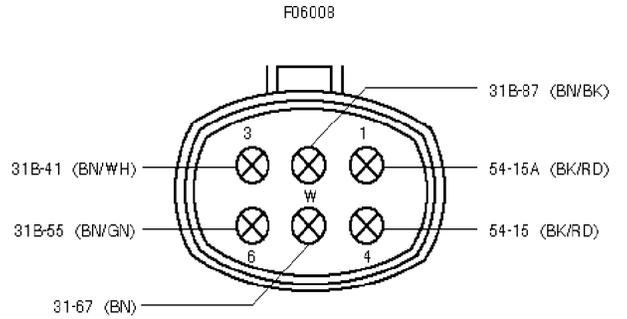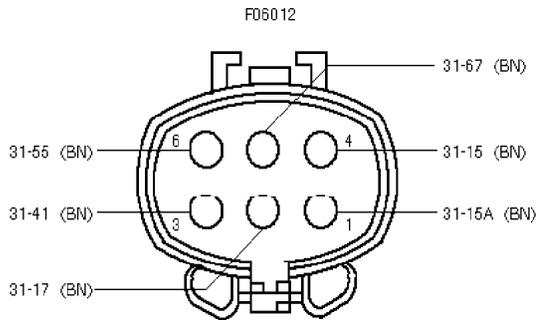




as of 95

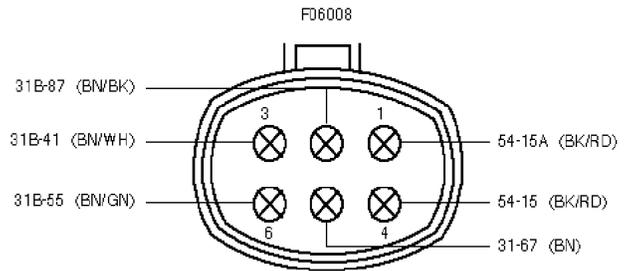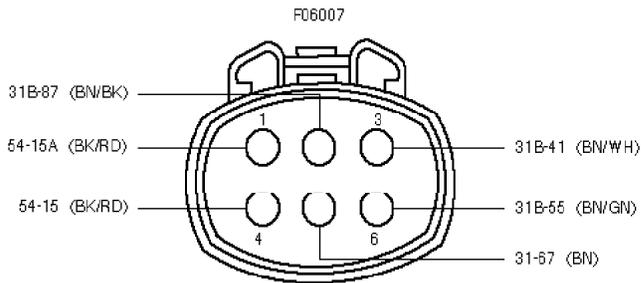


C1945 - N19 Reversing lamps switch

C1945

F03015 Valencia

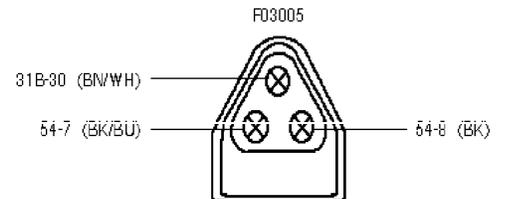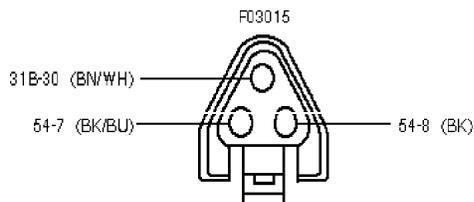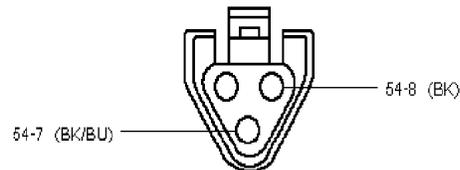

C1946

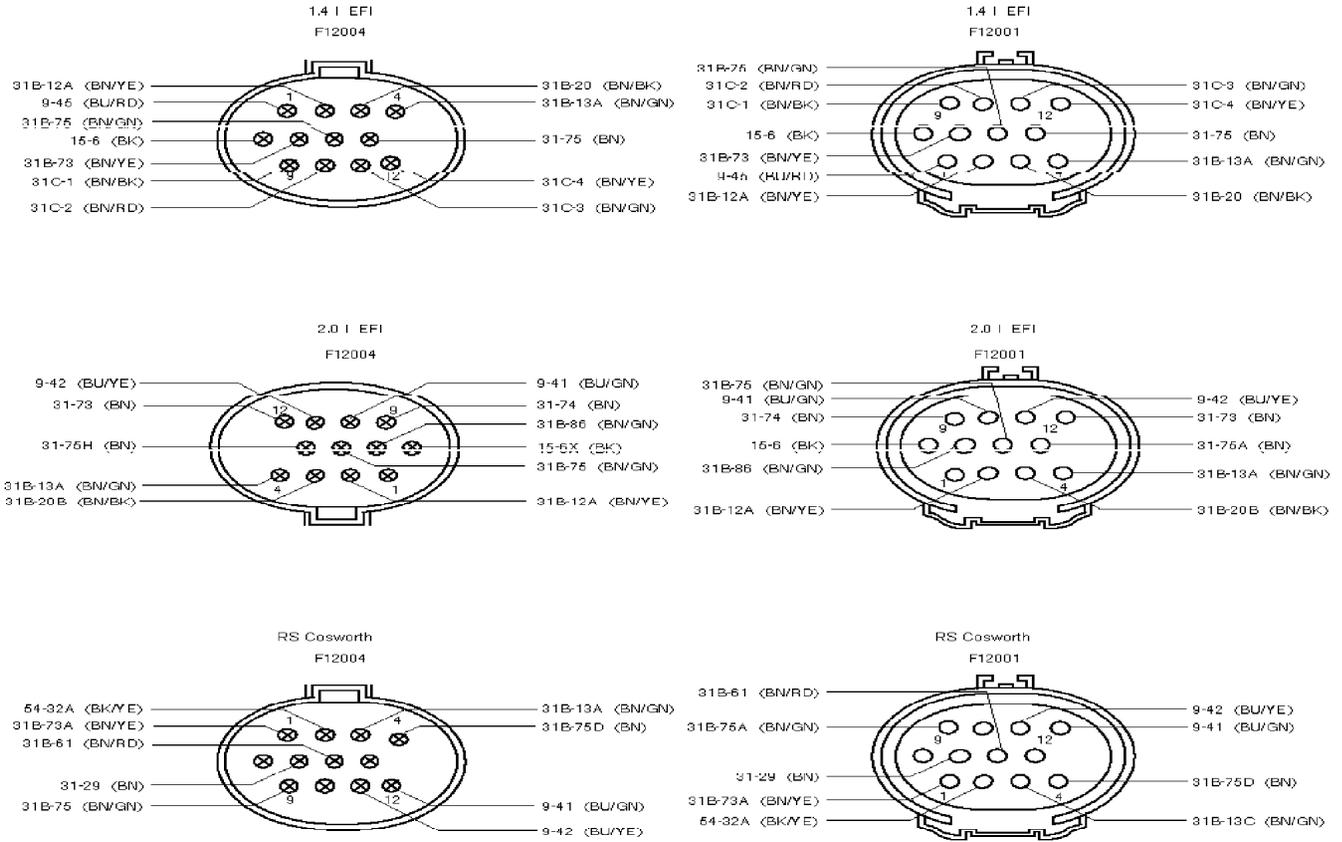


C1947





C1953

C1953

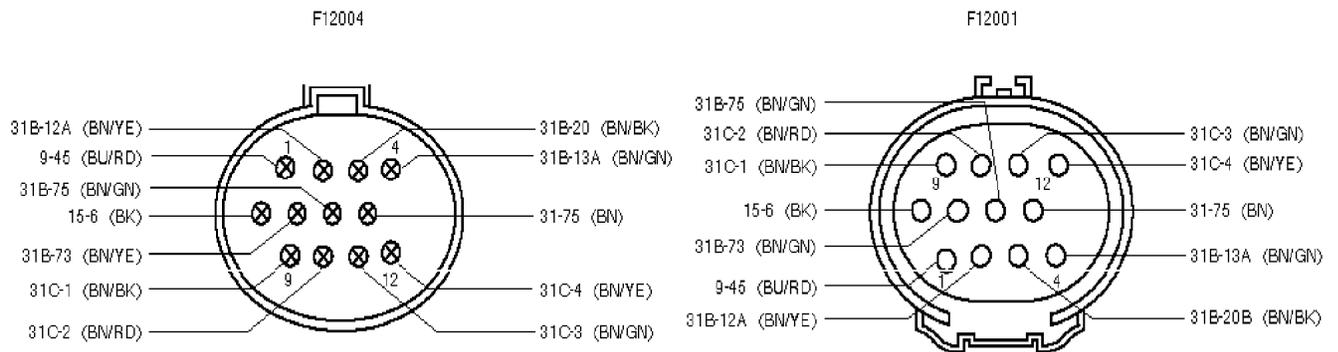



C1954

C1954

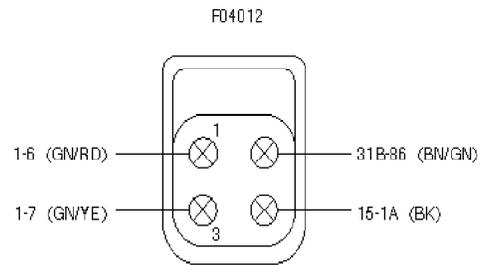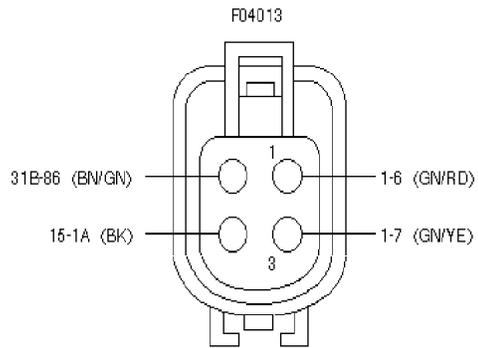


C1962

C1962

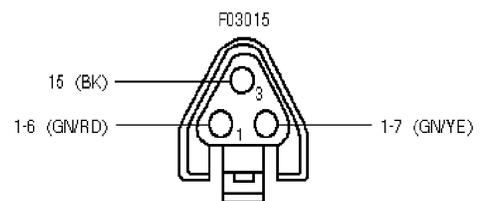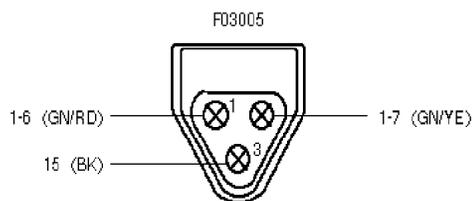


C1963

C1963

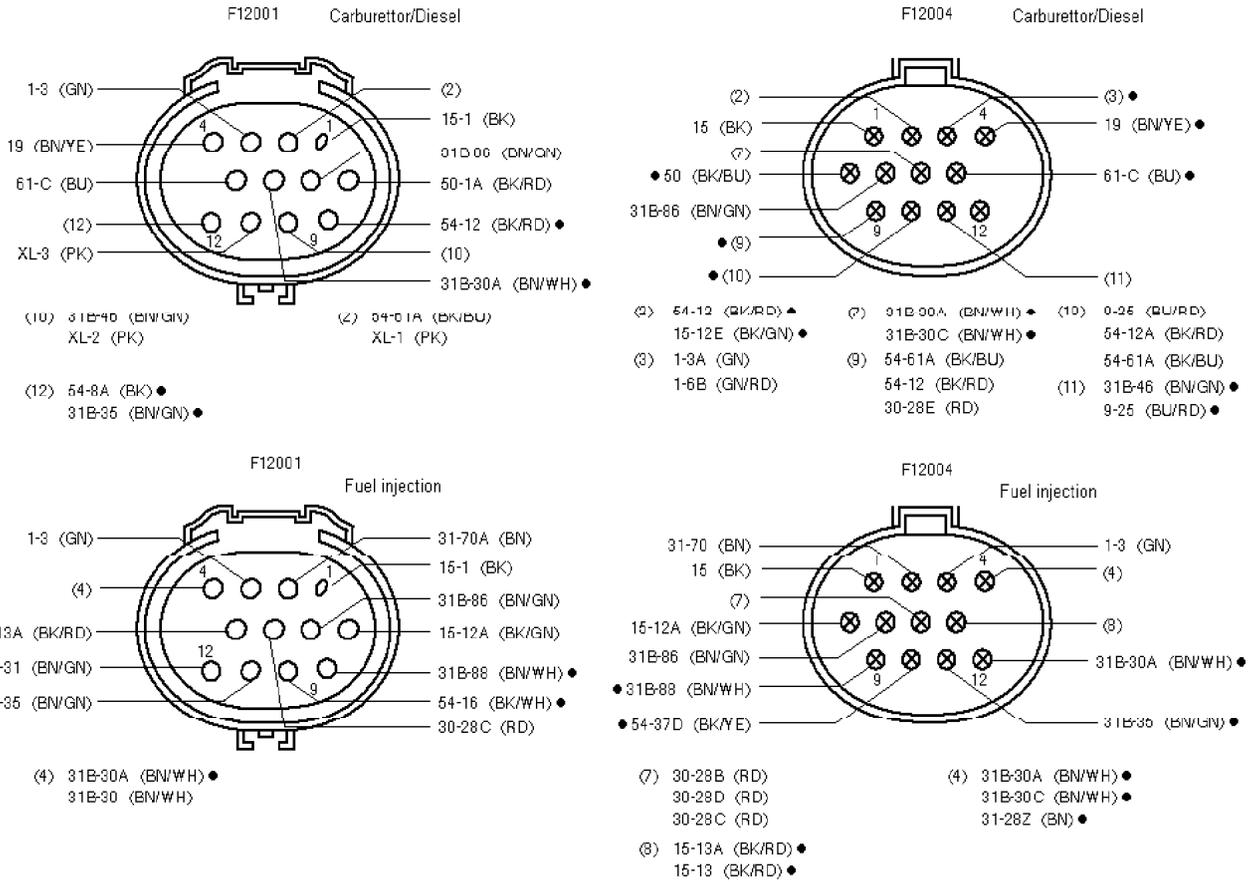





C1991 - D23 Diagnostic connector

C1991

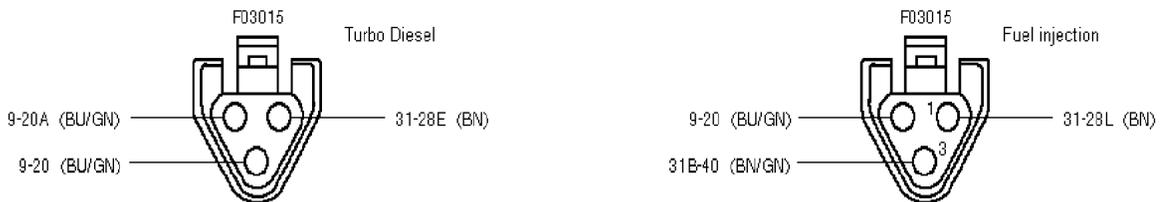

C1992 - P21 Idle adjust plug, P6 Octane adjust plug

C1992

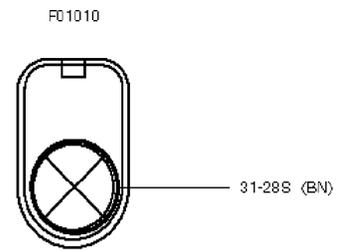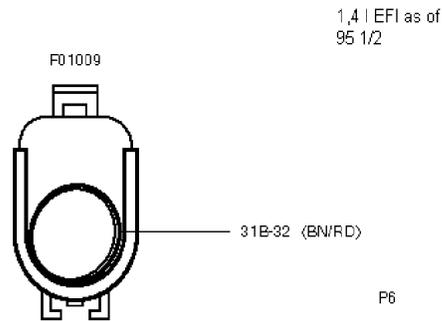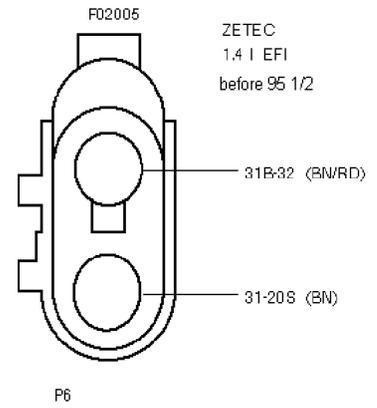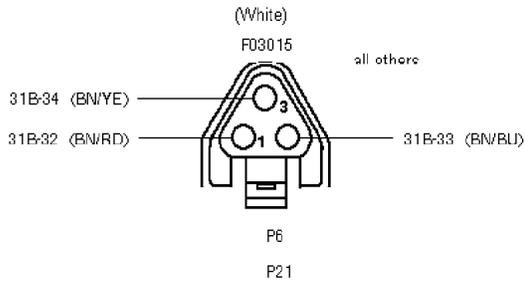


C2000 - K92 Power window relay, driver side rear

C2000



C2001 - K90 Power window relay, driver side front

C2001

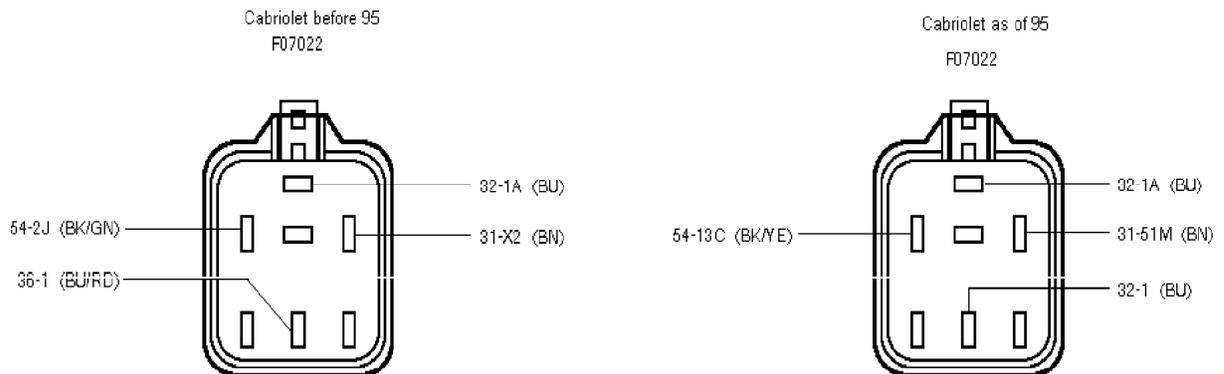


C2002 - K89 Power window relay, passenger side front

C2002



C2003 - K91 Power window relay, passenger side rear



C2003

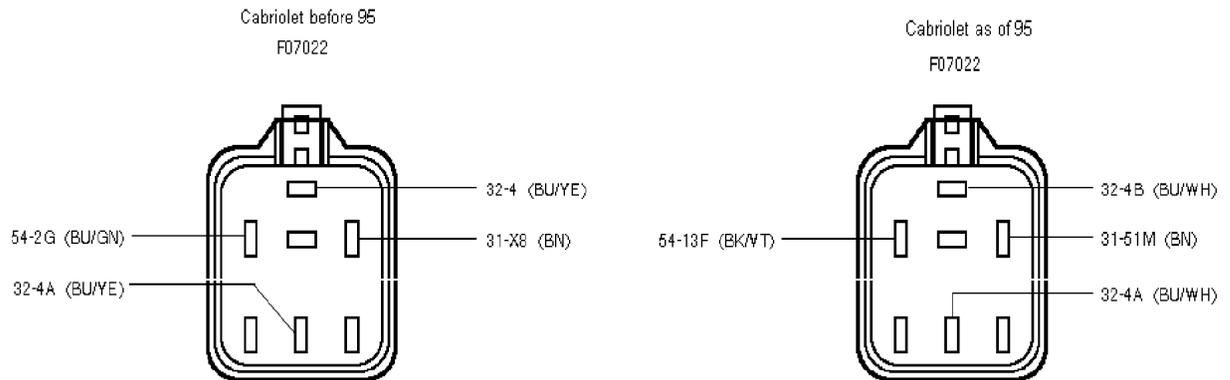

C2005

C2005



Passenger side

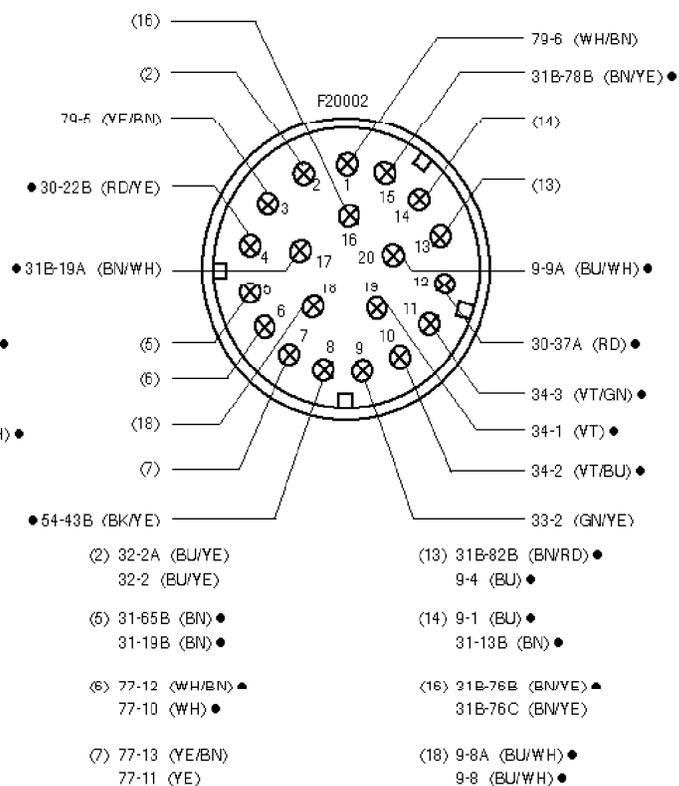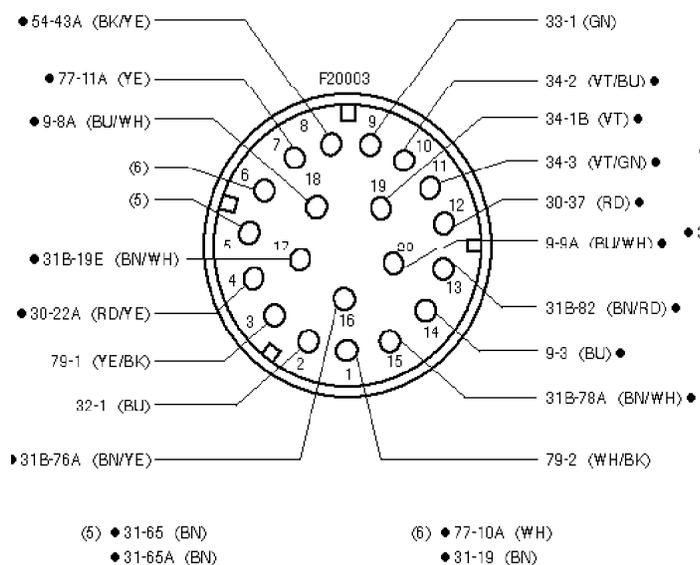

C2006

C2006


Driver side rear

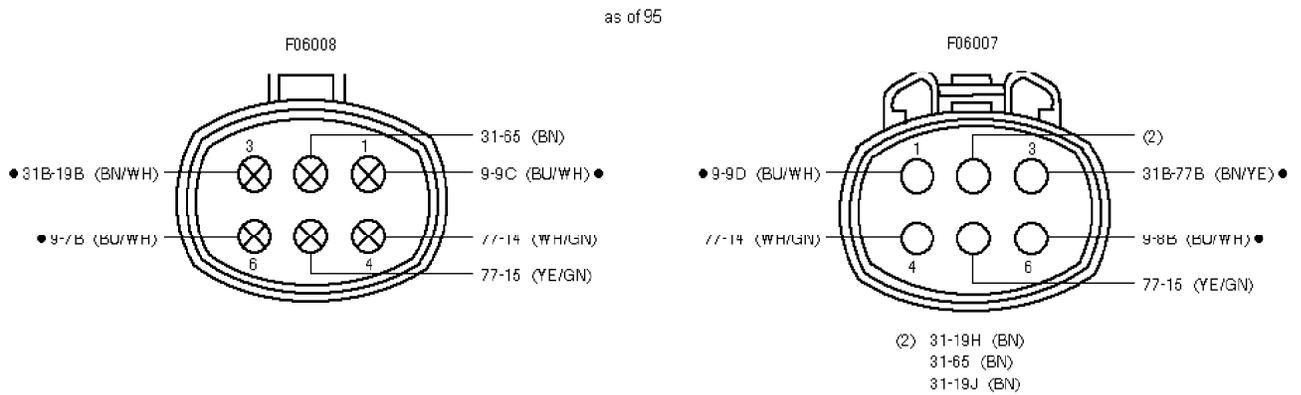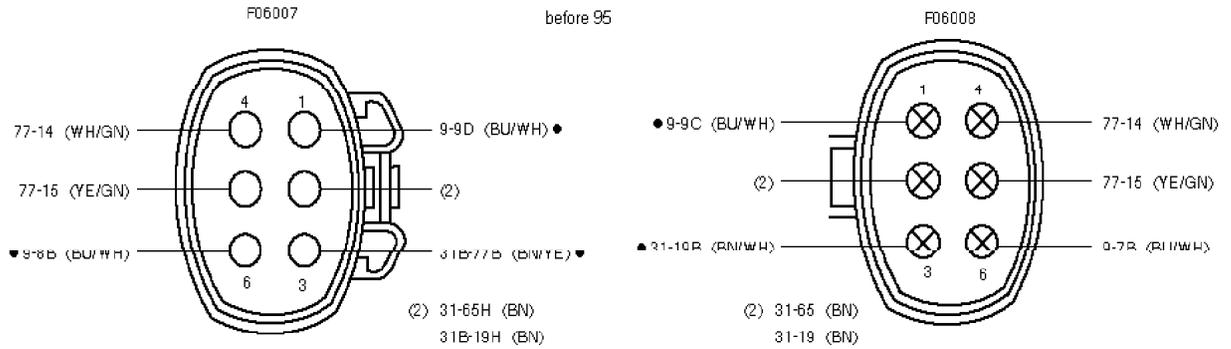

C2007

C2007


Driver side

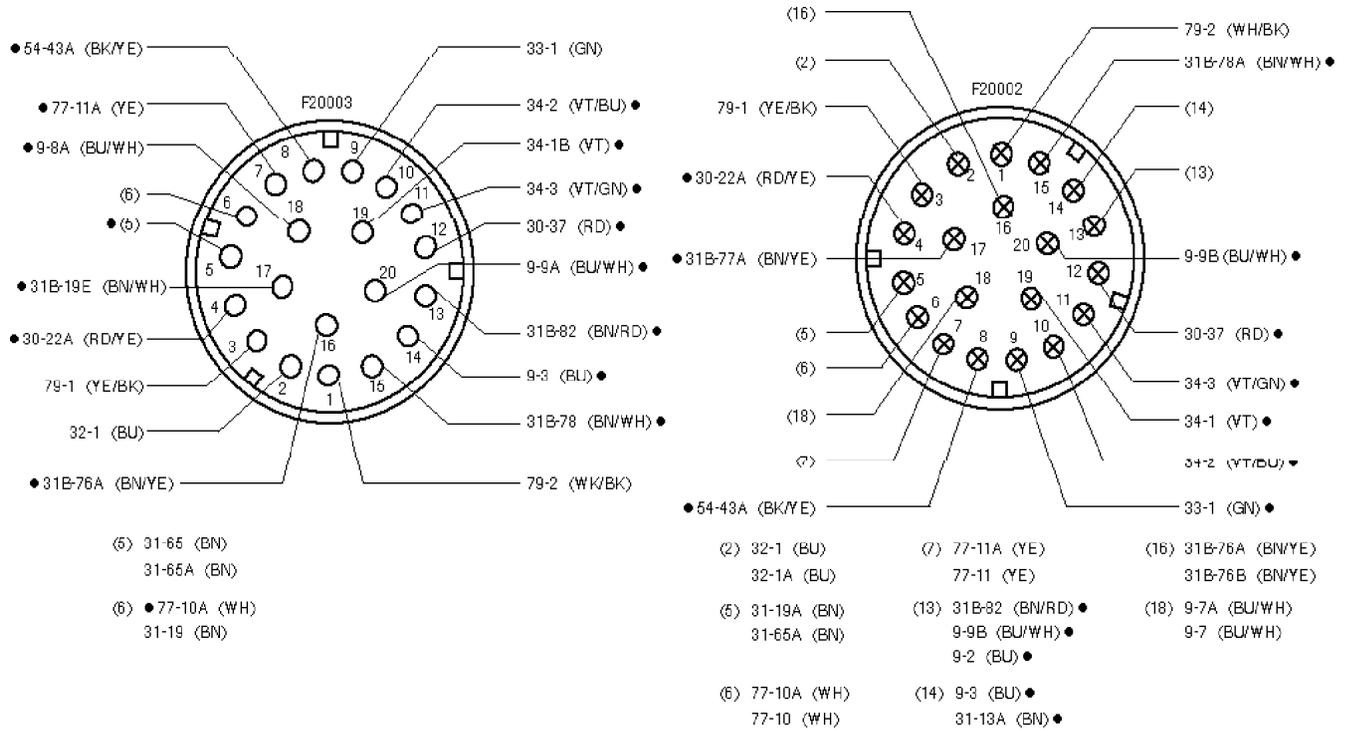

C2008

C2008



Passenger side rear

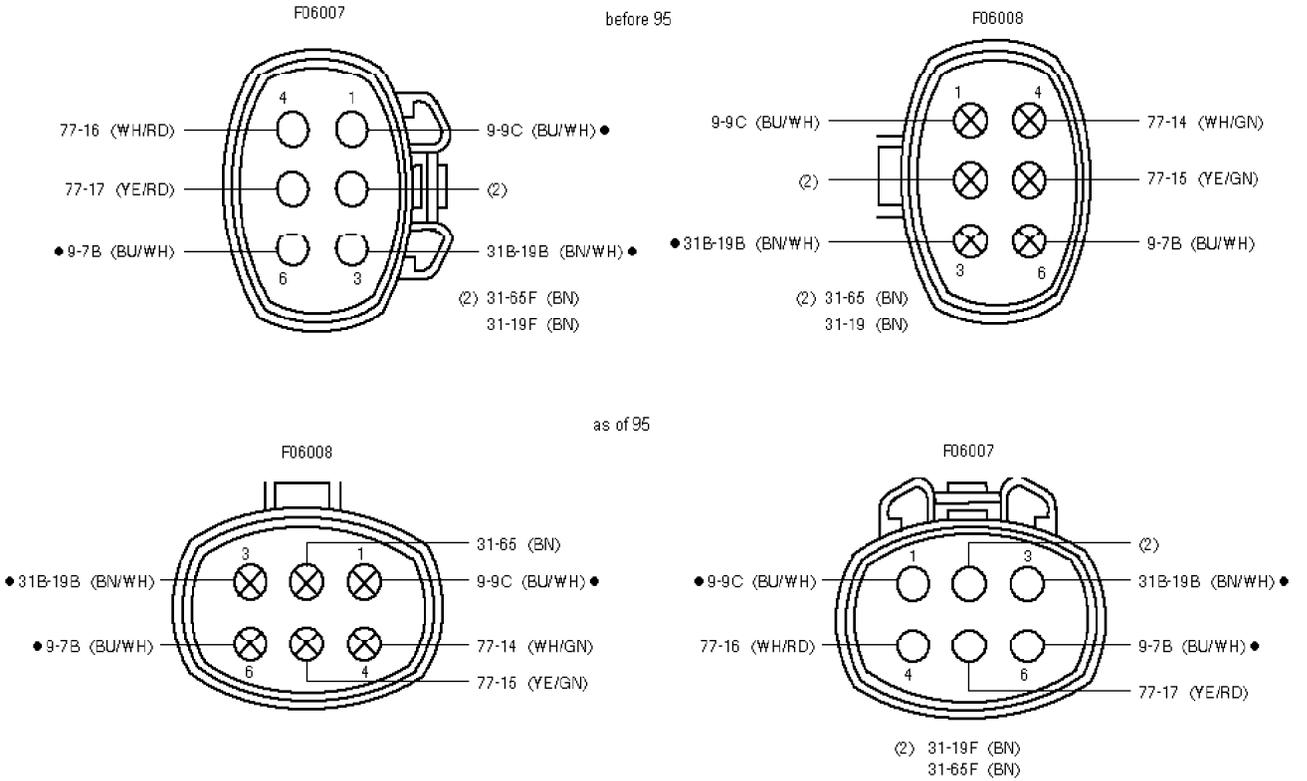



C2009

C2009

before 95

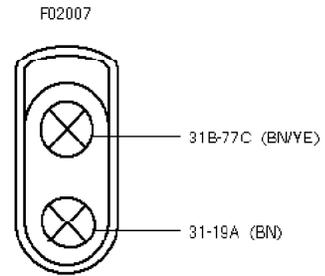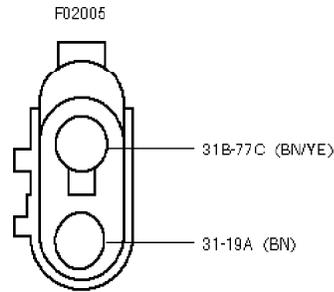

as of 95

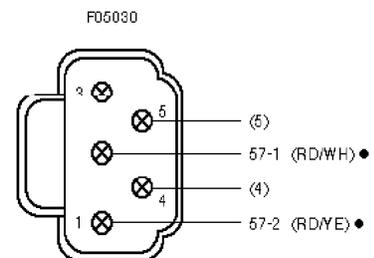
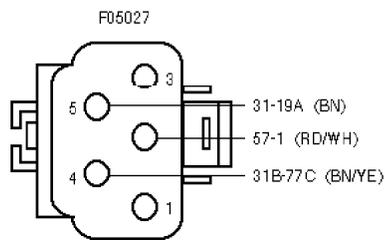


(4) 31-19A (BN)
31B-77 (BN/YE)
31B-77C (BN/YE)



(5) 31-19A (BN)
31-19 (BN)

C2016



C2016

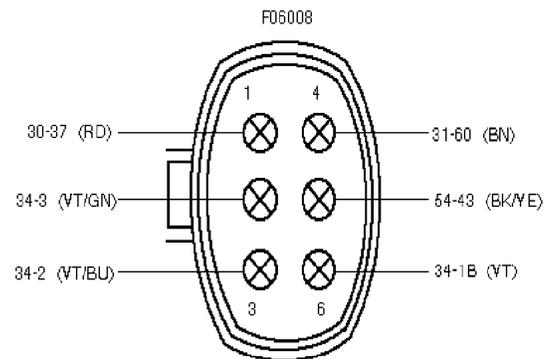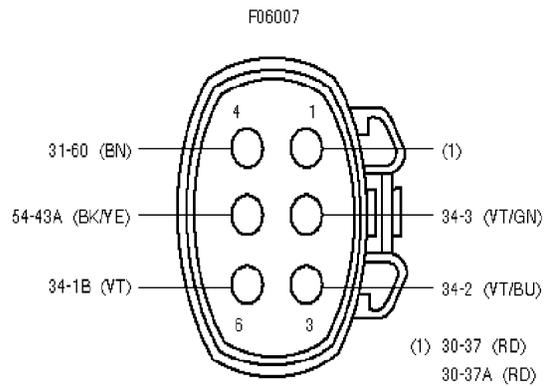

C2017







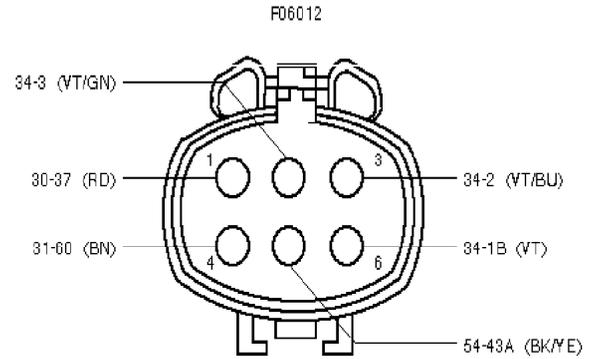
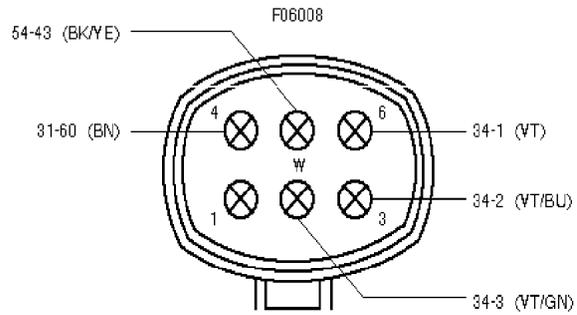
C2017

C2030

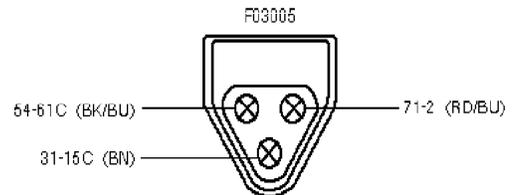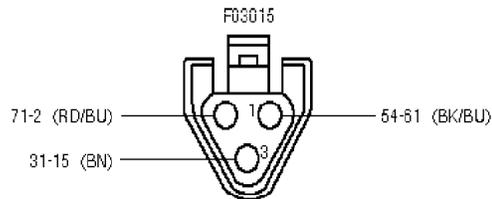C2030



C2033

C2033

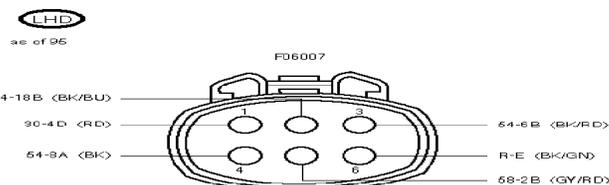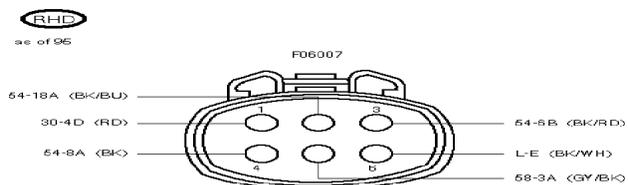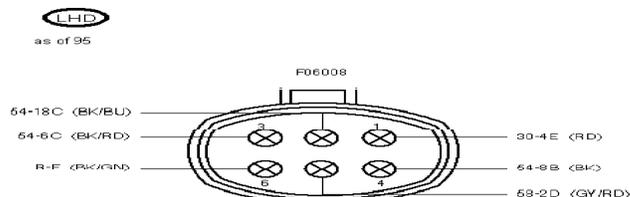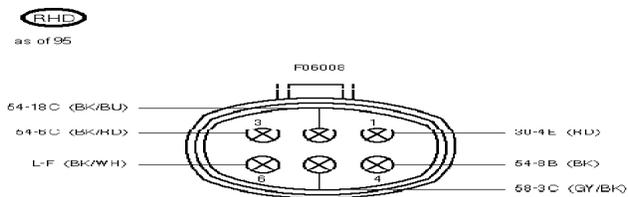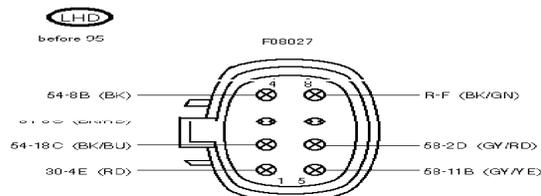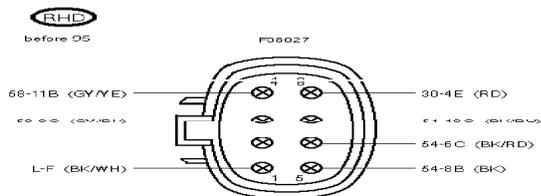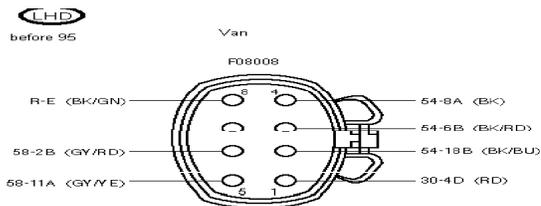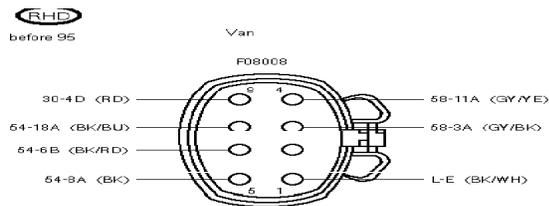

C2038

C2038 (Grey)

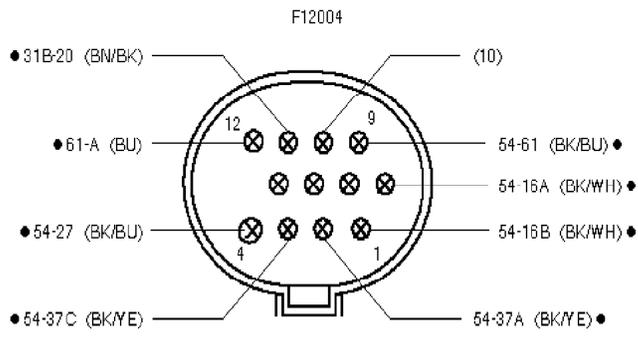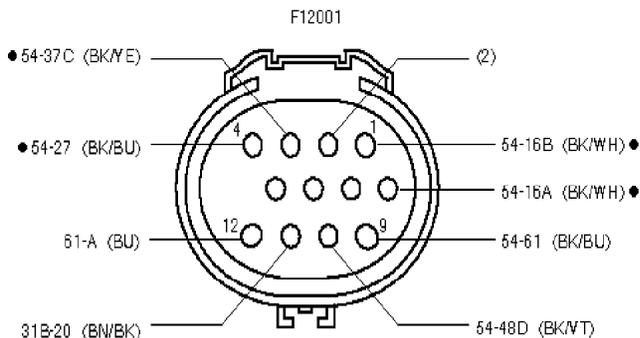


(2) 54-37 (BK/YE) ●
54-37A (BK/YE) ●

(10) 54-48C (BK/VT) ●
54-68 (BK/GN) ●




C2041 - H9 Buzzer

C2041

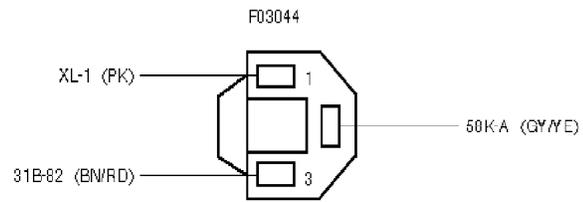


C2100 - A11 Radio

C2100 (Yellow)

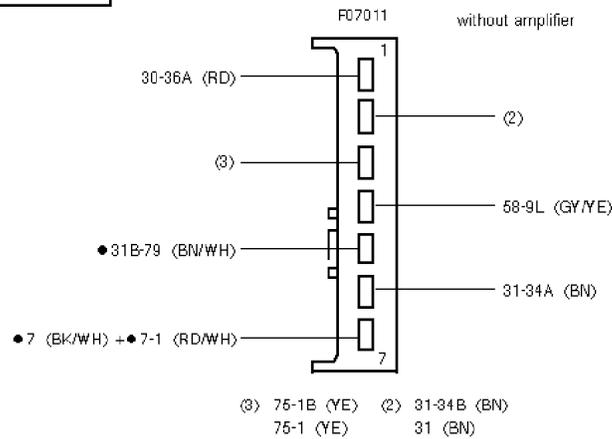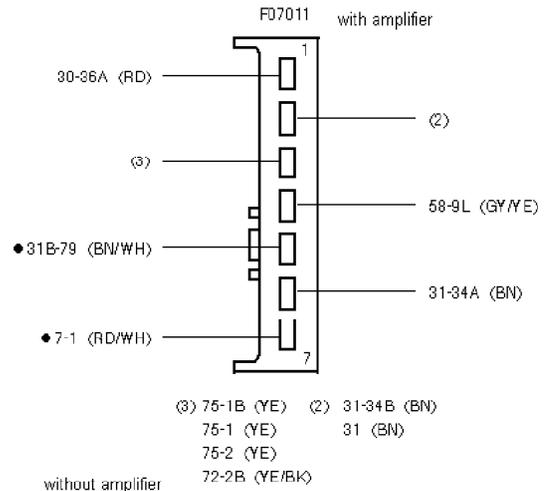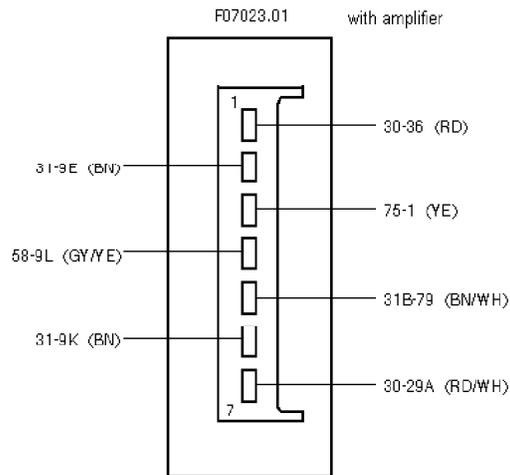


C2101 - A11 Radio

C2101

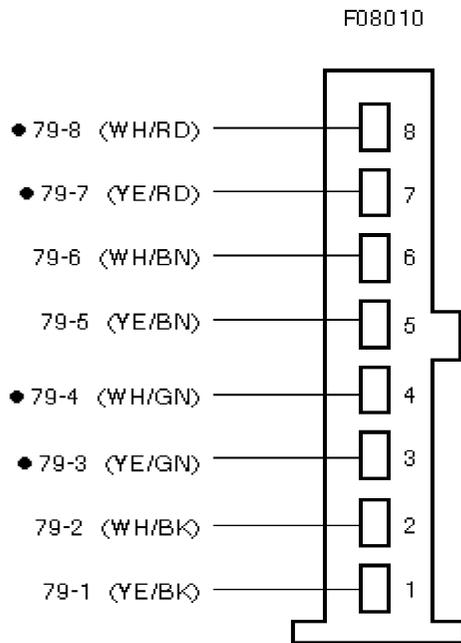


C2104 - A13 Front remote amplifier

C2104

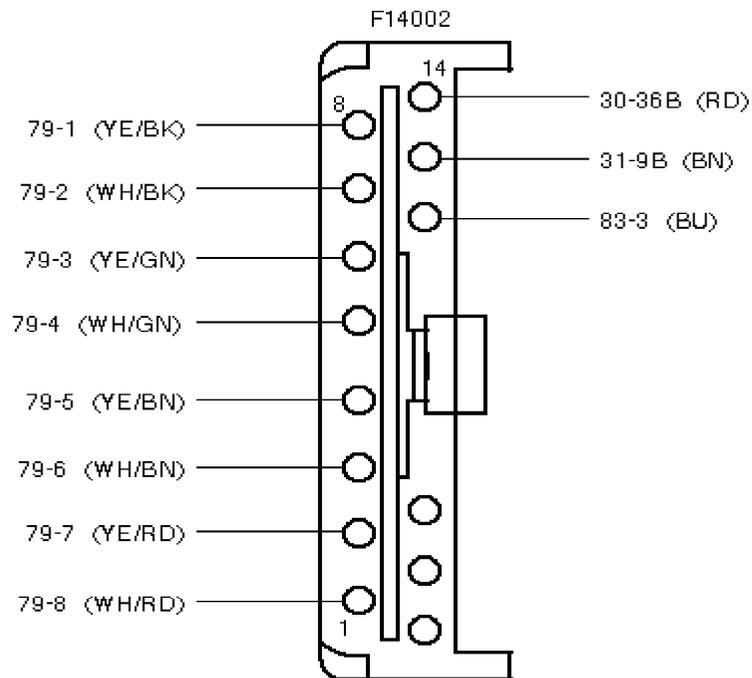


C2164 - A11 Radio

C2164 (Yellow)

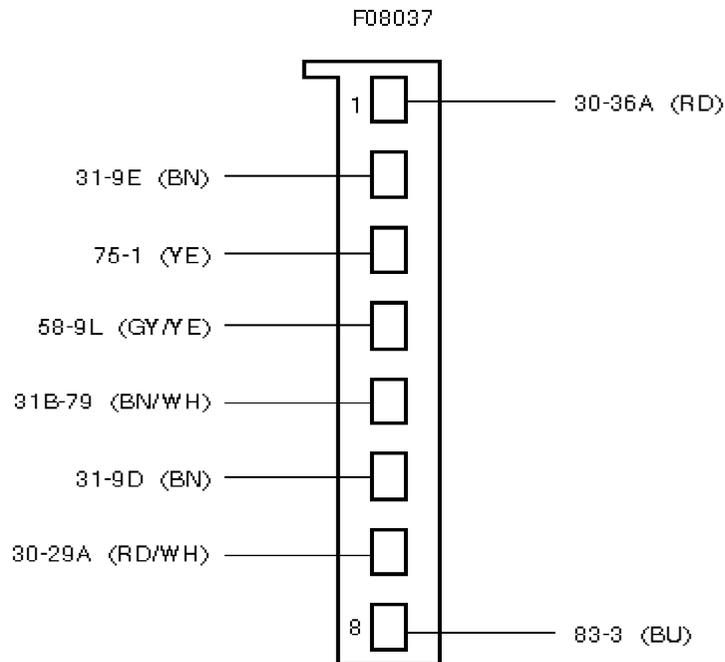


C2168 - A11 Radio

C2168

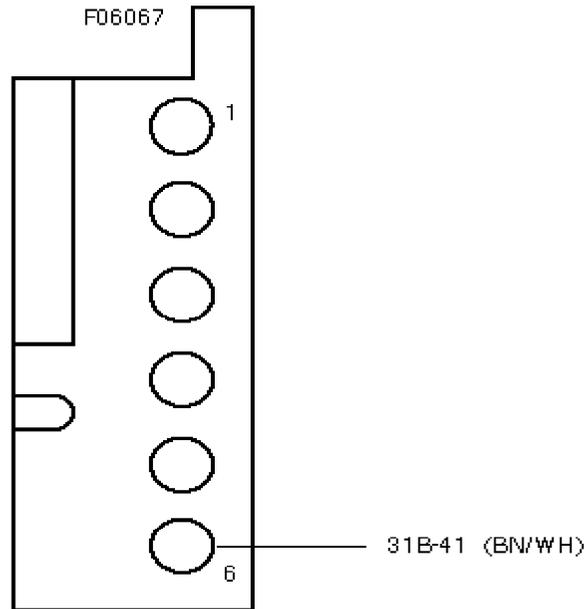

C2204


C2204

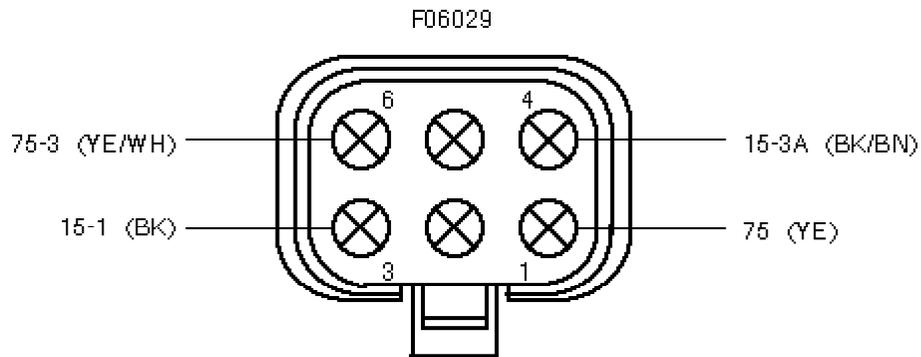

C2205 - D23 Diagnostic connector

C2205


RS Cosworth

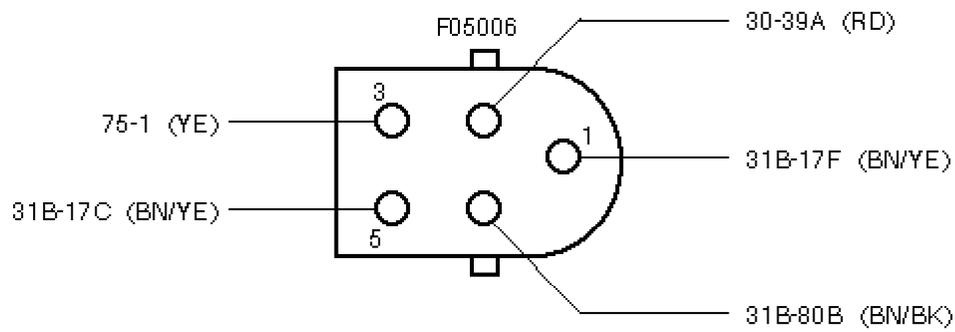

C2207 - N191 ABS Pressure switch

C2207

RS Cosworth
F05022

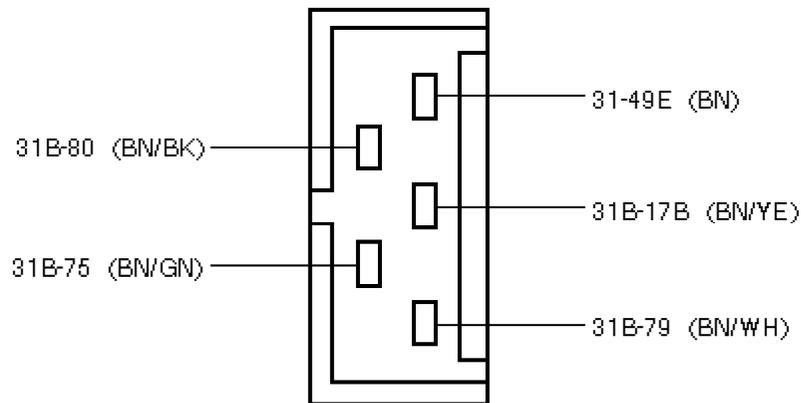


C2208 - A8 ABS Hydraulic control unit

C2208

RS Cosworth


F07024

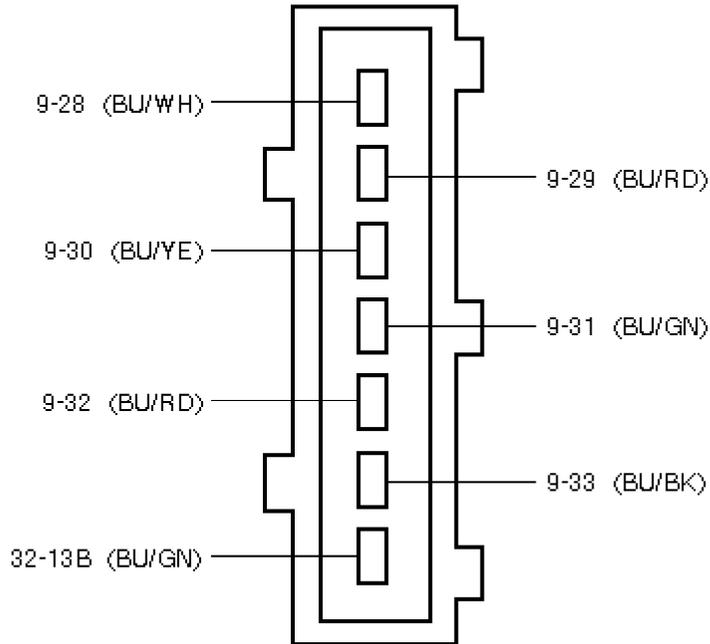

C2209 - B61 ABS Deceleration sensor

C2209


RS Cosworth

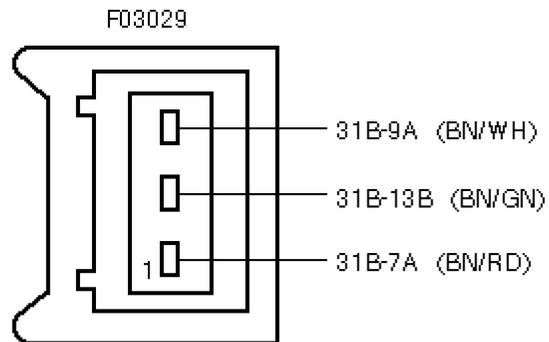

C2218 - K18 ABS Main relay

C2218 (Dark green)


RS Cosworth

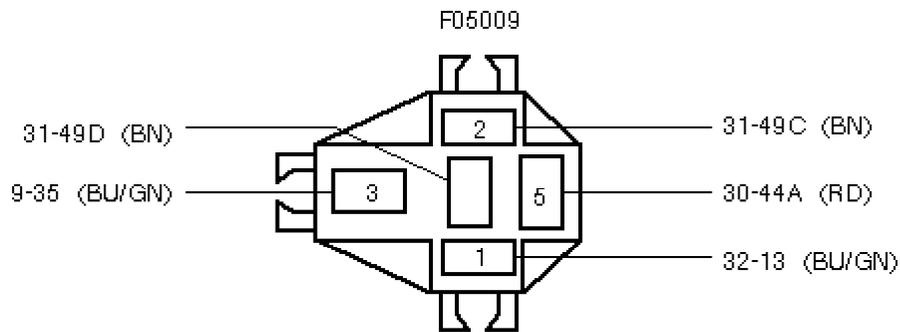

C2219 - K97 ABS Pump relay I

C2219 (Violet)

RS Cosworth

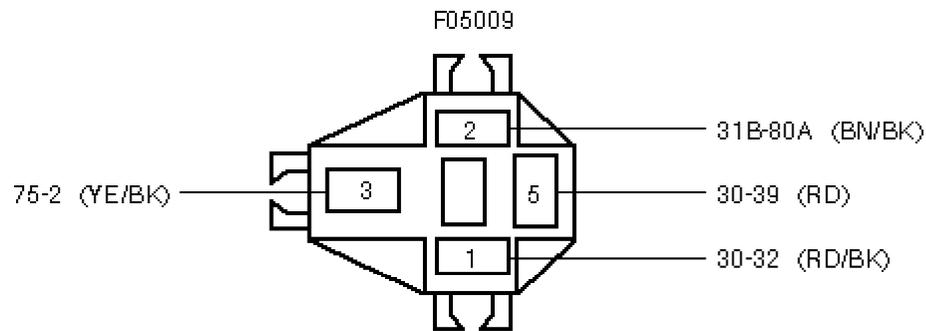


C2220 - K98 ABS Pump relay II

C2220 (Violet)

RS Cosworth

F05009

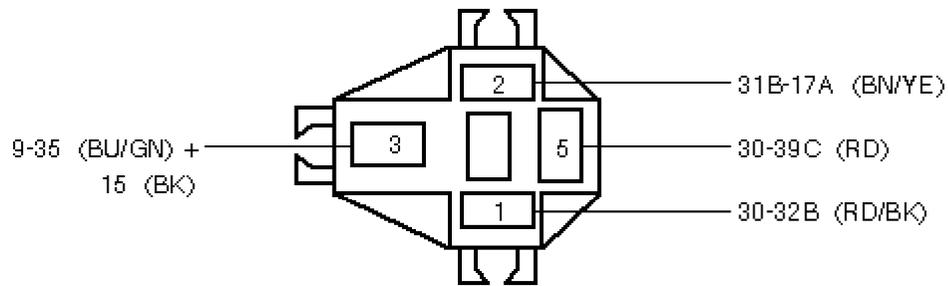


C2221a - A76 Minor gauge cluster

C2221a

RS Cosworth

F06068

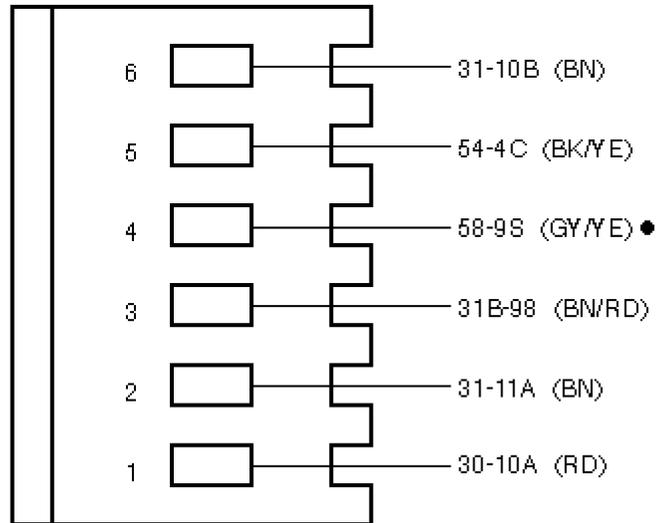


C2221b - A76 Minor gauge cluster

C2221b



RS Cosworth

F02006

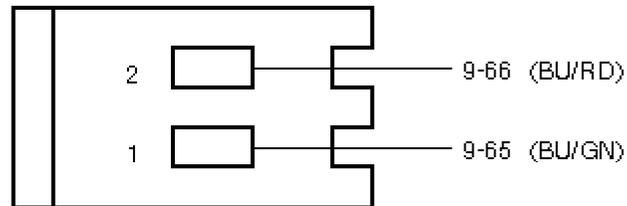


C2226

C2226

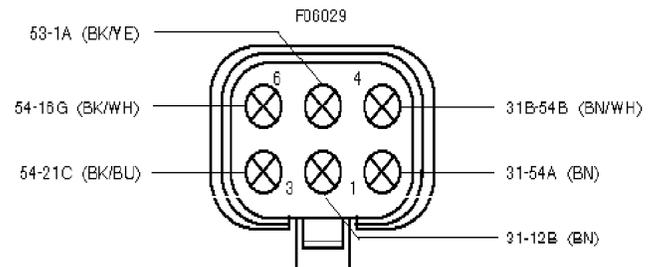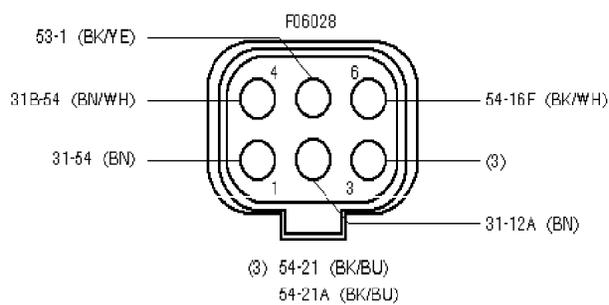


C2227 - K34 Headlamp cleaning relay

C2227

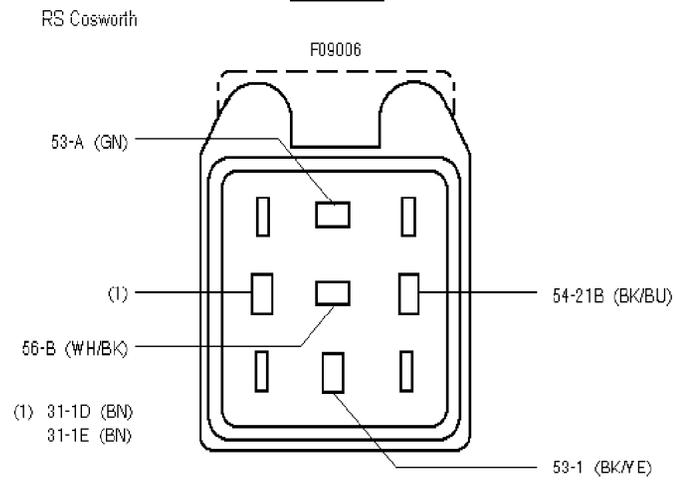


C2243

C2243

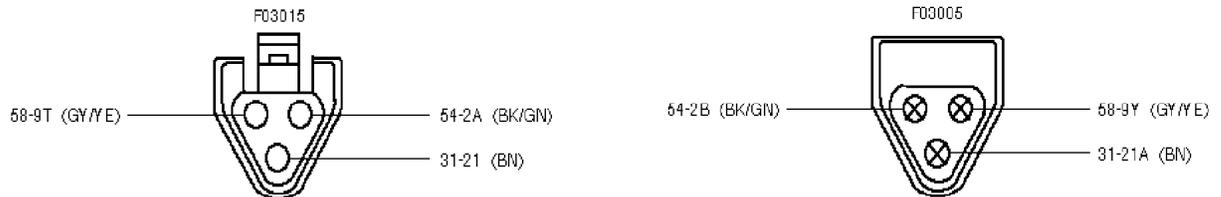

C2244


C2244

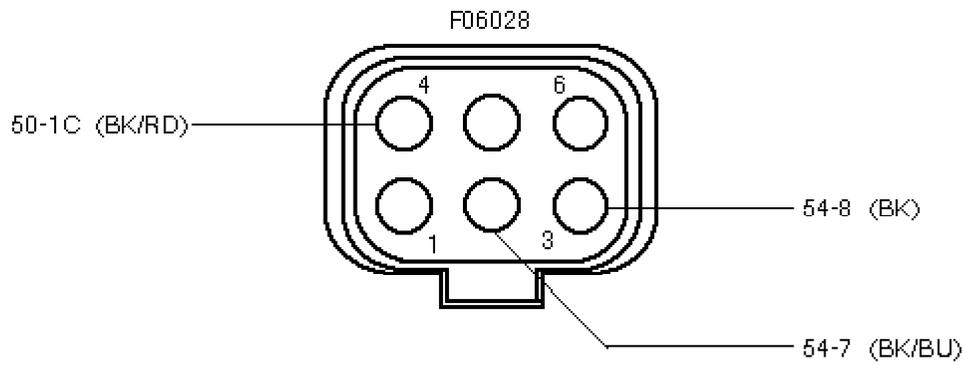

C2245 - K93 Radiator fan relay

C2245




RS Cosworth

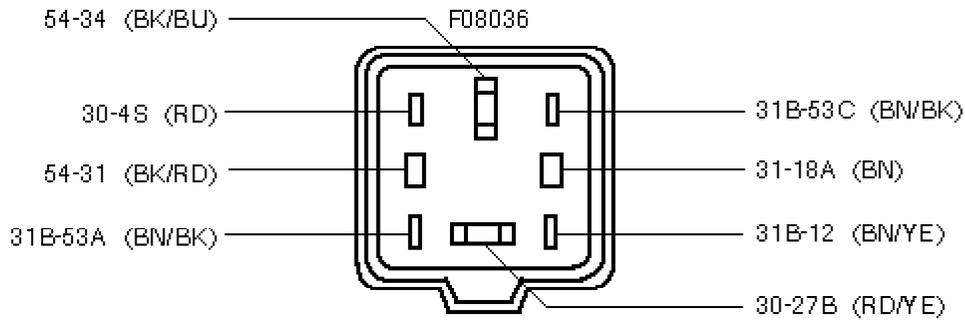


C2248

LHD **C2248**

RHD as of 95

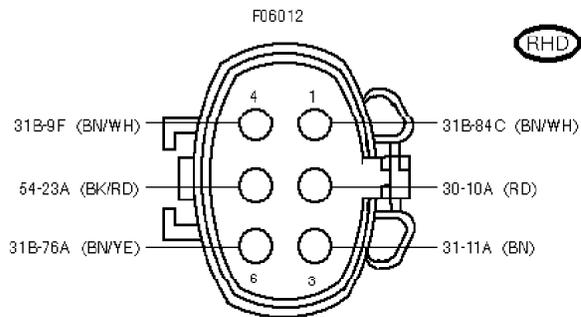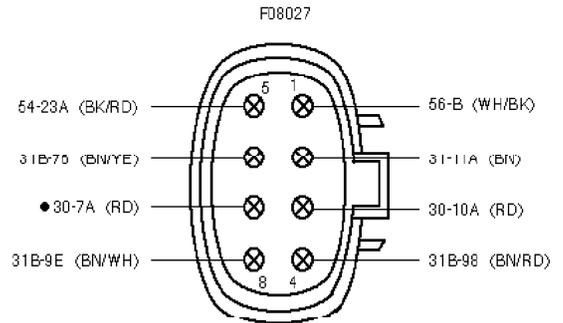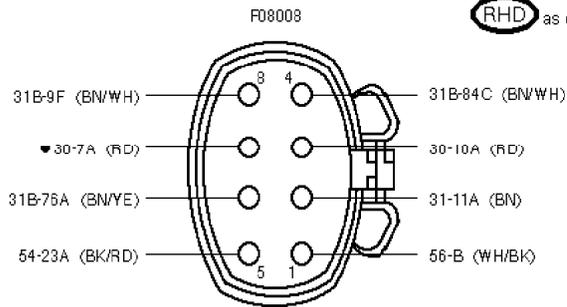


RHD before 95

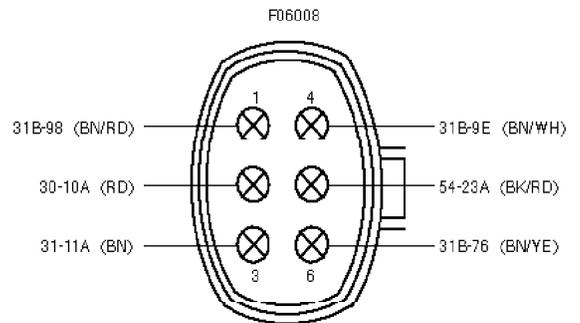


C2250 - K87 Power window relay I (global down)

C2250

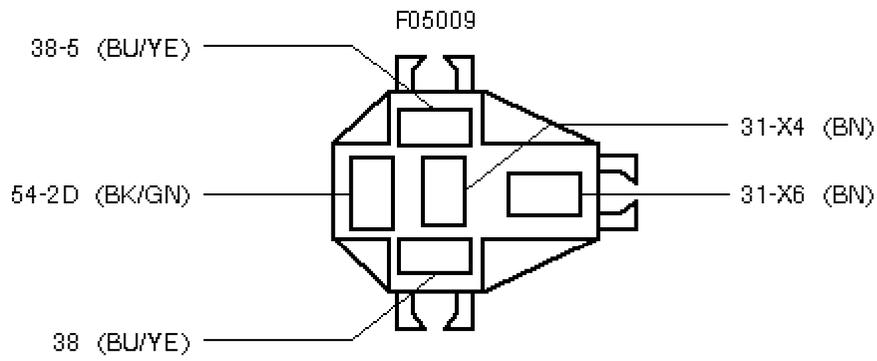


C2251 - K88 Power window relay II (global up)

C2251

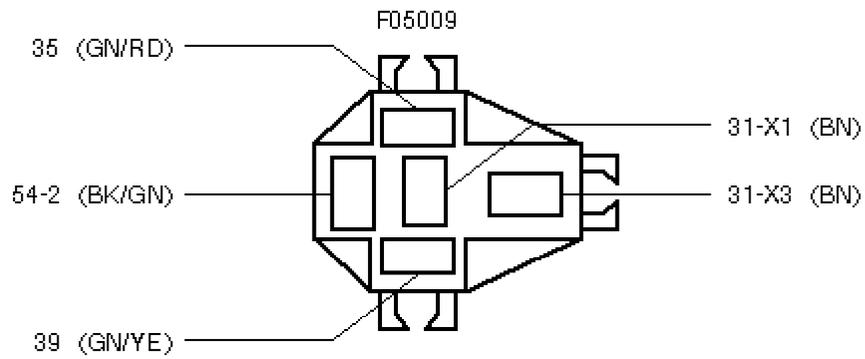

C2253 - B49 Exhaust gas recirculation (EGR) valve position sensor


C2253

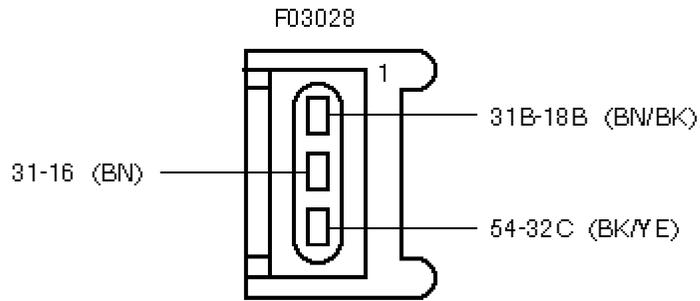

C2255 - B2 Manifold Absolute Pressure (MAP) sensor

C2255


F03013

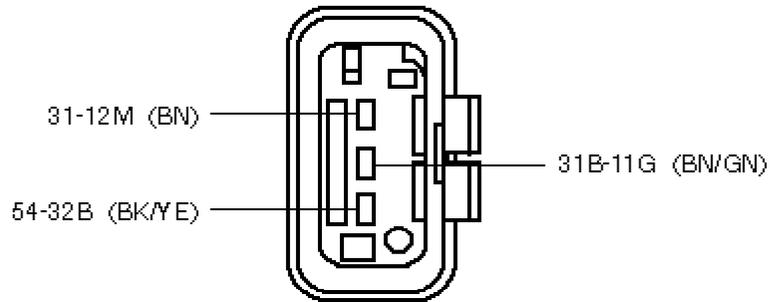

C2256 - D19 Self-test input connector

C2256

RS Cosworth

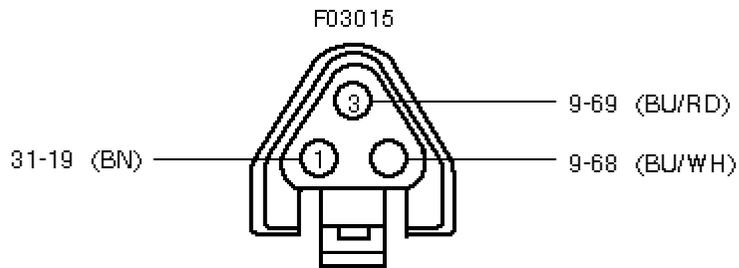


C2258 - A41 Illumination dimmer

C2258

RS Cosworth

F06027

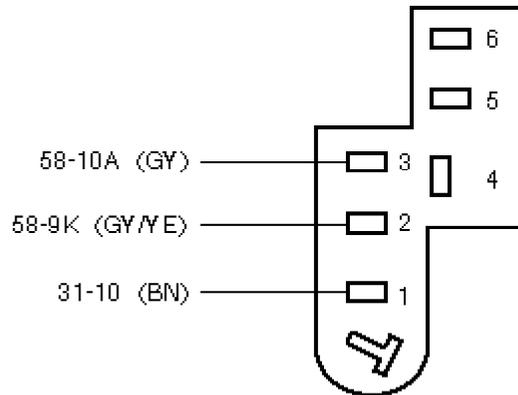

C2263 - K59 A/C Relay

C2263 (Yellow)


RS Cosworth

F05009

31B-12 (BK/YE) +
31B-12C (BN/WH)

31-23B (BN) +
31-30E (BN)

54-16G (BK/WH)

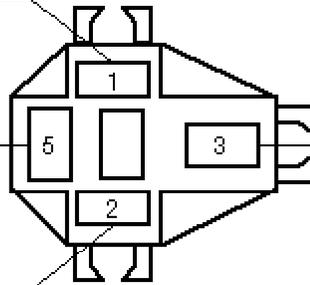


31-23C (BN) +
31-30E (BN)

C2264

C2264


F07016

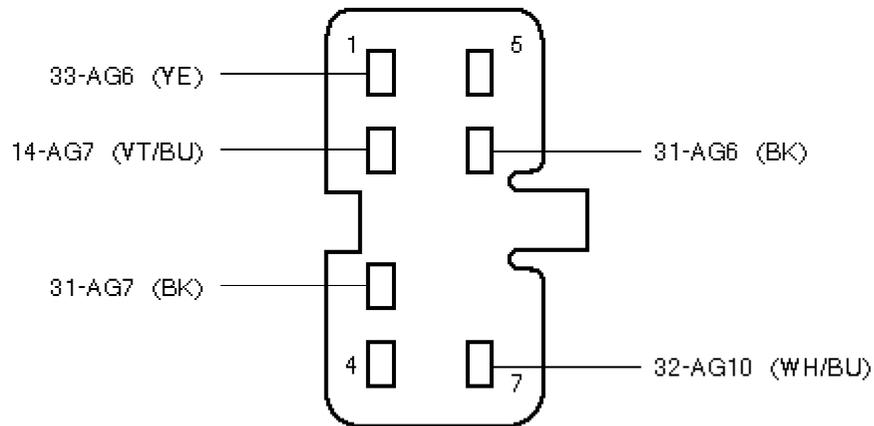


C2265 - P13 Clock spring

C2265

F03035

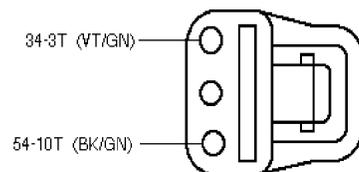


F03062

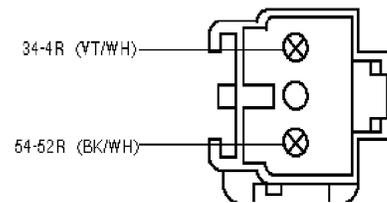

C2268 - A29 Airbag module

C2268

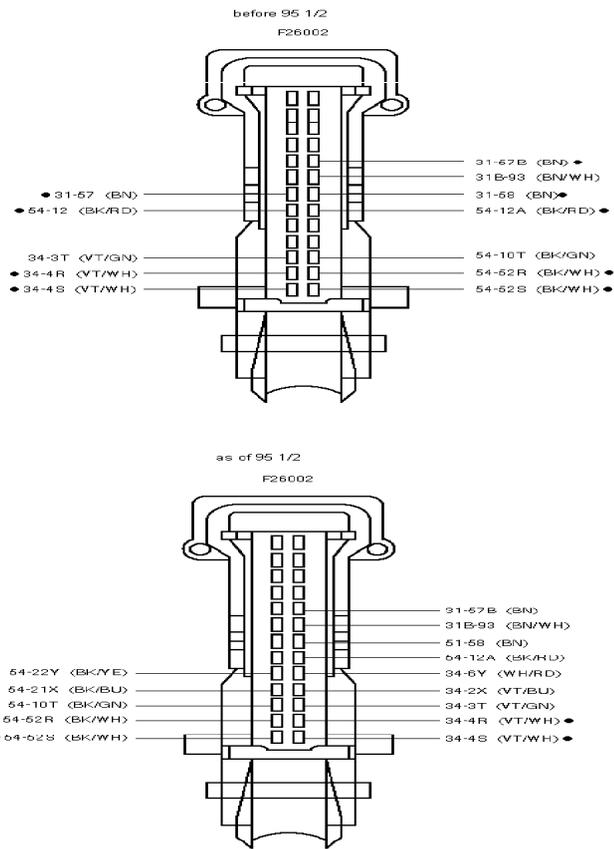

C2269


C2269



C2270 - K82 HEGO relay


C2270 (Green)

RS Cosworth

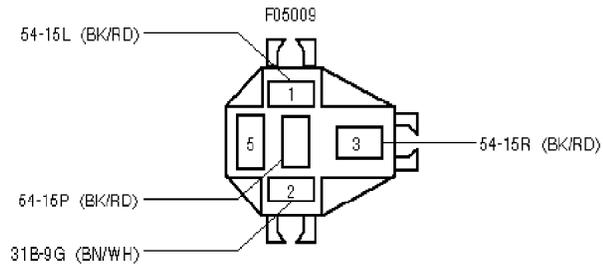


C2271

C2271

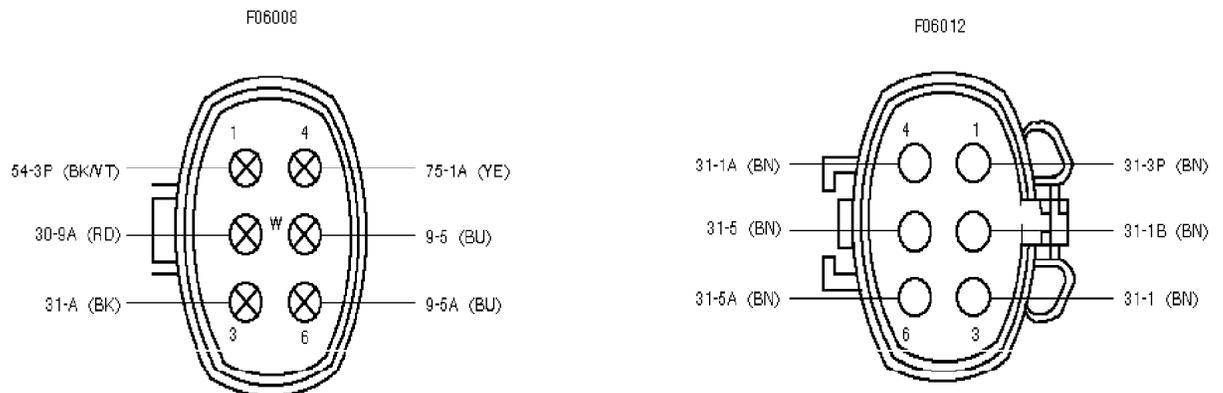


C2272

C2272

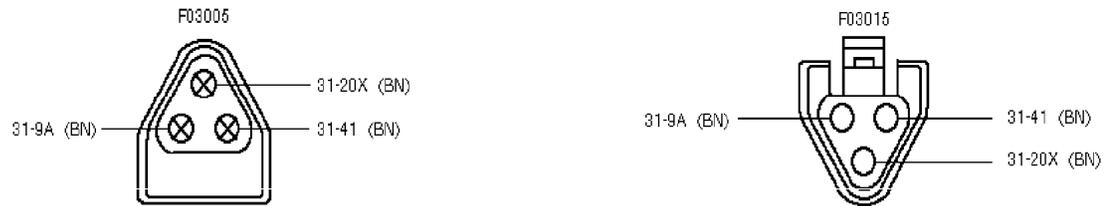


C2278 - N170 Power window switch global up/down

C2278

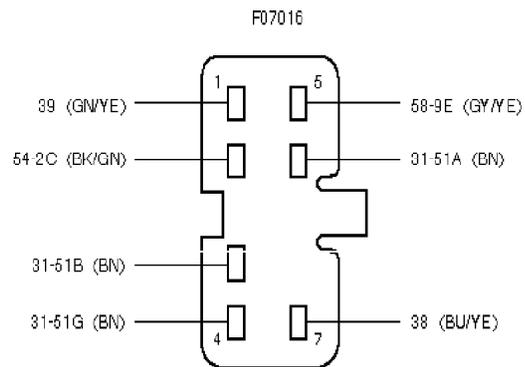


C2281 - M67 Door lock motor, driver's side, M68 Door lock motor, passenger's side

C2281

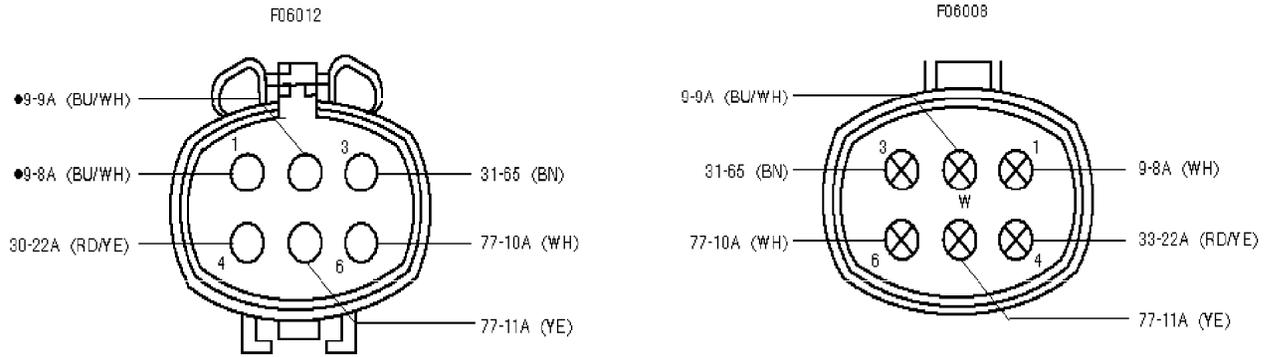


C2283 - M22 LH Rear door lock motor, M20 RH Rear door lock motor



C2283

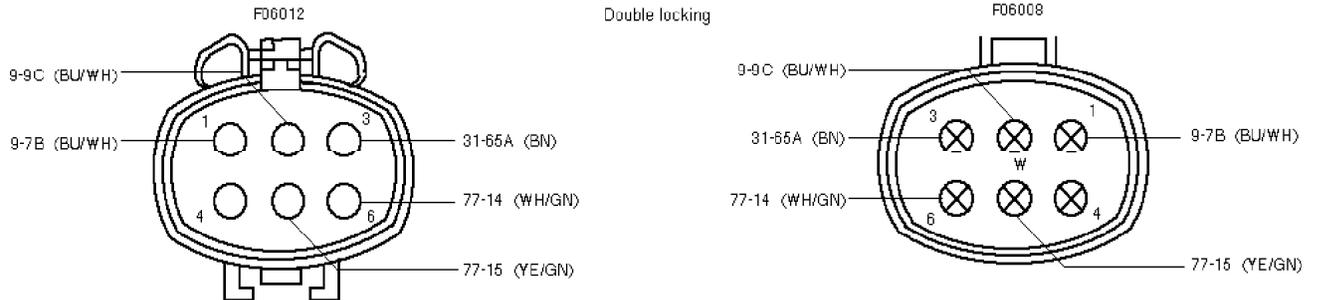

Central locking

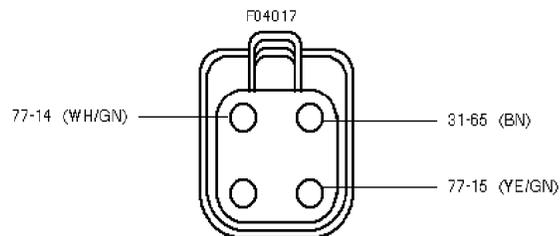



C2285

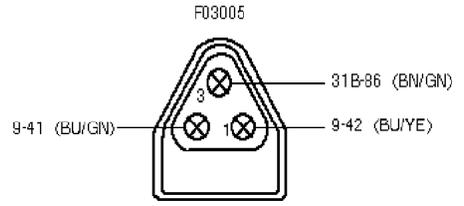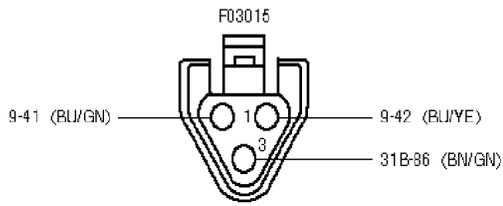



C2288

Cabriolet

before 95

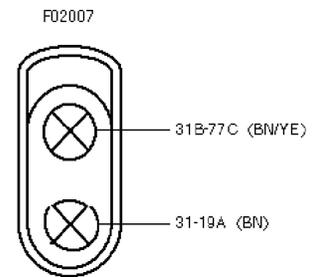
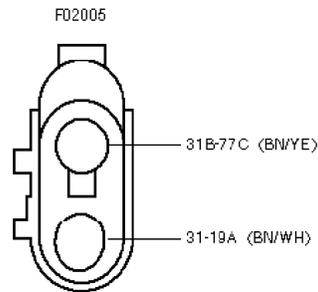


as of 95

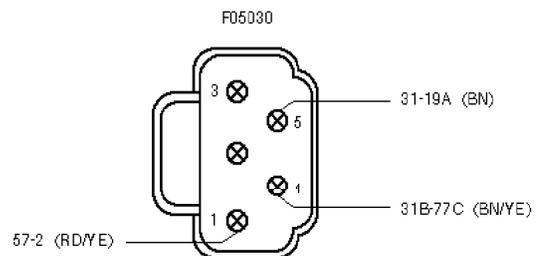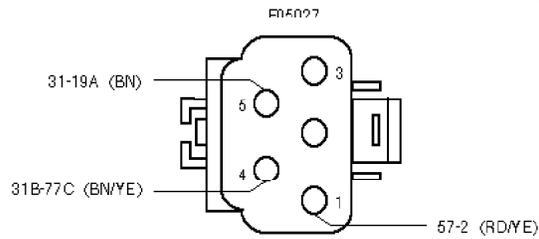

C2291

C2291

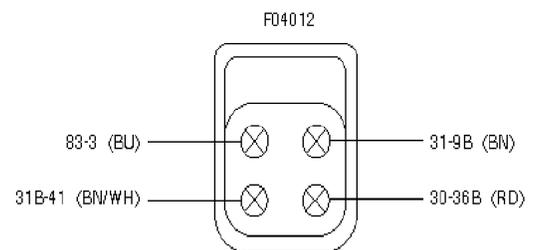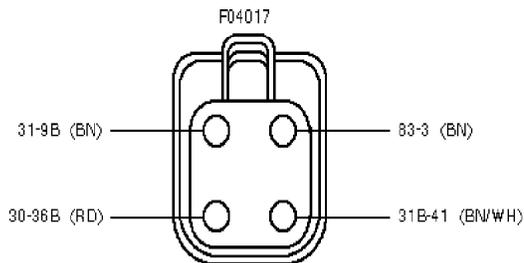


C3003 - K144 Main beam relay II



C3003

as of 95


F04057

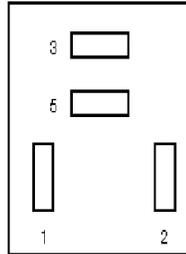

C3006 - A70 Instrument cluster

C3006 (White)

as of 95 1/2

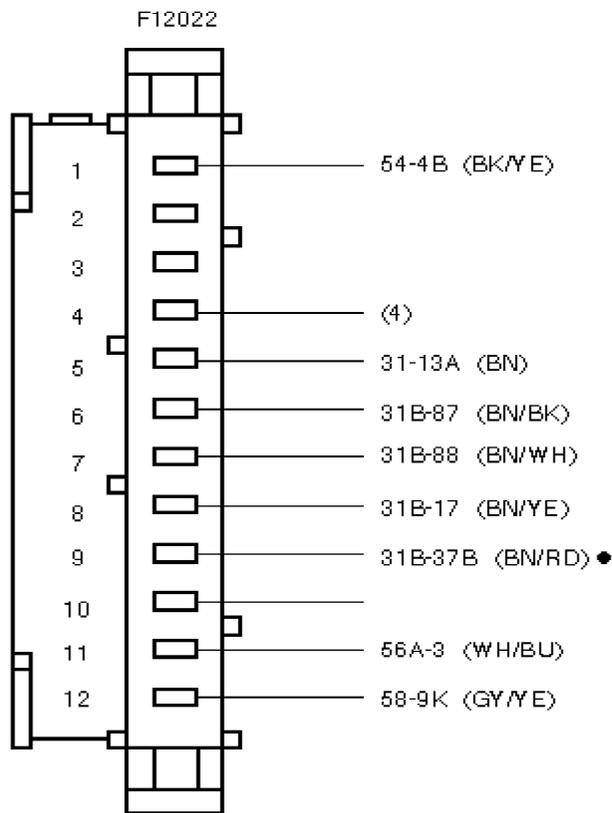


(4) 19 (BN/YE) + 31B-11 (BN/GN)
19 (BN/YE)

C3008 - N56 Front fog lamp switch

C3008 (Violet)

as of 95 1/2


F08060

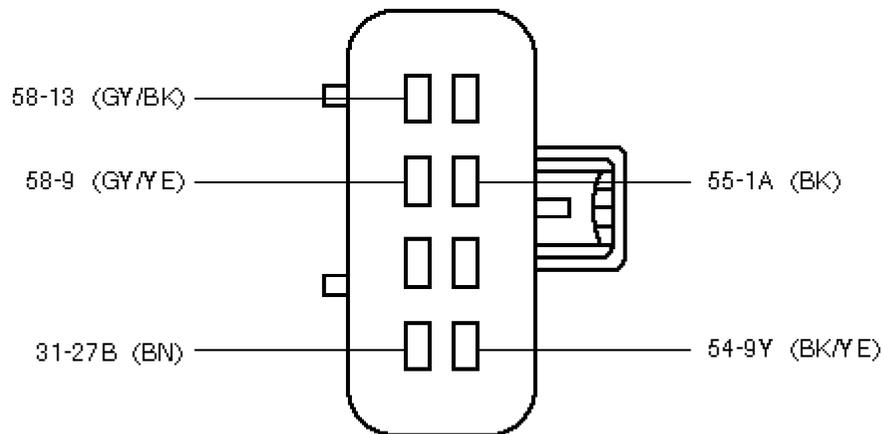

C3007 - A70 Instrument cluster

C3007 (Blue)


as of 95 1/2

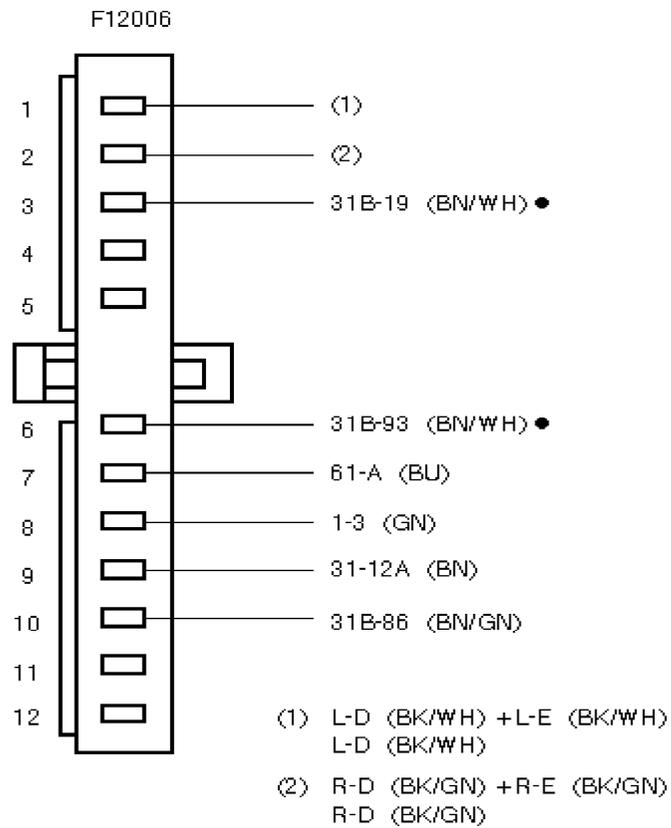

C3009 - R2 Cigar lighter

C3009


as of 95 1/2

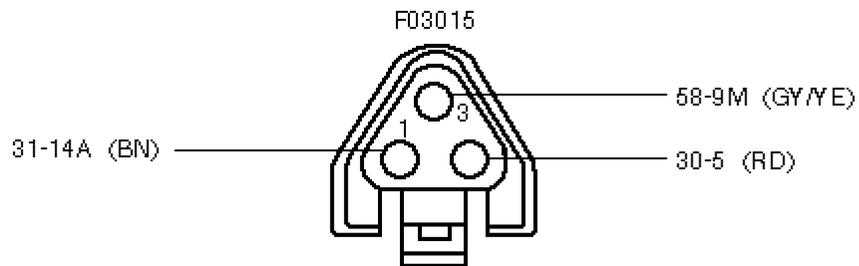

C3010 - N91 Windscreen heater switch

C3010 (Green)

as of 95 1/2

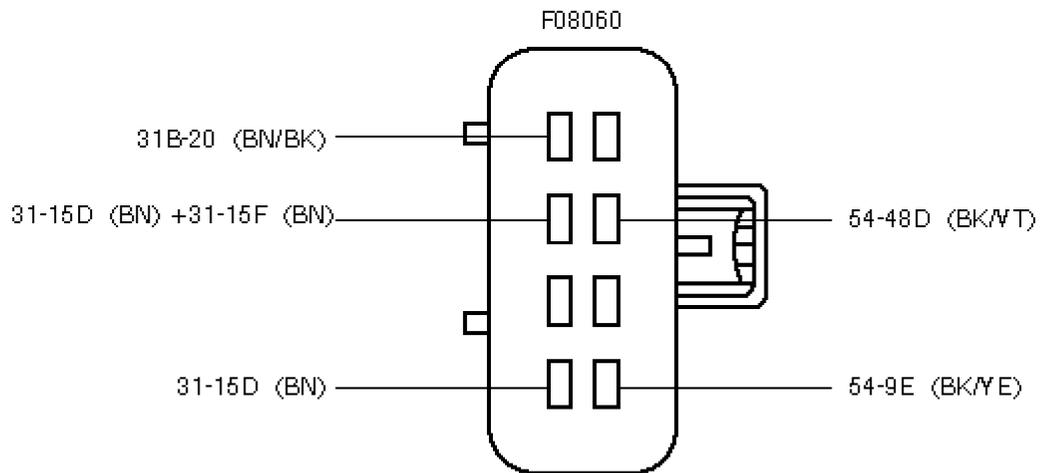


C3011 - N10 Rear window heater switch

C3011 (Blue)

as of 95 1/2


F08060

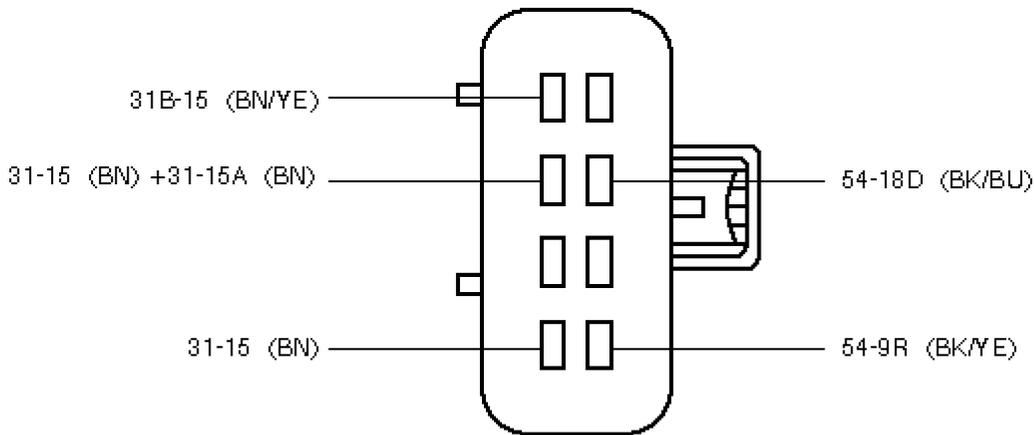

C3012

C3012


as of 95 1/2

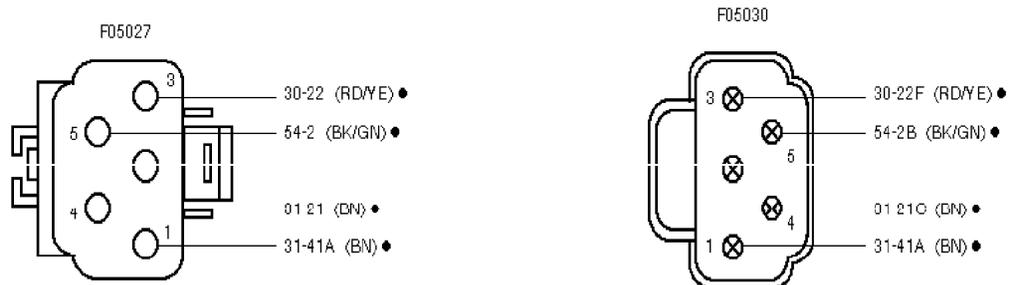

C3013


C3013

as of 95 1/2

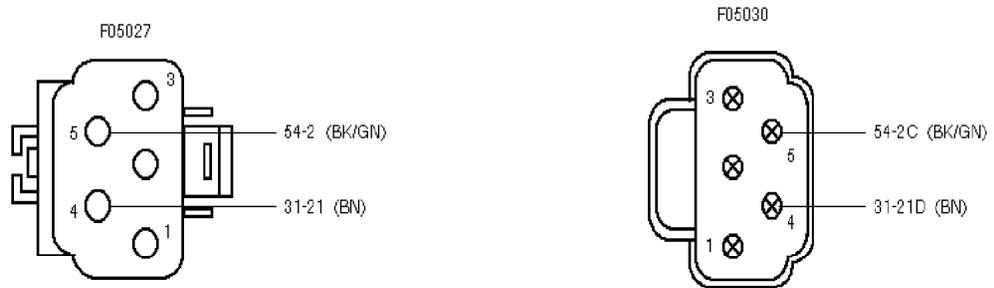

C3014 - A26 Sunroof unit



C3014

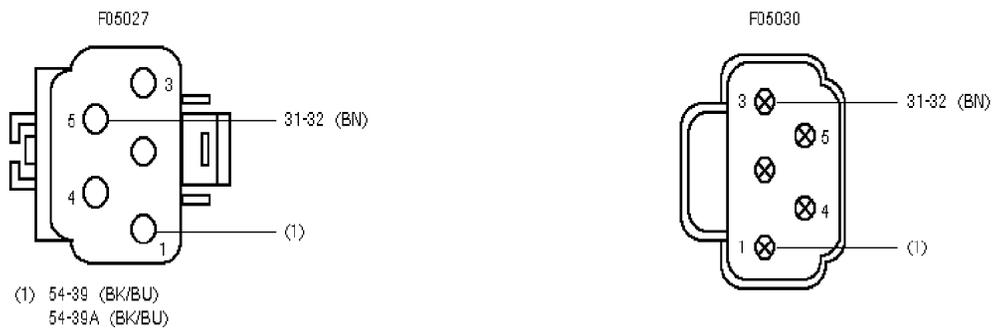

C3015

C3015

as of 95 1/2

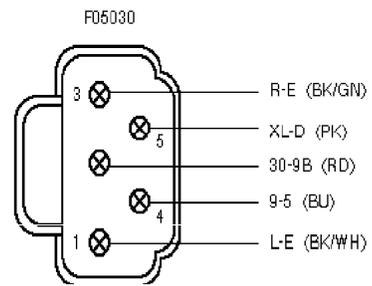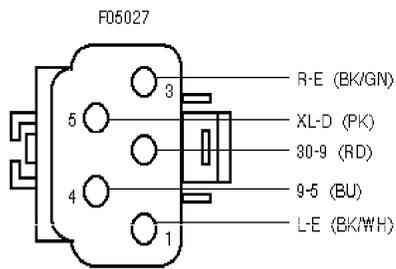


C3016 - K145 Main beam relay I



C3016

as of 95





F04067

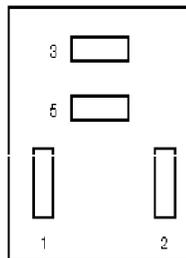

C3017

C3017

as of 95

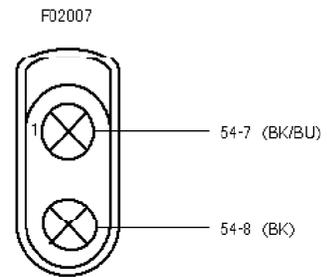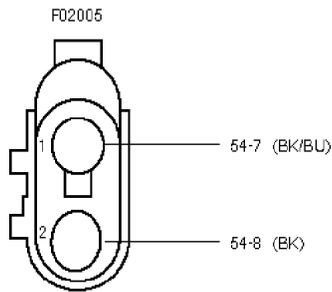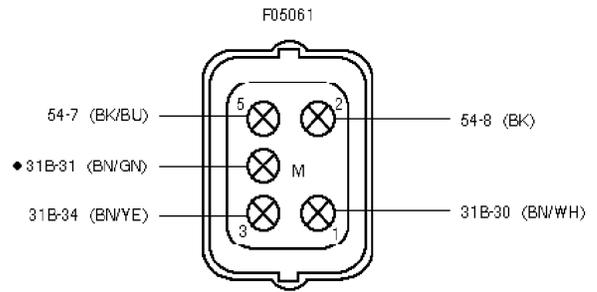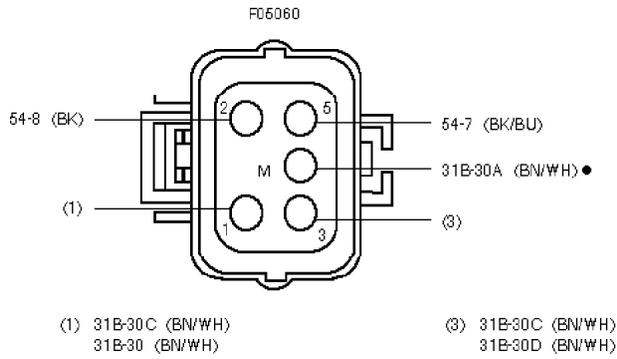


C3018 - N22 Tailgate/decklid switch

C3018

as of 95


Higher option content

F03005

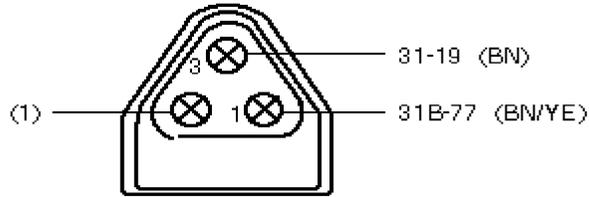

Lower option content

F02007

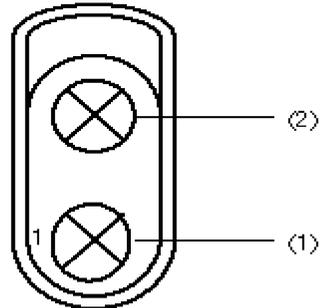

(2) 31B-77C (BN/YE)
31B-77 (BN/YE)


(1) 31-19A (BN)
31-X (BK) +31-19 (BN)
31B-19 (BN/WH)

C3020 - D20 Data Link Connector (DLC)

C3020

as of 95 1/2

F16016

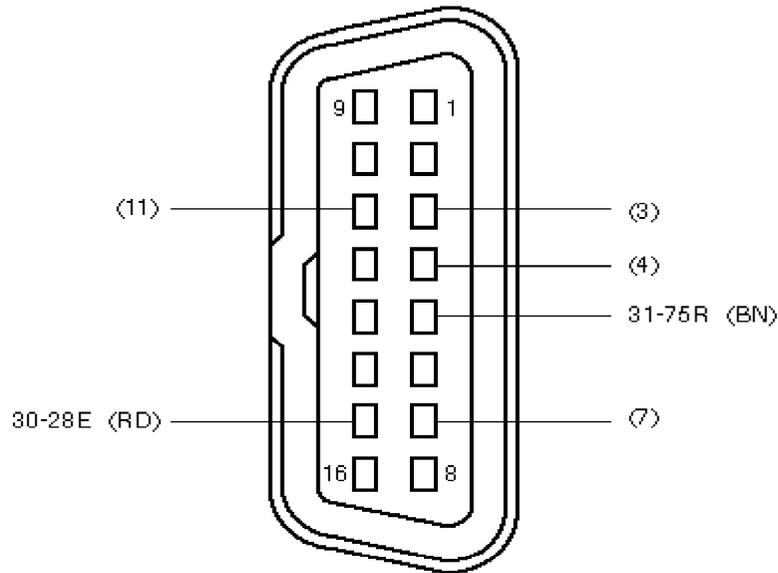


- (3) 31B-40 (BN/GN) ●
9-71 (BU/YE) ●
9-20 (BU/GN) ●
- (4) 31-49B (BN) ●
31-49R (BN) ●
- (7) 9-64 (BU/YE) ●
31-20X (BN) ●
9-64A (BU/YE) ●
31-D (BK) ●
31-10D (BN) ●
- (11) 9-20 (BU/GN) ●
9-72 (BU/GN) ●

C3021 - K82 HEGO relay

C3021

ZETEC as of 95 1/-
2 "96
EEC"emissions
standard

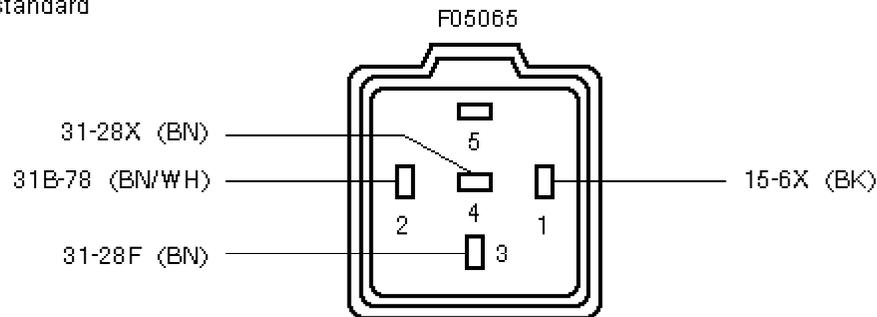


C3022 - A74 Diesel pump unit

C3022

as of 95 1/2

F08008

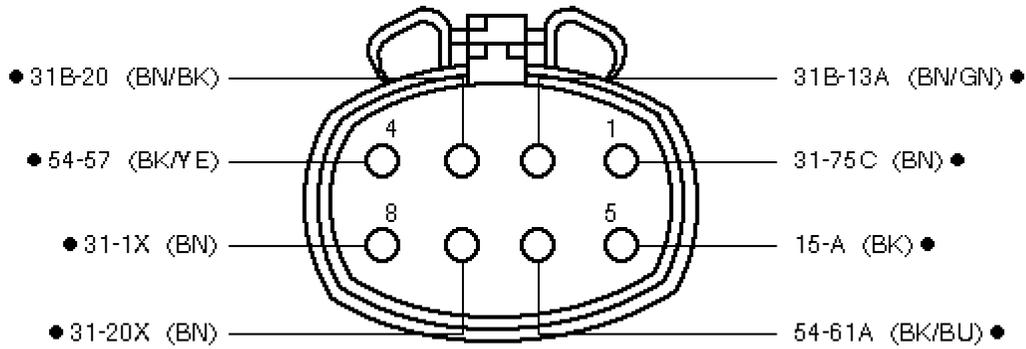


C3023 - K43 LH Anti-theft flasher relay

C3023

as of 95 1/2


F04010

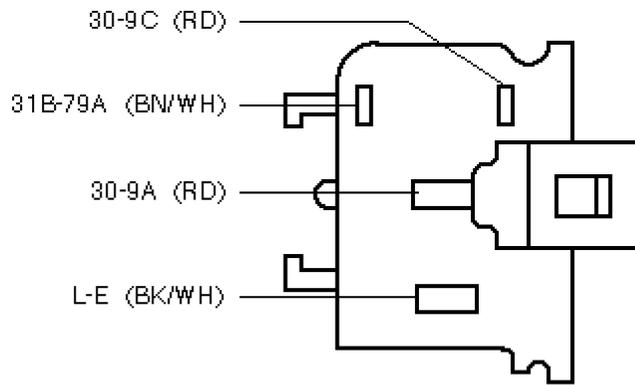

C3024 - K44 RH Anti-theft flasher relay

C3024



as of 95 1/2

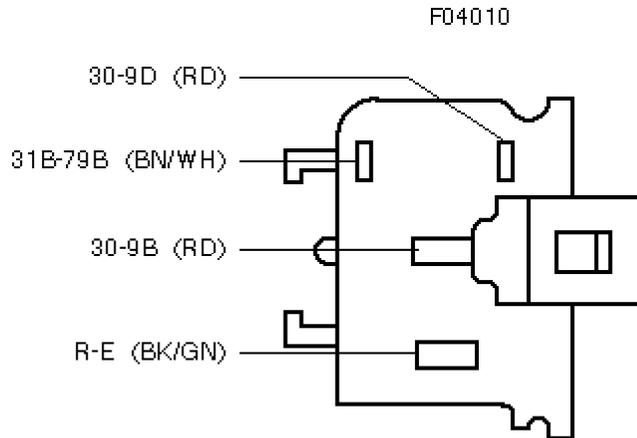

C3028

C3028 (Yellow)

as of 95 1/2

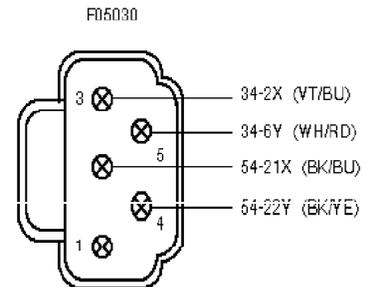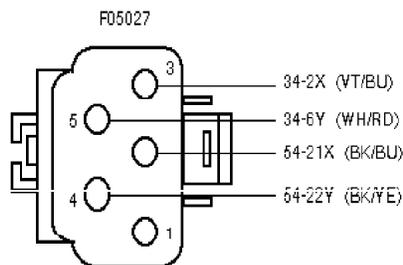


C3029 - A117 Seat belt tensioner, driver seat

C3029

as of 95 1/2

F03035

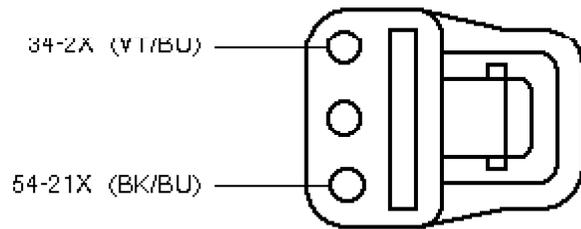


C3030 - A116 Seat belt tensioner, passenger seat

C3030

as of 95 1/2

F03035

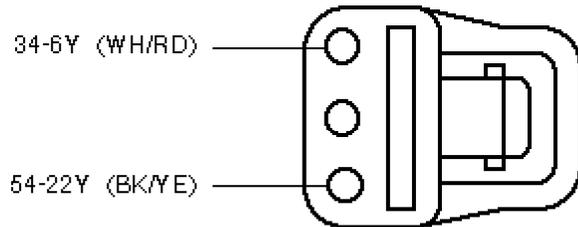

C3033 - N260 Power window switch, centre console


LHD

C3033


Cabriolet as of 95

RHD

F10002

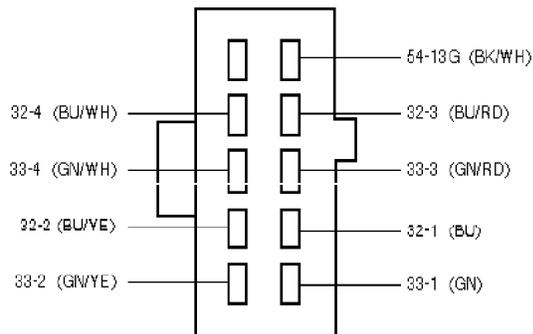

F10002

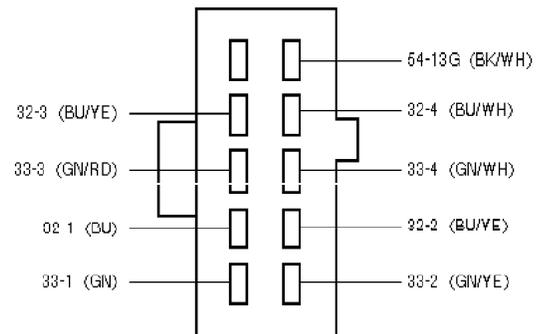


C3035 - N180 Power window switch, passenger side rear (centre console)

C3035 (Green)

Cabriolet before 95

F07016

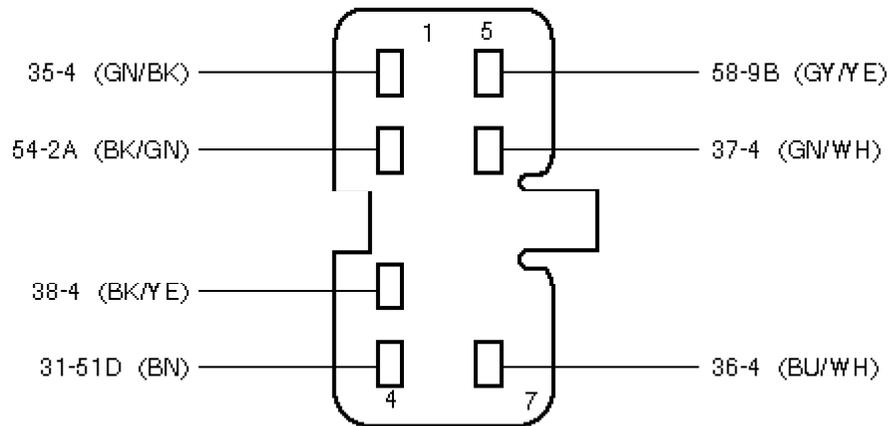


C3036 - N179 Power window switch, driver side rear (centre console)

C3036 (Black)

Cabriolet before 95


F07016

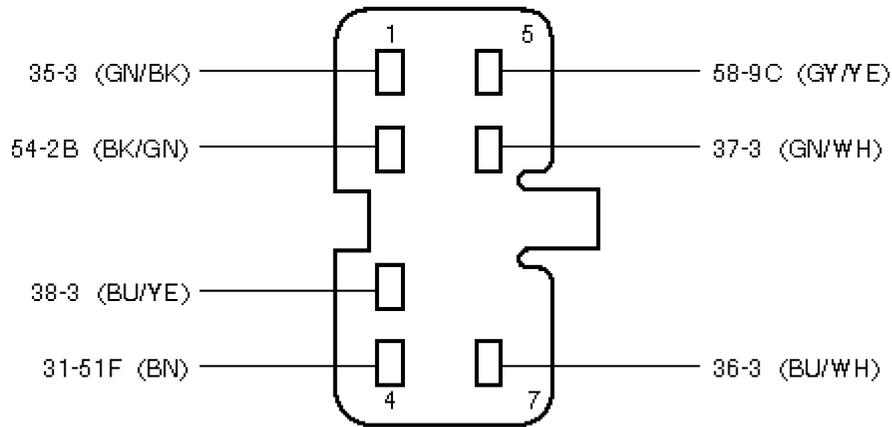


C3037 - N183 Power window switch, passenger side rear

C3037

Cabriolet before 95
F07016

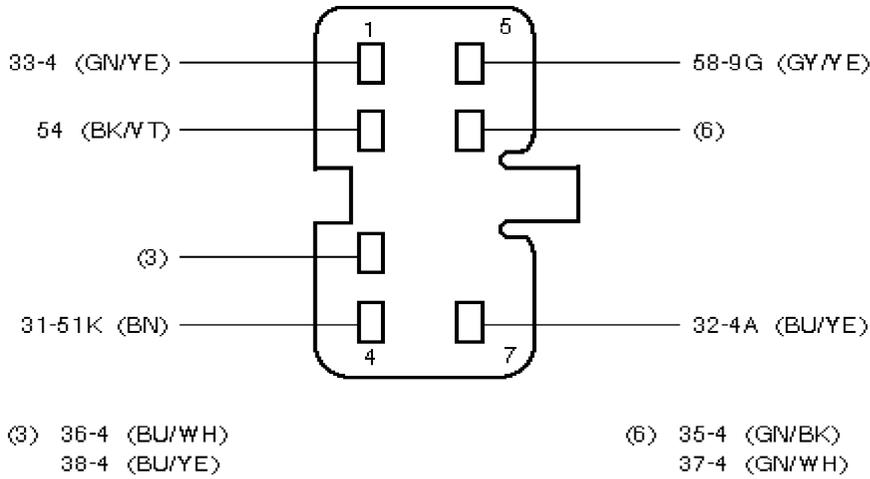


Cabriolet as of 95
F07016

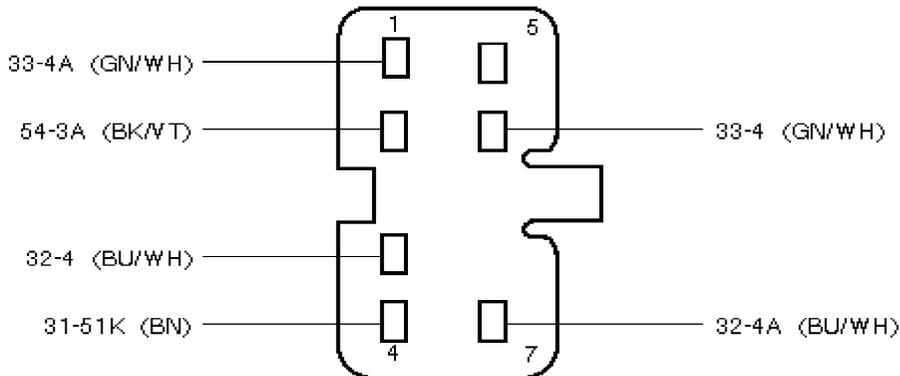

C3038 - N184 Power window switch, driver side rear

C3038


Cabriolet before 95
F07016

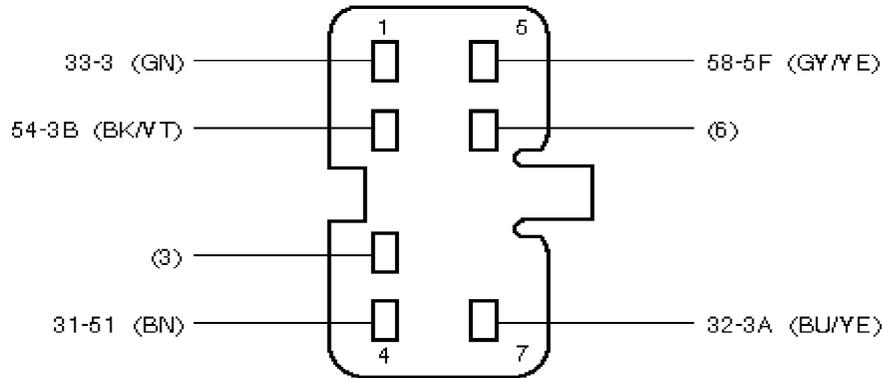

(3) 36-3 (BU/WH)
38-3 (BU/YE)

(6) 35-3 (GN/BK)
37-3 (GN/WH)

Cabriolet as of 95
F07016

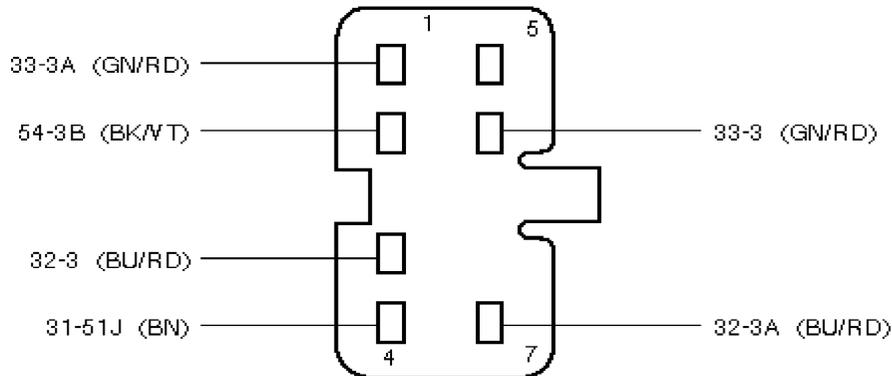


C3901a - P91 Central junction box (CJB)

LHD

as of 95, except
RS Cosworth

F10002

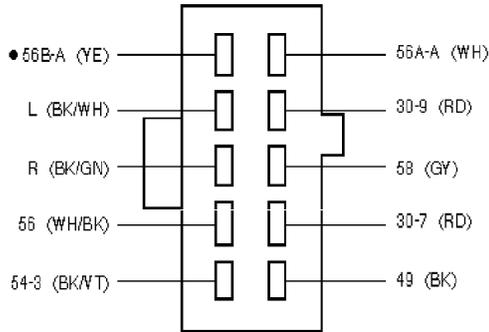


C3901a

(Natural)

RHD

as of 95, except
RS Cosworth

F10002

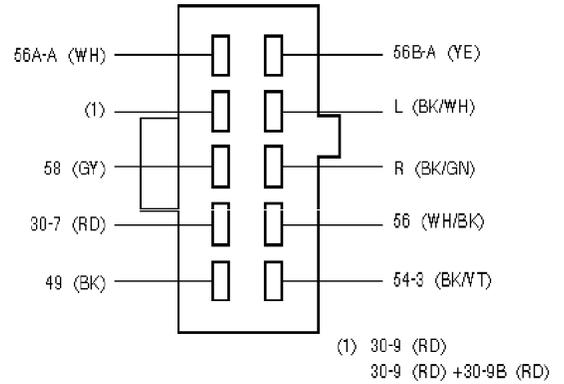


C3901b - P91 Central junction box (CJB)

LHD

as of 95, except
RS Cosworth

F10002.01

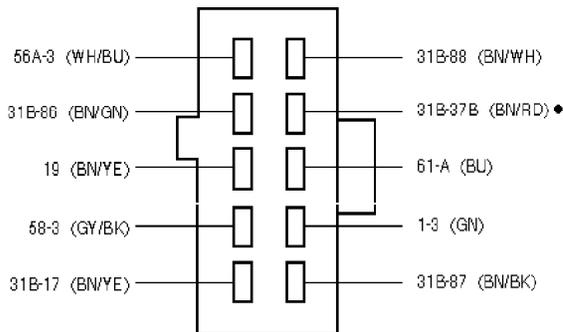


C3901b

RHD

as of 95, except
RS Cosworth


F10002.01

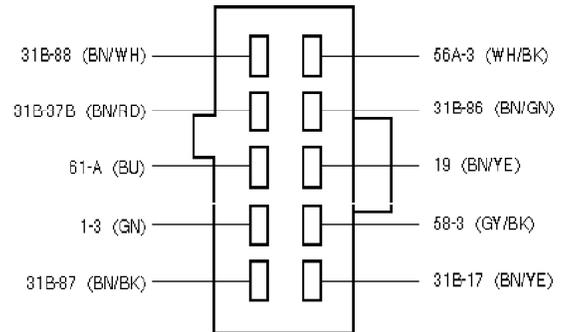

C3901c - P91 Central junction box (CJB)

LHD


as of 95, except
RS Cosworth
F04029

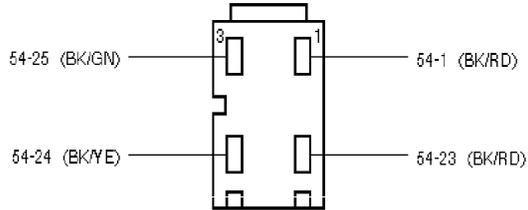

C3901c

RHD

as of 95, except
RS Cosworth
F04029

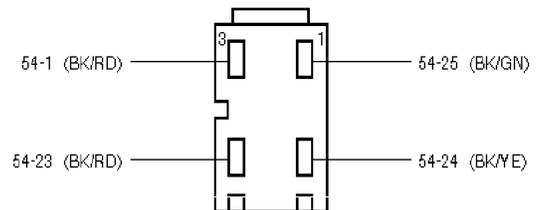


C3901d - P91 Central junction box (CJB)

C3901d


LHD

as of 95, except
RS Cosworth
F04024

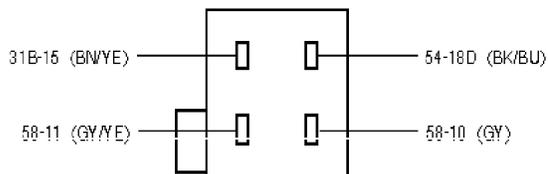

RHD

as of 95, except
RS Cosworth
F04024

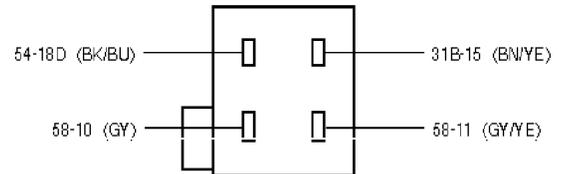


C3901e - P91 Central junction box (CJB)

C3901e

LHD

as of 95, except
RS Cosworth


F04025

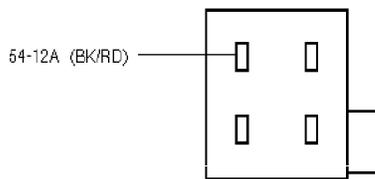

RHD

as of 95, except
RS Cosworth


F04025

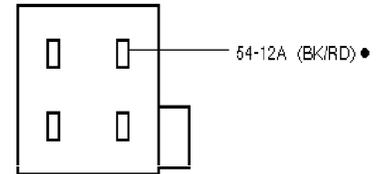

C3902a - P91 Central junction box (CJB)

LHD


as of 95, except
RS Cosworth
F10002.01

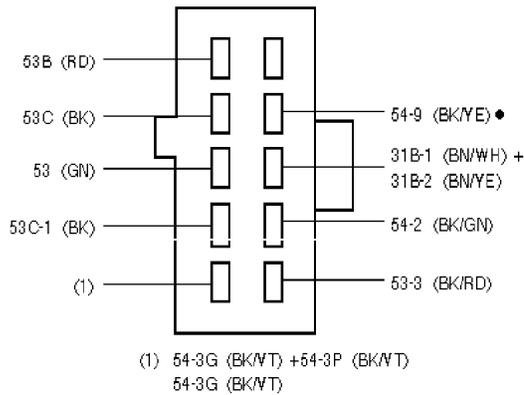

C3902a

RHD

as of 95, except
RS Cosworth
F10002.01

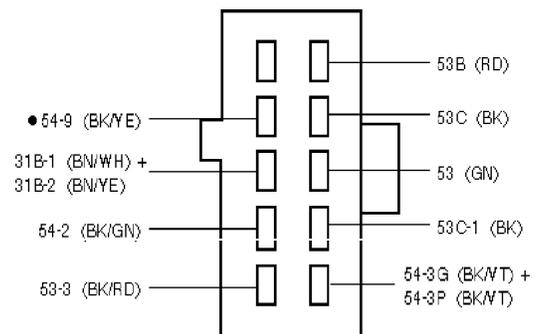


C3902b - P91 Central junction box (CJB)

LHD

(Natural)

as of 95, except
RS Cosworth
F10002

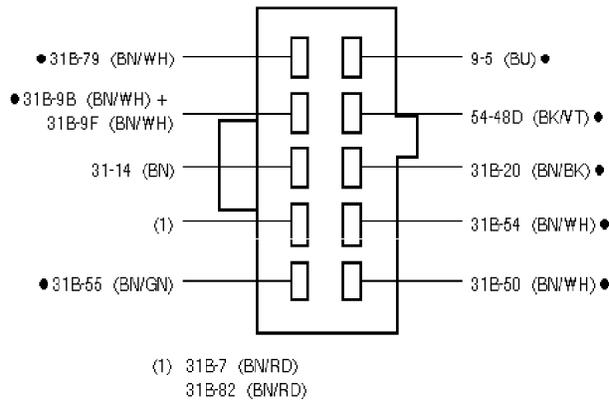


C3902b

(Natural)

RHD

(Natural)

as of 95, except
RS Cosworth
F10002

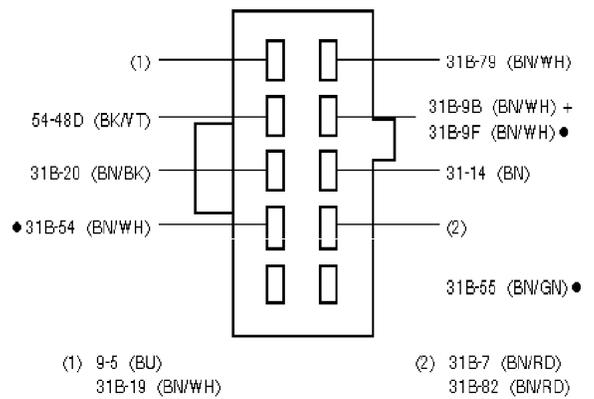


C3902c - P91 Central junction box (CJB)

C3902c

LHD

as of 95, except
RS Cosworth


F16001.01

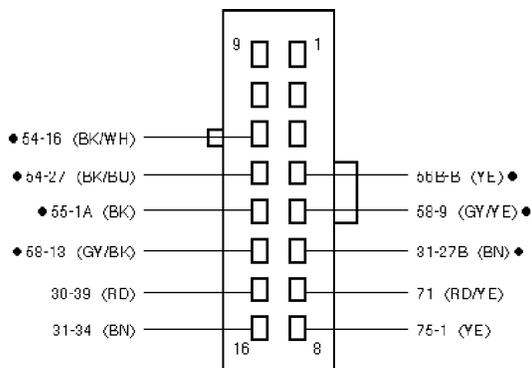

RHD

as of 95, except
RS Cosworth

F16001.01

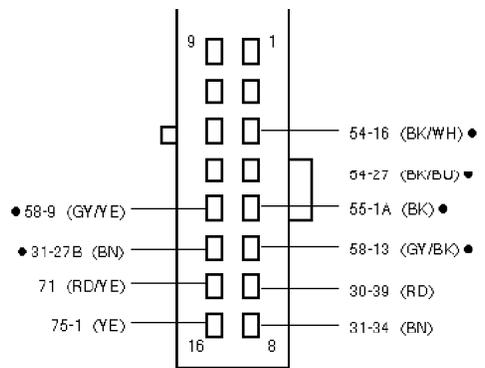


C3903a - P91 Central junction box (CJB)

LHD

C3903a

as of 95, except RS
Cosworth

F10002.01

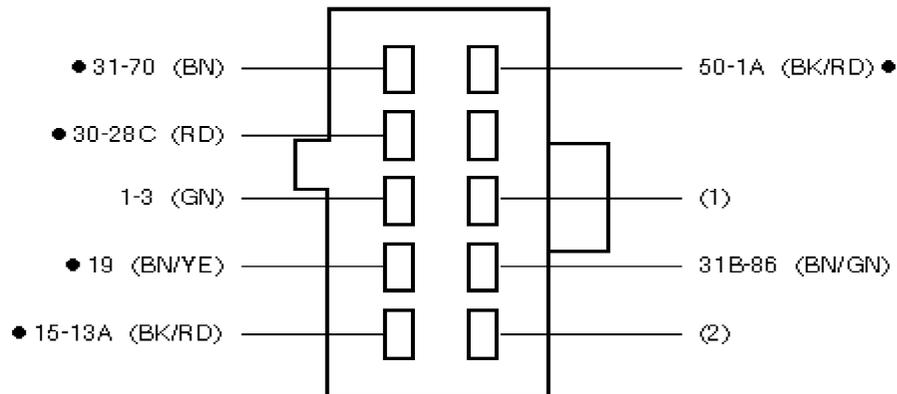


(1) 15-12A (BK/GN)
XL-2 (PK)

(2) 31B-88 (BN/WH) + 31B-88B (BN/WH)
31B-88A (BN/WH)
31B-88 (BN/WH) + 31B-88A (BN/WH)

C3903b - P91 Central junction box (CJB)

C3903b (Natural)

as of 95

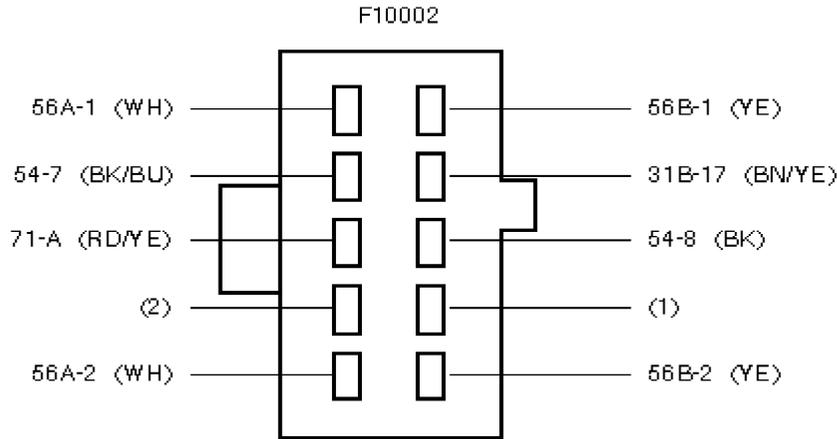

(1) 58-5 (GY/BK) **LHD**
58-4 (GY/RD)


(2) 58-4 (GY/RD) **LHD**
58-5 (GY/BK)

C3903c - P91 Central junction box (CJB)

C3903c

as of 95

F04029

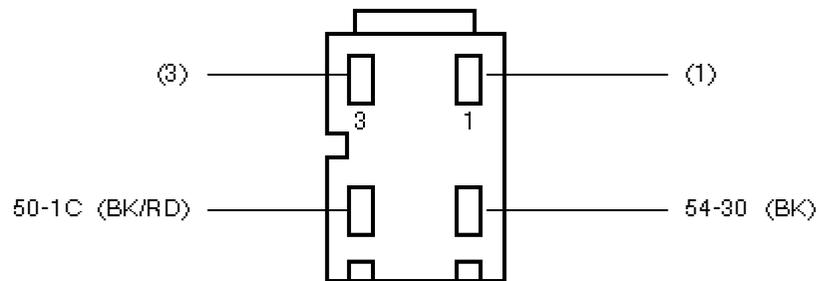


(3) 31-28Z (BN)
31-28Z (BN) +XL-3 (PK)
XL-3 (PK)

(1) 31-1 (BN) +31-28Z (BN)
31-1 (BN)

C3903d - P91 Central junction box (CJB)

C3903d

as of 95

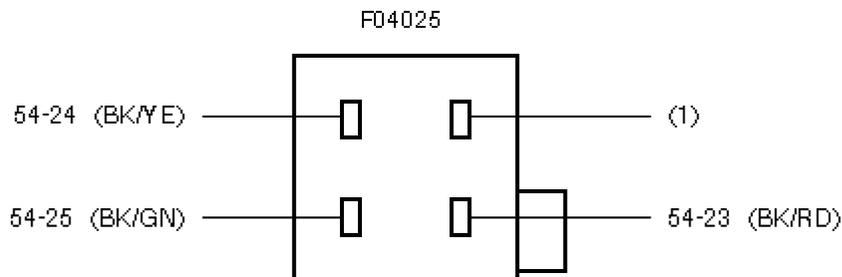


(1) 61 (BU) + 61-A (BU)
61 (BU)

C3903e - P91 Central junction box (CJB)

C3903e

as of 95, except RS
Cosworth

F04024

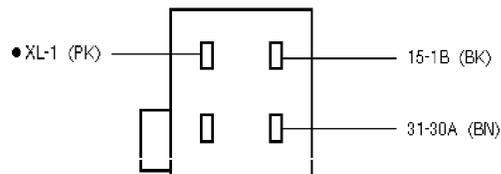


C3904 - P91 Central junction box (CJB)

LHD


C3904

as of 95, except RS
Cosworth

RHD

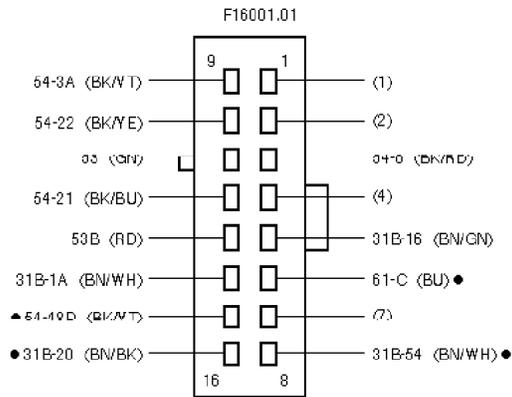

- (1) 53-1A (BK/YE) +54-61 (BK/BU)
53-1A (BK/YE)
- (2) L-A (BK/WH) +L-B (BK/WH)
L-A (BK/WH)
- (4) R-A (BK/GN) +R-B (BK/GN)
R-A (BK/GN)
- (7) 31B-50 (BN/WH) ●
31B-50 (BN/WH) +31B-50A (BN/WH)

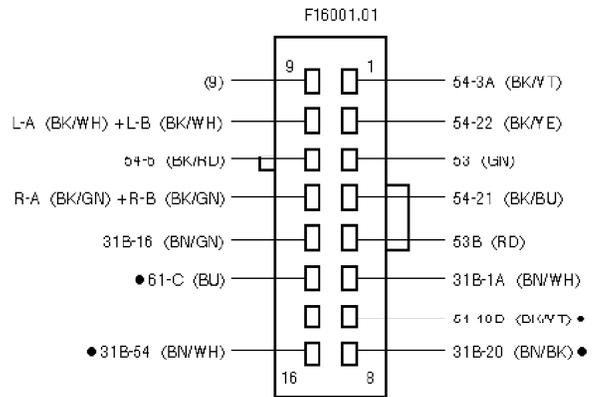


- (9) 53-1A (BK/YE) +54-61 (BK/BU)
53-1A (BK/YE)

C3905a - P91 Central junction box (CJB)

C3905a

as of 95, except
RS Cosworth

F07020

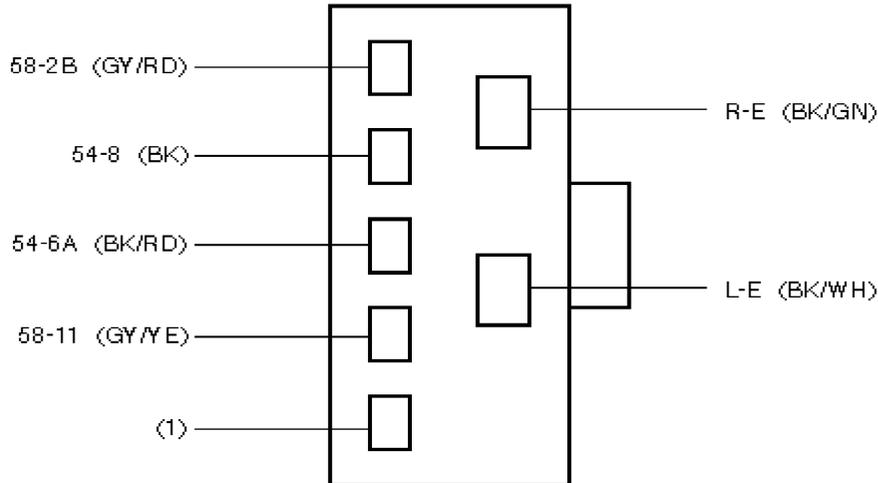


(1) 58-3A (GY/BK) +58-9J (GY/YE)
58-3A (GY/BK)

C3905b - P91 Central junction box (CJB)

C3905b

as of 95, except
RS Cosworth

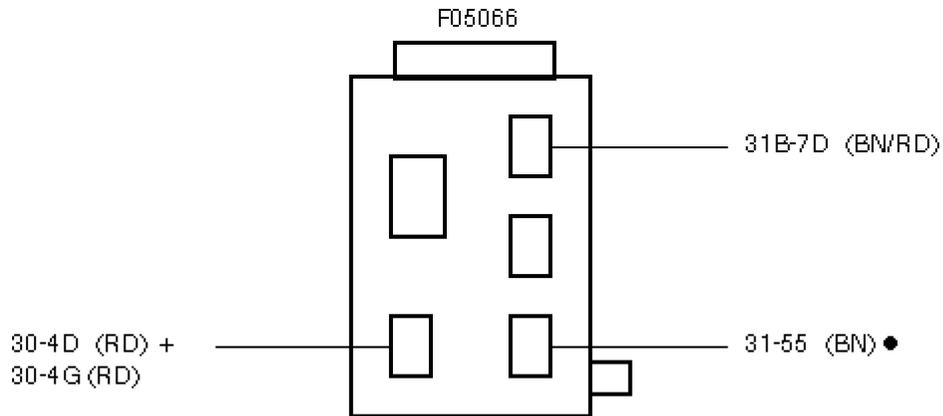


C3905c - P91 Central junction box (CJB)

C3905c

as of 95, except
RS Cosworth

F07020

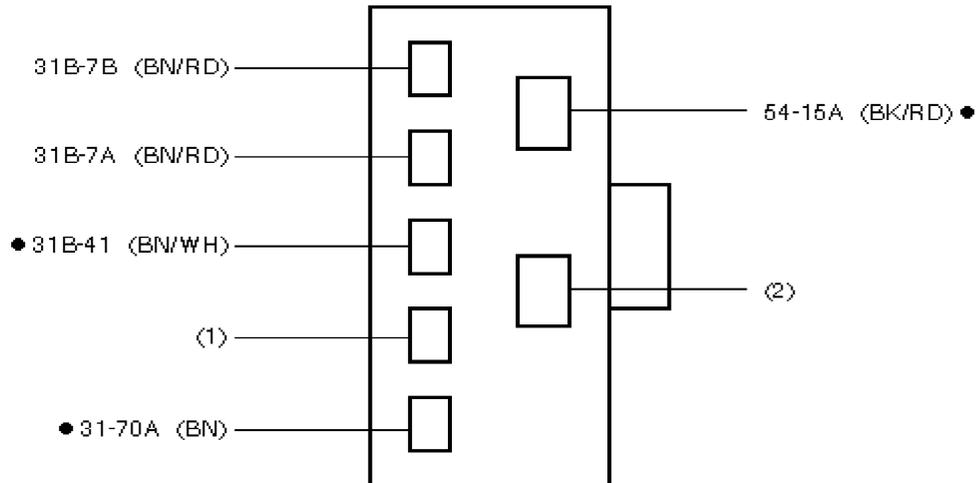


- (1) 31B-87 (BN/BK)
31-17 (BN)
- (2) 31-15 (BN) ●
54-15 (BK/RD) ●

C3905d - P91 Central junction box (CJB)

C3905d


as of 95, except
RS Cosworth

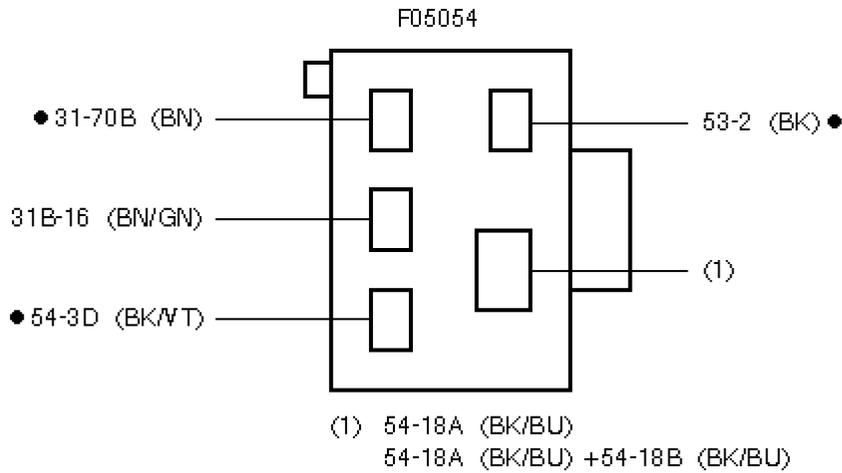

C3908 - P91 Central junction box (CJB)

C3908


as of 95, except RS
Cosworth

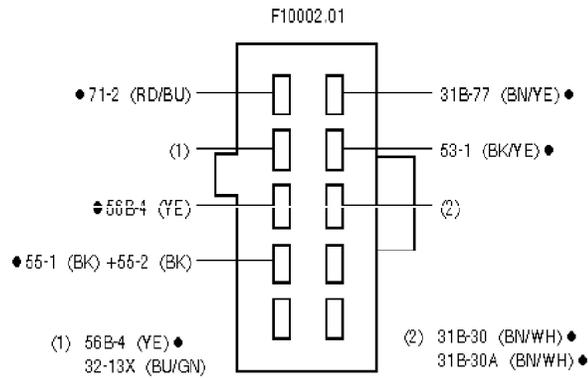

C3909a - P91 Central junction box (CJB)

C3909a

as of 95, except RS
Cosworth

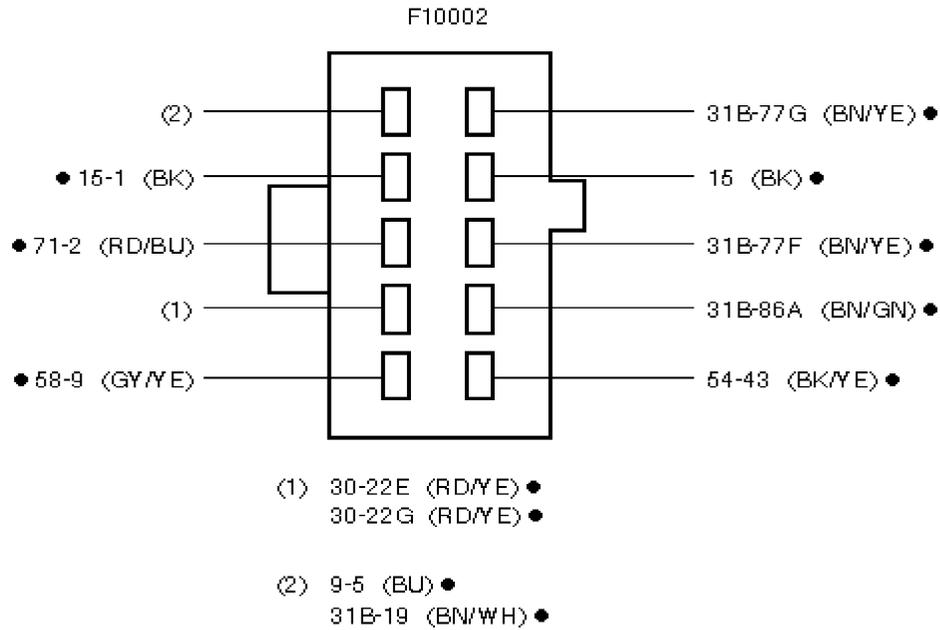


C3910 - P91 Central junction box (CJB)

C3910

as of 95, except RS
Cosworth

F07020

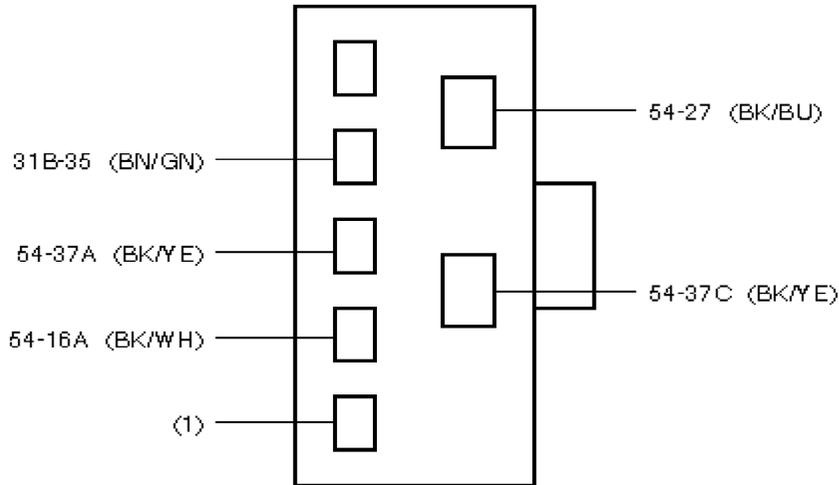


(1) 54-16B (BK/WH)
54-17B (BK)

C3909b - P91 Central junction box (CJB)

C3911


as of 95, except RS
Cosworth

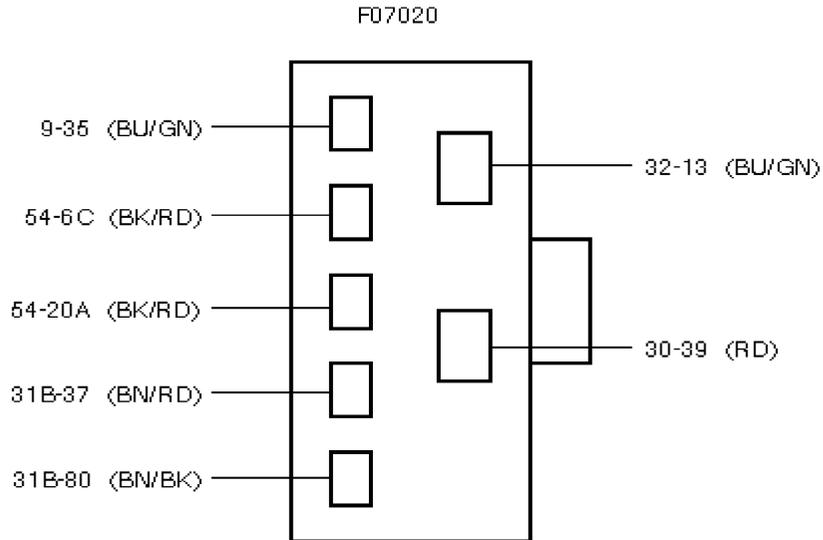

C3912 - P91 Central junction box (CJB)


C3912

as of 95, except RS
Cosworth
F04085

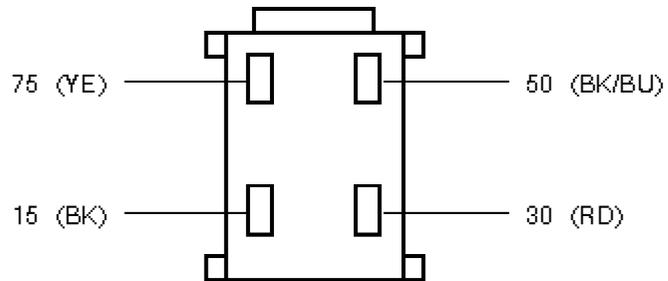

C9000 - N97 Front seat adjust switch



C9000

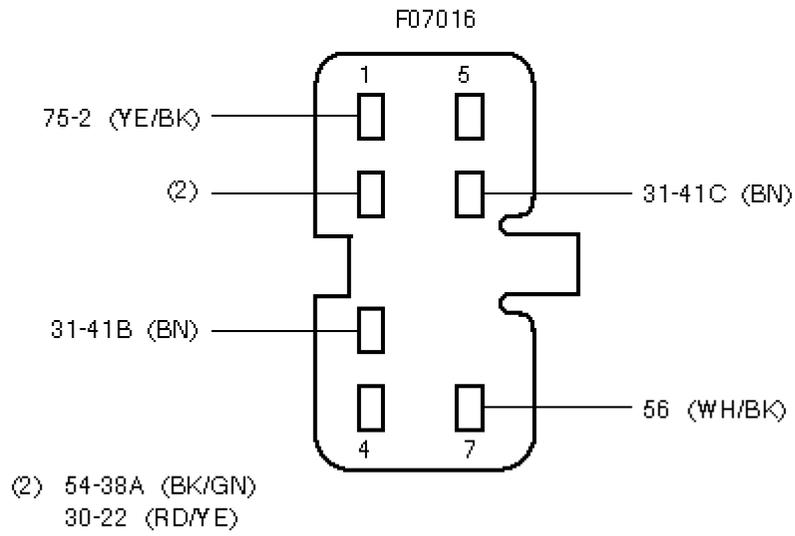



C9311

C9311

Van
Fuel injection

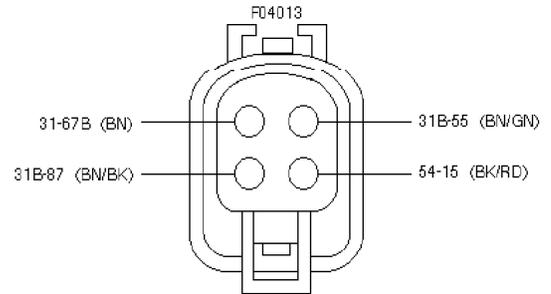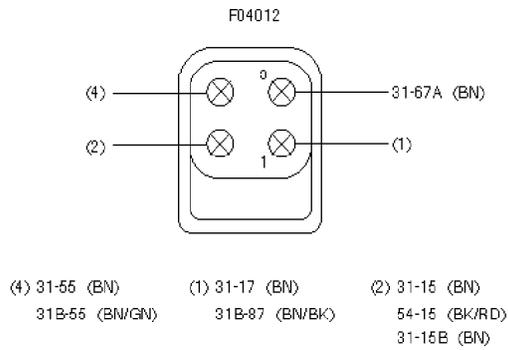


Van
Diesel

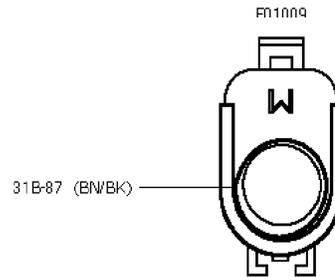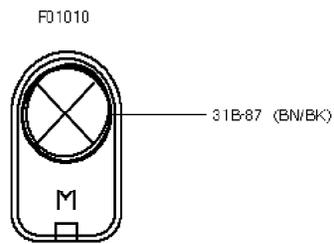


C9649 - Y31 A/C Clutch solenoid

C9649

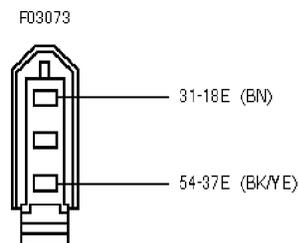

C9905 - A15 EEC IV module

 C9905 RS Cosworth
F60004



- | | | |
|---------------------------------------|------------------------------------|---------------------------------------|
| (1) 30-4 (RD)
00-4T (RD) | Q21) 31B-73A (BN/YE) | (41) 31-1C (BN) ● |
| Q2) | Q22) 31-70A (BN)
31-55 (BN) | (42) 31B-9C (BN/WH) ● |
| Q3) 31B-20 (BN/RD)
31B-R2D (RN/RD) | Q23) | (43) |
| (4) 15-V (BK)
15-U (BK) | Q24) 31B-51 (BN/RD) | (44) 31B-1B (BN/WH) |
| (5) 31-1G (BN) ● | Q25) 31B-55D (BN/YE) | (45) 31B-11G (BN/GN) |
| (6) | Q26) 54-32D (BK/YE) | (46) 31-1A (BN)
31-1B (BN) |
| (7) 31B-75A (BN/GN) | Q27) 31B-18B (BN/BK) ● | (47) 31B-13C (BN/GN) |
| (8) | Q28) 31B-52 (BN/YE) ● | (48) 9-58 (BU/WH) |
| (9) 31B-12B (BN/YE) | Q29) 9-65 (BU/RD) ● | (49) 9-54A (BU/YE) ● |
| (10) 54-16E (BK/WH) | Q30) | (50) 31B-12A (BN/YE) |
| (11) 31B-10B (BN/WH) | Q31) 31B-9G (BN/WH) ● | (51) 31B-9 (BN/WH) ● |
| (12) 31B-35 (BN/GN) ● | Q32) | (52) 31B-9E (BN/WH) ● |
| (13) 31B-68A (BN/YE) | Q33) 31B-9B (BN/WH) ● | (53) 31-70 (BN) ● |
| (14) | Q34) | (54) 31B-35 (BN/GN)
31B-9D (BN/WH) |
| (15) 31B-9G (BN/WH) ● | Q35) 31B-9D (BN/WH) ● | (55) 31-1A (BN) ● |
| (16) 31-19B (BN) | Q36) 15-12A (BK/GN) | (56) 15-3B (BK/BN) |
| (17) 9-69 (BU/RD) | Q37) 54-16D (BK/RD) | (57) 54-16E (BK/RD) |
| (18) 9-65 (BU/GN) | Q38) 31-1F (BN) ● | (58) 31B-9 (BN/WH)
15-K (BK) |
| (19) 9-64 (BU/YE) | Q39) 31B-9C (BN/WH)
31-55A (BN) | (59) 31B-9E (BN/WH) ● |
| Q20) 31-81B (BN) | (40) 31-9M (BN) | (60) 31-19A (BN) |