



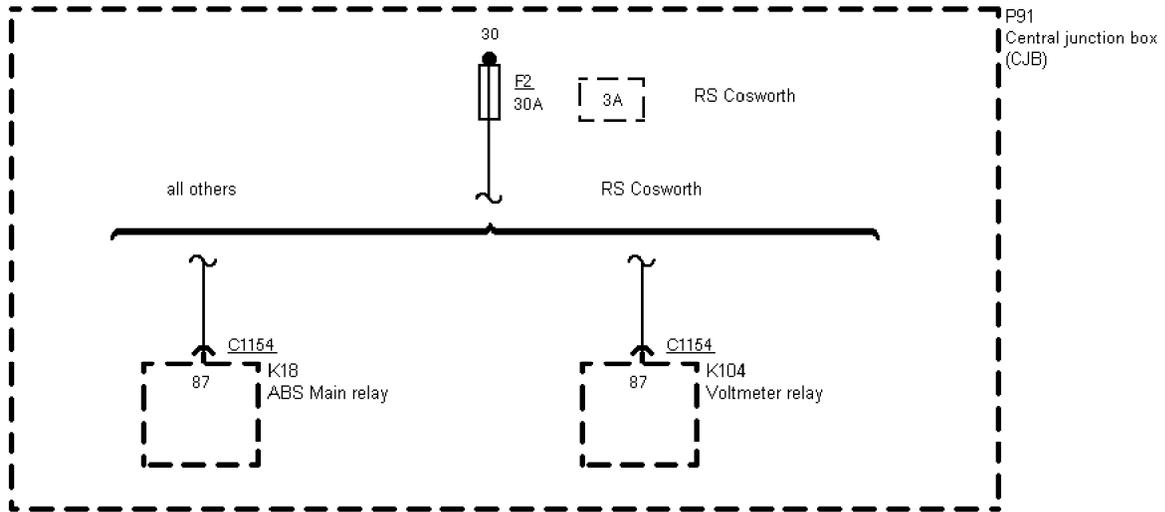

01-03-002 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 2

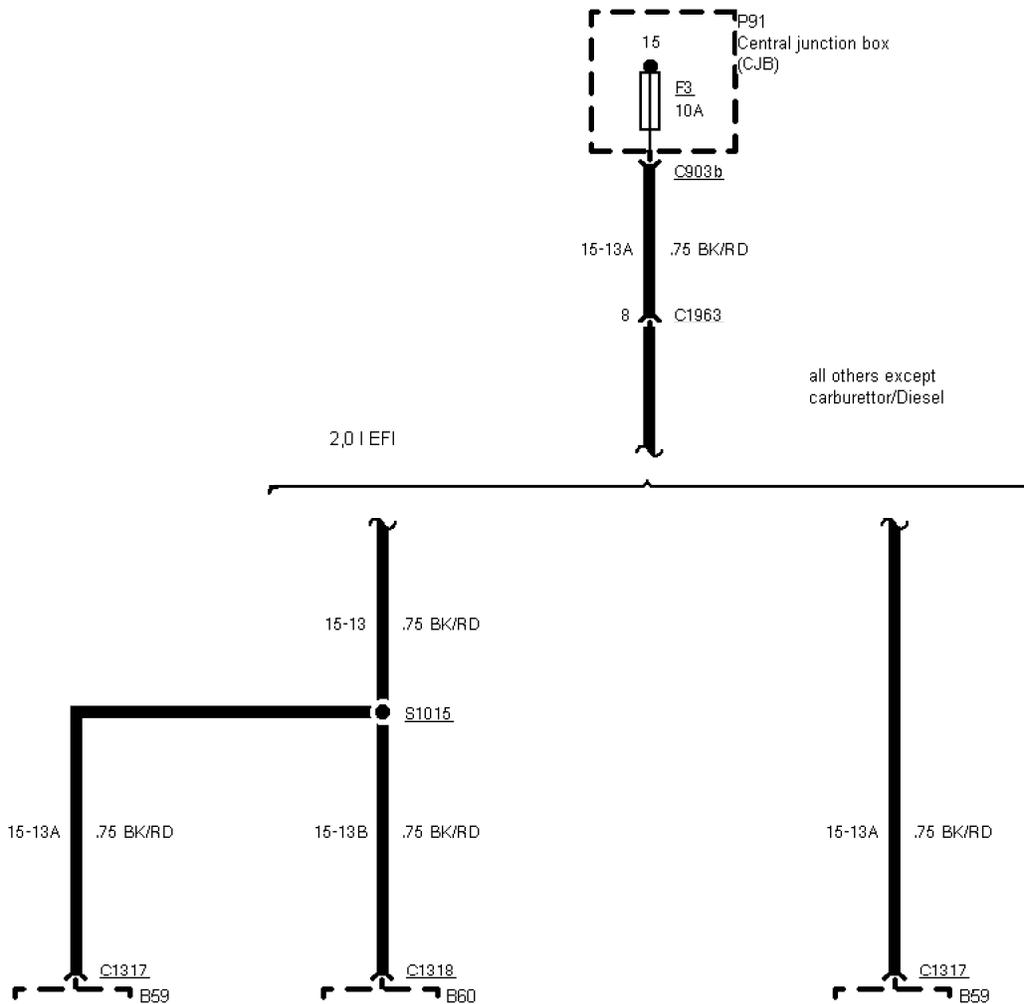


Before 95, Except RS Cosworth Fuse 3







01-03-003 , Fuse Details , Before 95 1/2, RS Cosworth 95 1/2 Fuse 3

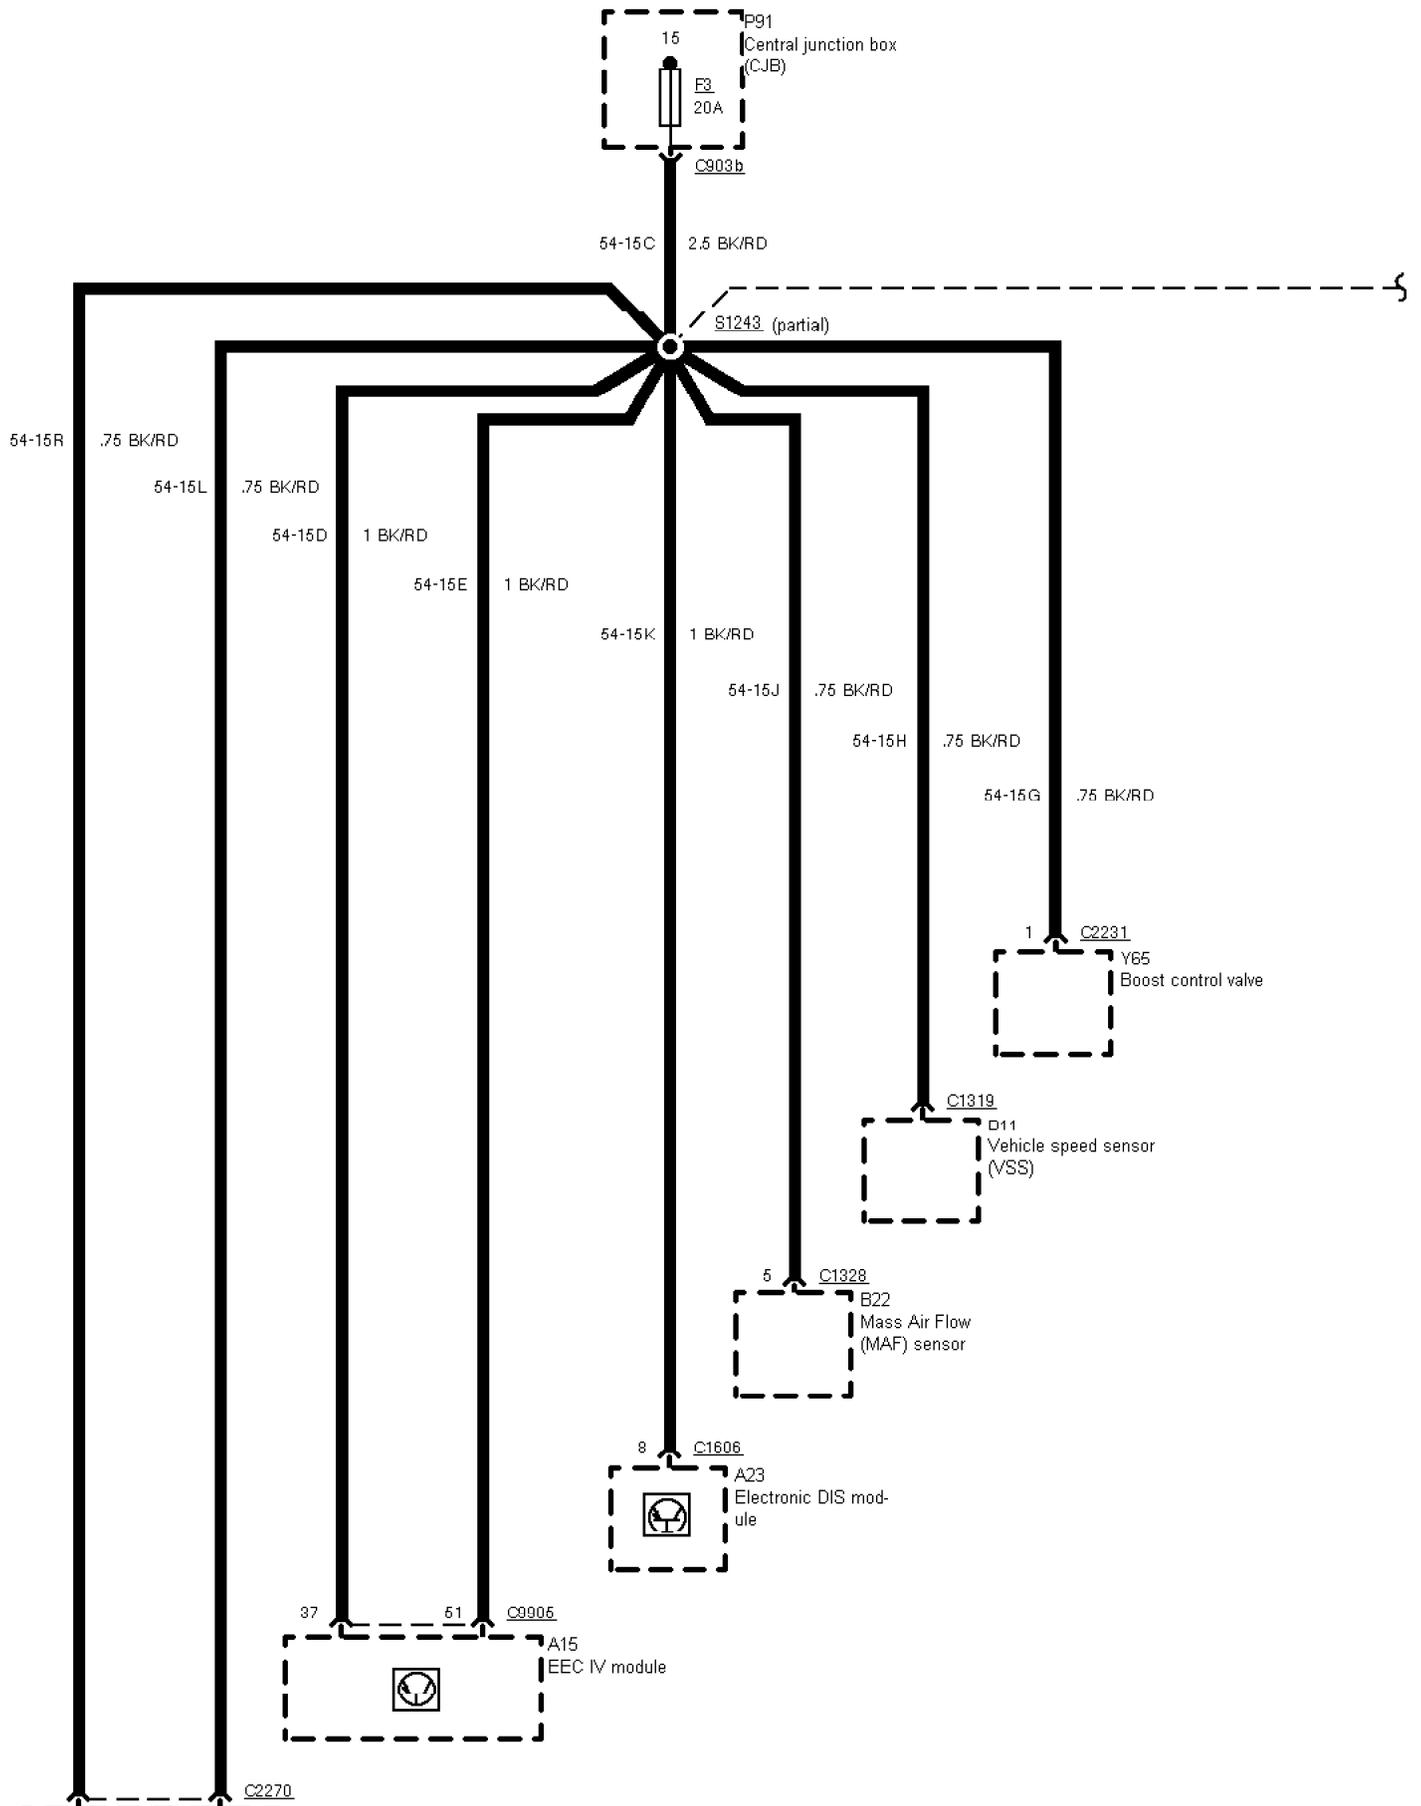




 01-03-004 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 3

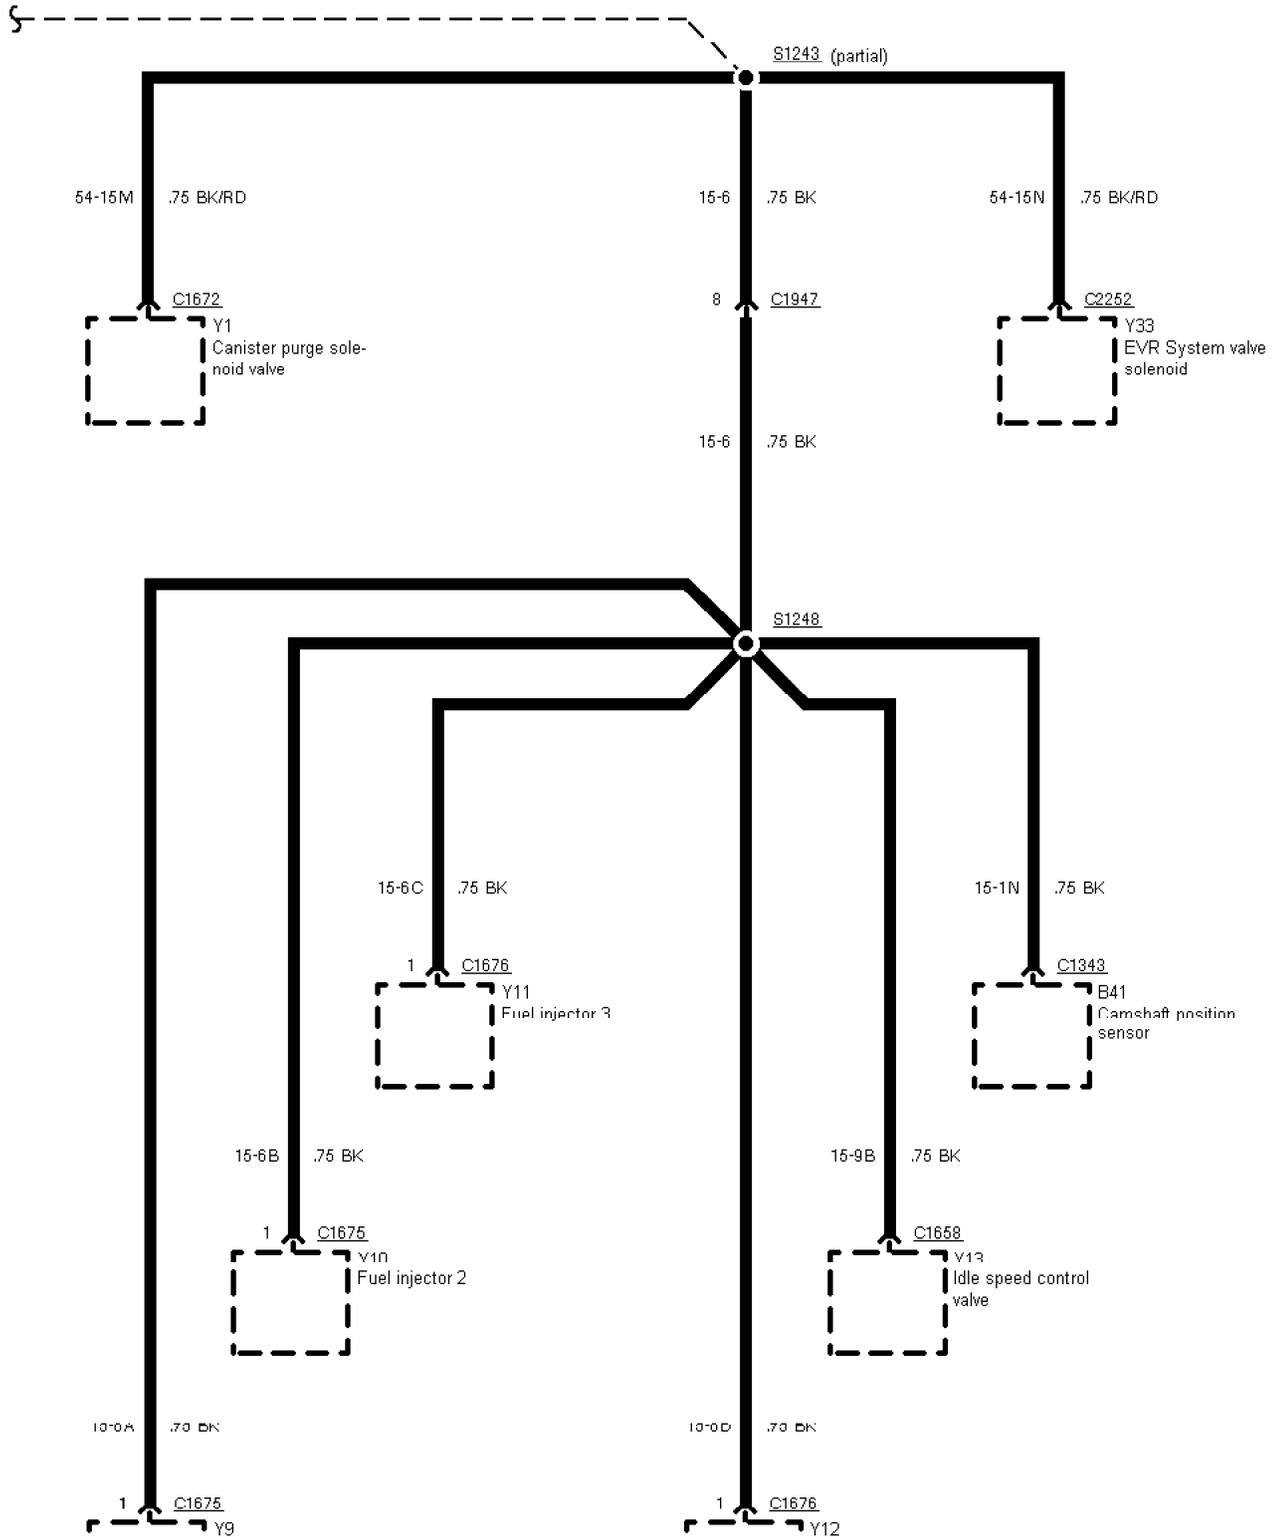





01-03-005 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 4

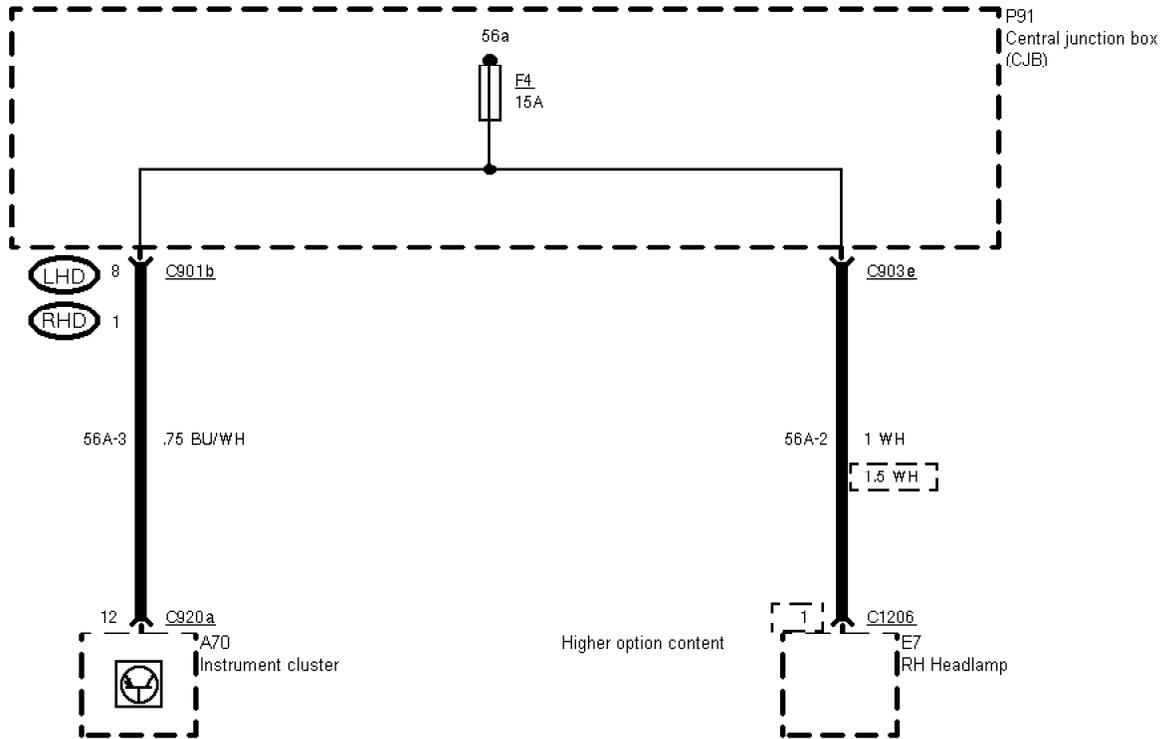


Before 95, RS Cosworth 95 1/2 Fuse 5

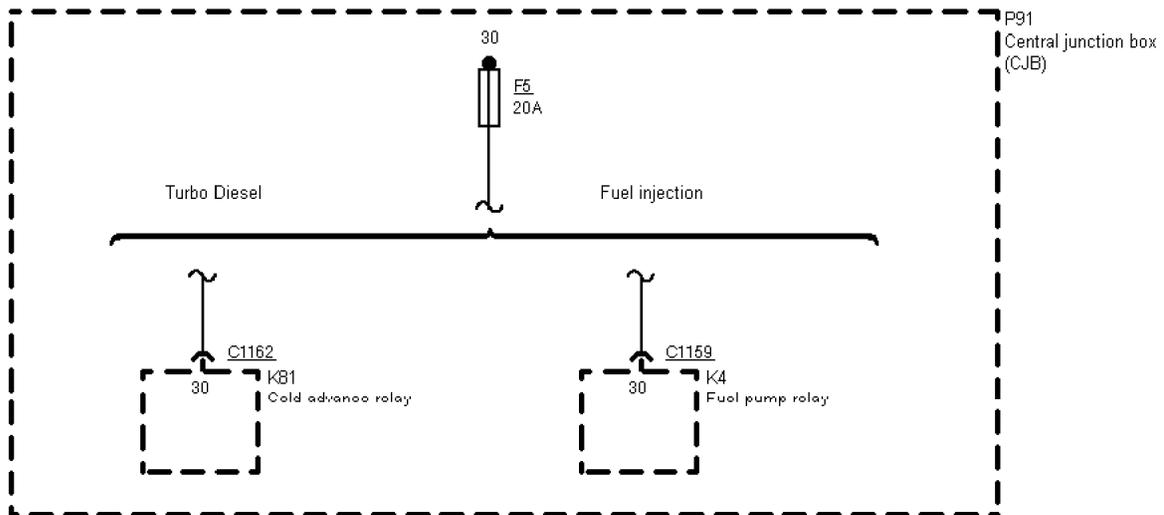

01-03-006 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 6

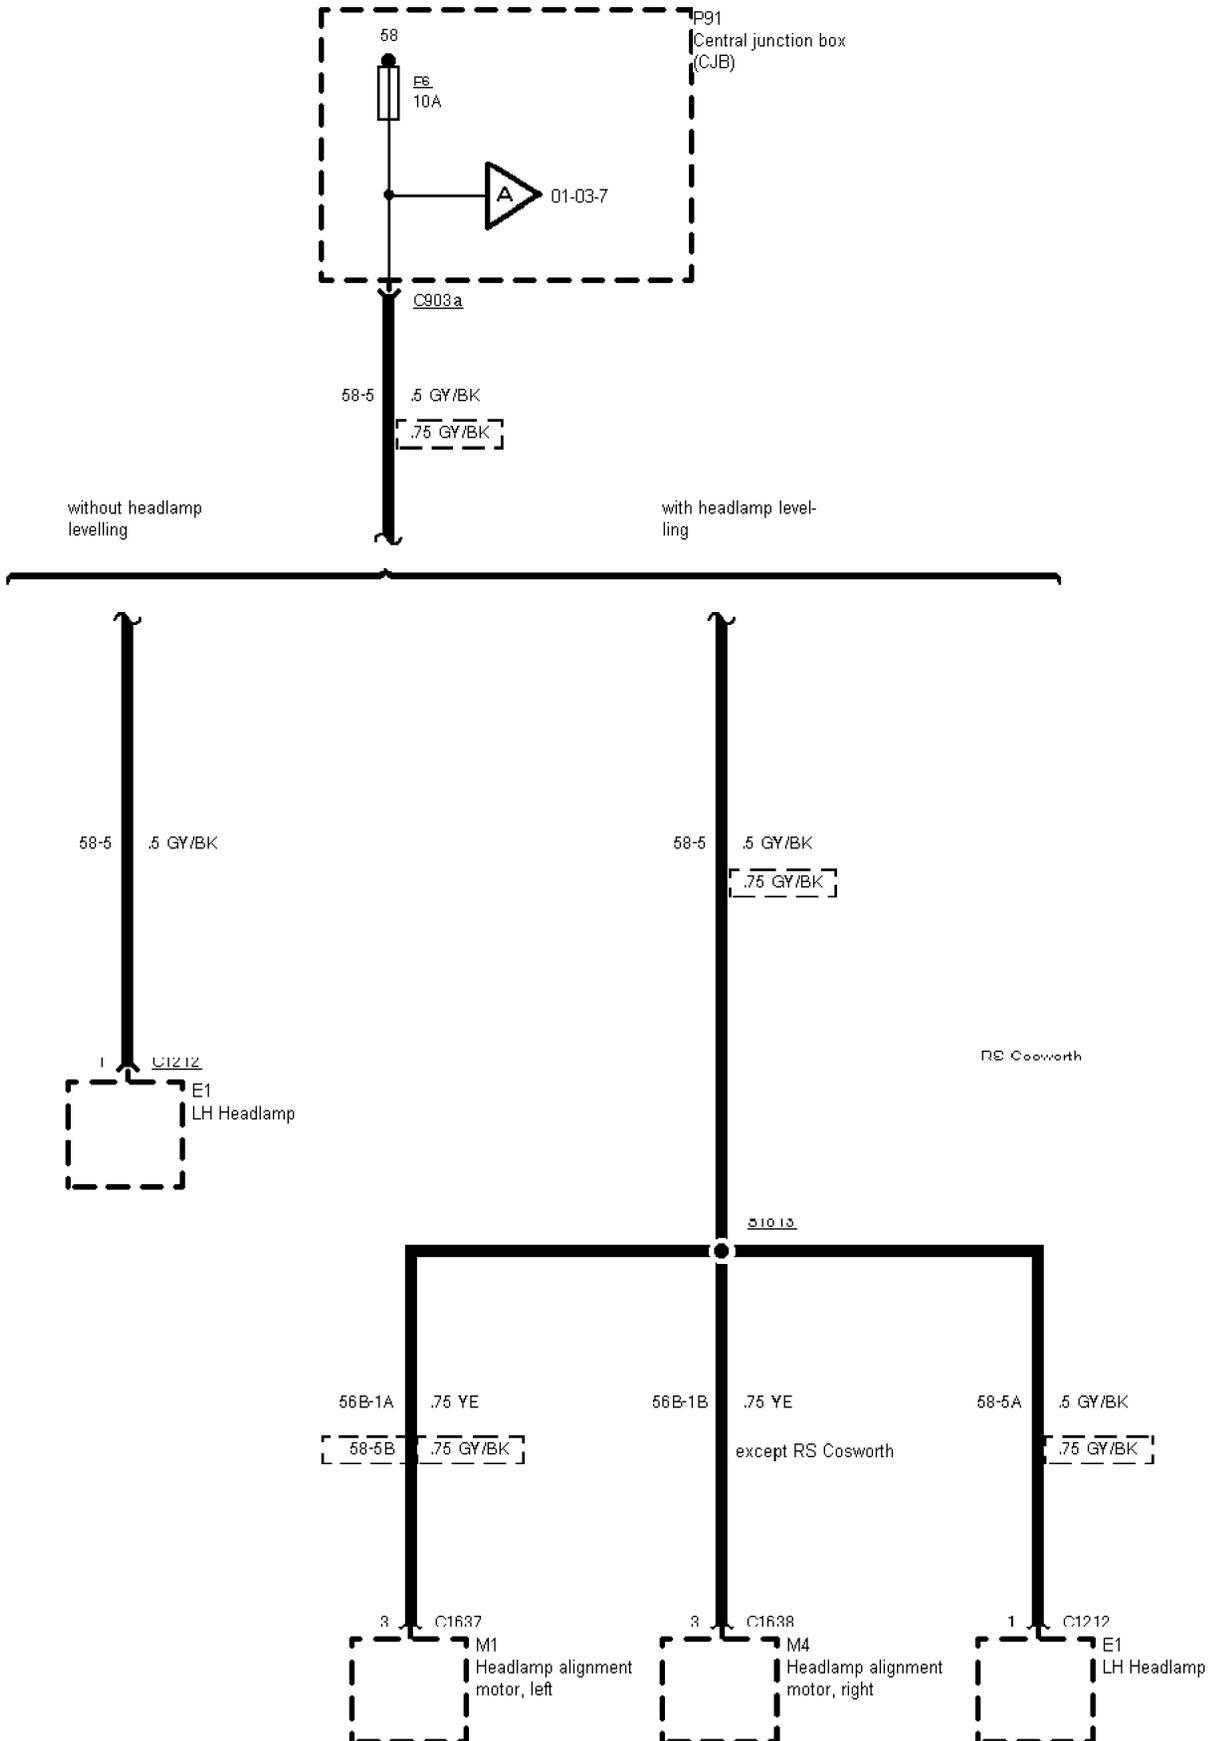

01-03-007 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 6

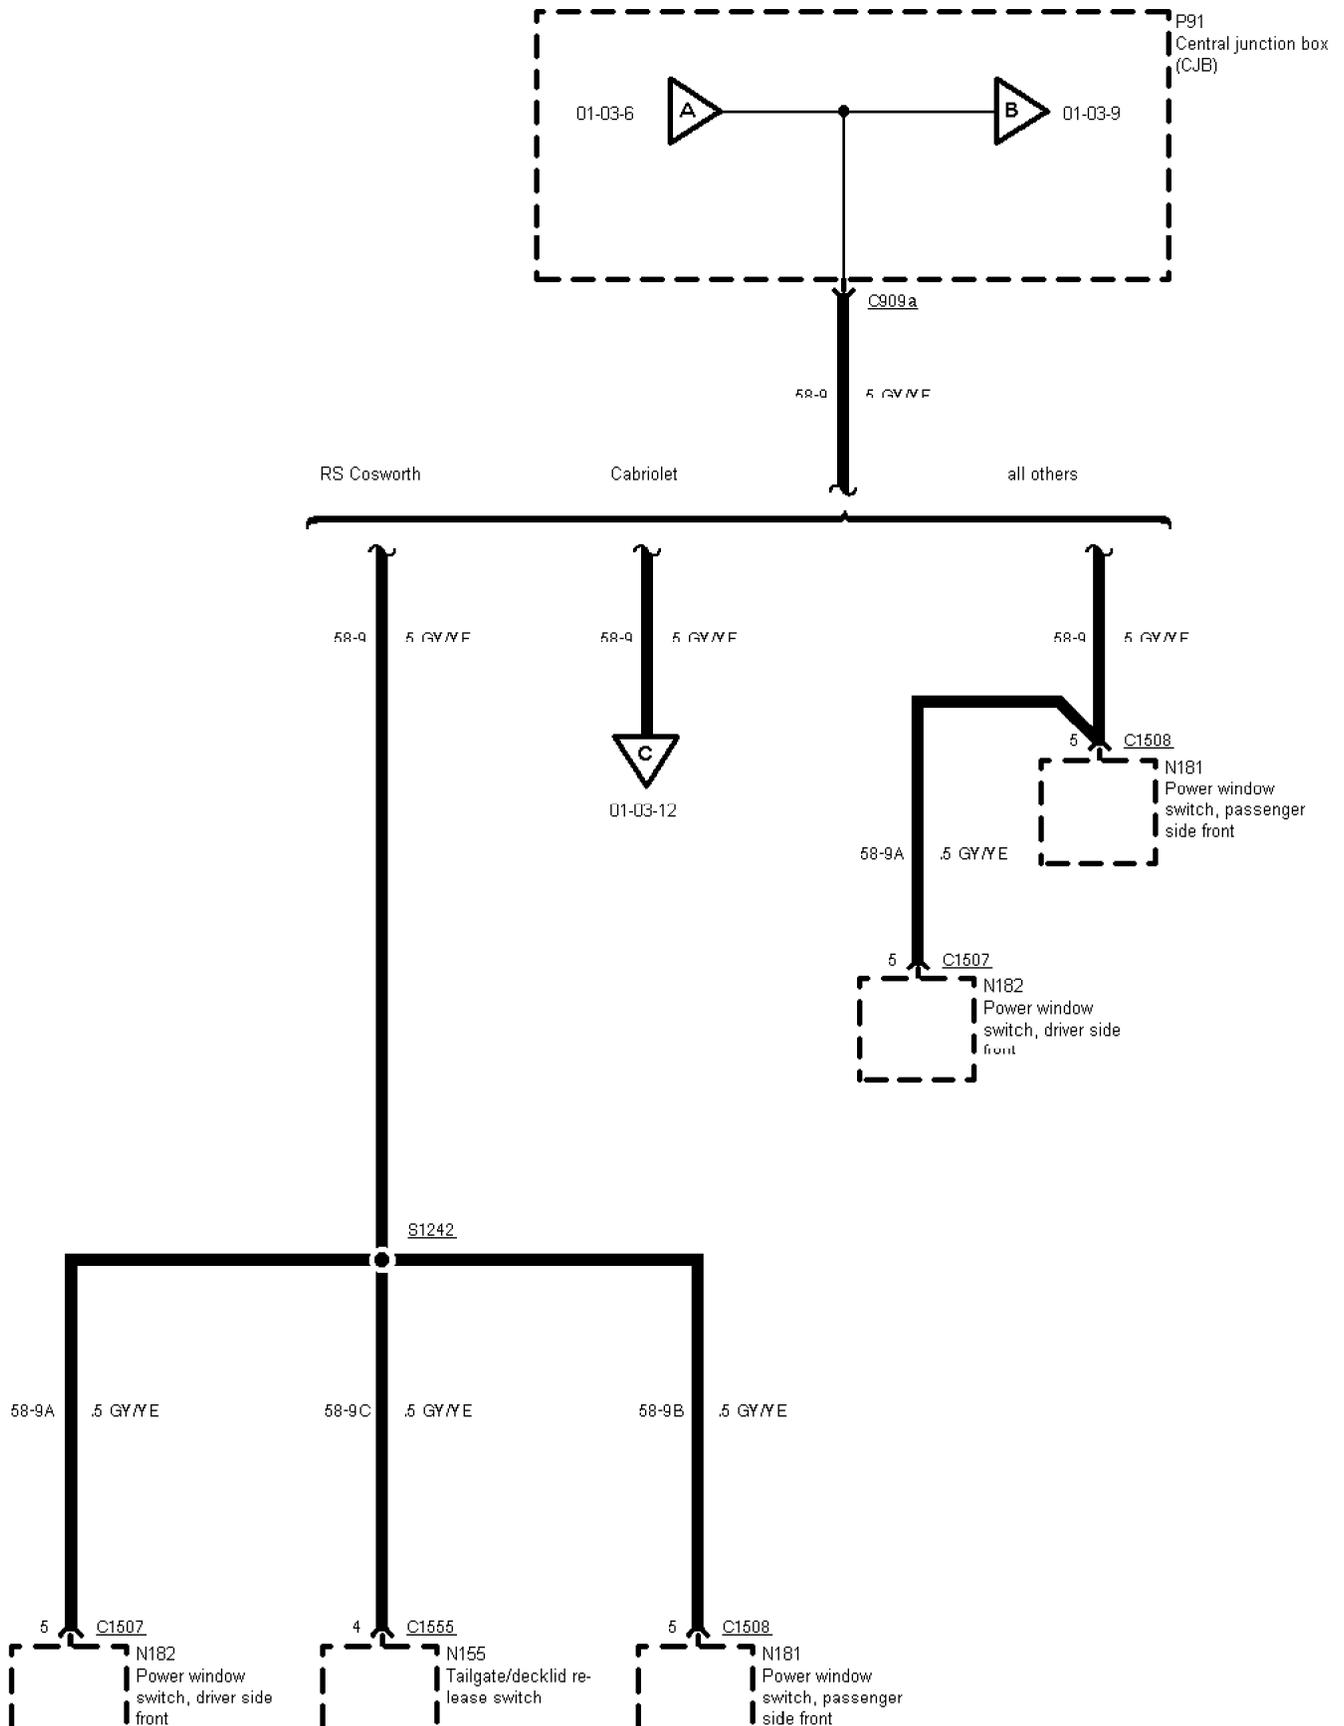


1 - - - J



1 - - - J

1 - - - J


01-03-008 , Fuse Details , Before 95, RS Cosworth 95 1/2


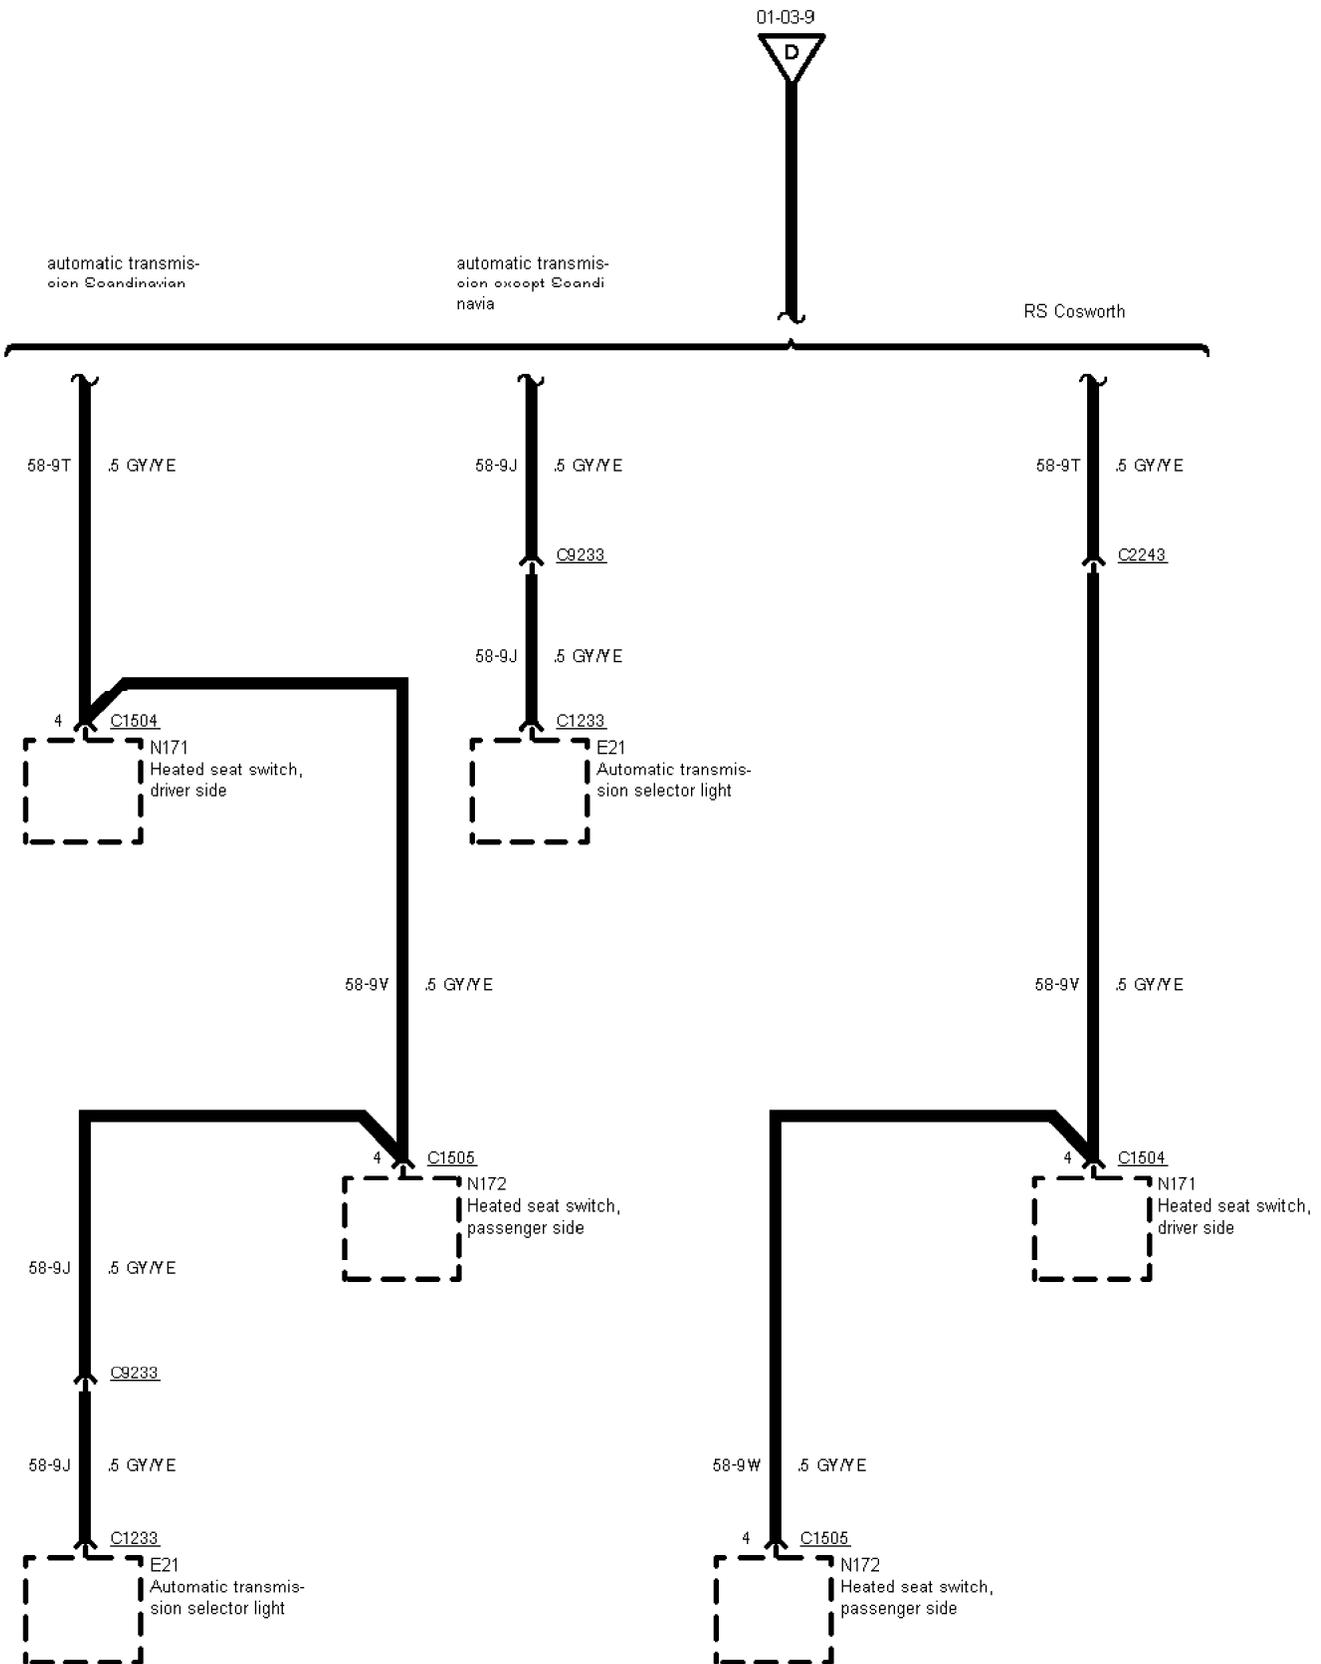


  01-03-009 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 6




  01-03-010 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 6

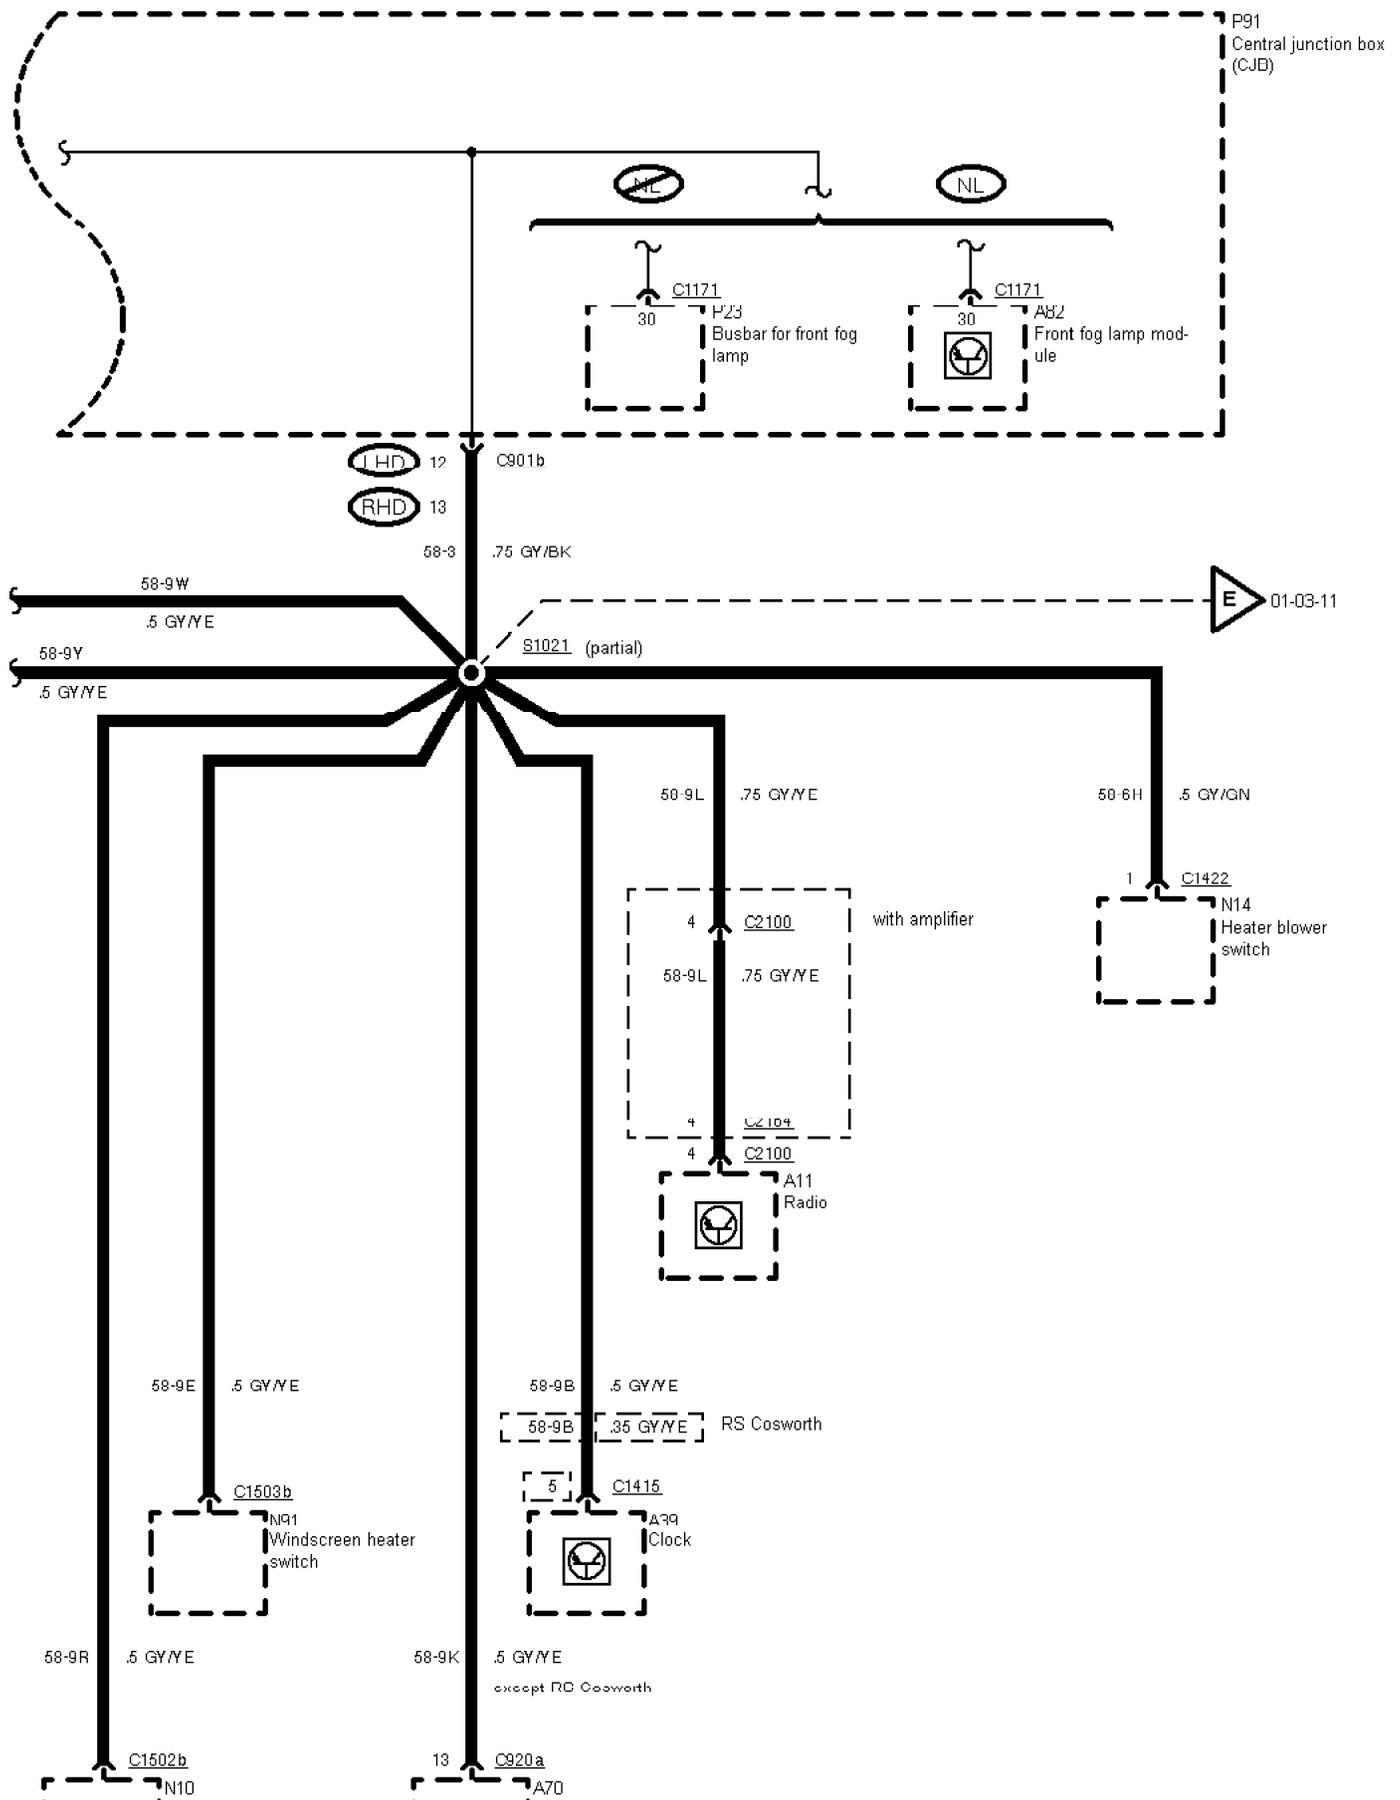




01-03-011 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 6

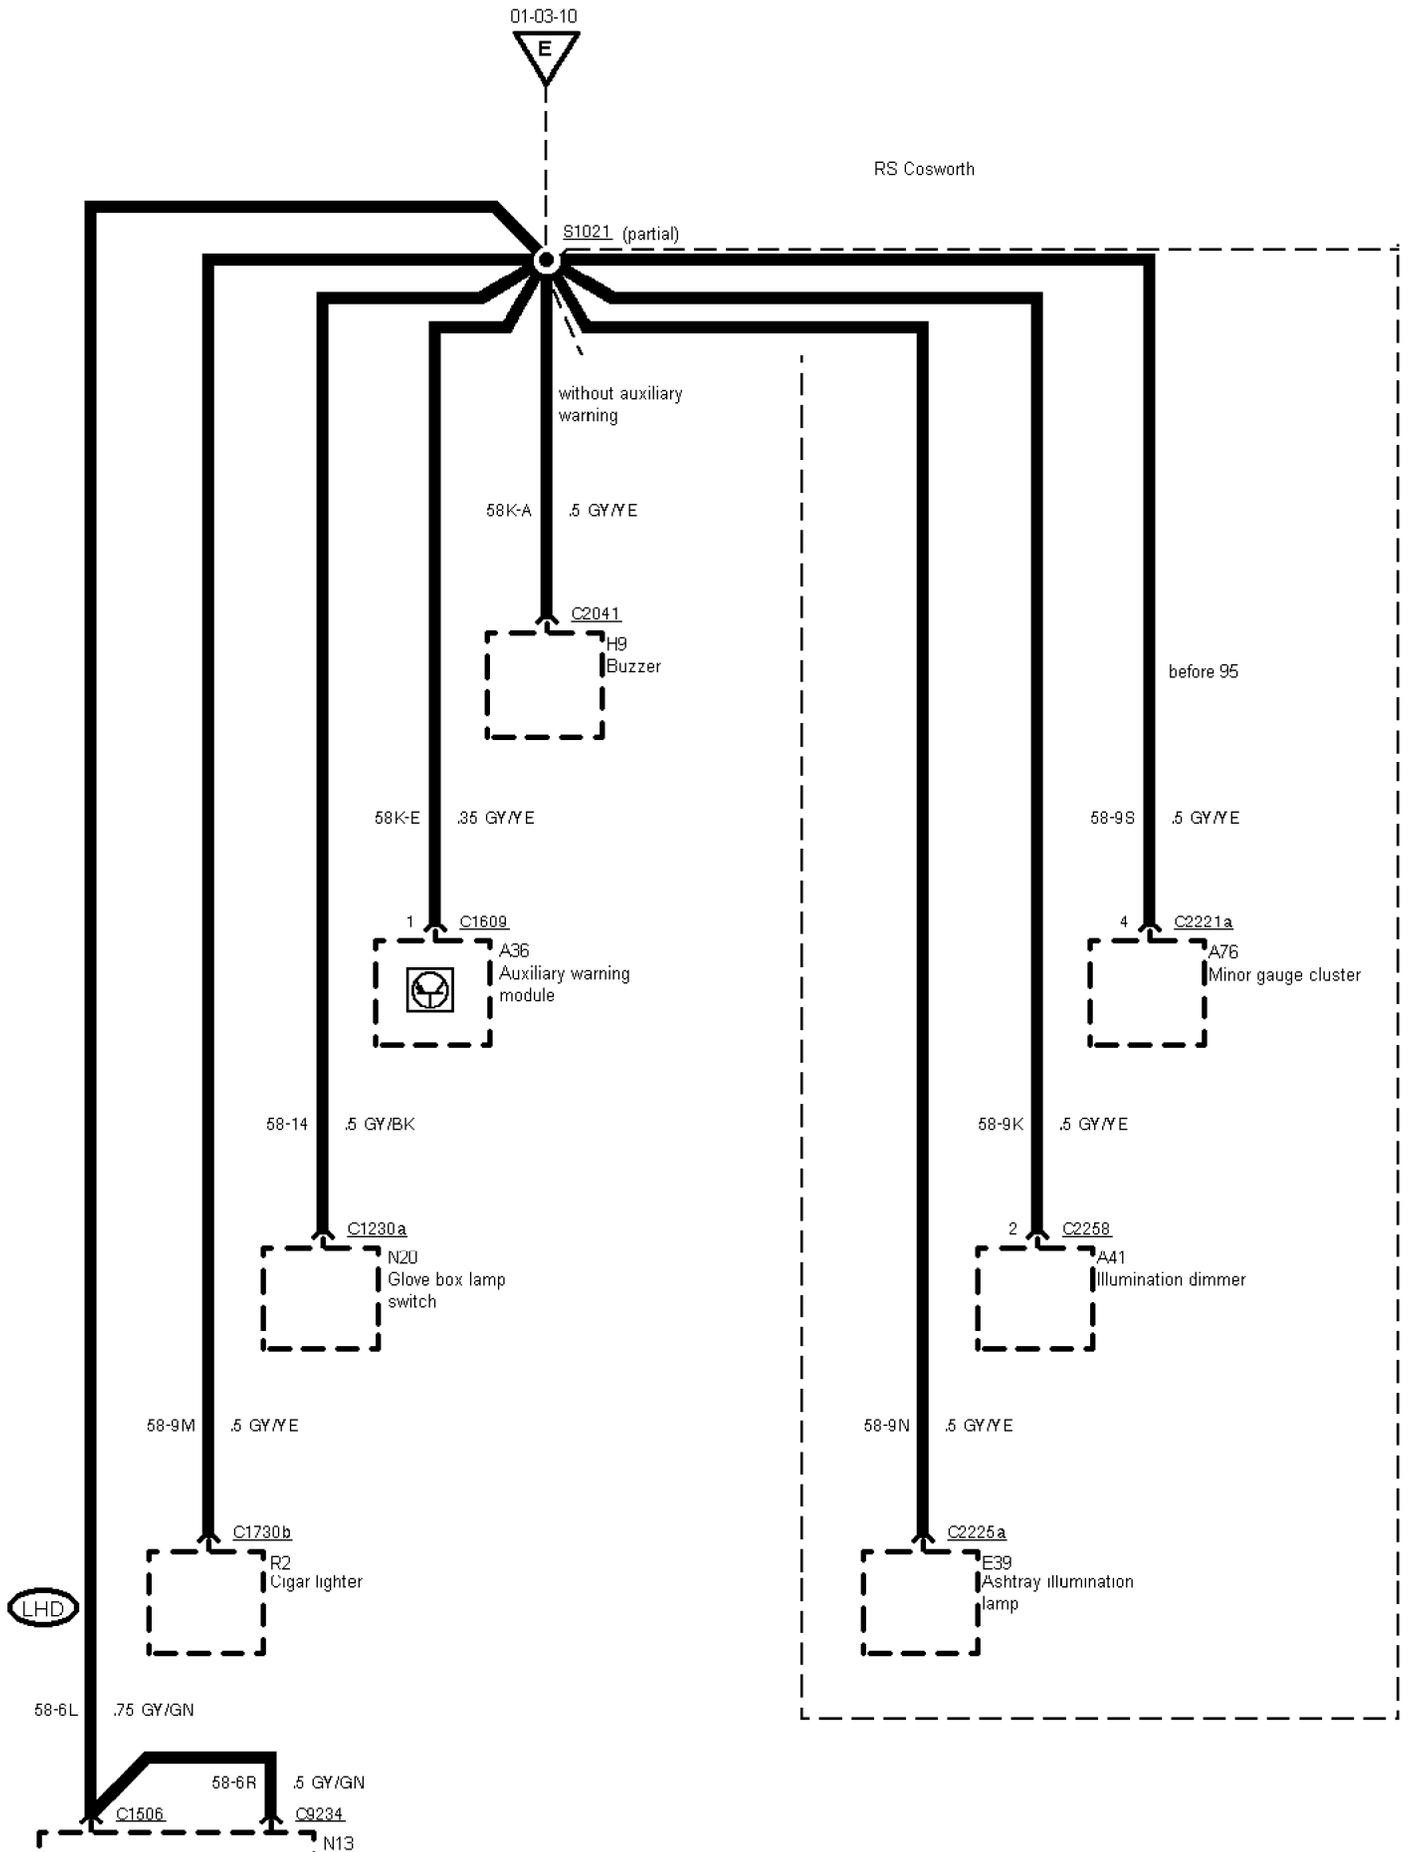




01-03-012 , Fuse Details , Before 95, RS Cosworth 95 1/2 Cabriolet Fuse 6

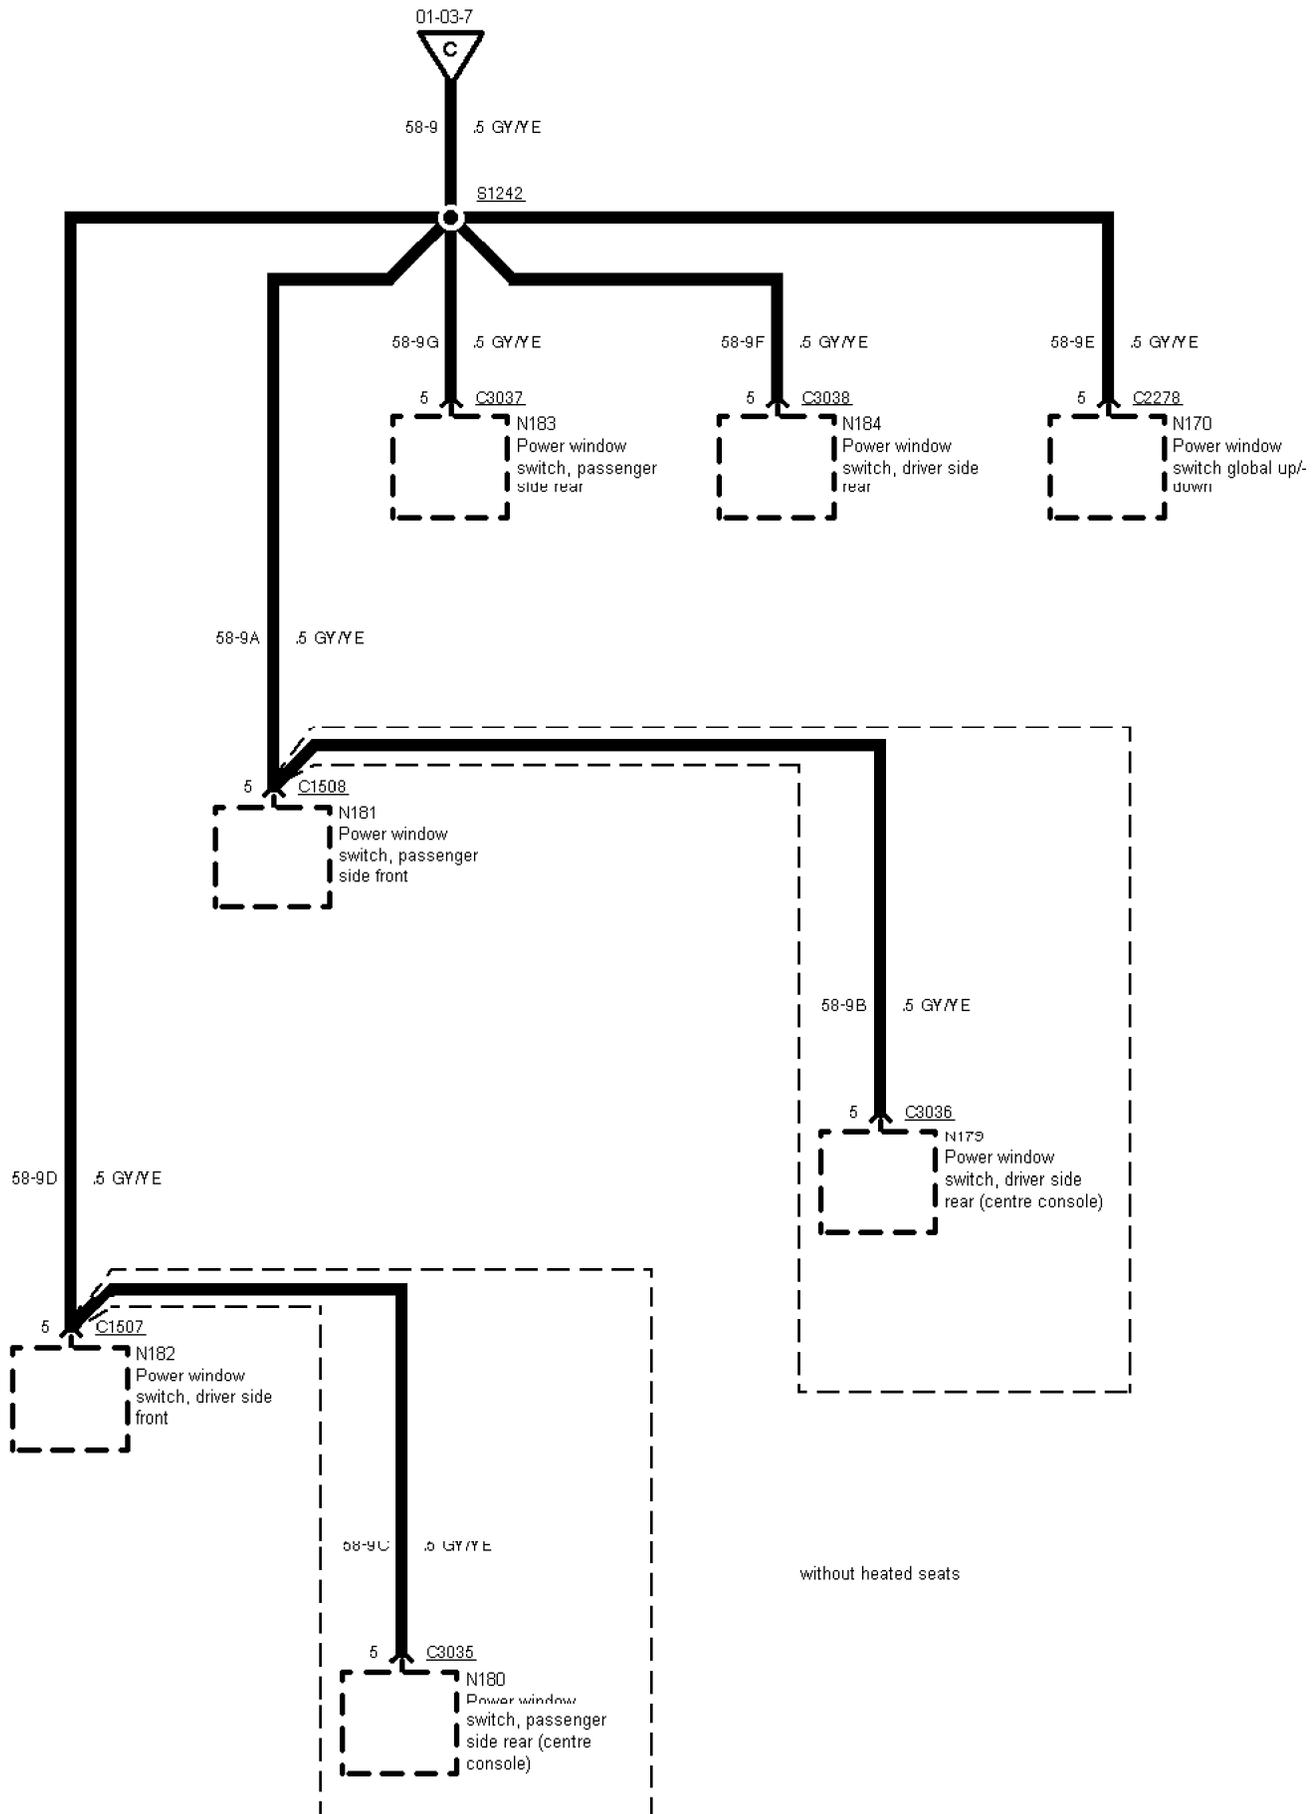




01-03-013 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 7

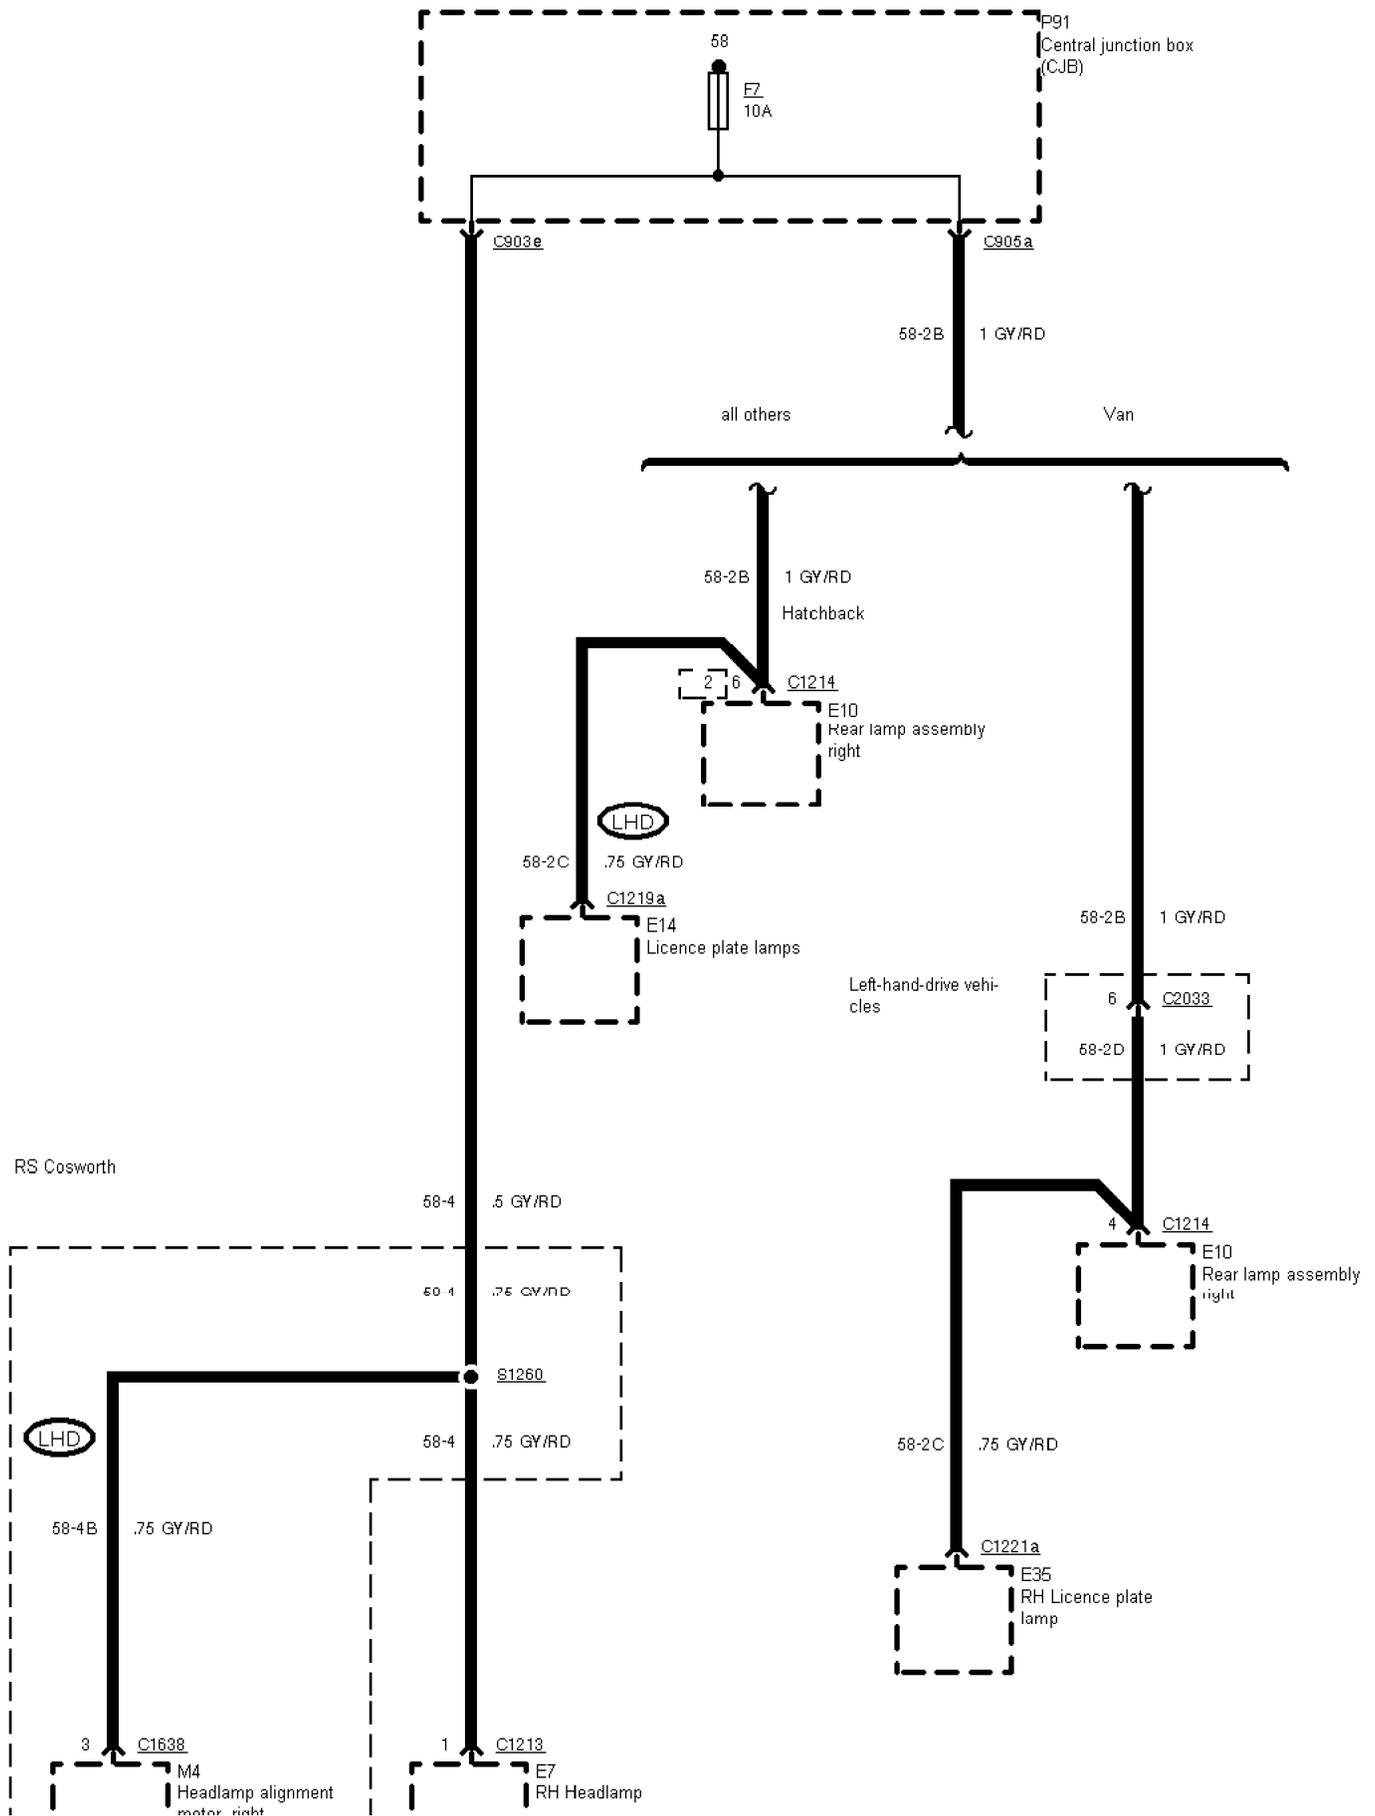




01-03-014 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 8

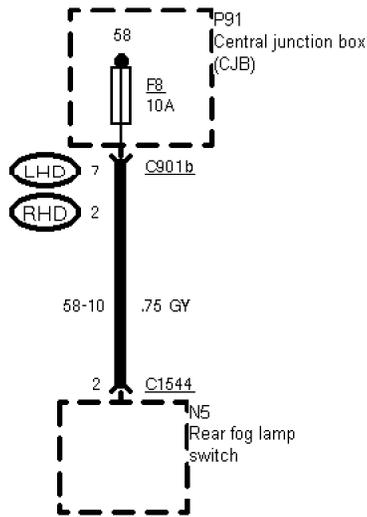


Fuse 9

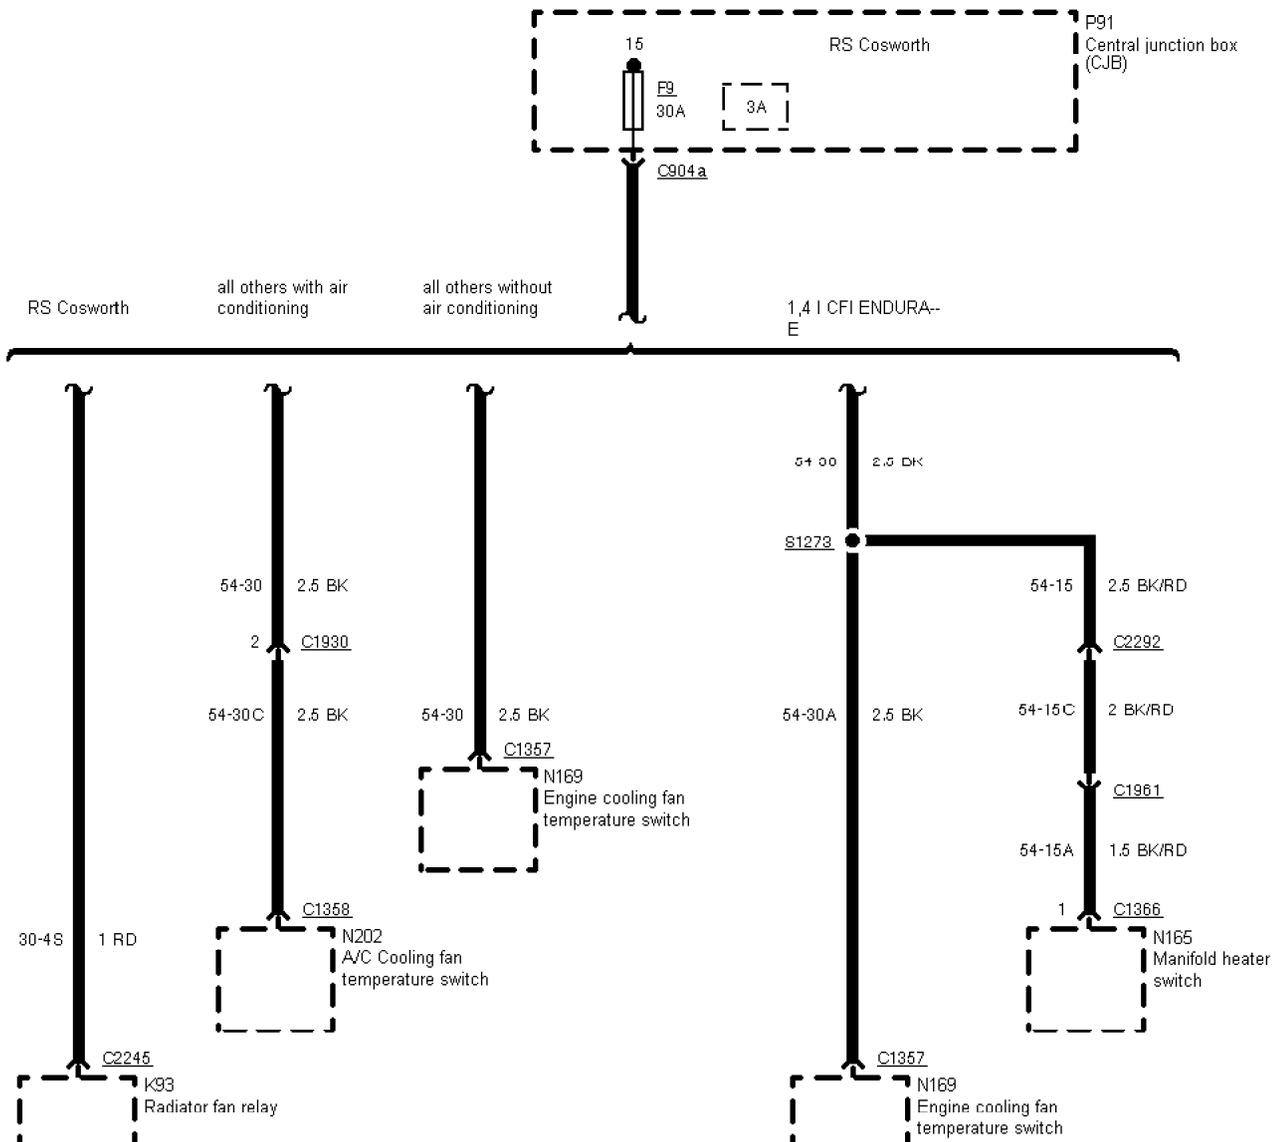





01-03-015 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuses 10 and 11

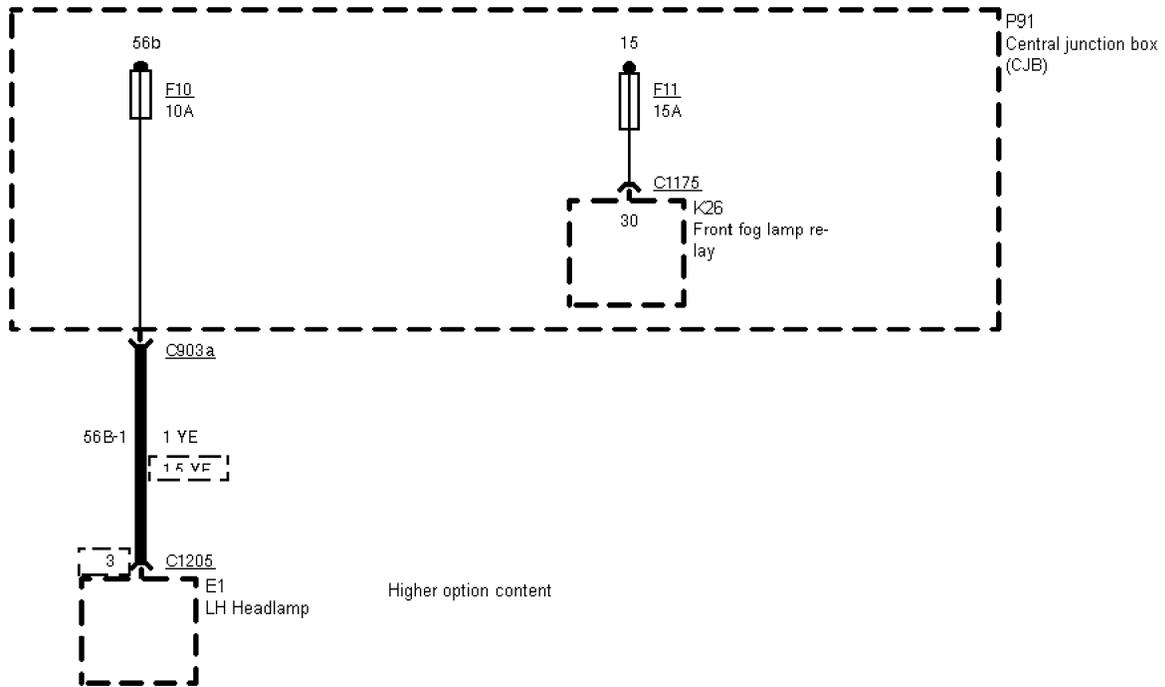


Before 95, RS Cosworth 95 1/2 Fuse 12

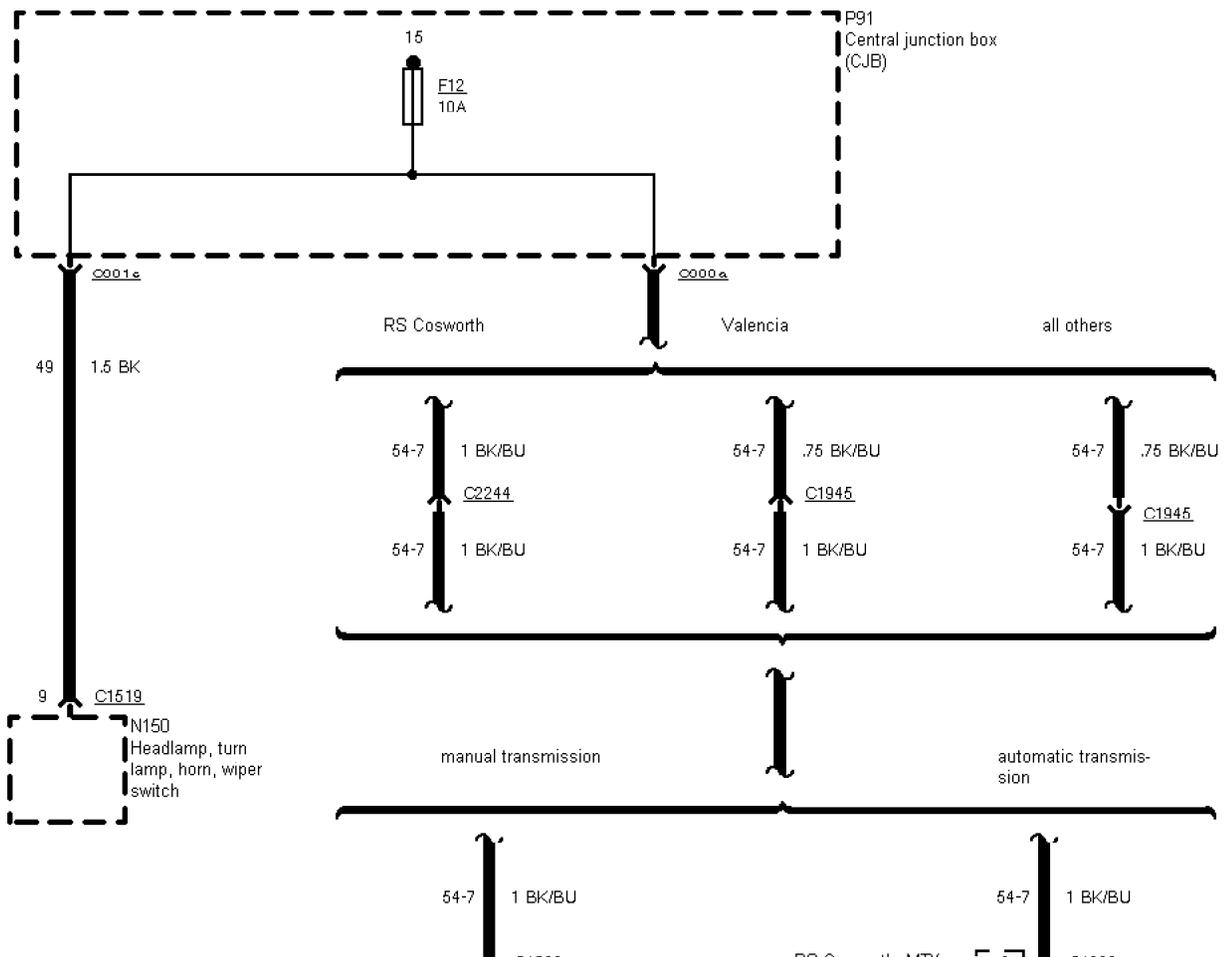


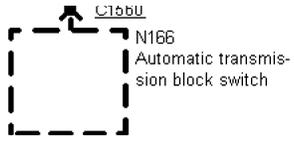


RS Cosworth, W1A

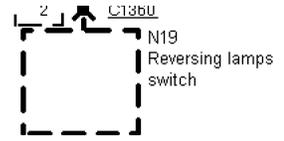


 01-03-016 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 13

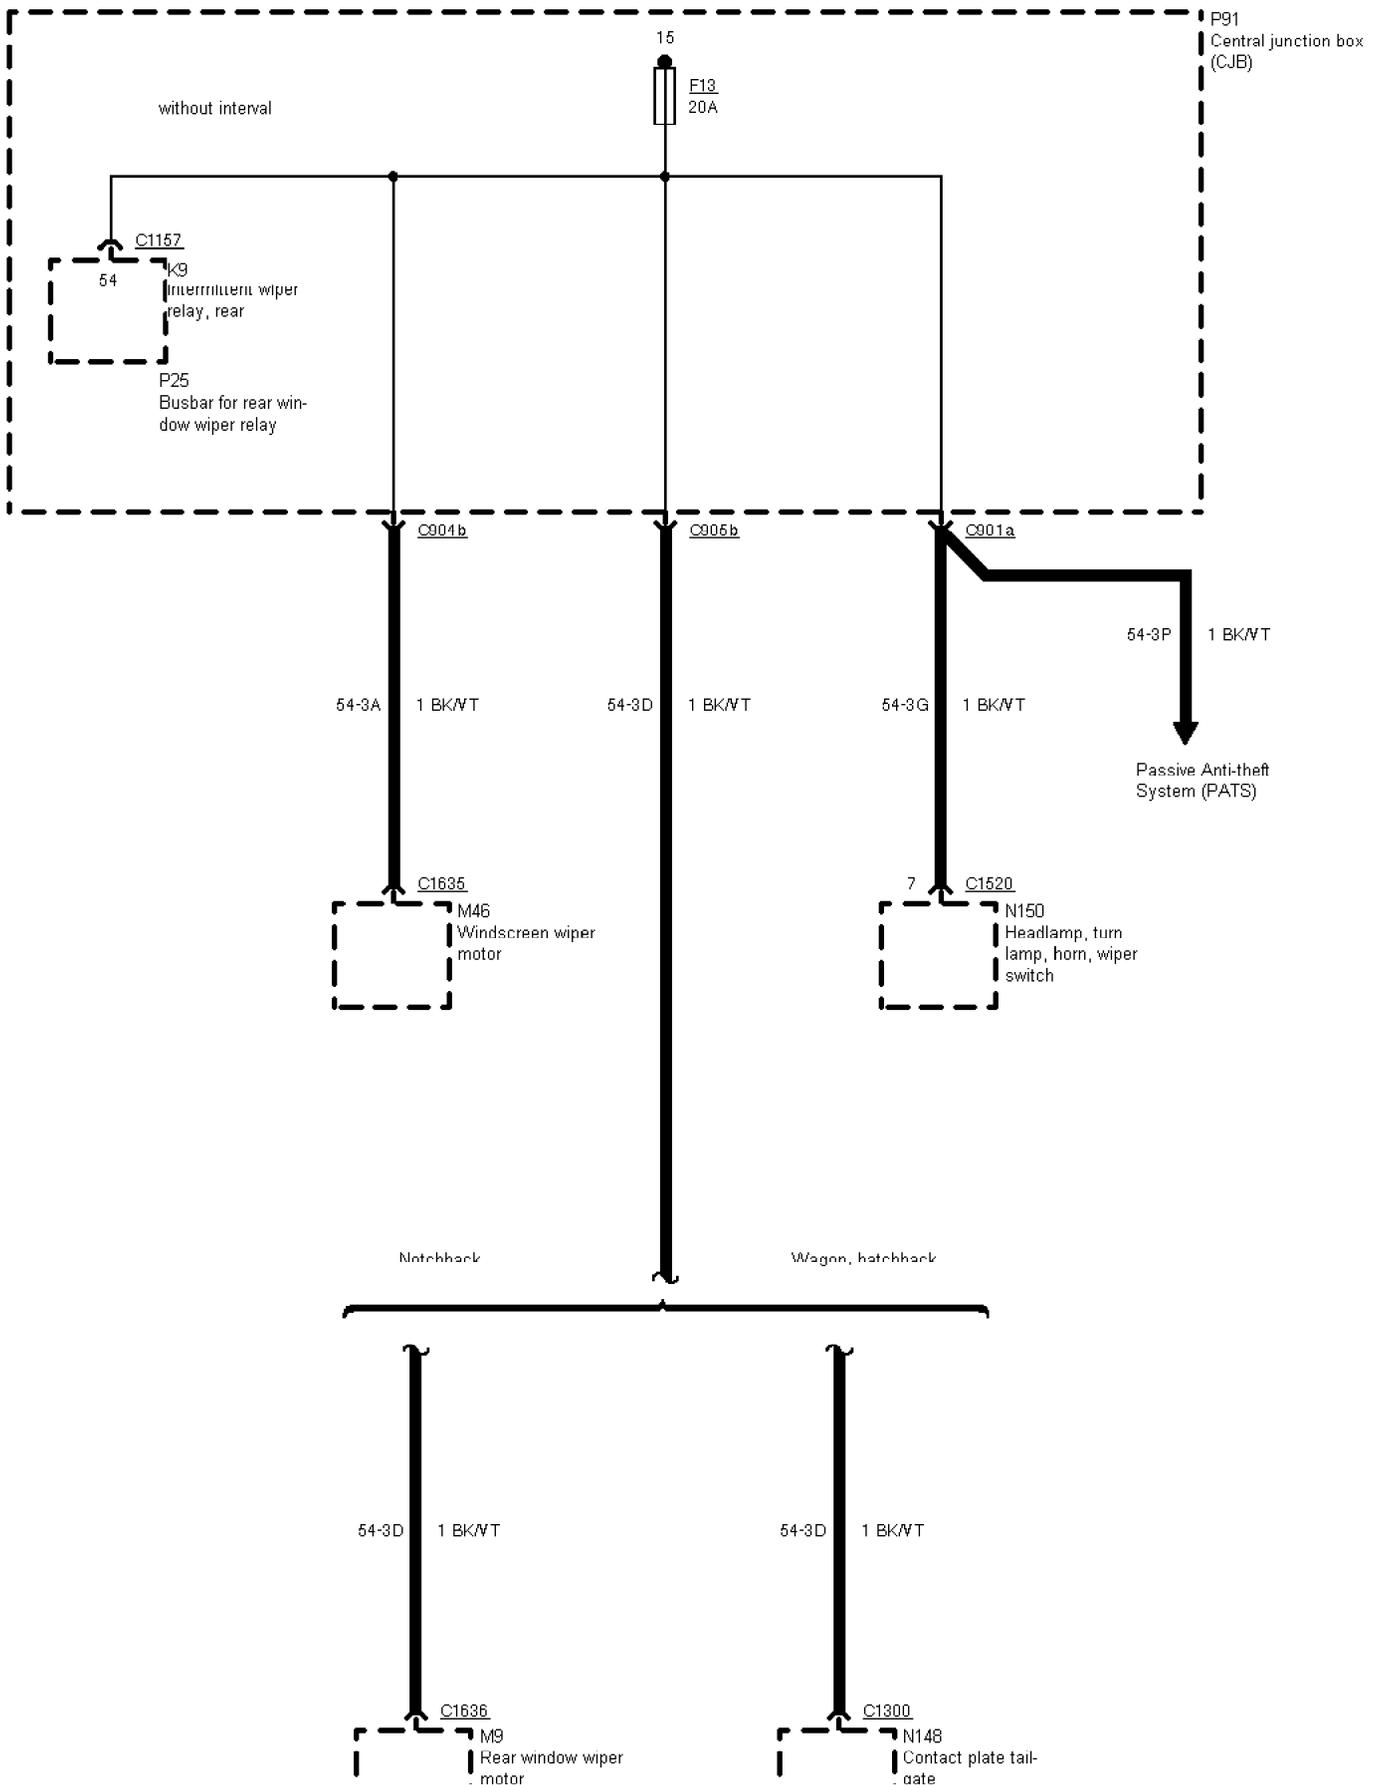




01-03-017 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuses 14, 15 and 16

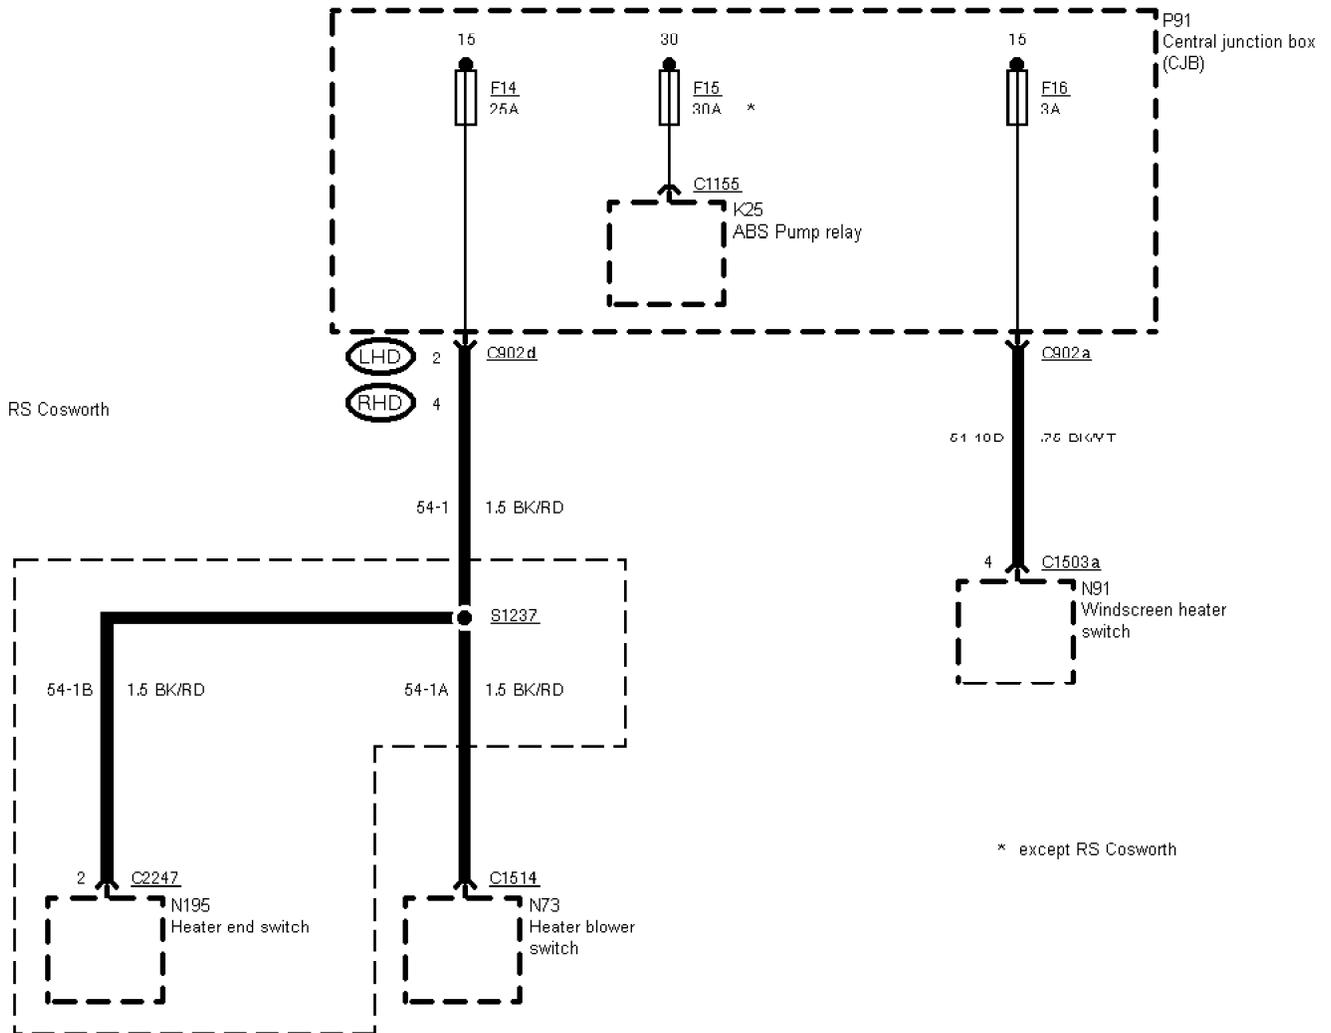


Before 95, RS Cosworth 95 1/2 Fuse 17

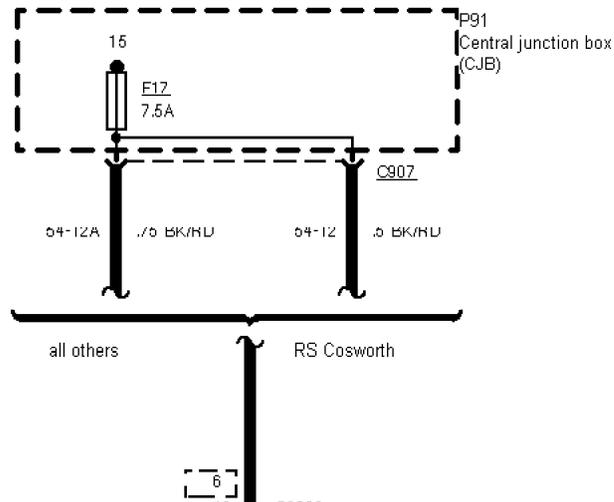


RS Cosworth





01-03-018 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuses 18 and 19

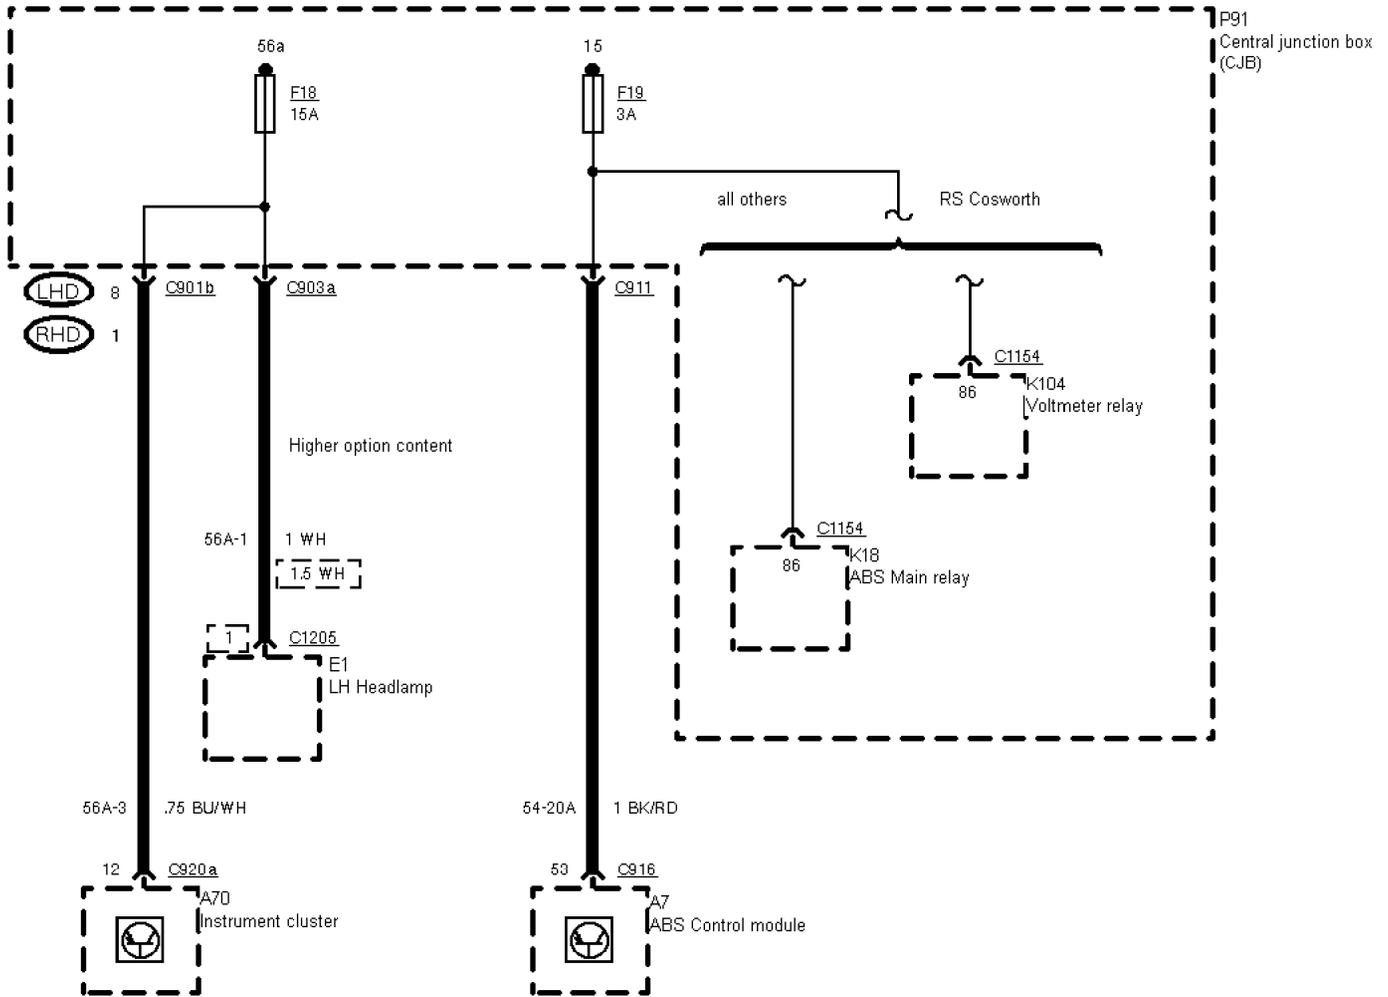


Before 95, RS Cosworth 95 1/2 Fuse 20

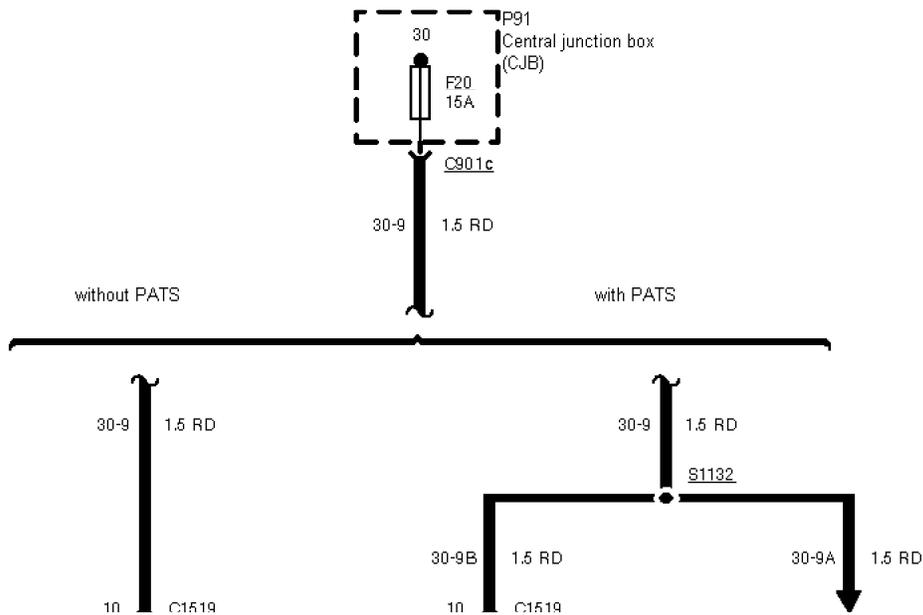


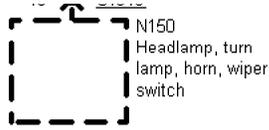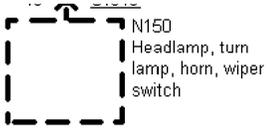


Passive Anti-theft
System (PATS)

 01-03-019 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 21

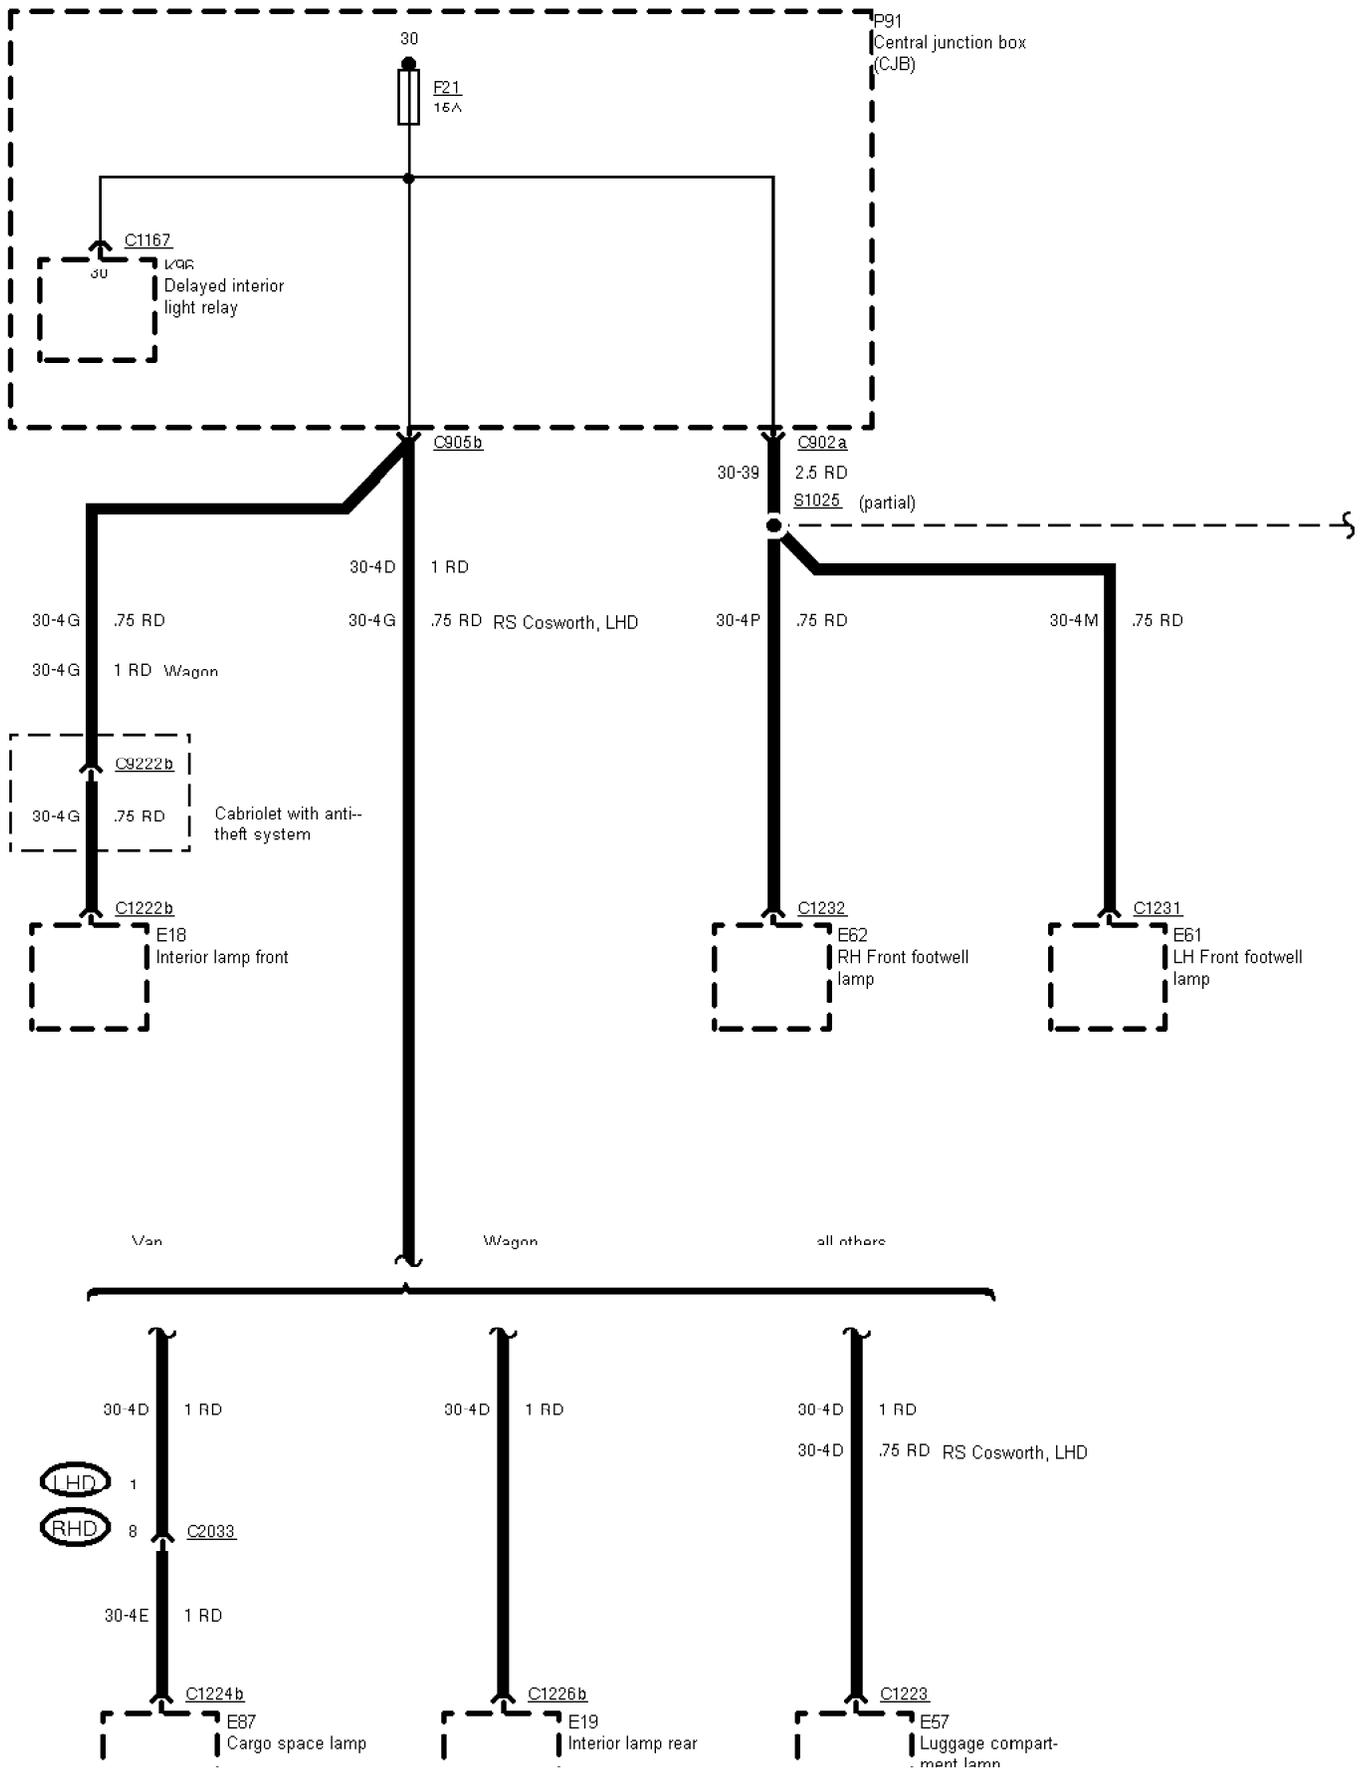



01-03-020 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 21

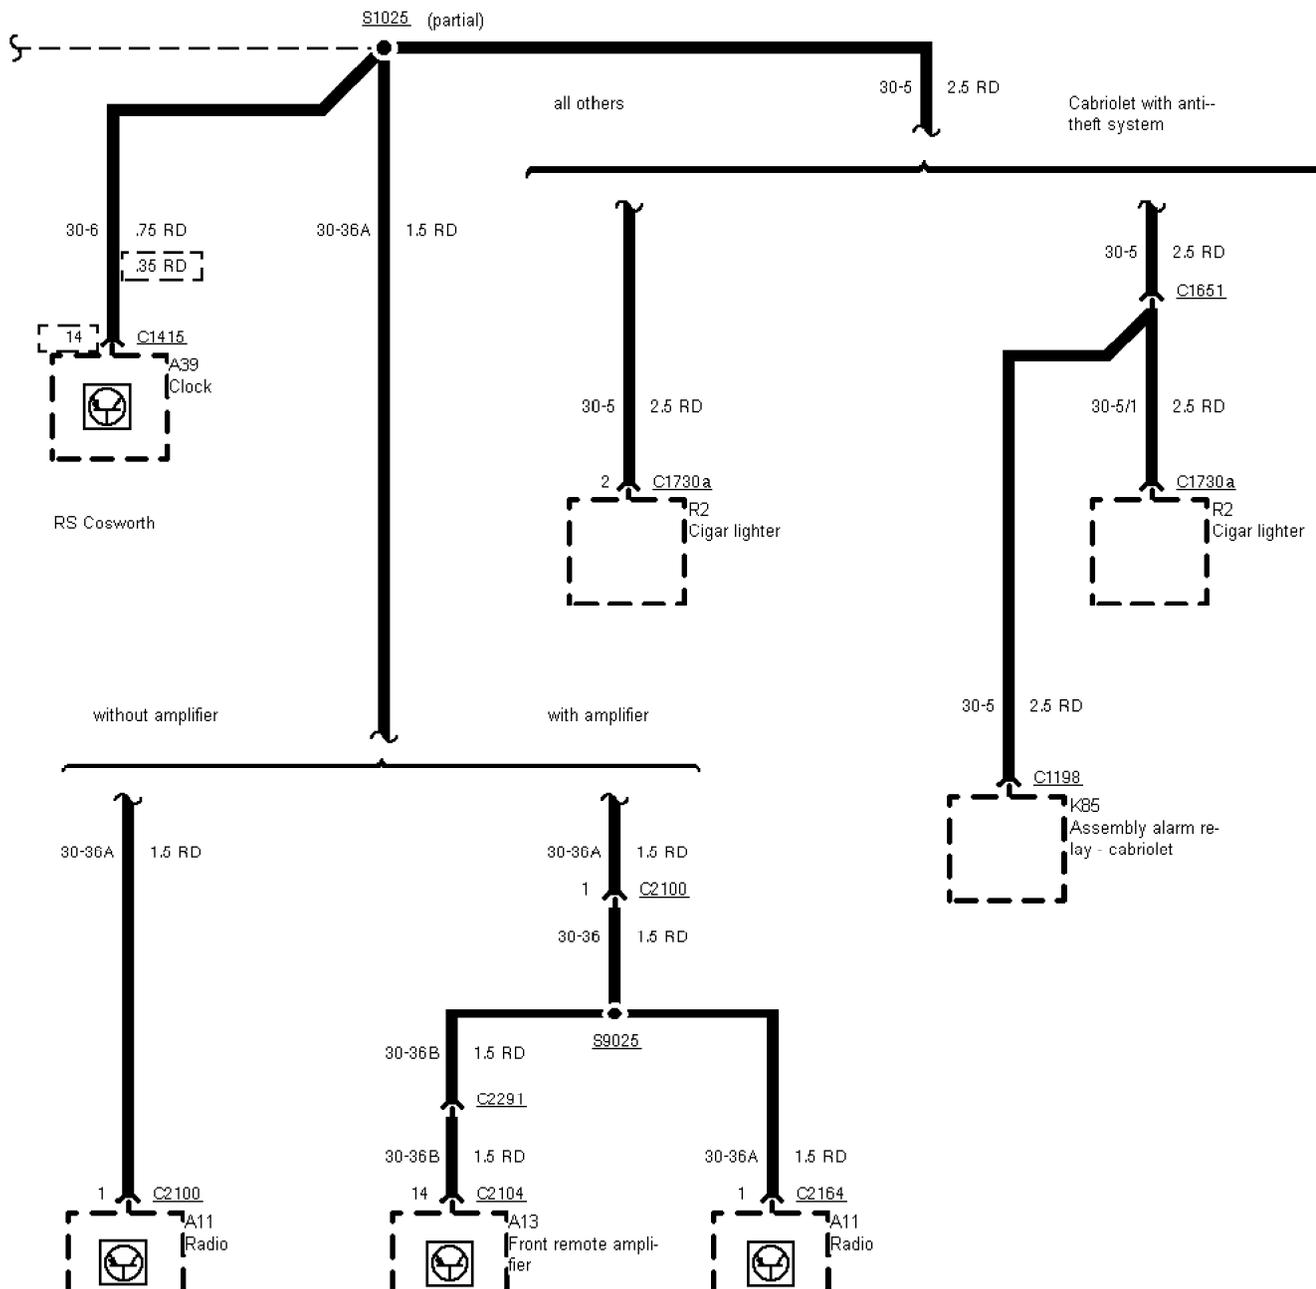


i - - - j

i - - - j

i - - - j


01-03-021 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 22

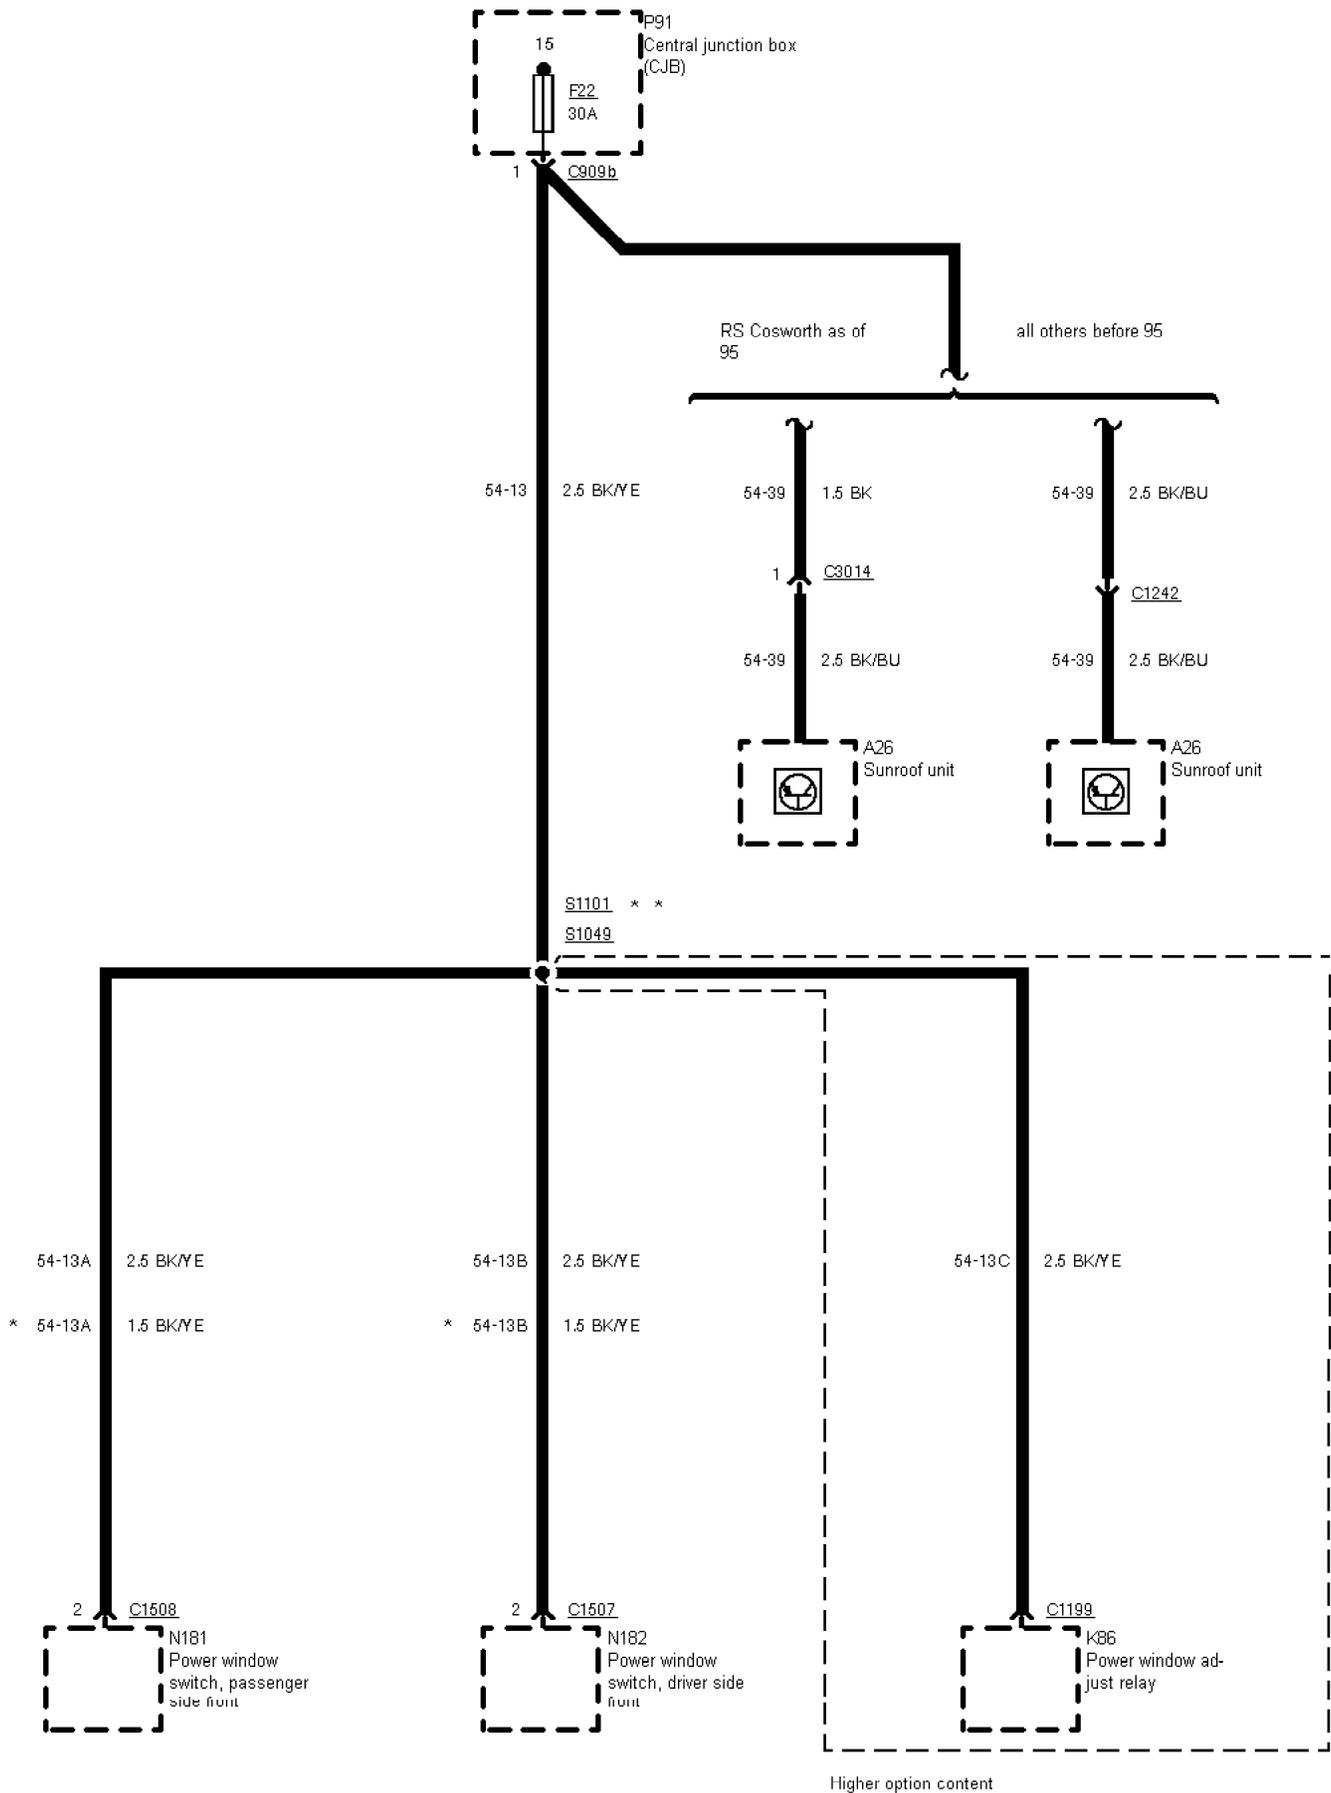


* Cabriolet, RS
Cosworth


* * Cabriolet

01-03-022 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 23

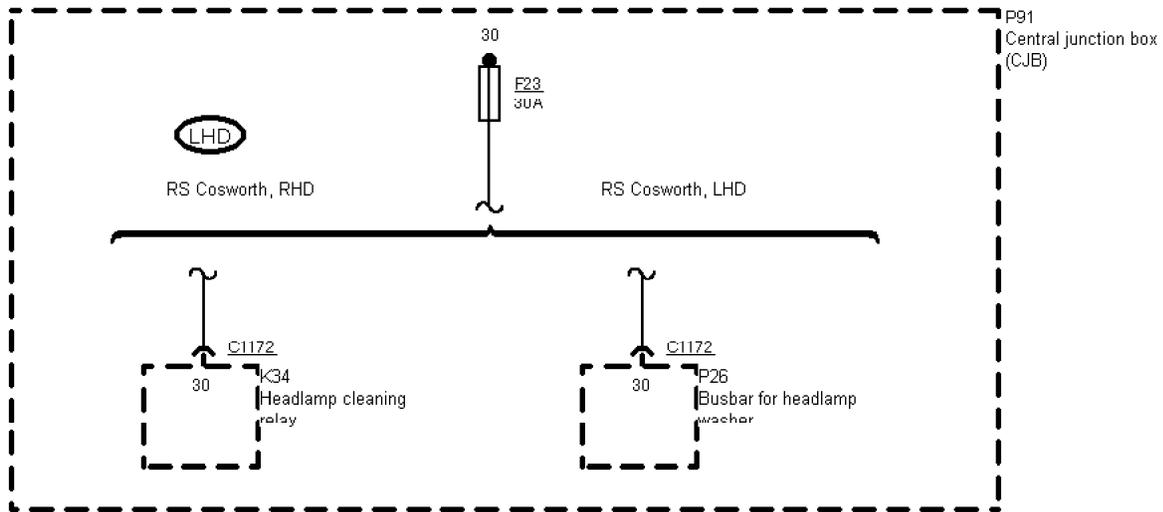

 Before 95, RS Cosworth 95 1/2 Fuses 24 and 25

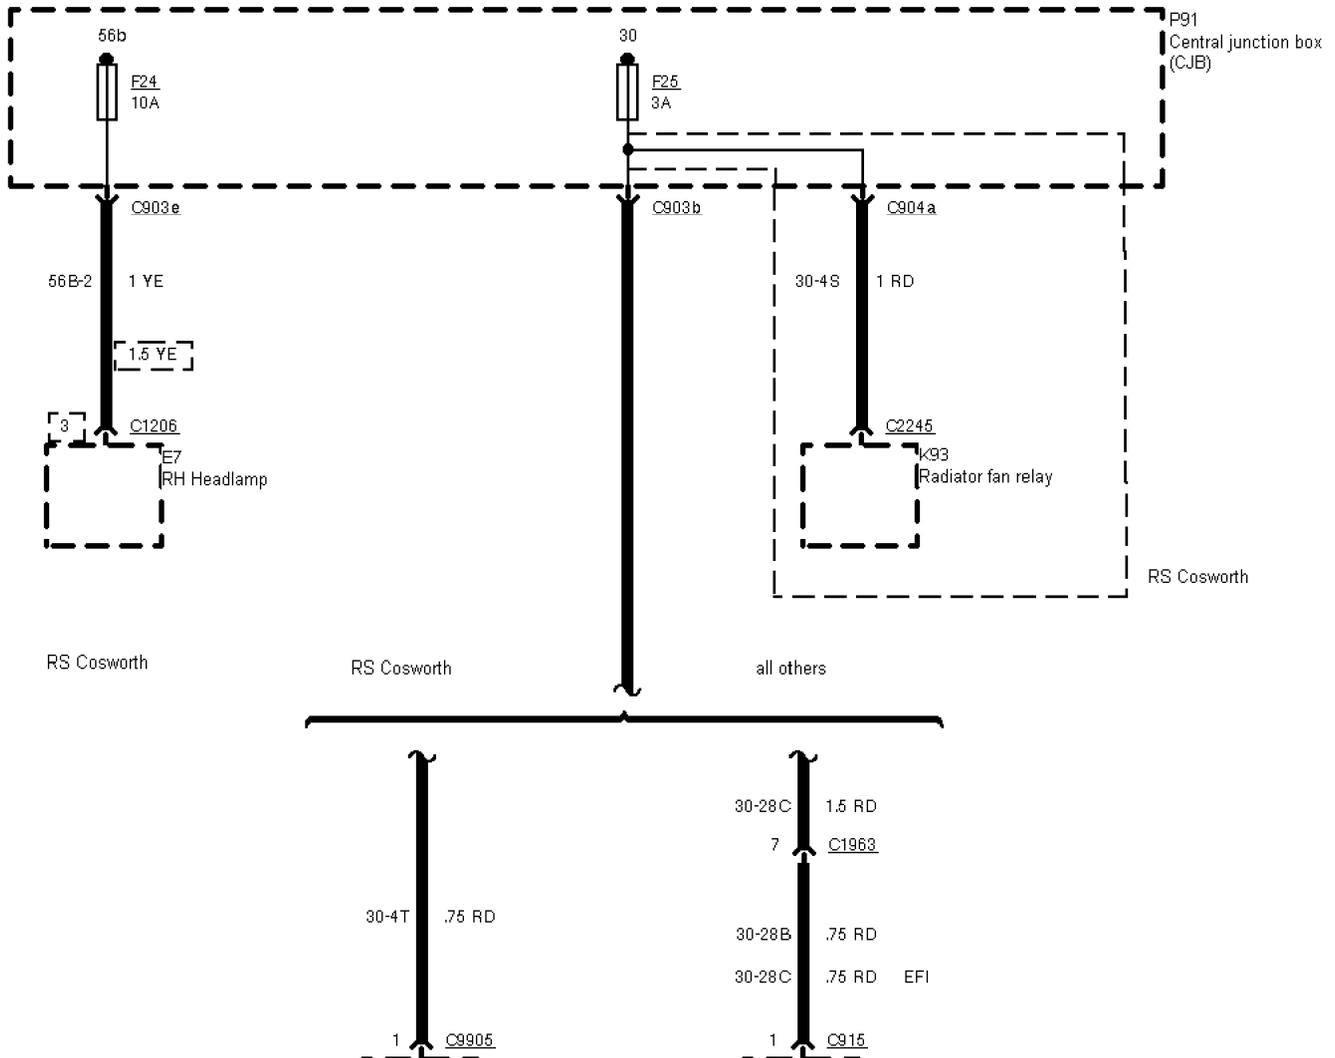



01-03-023 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuses 26 and 27


Y49
Exhaust gas recirculation (EGR) solenoid valve (vacuum)


A/5
Electronic diesel control module (EDC)




R2b
LH windscreen washer jet heater

01-03-024 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse 27

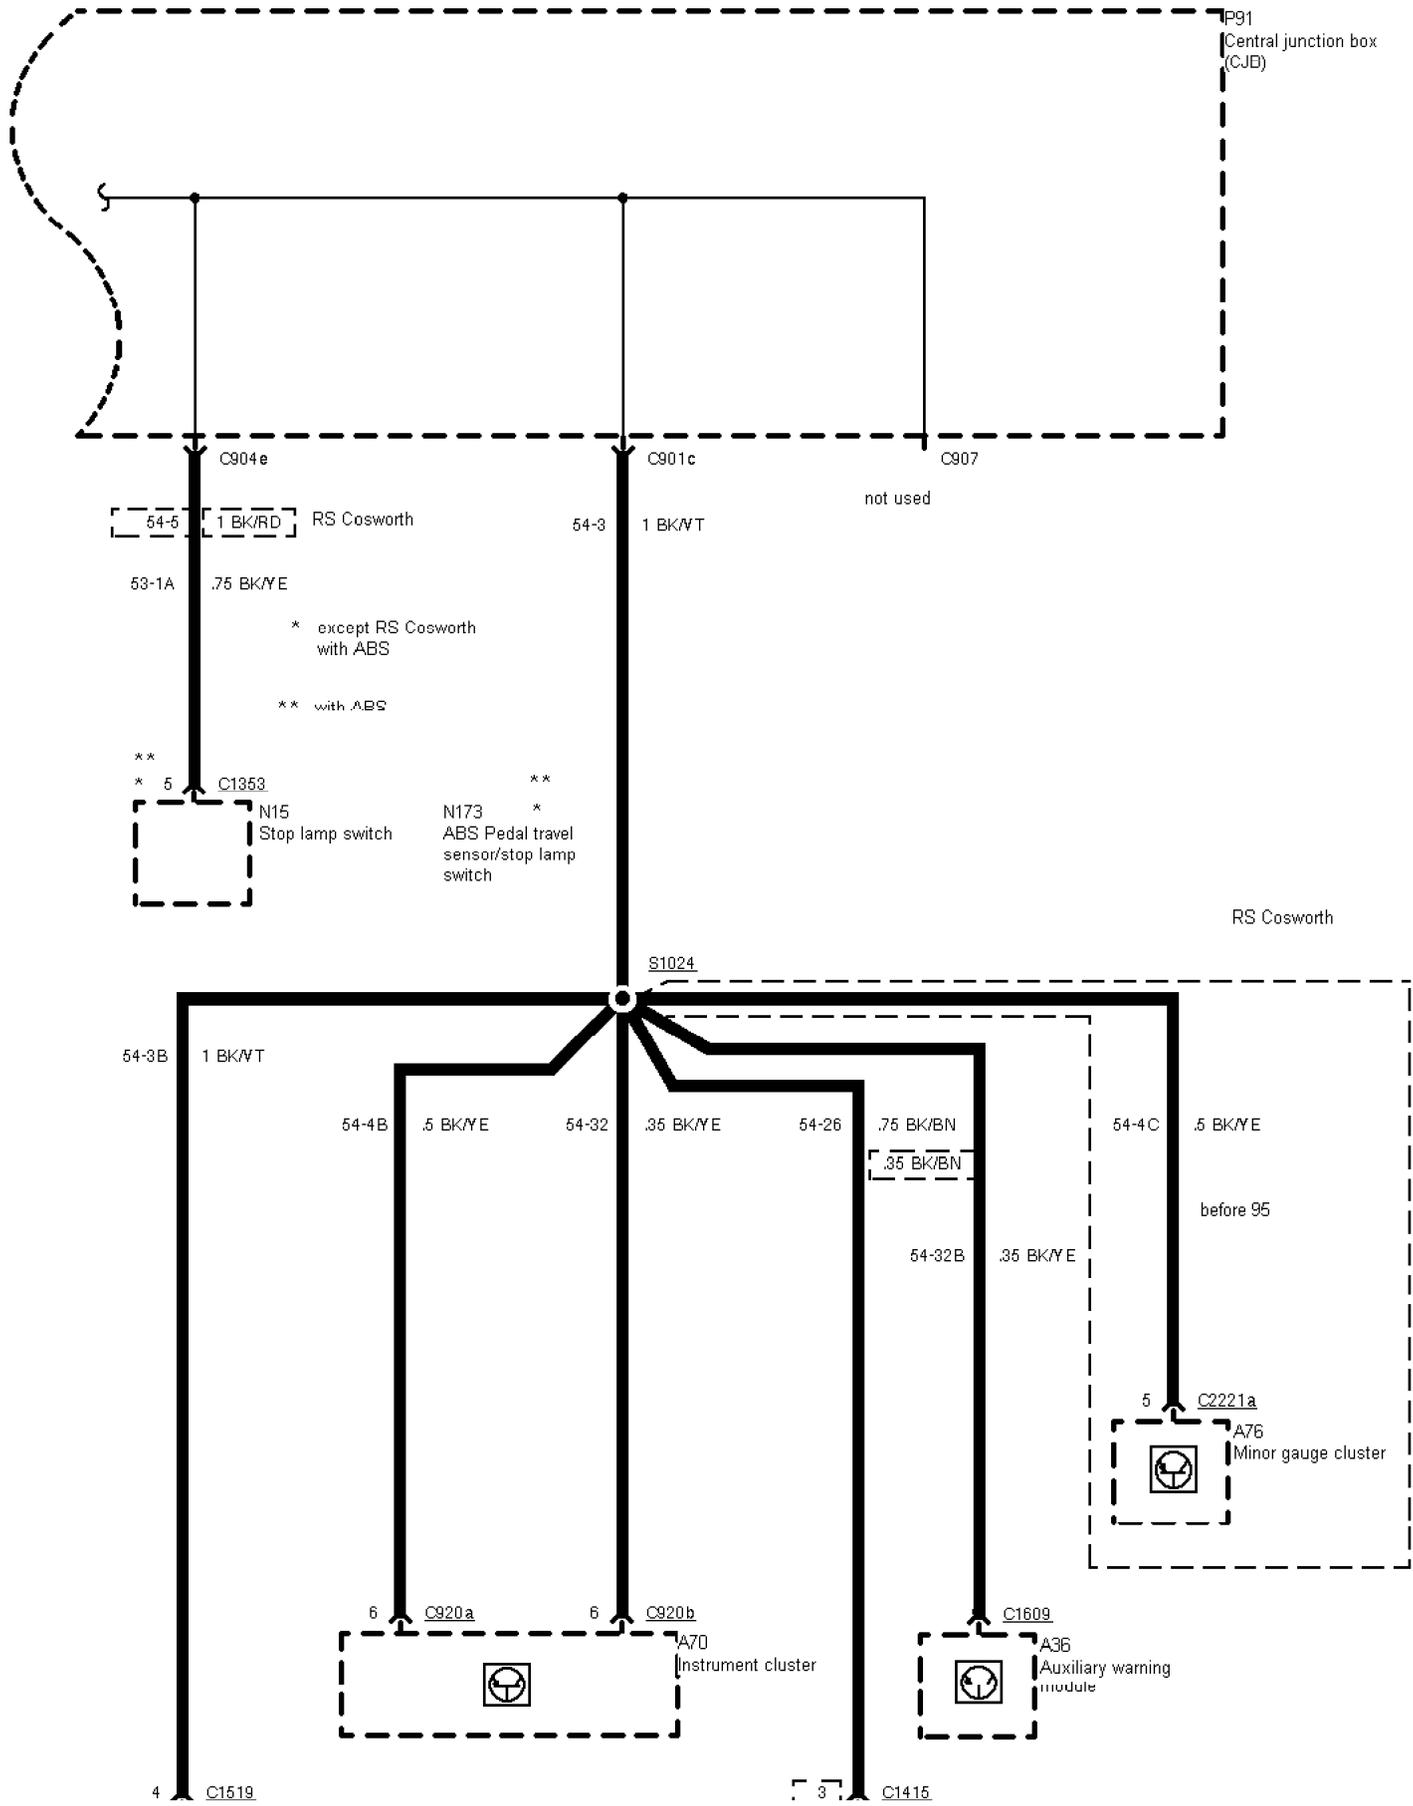

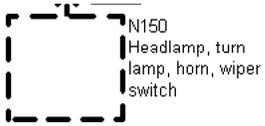


01-03-025 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuses 28 and 29

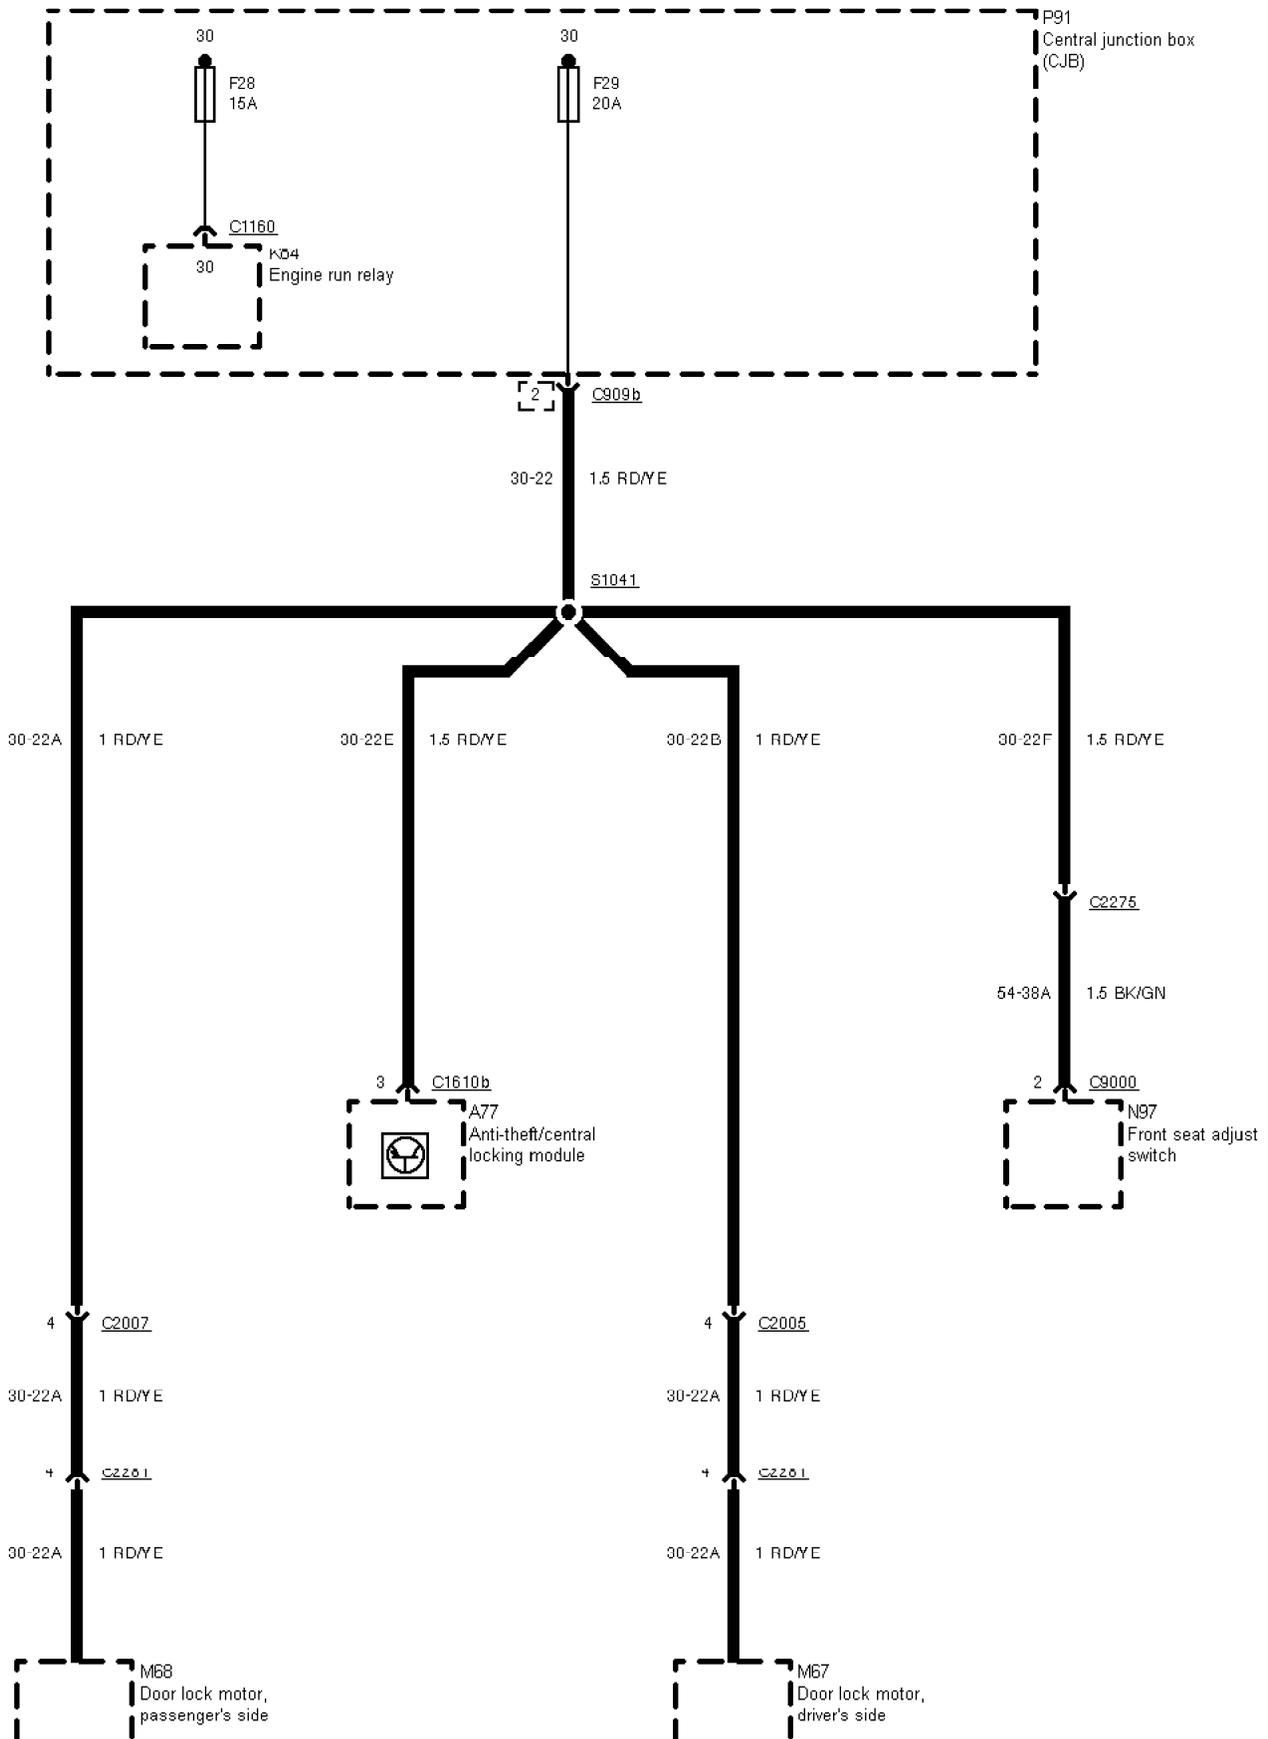




01-03-026 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse FA

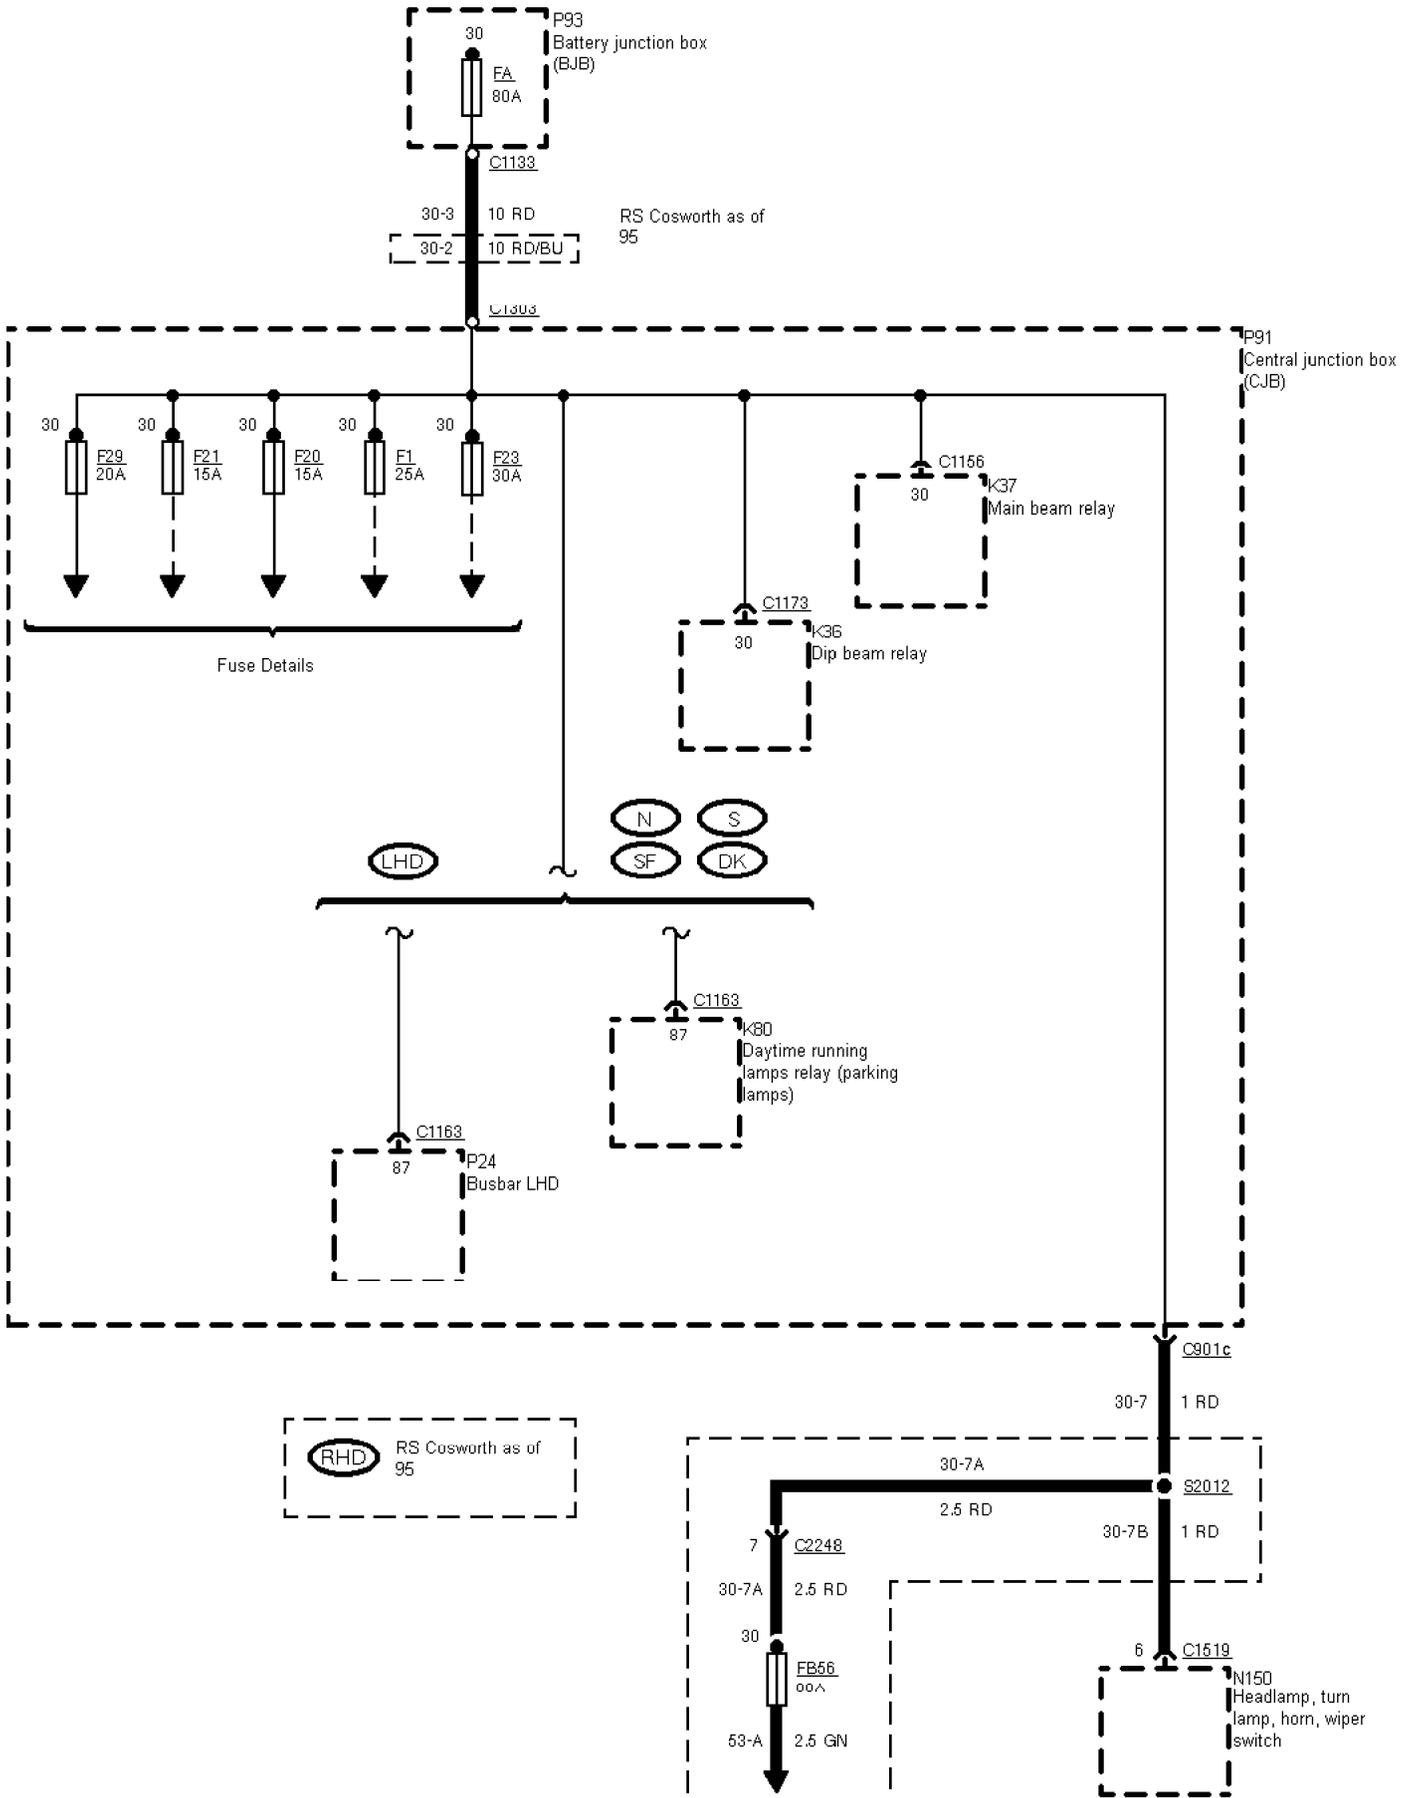


Fuse Details

01-03-027 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse FB


01-03-028 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse FC

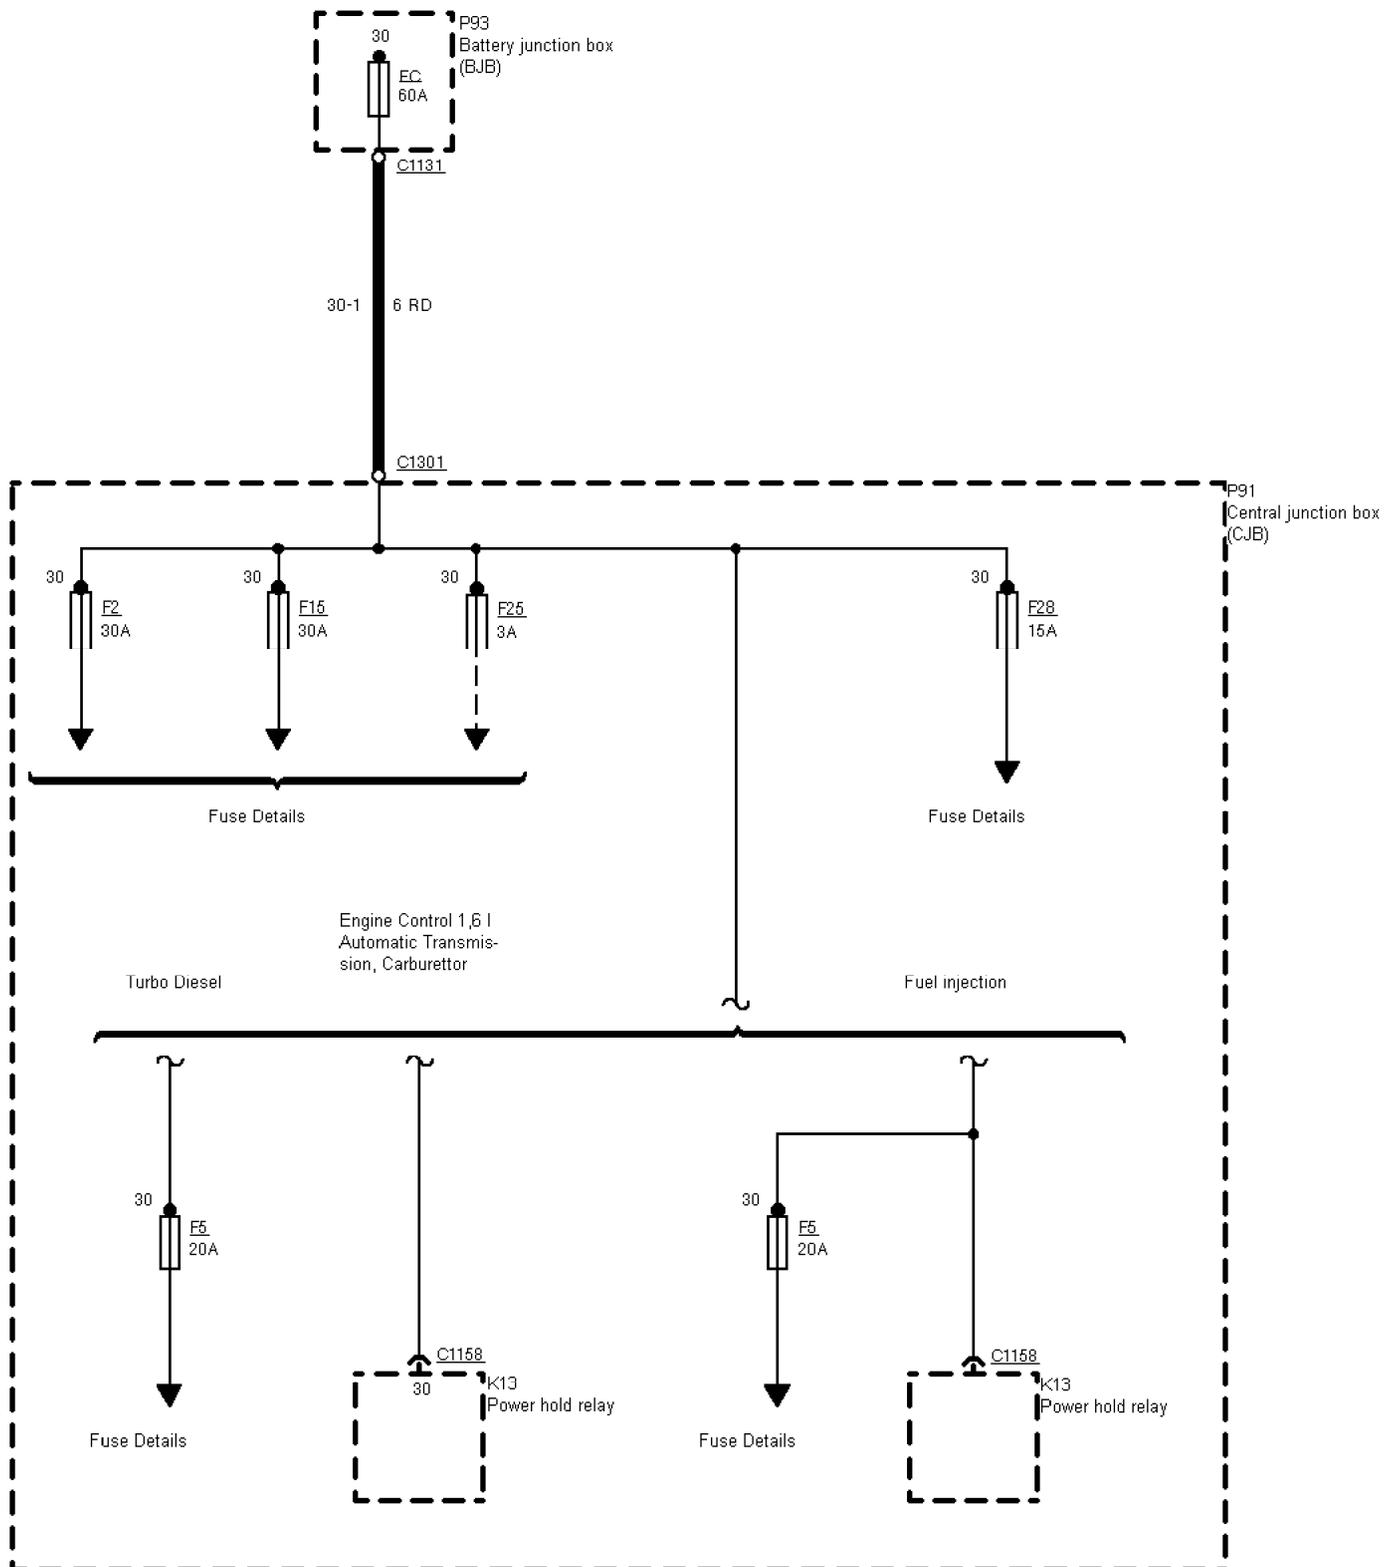

01-03-029 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuses FD, FE and FF

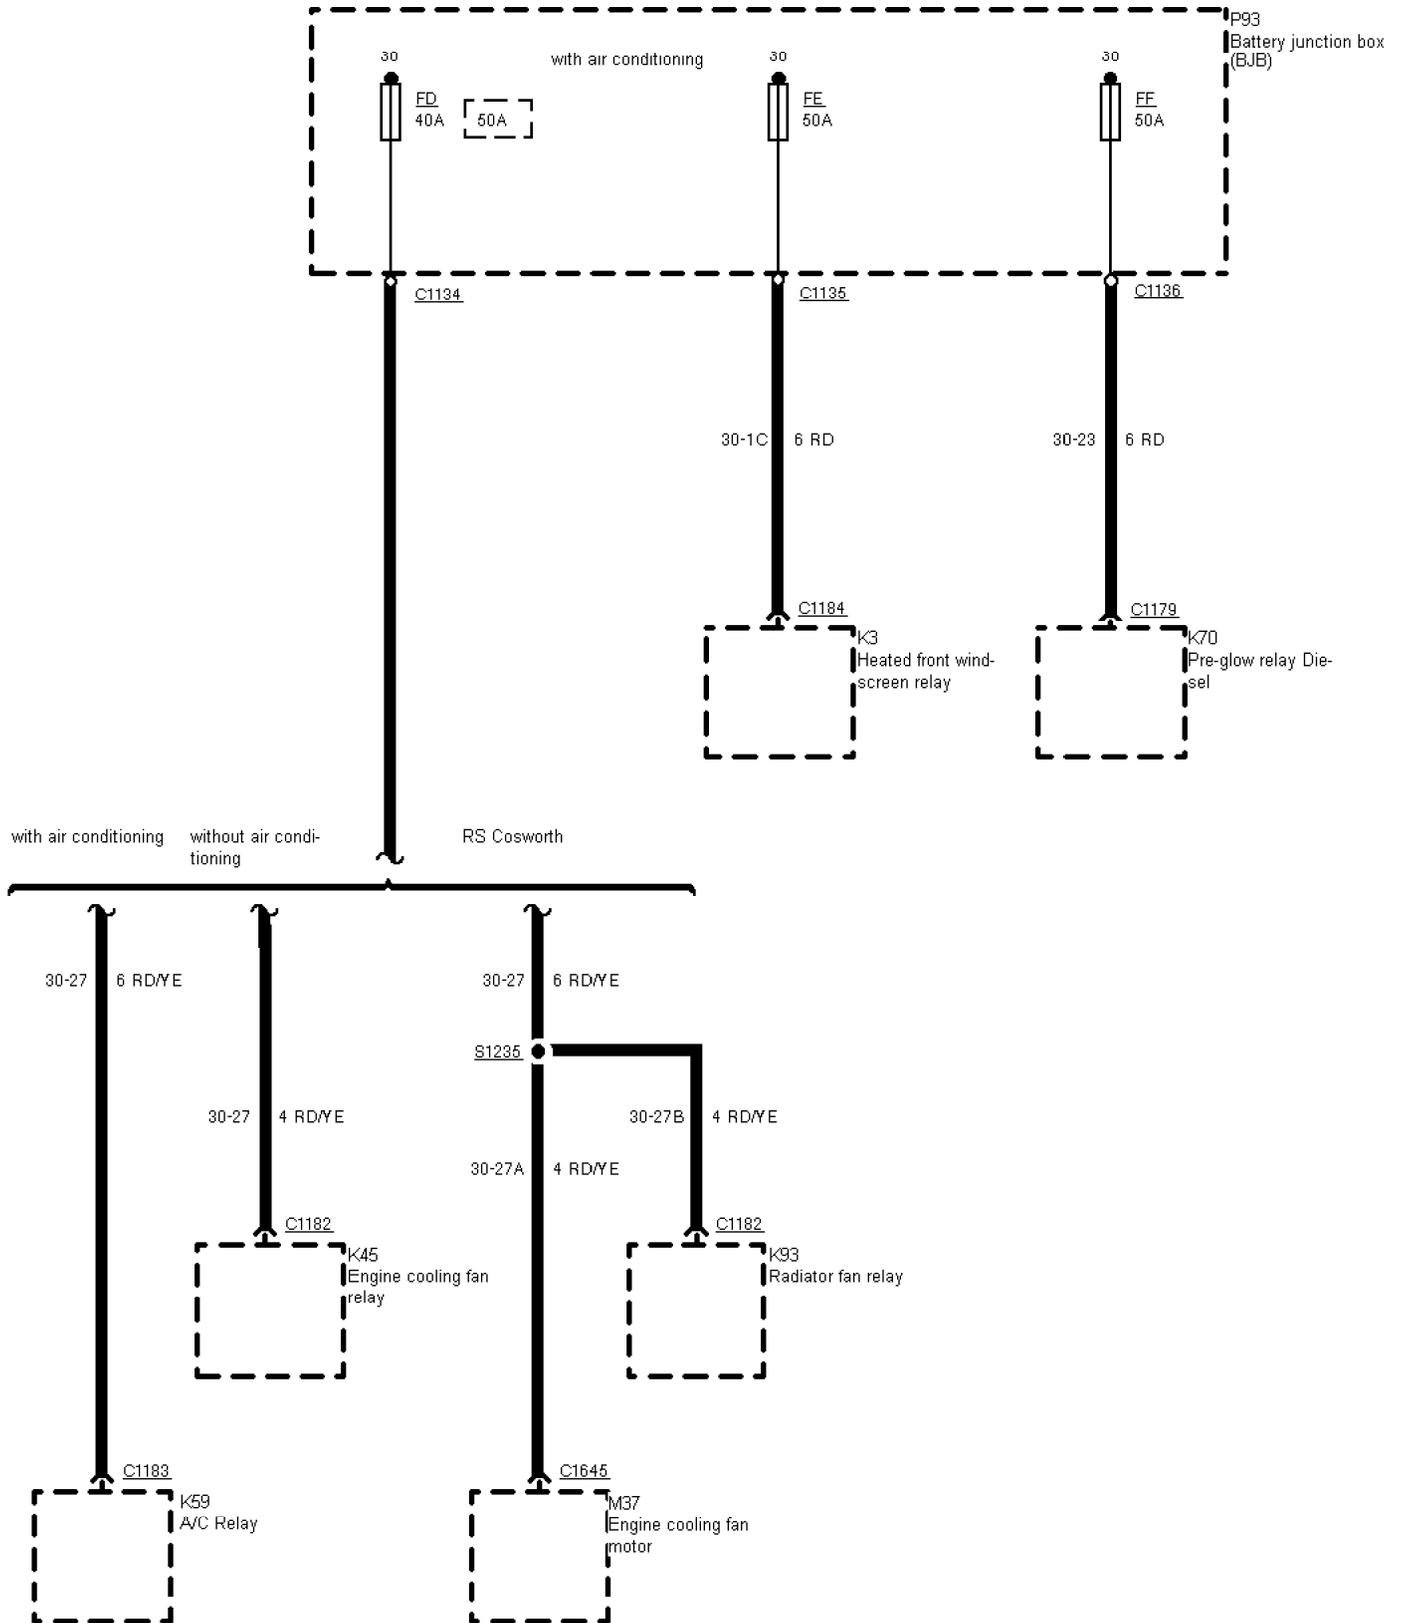


01-03-030 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuses FB37, FB38 and FB39, cabriolet only

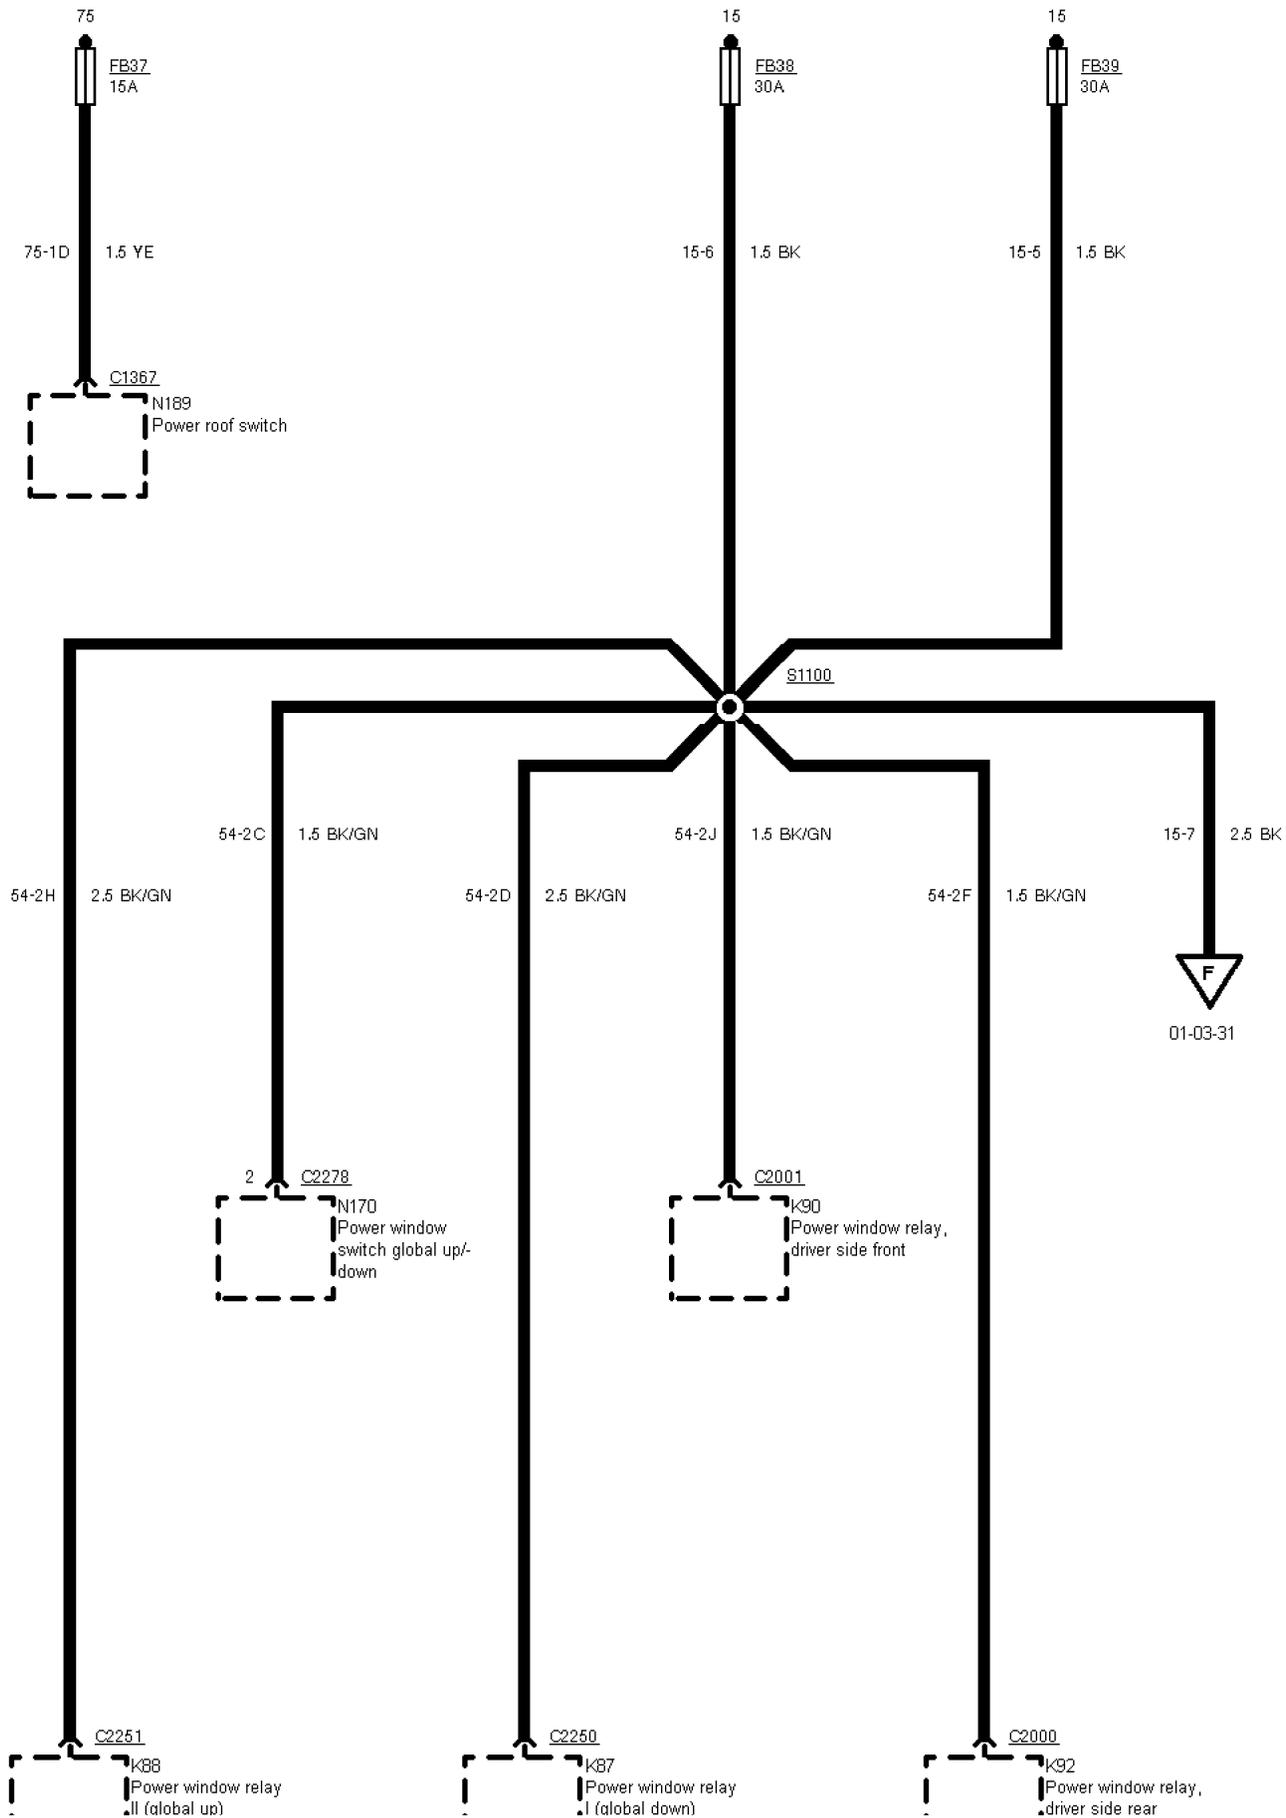




01-03-031 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuses FB38 and FB39, cabriolet only

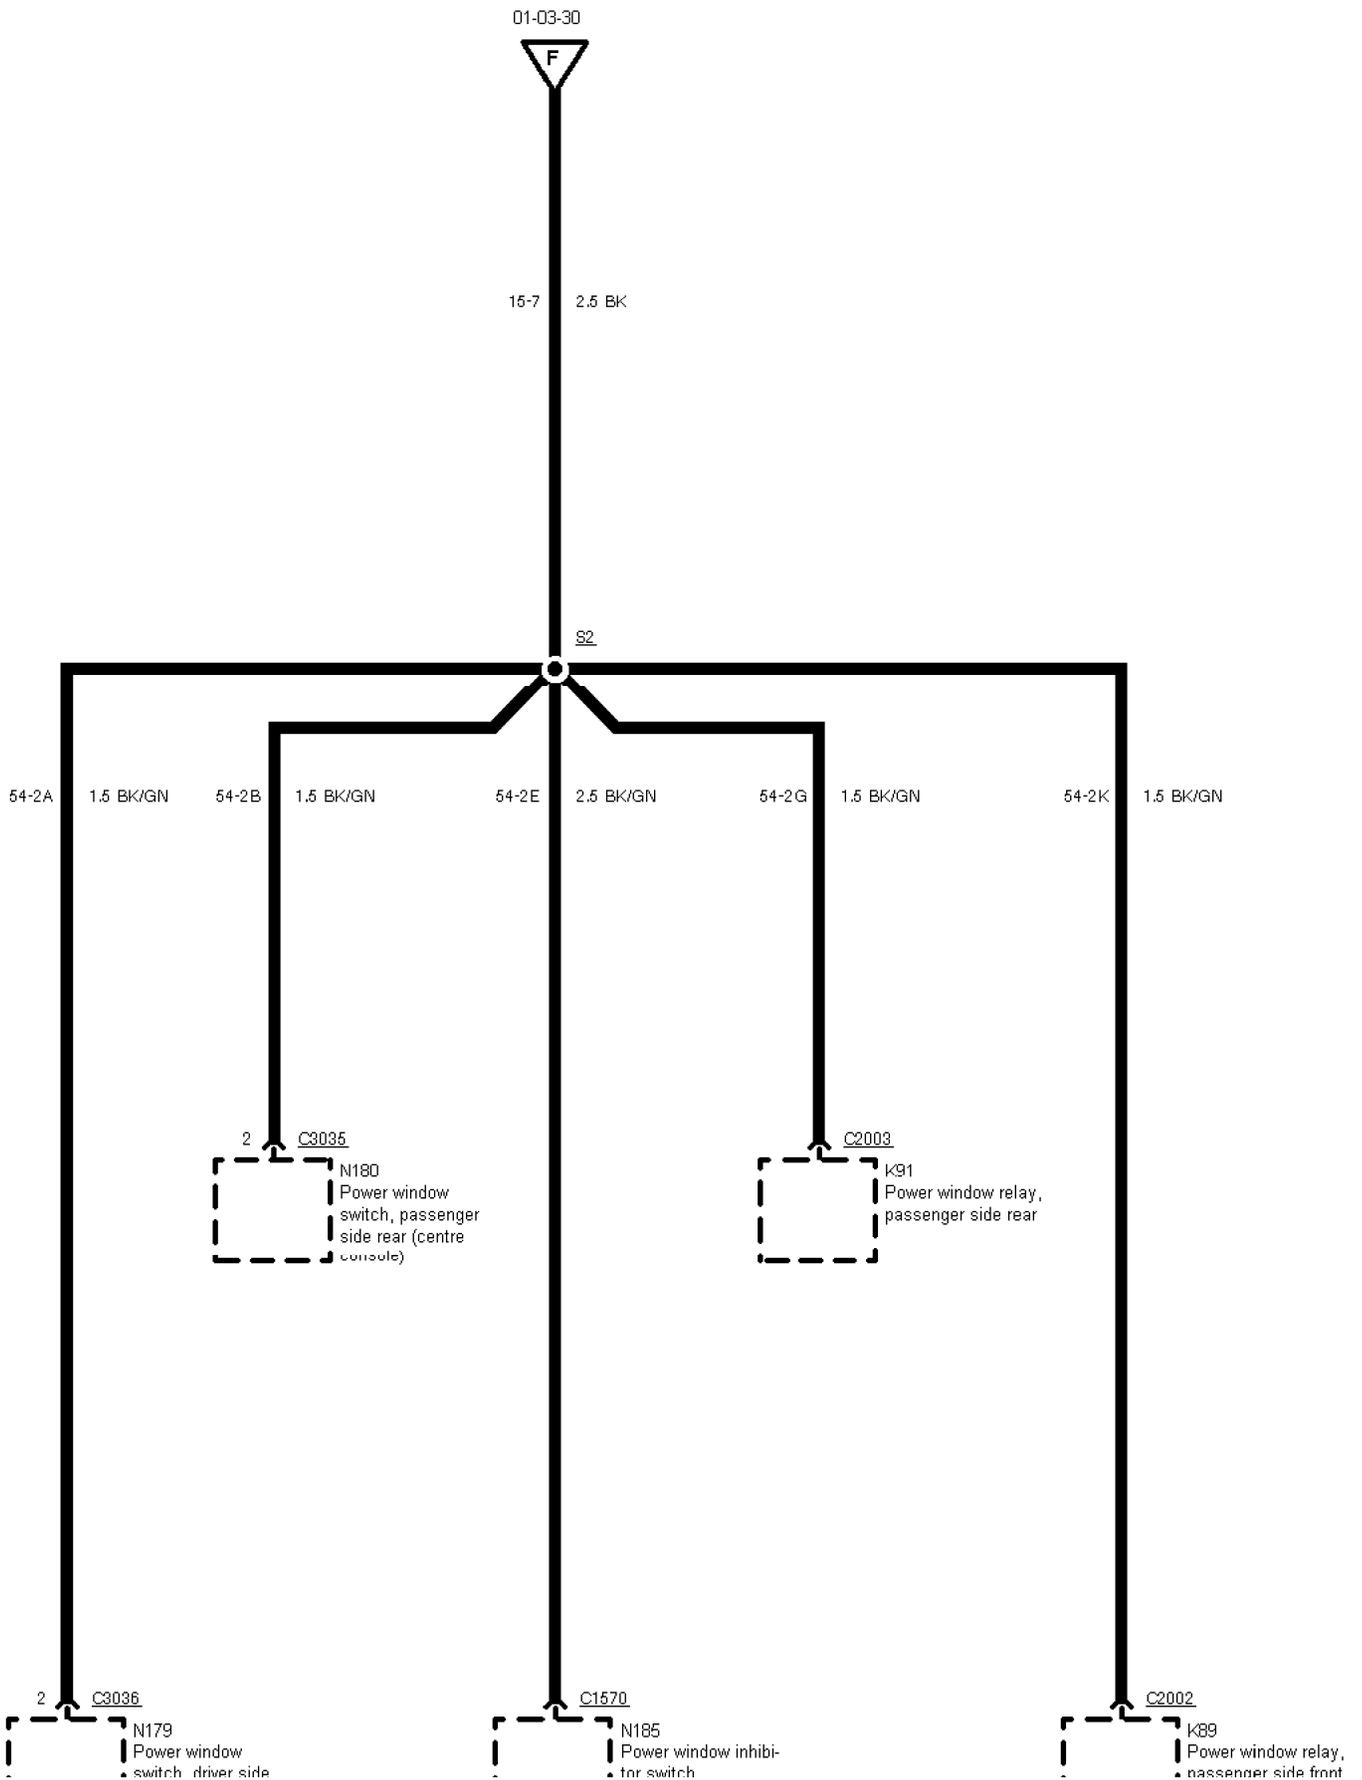




rear (centre console)

passenger side front



01-03-032 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuse FB40, cabriolet only


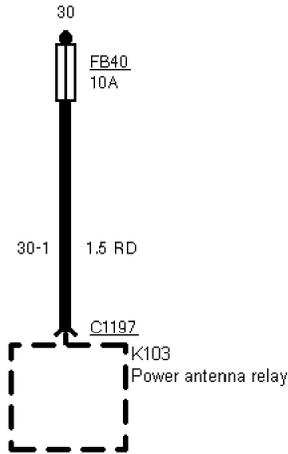


Before 95 Fuses FB41, FB42 and FB43, RS Cosworth only

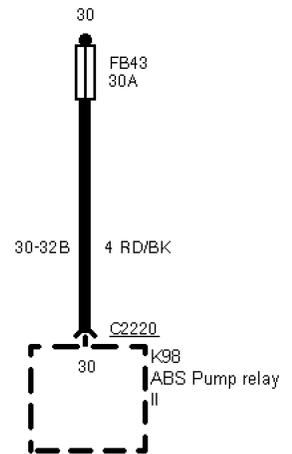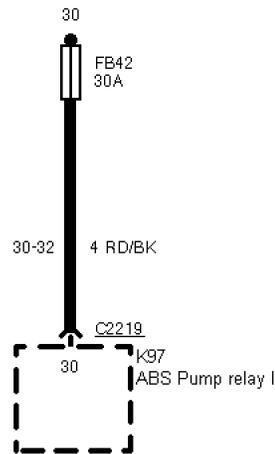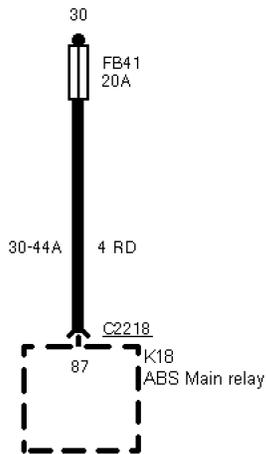


  Before 95 Fuses FB44 and FB53, RS Cosworth only

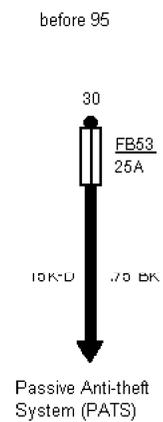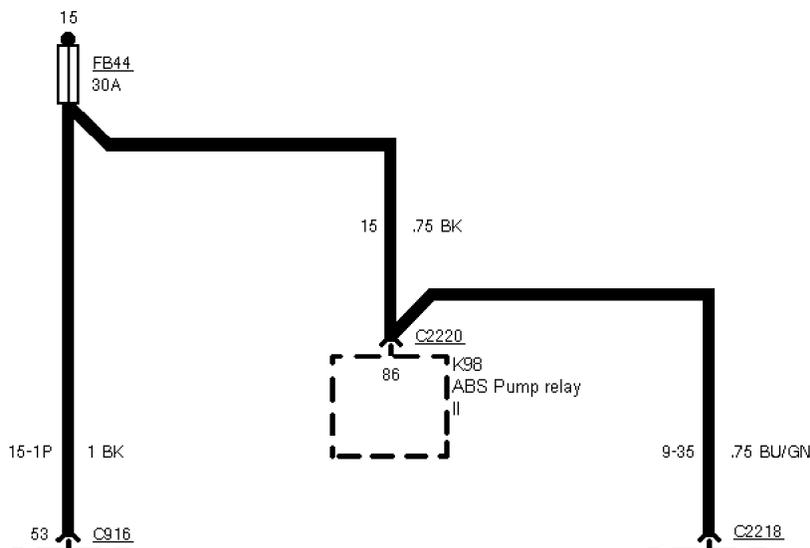





01-03-033 , Fuse Details , Before 95, RS Cosworth 95 1/2 Fuses FB54 and FB55, RS Cosworth only

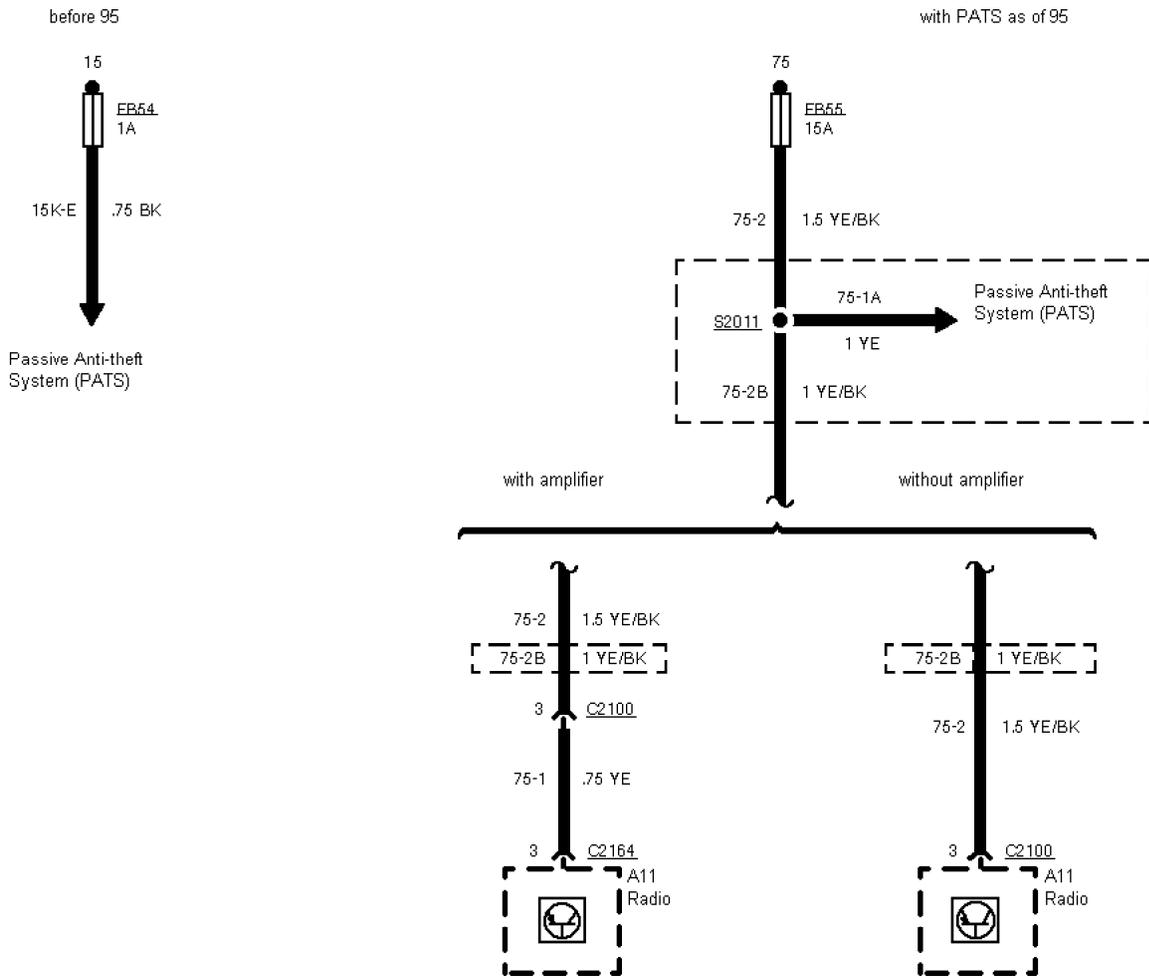


RS Cosworth RHD as of 95 Fuse FB 56

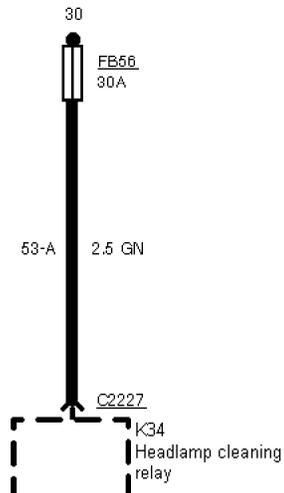

01-03-034 , Fuse Details , As of 95 without RS Cosworth Fuse FA

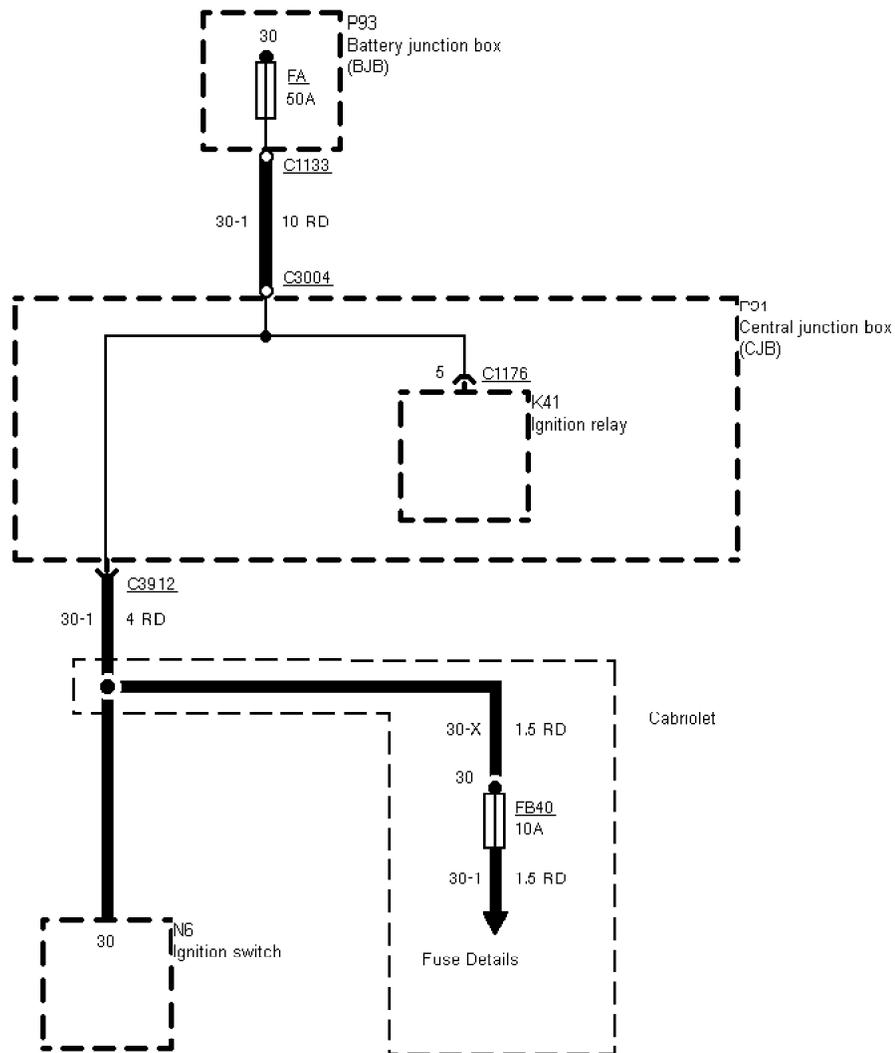


As of 95 without R5 Cosworth Fuse PD

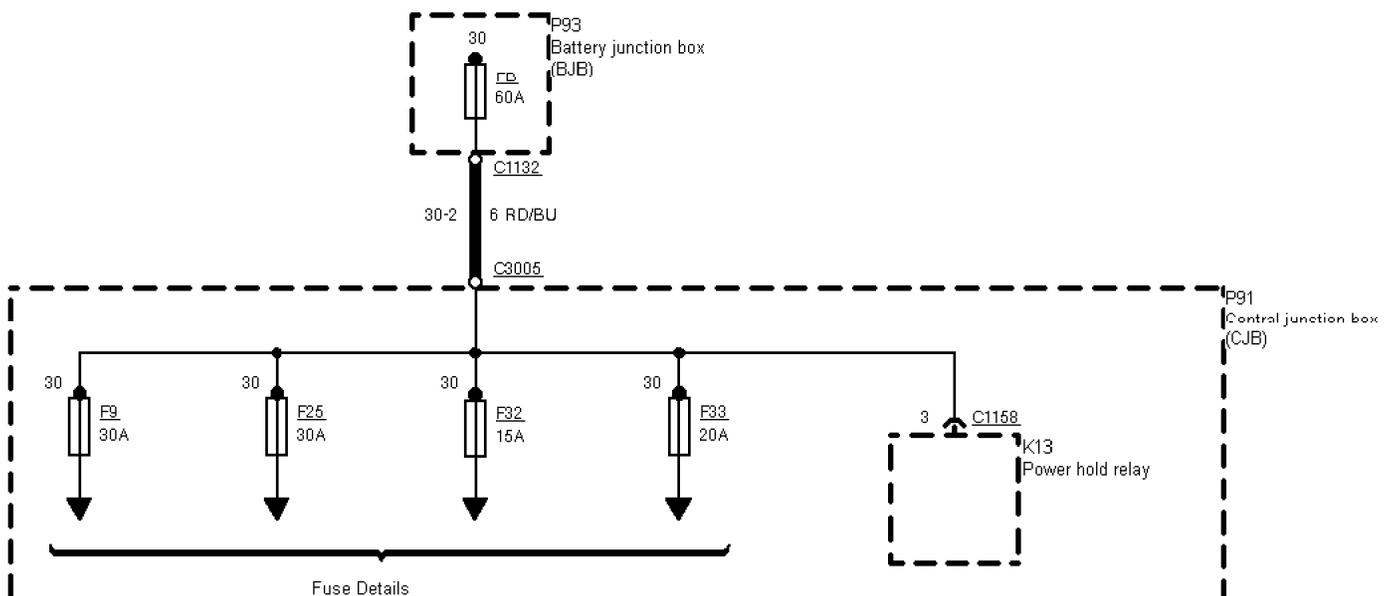





01-03-035 , Fuse Details , As of 95 without RS Cosworth Fuse FC

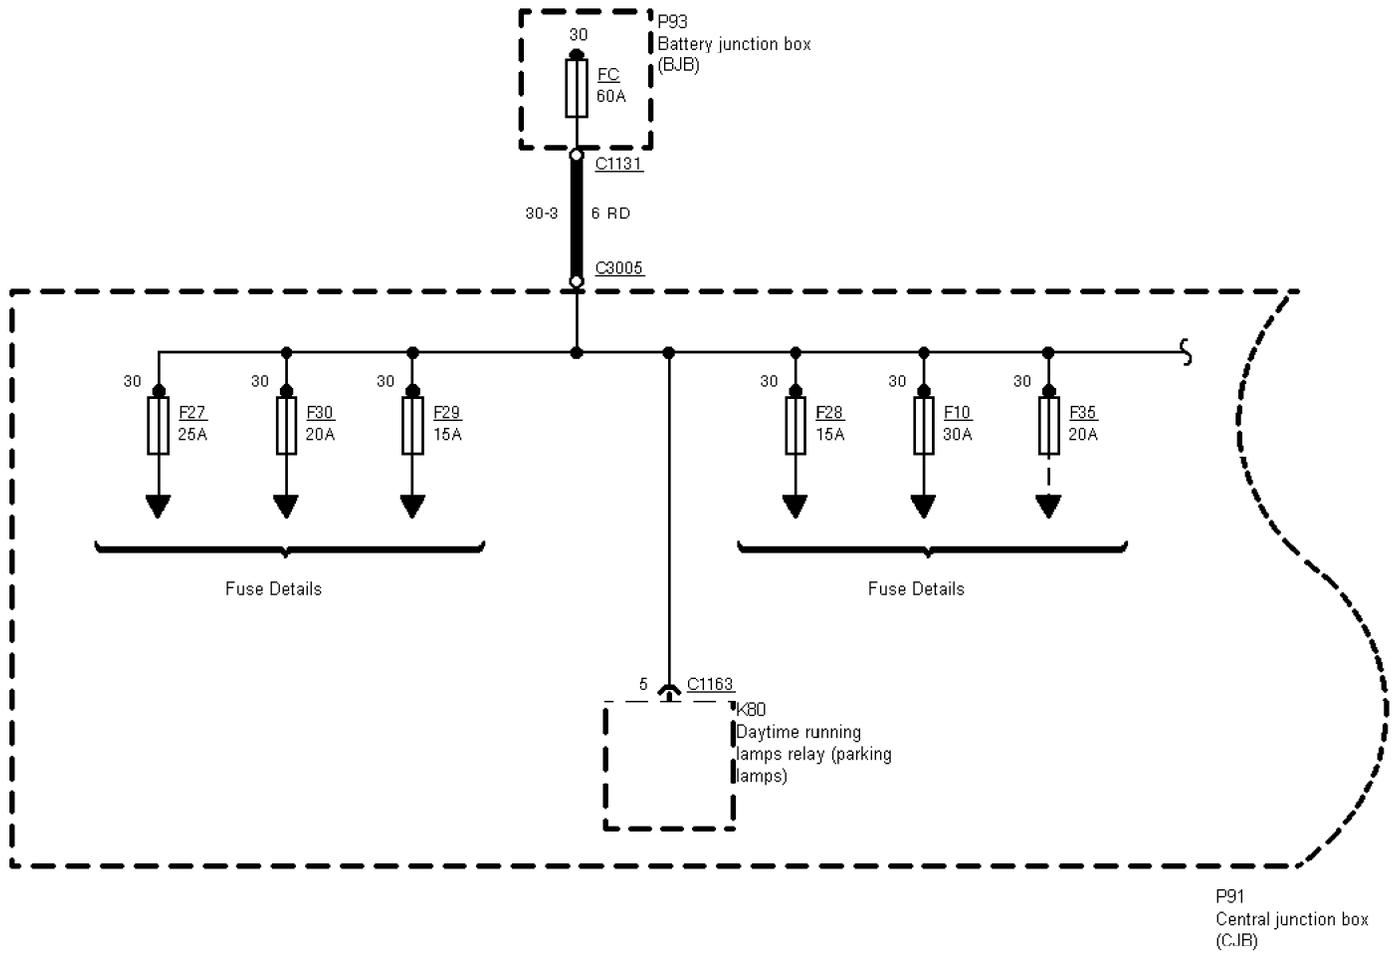


As of 95 without RS Cosworth Fuse FD

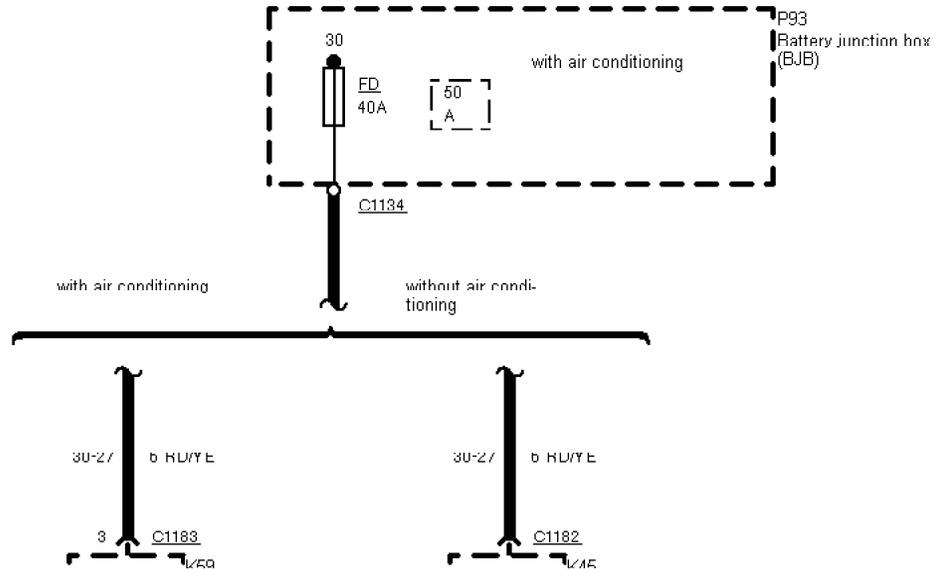


 

01-03-036 , Fuse Details , As of 95 without RS Cosworth Fuse FD

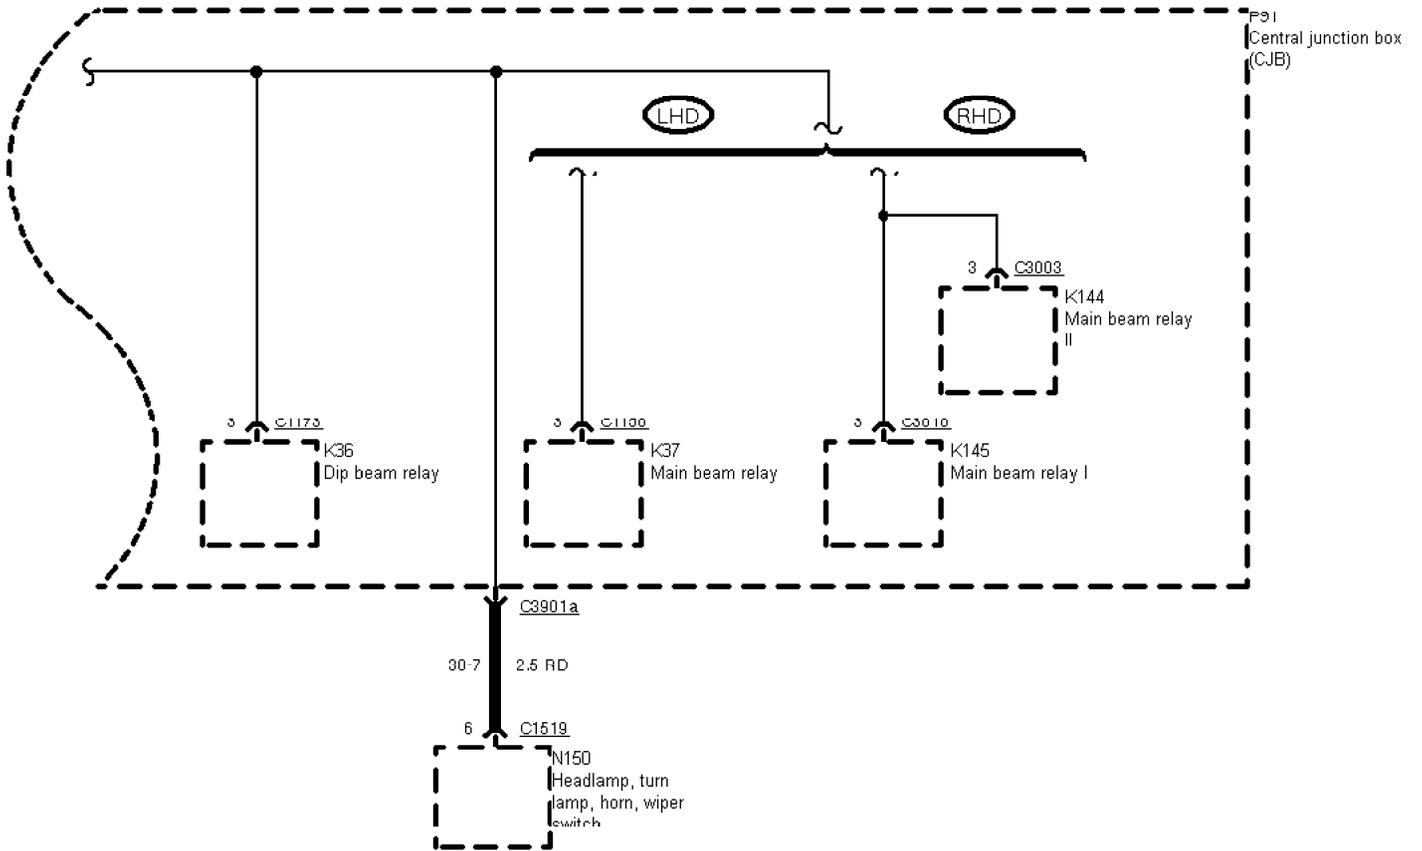


As of 95 without RS Cosworth Fuses FE and FF

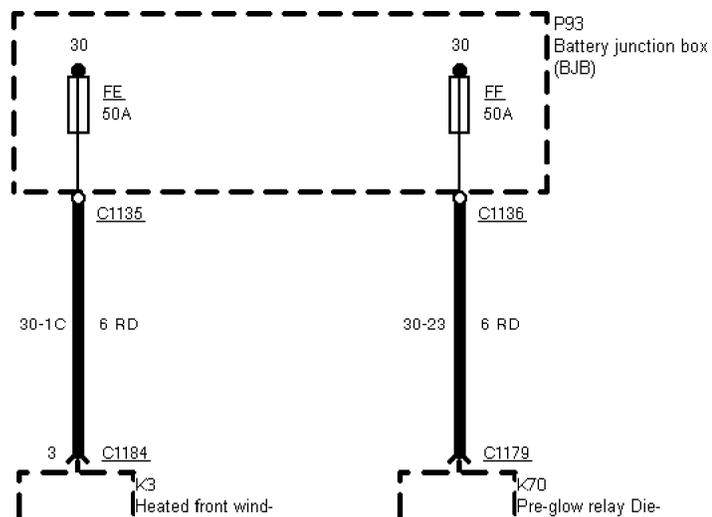

screen relay

sel

01-03-037 , Fuse Details , As of 95 without RS Cosworth Fuses 1 and 3

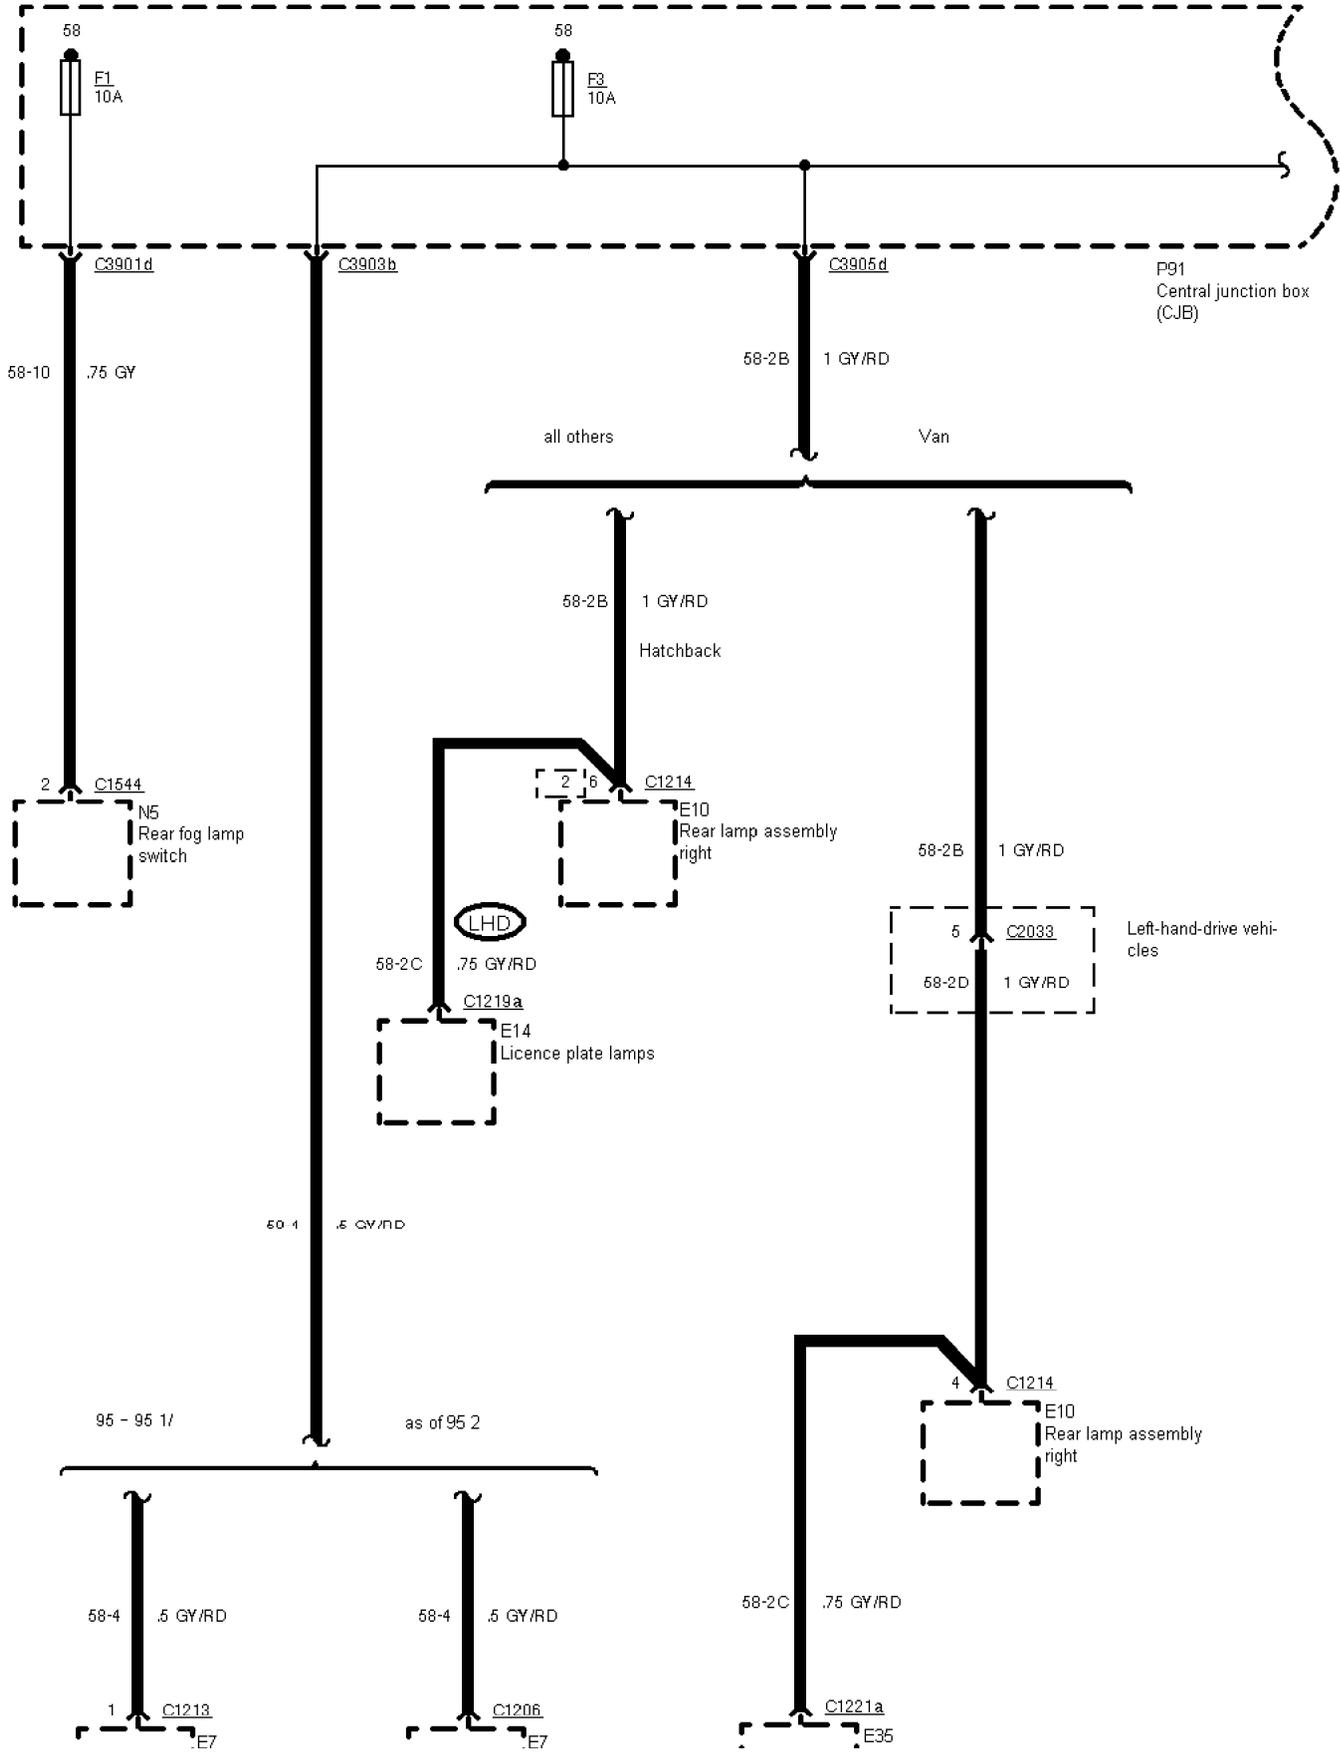


RH Headlamp

RH Headlamp

RH Licence plate
lamp

01-03-038 , Fuse Details , As of 95 without RS Cosworth Fuse 3

- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

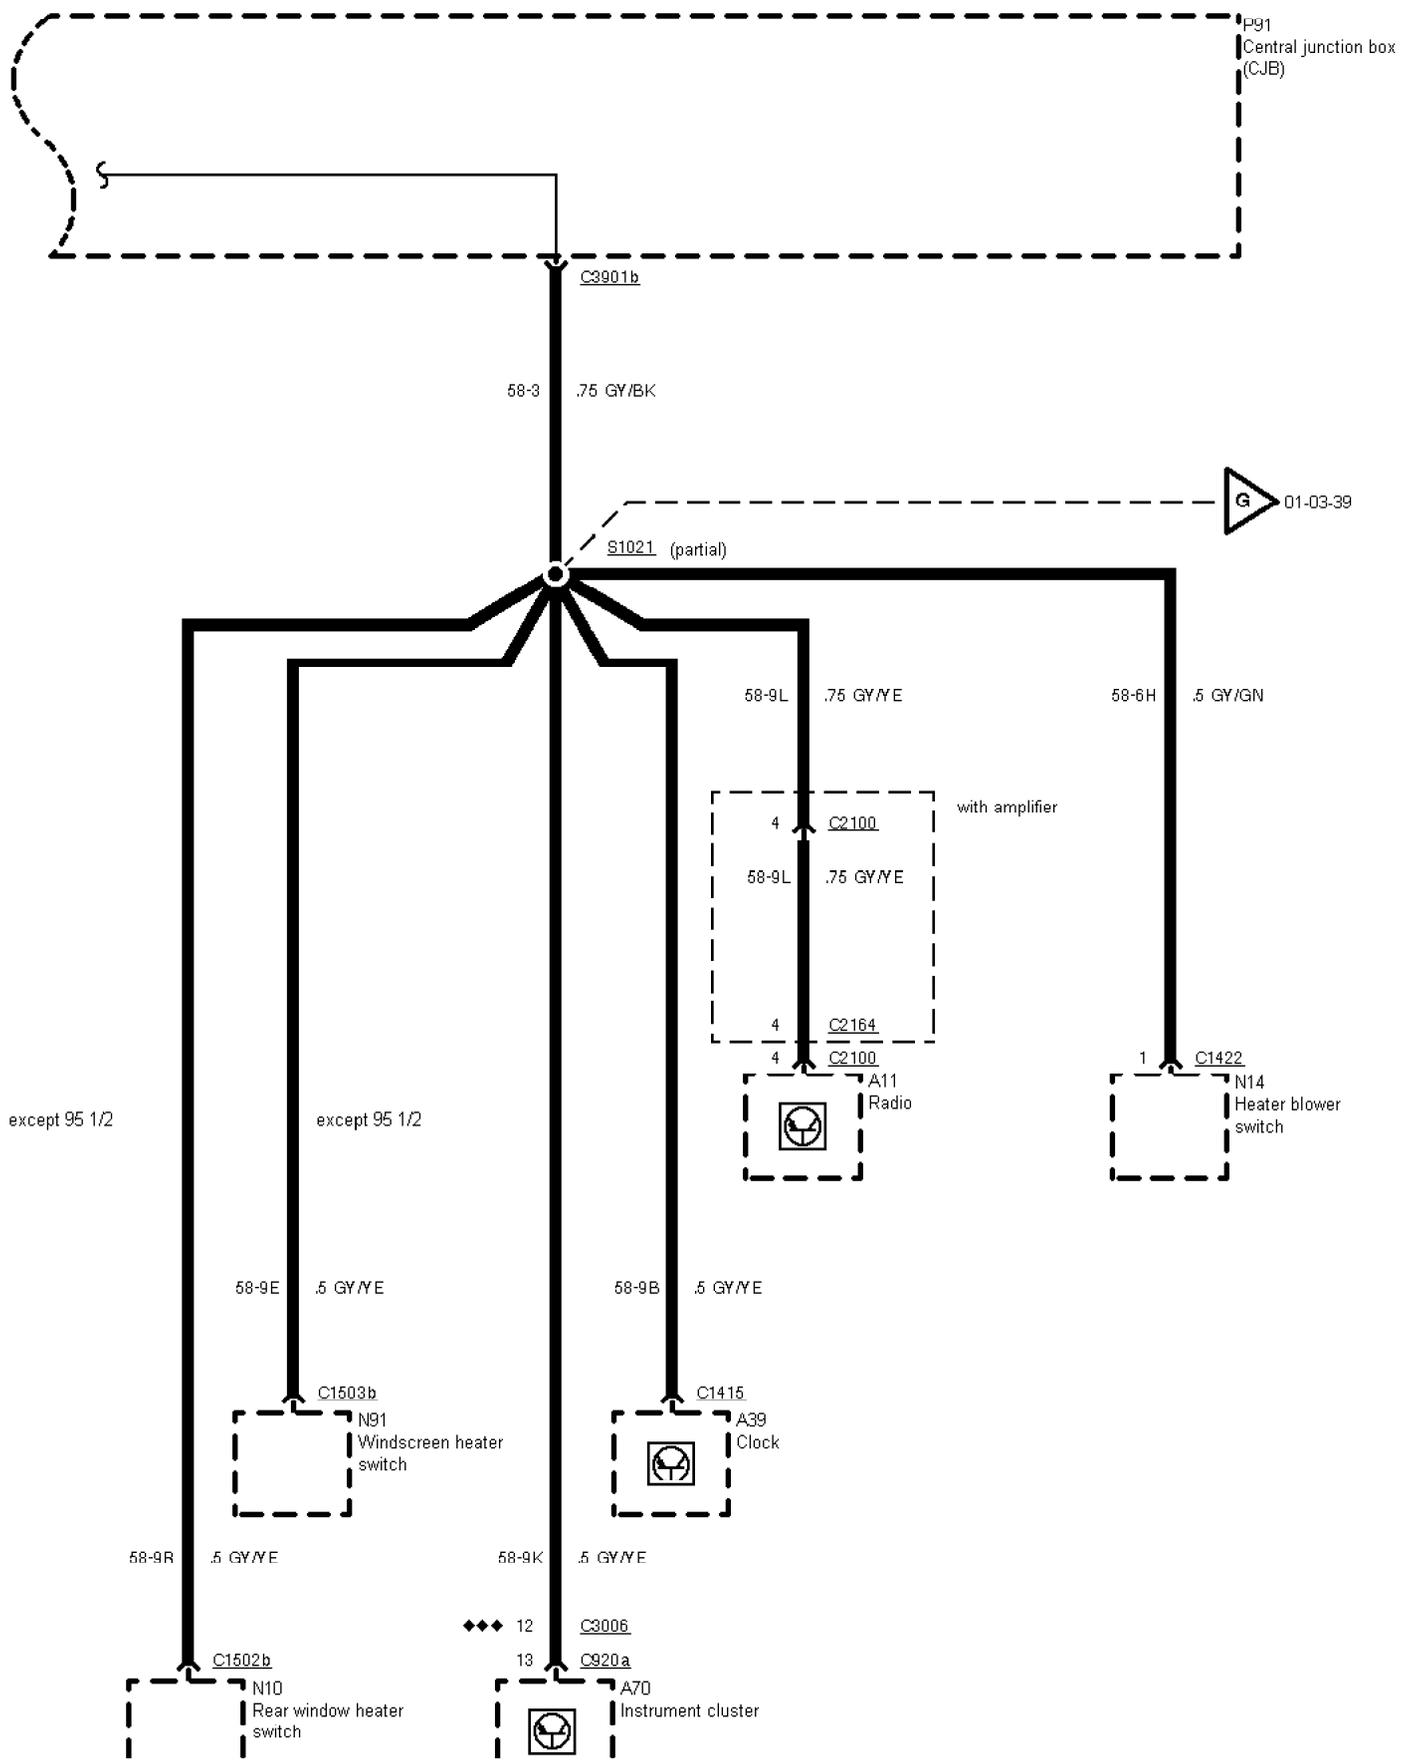



i - - - j

i - - - j

01-03-039 , Fuse Details , As of 95 without RS Cosworth Fuse 3



- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

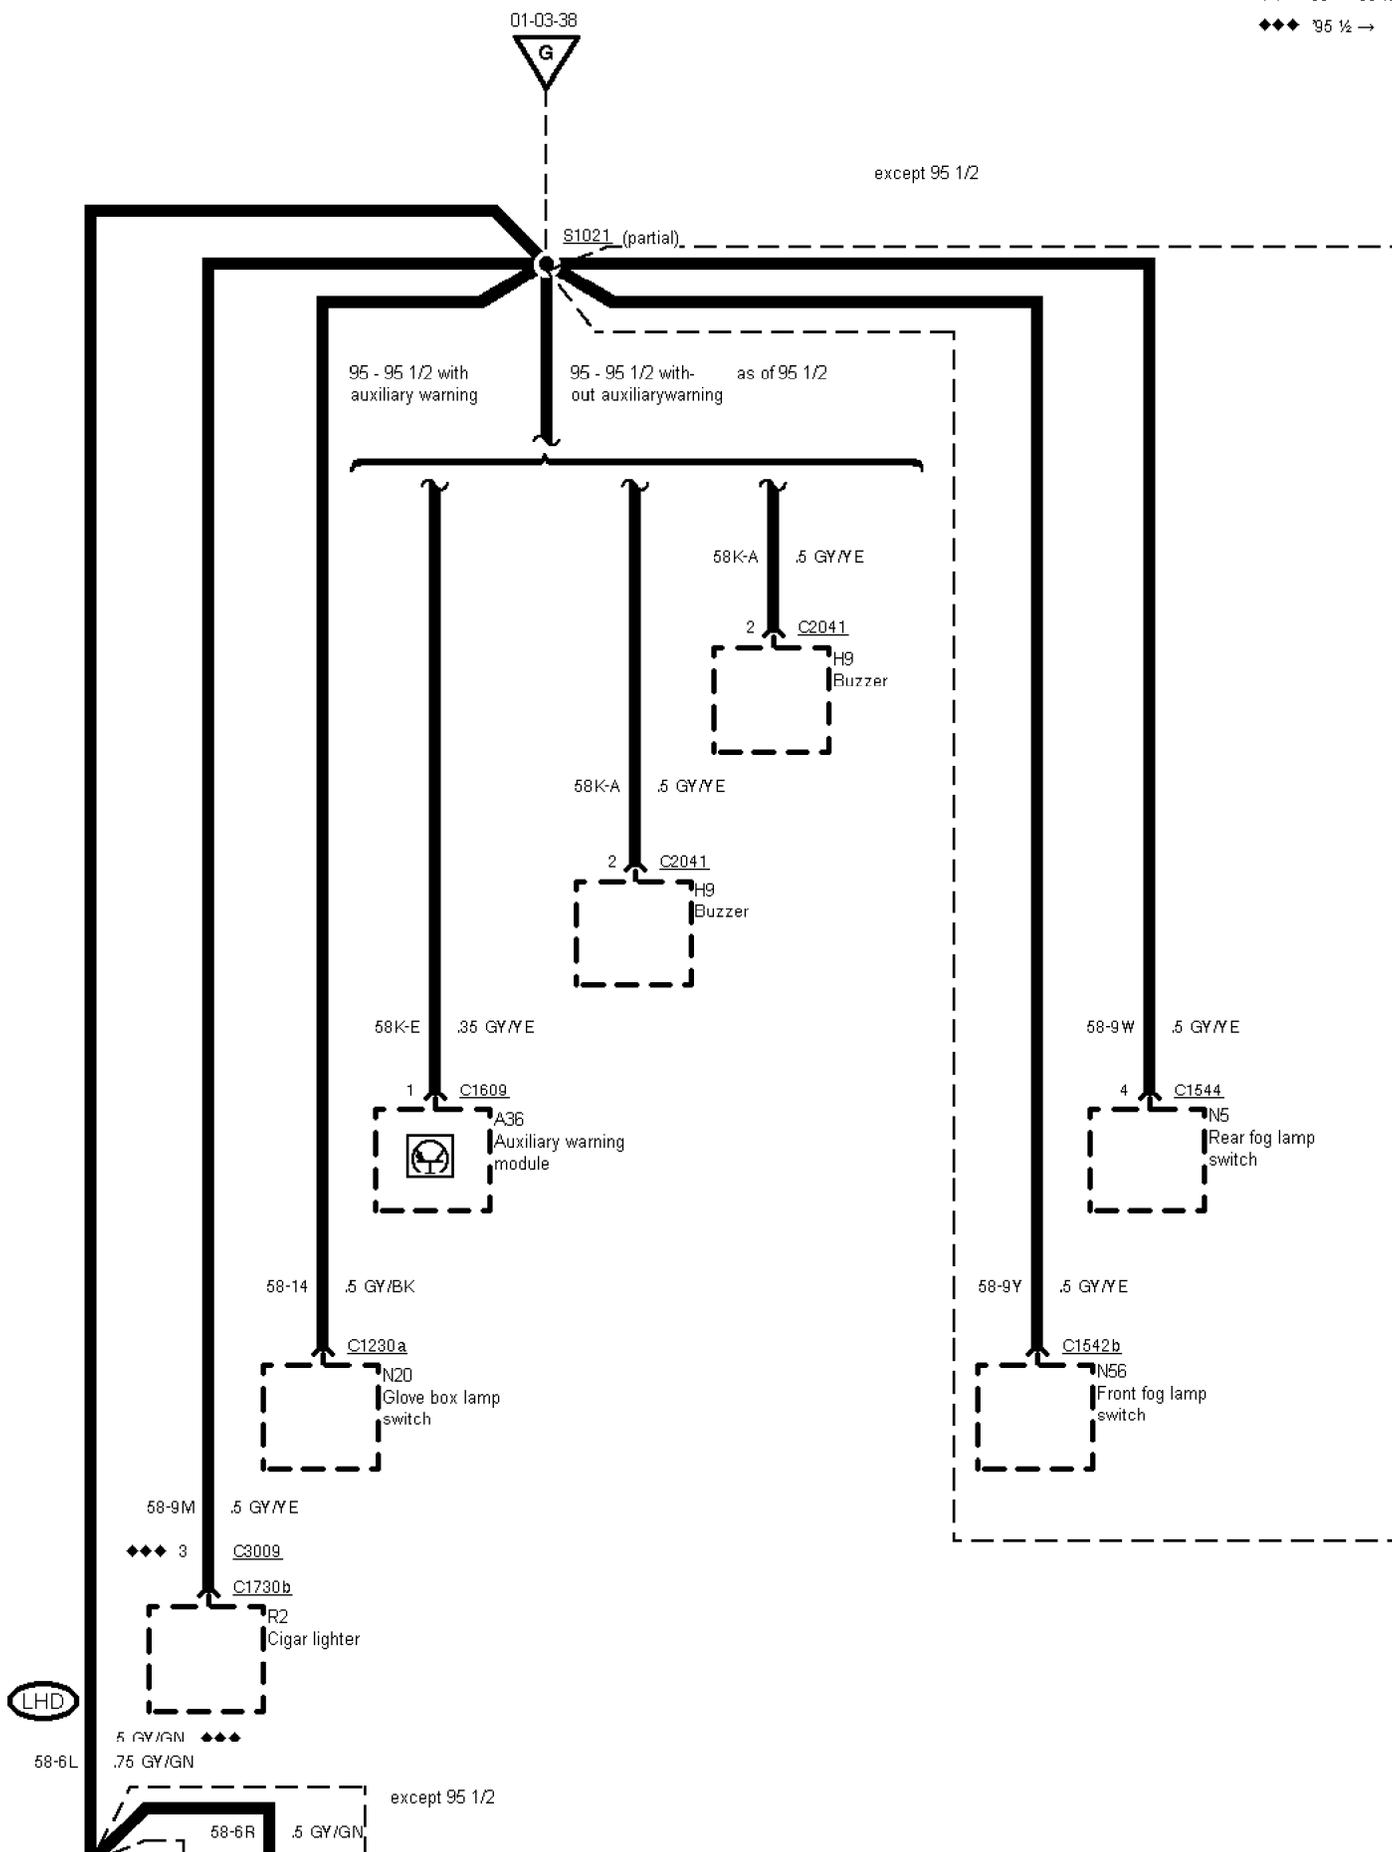

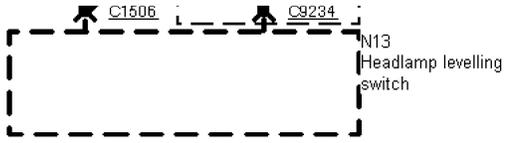


01-03-040 , Fuse Details , As of 95 without RS Cosworth Fuses 5, 6 and 7

- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

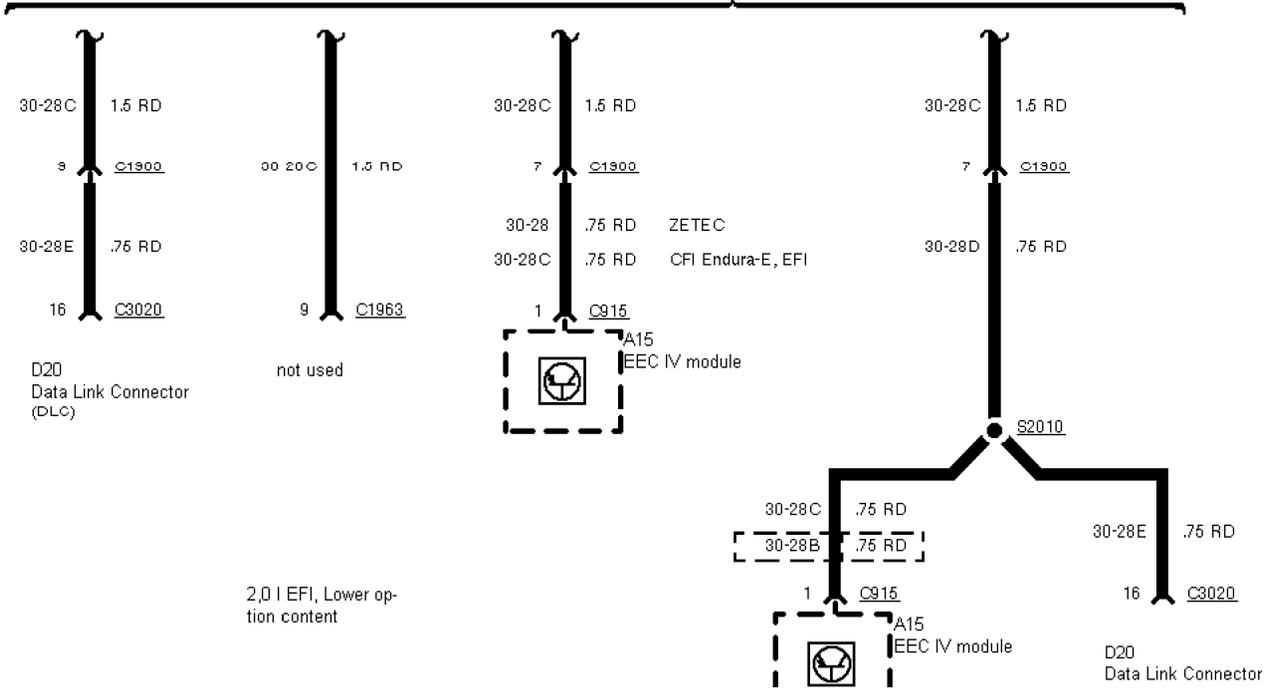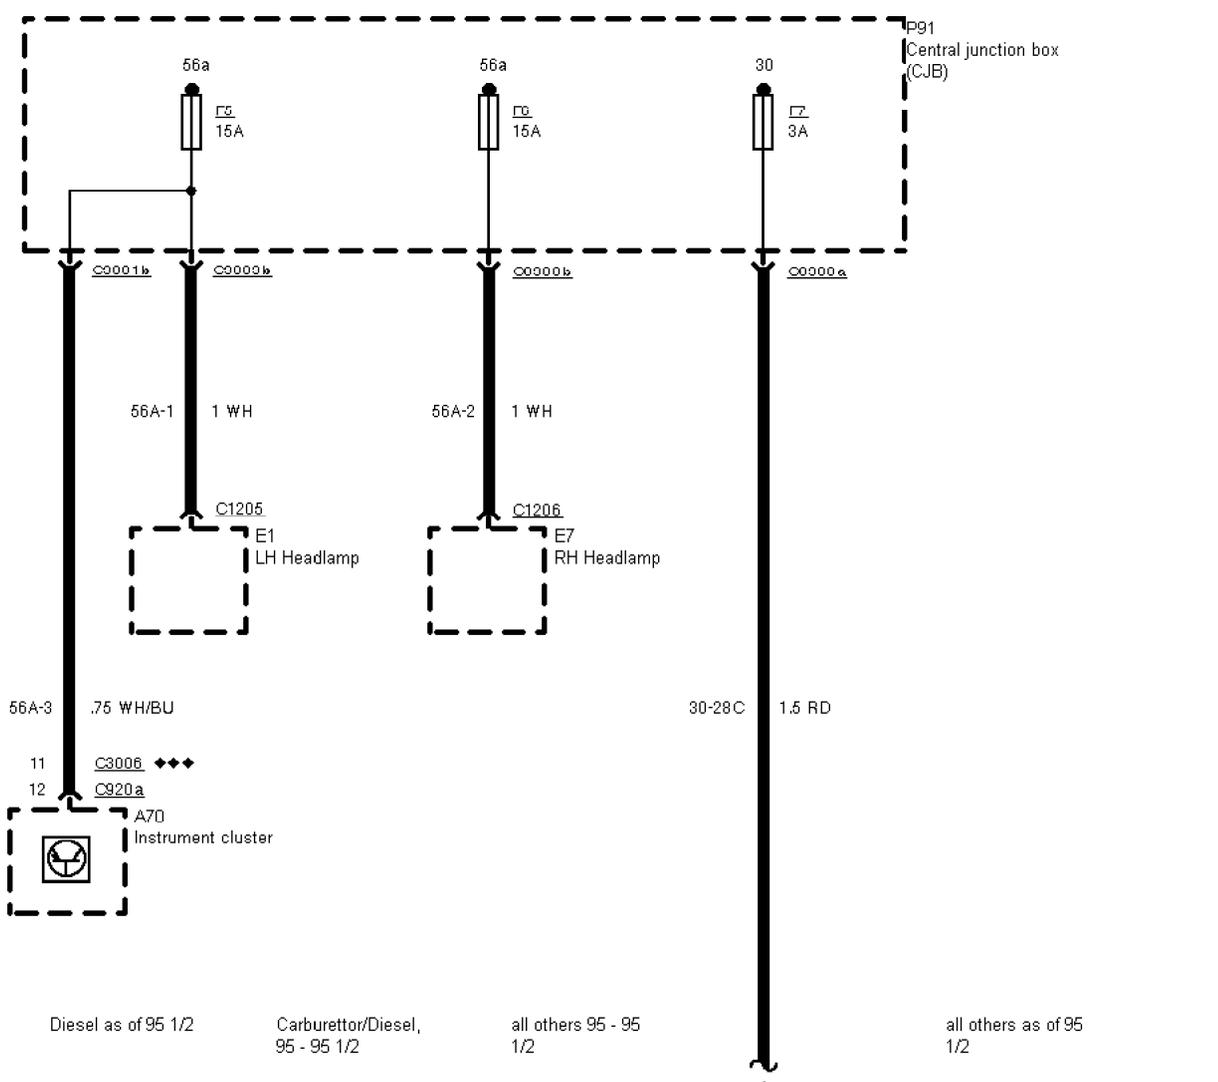


01-03-041 , Fuse Details , As of 95 without RS Cosworth Fuse 8

- ◆ → '95
- ◆◆ 95 → '95 1/2
- ◆◆◆ '95 1/2 →

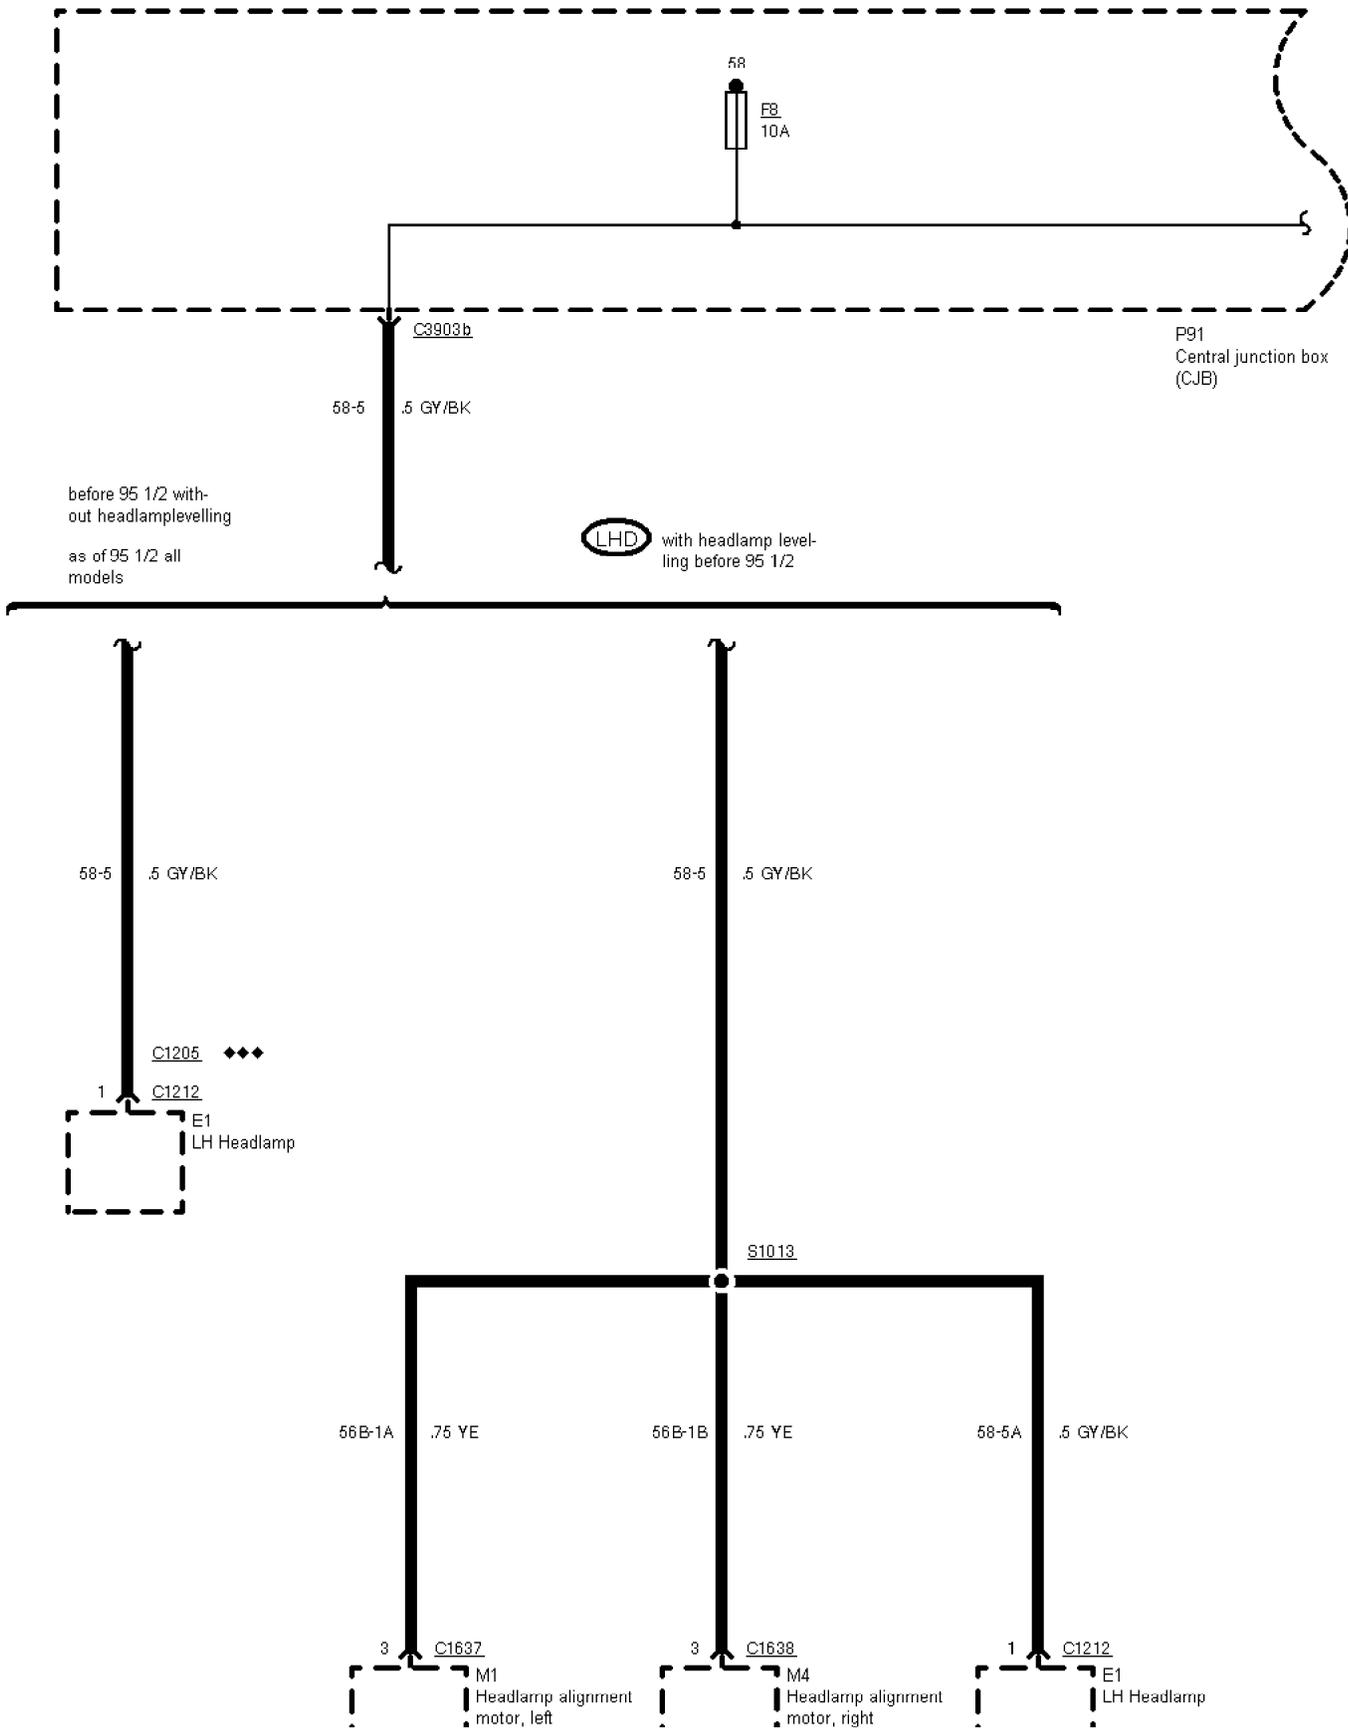



01-03-042 , Fuse Details , As of 95 without RS Cosworth Fuse 8

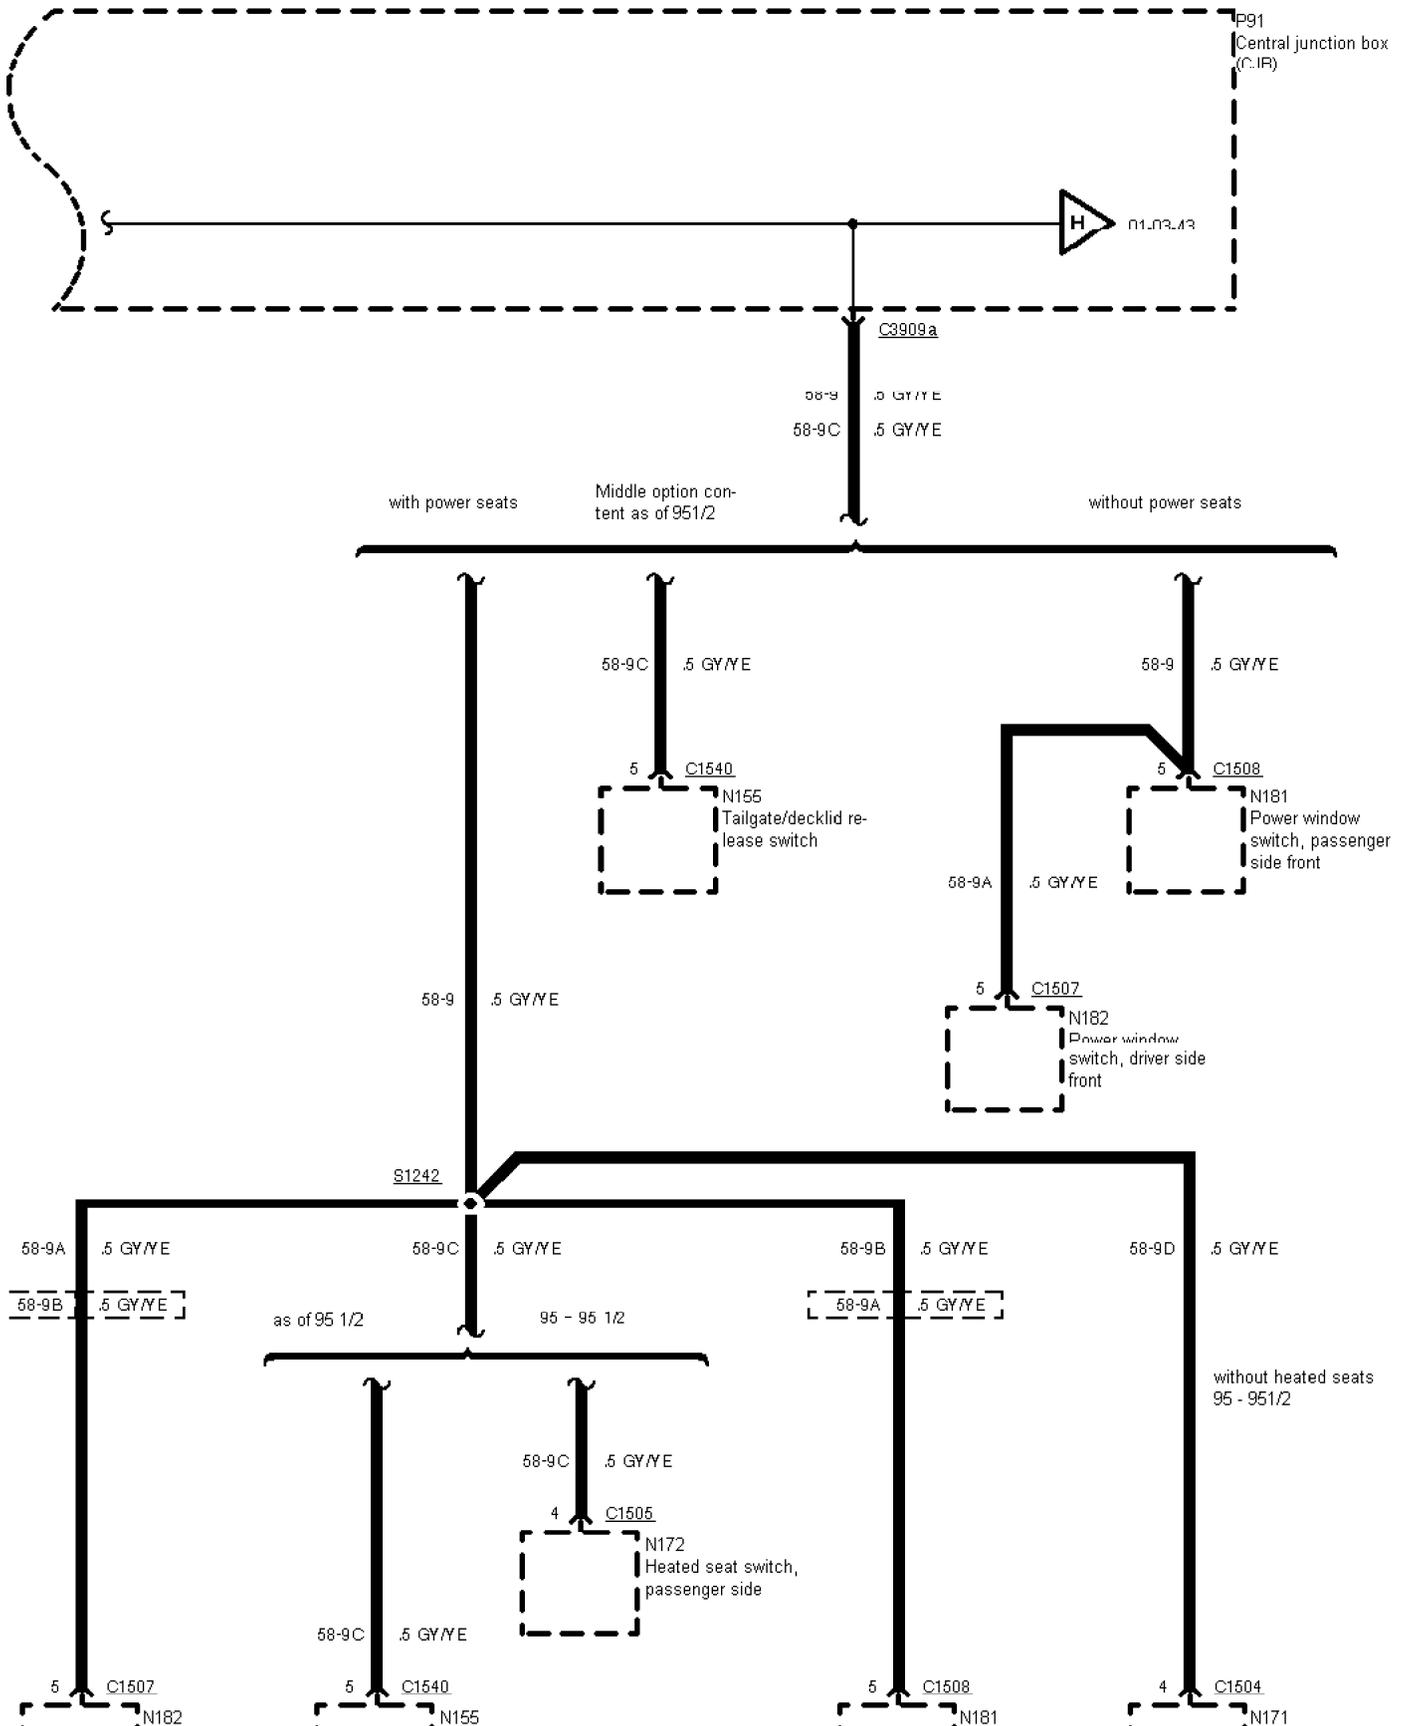


Power window switch, driver side front



Tailgate/decklid release switch

Power window switch, passenger side front


Heated seat switch, driver side

 
01-03-043 , Fuse Details , As of 95 without RS Cosworth Fuse 8

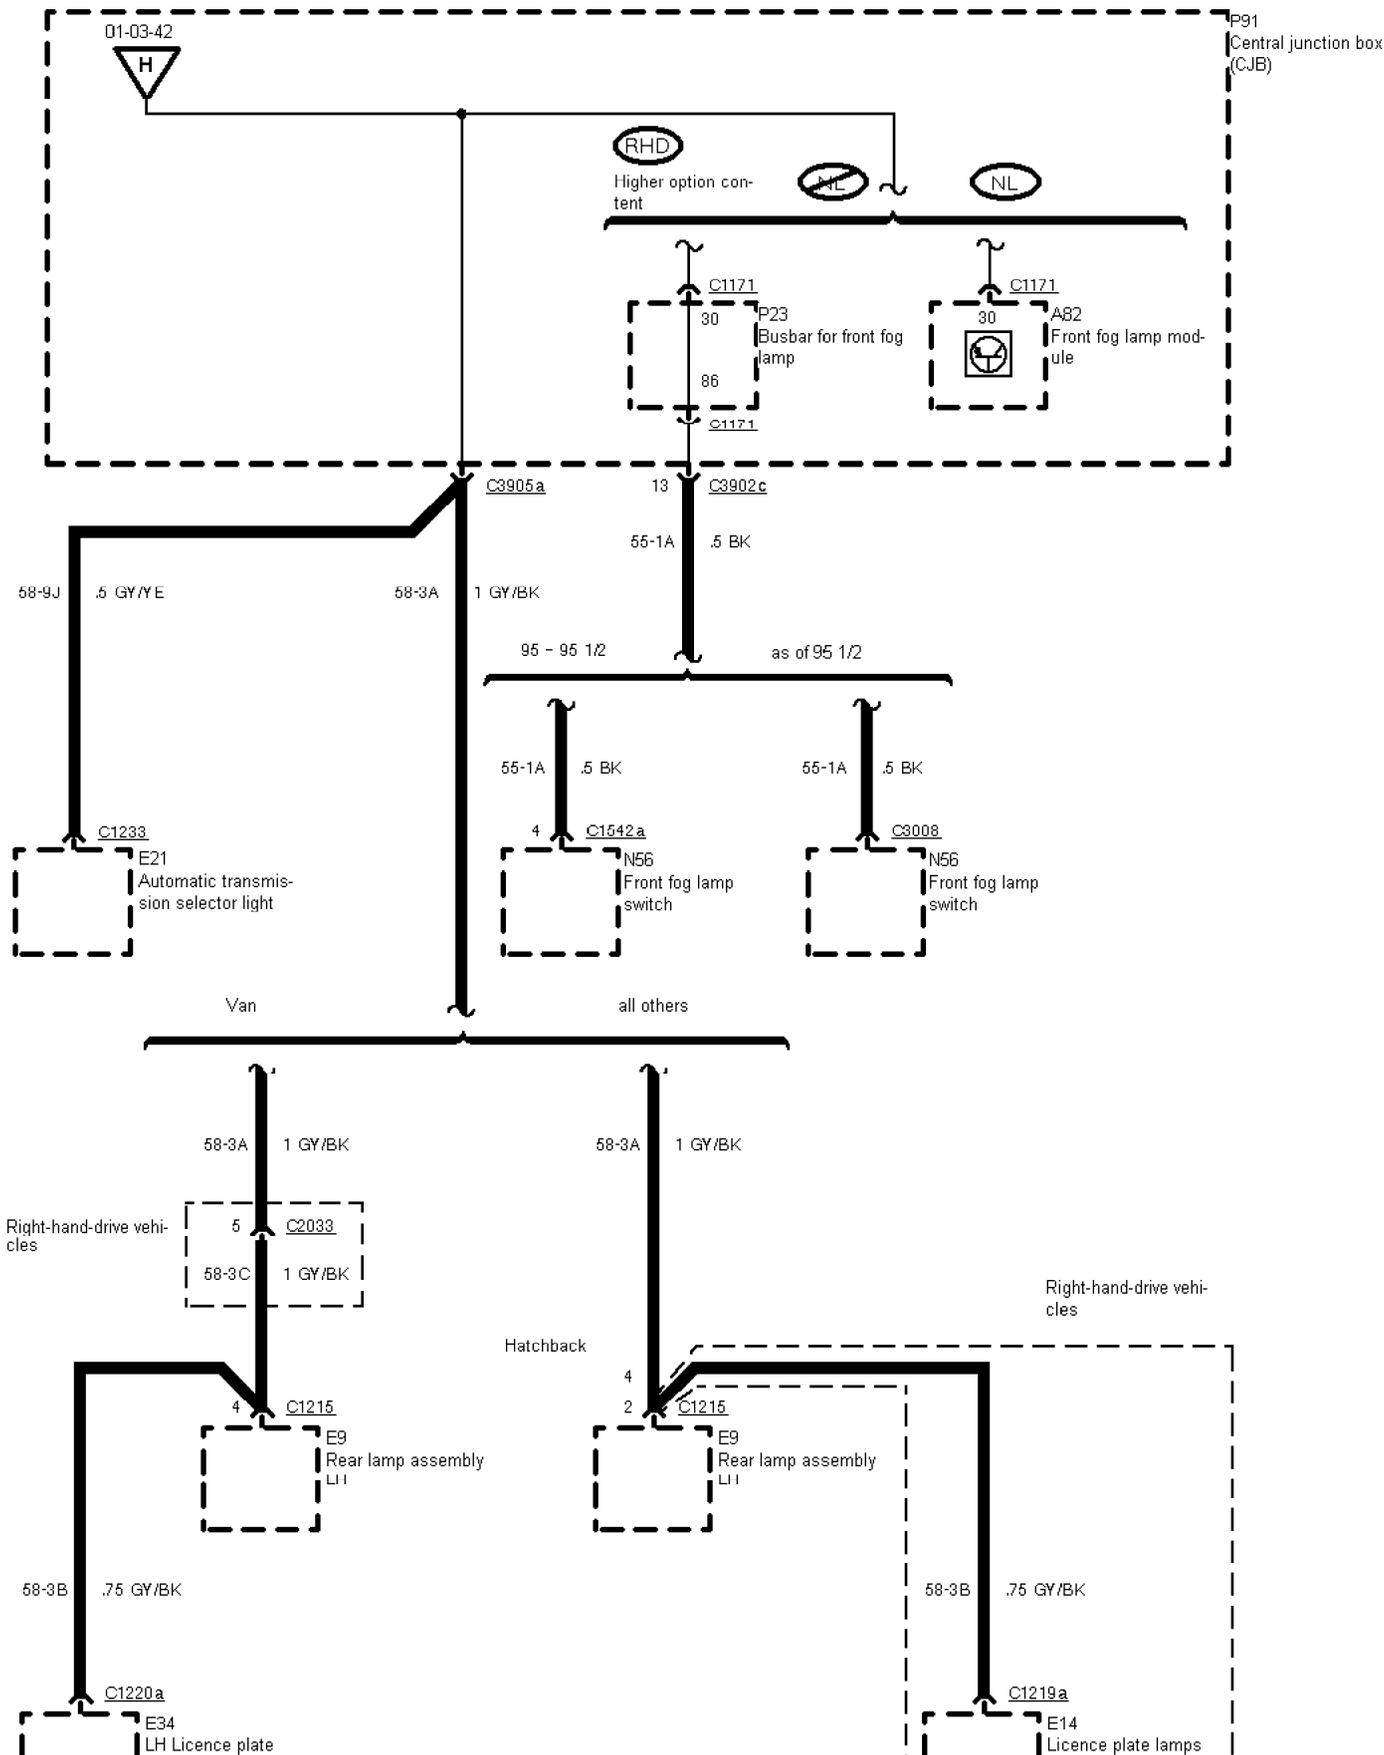

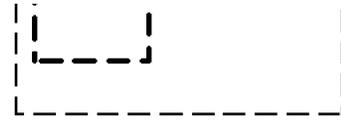


01-03-044 , Fuse Details , As of 95 without RS Cosworth Fuses 9, 10 and 11

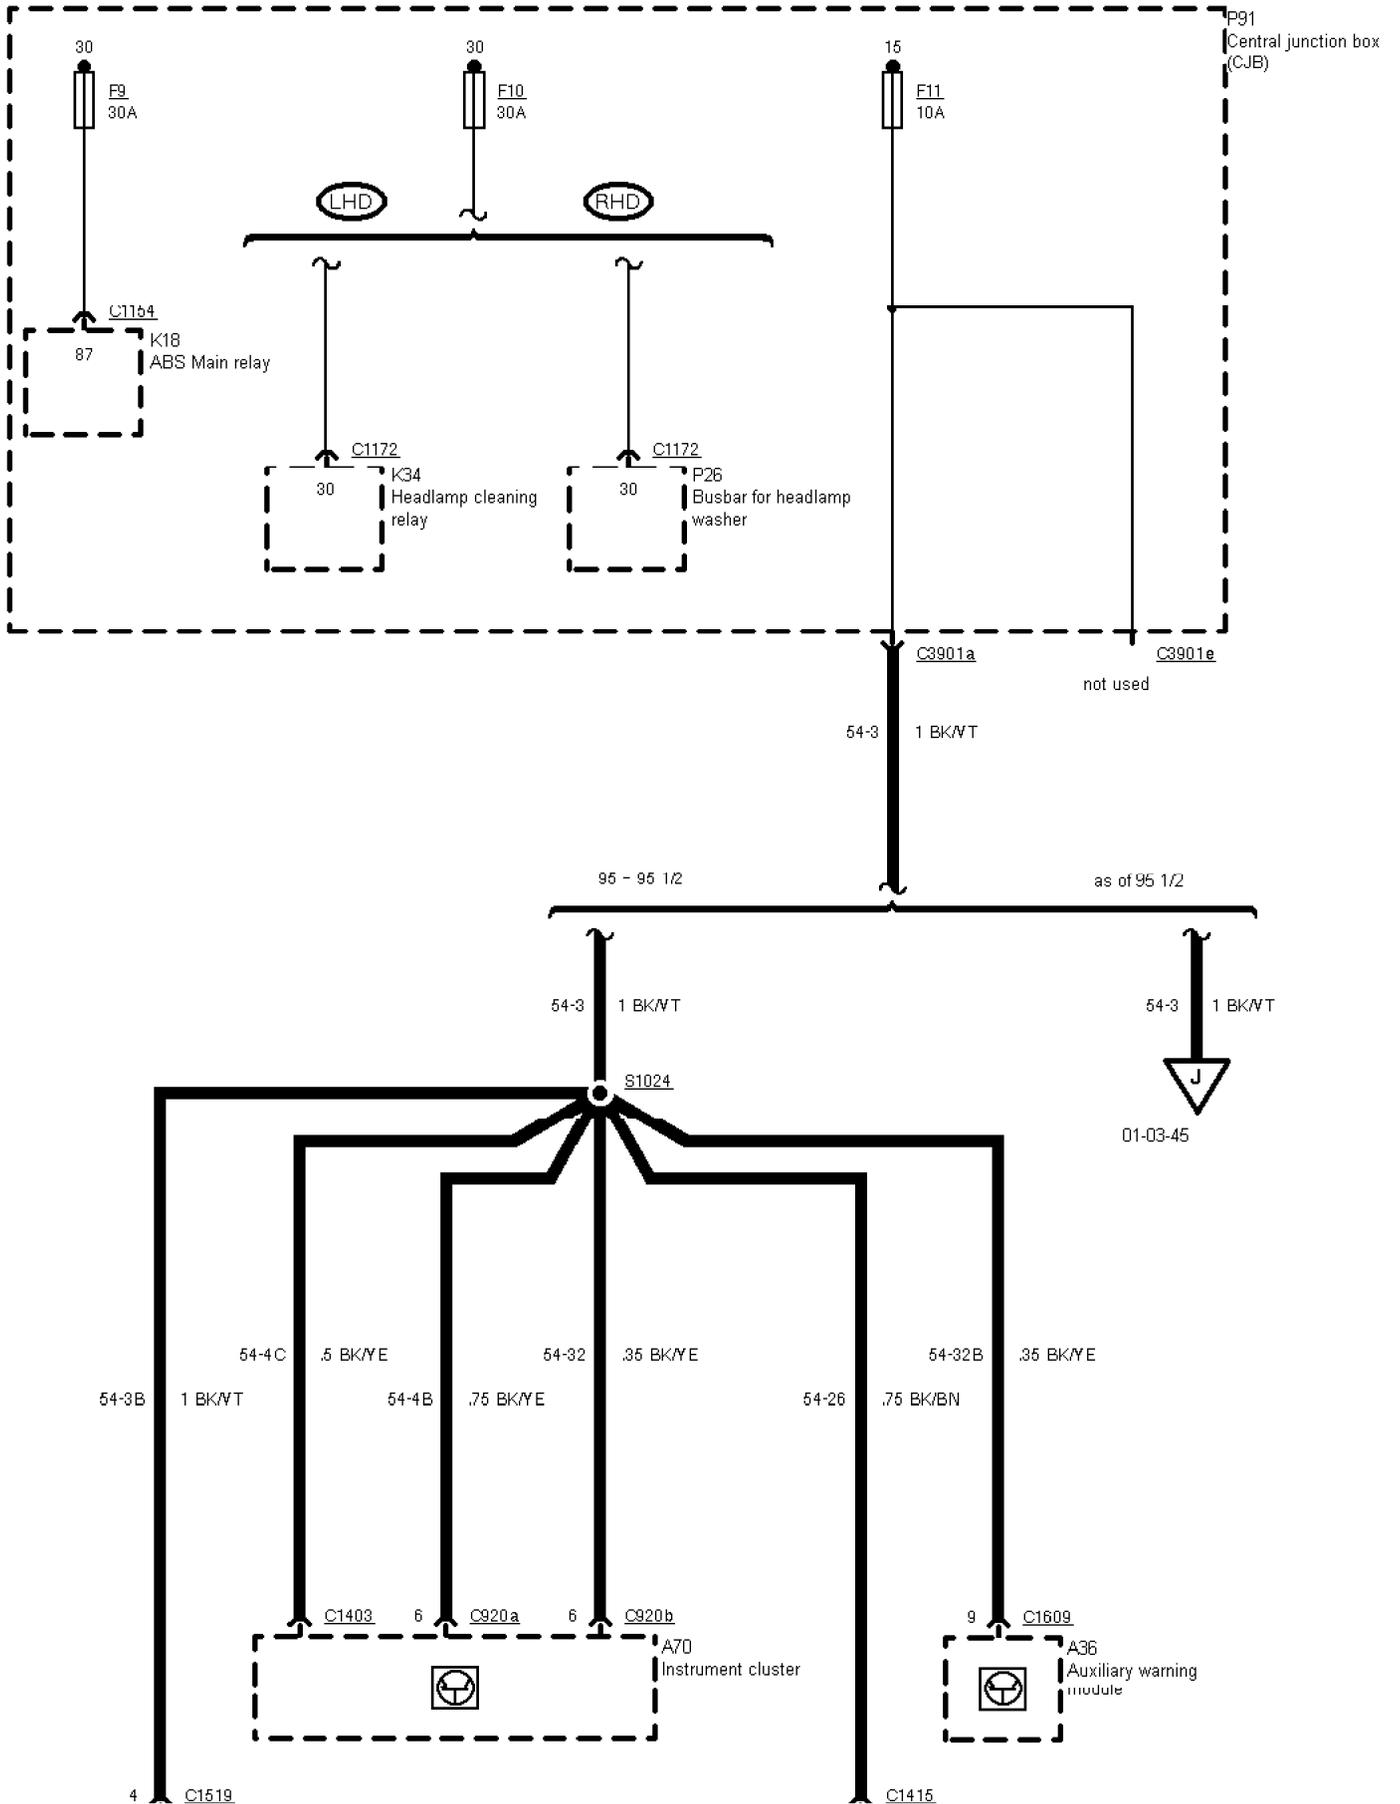

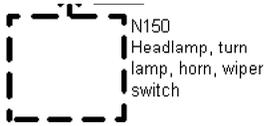


01-03-045 , Fuse Details , As of 95 without RS Cosworth Fuse 11 as of 95 1/2

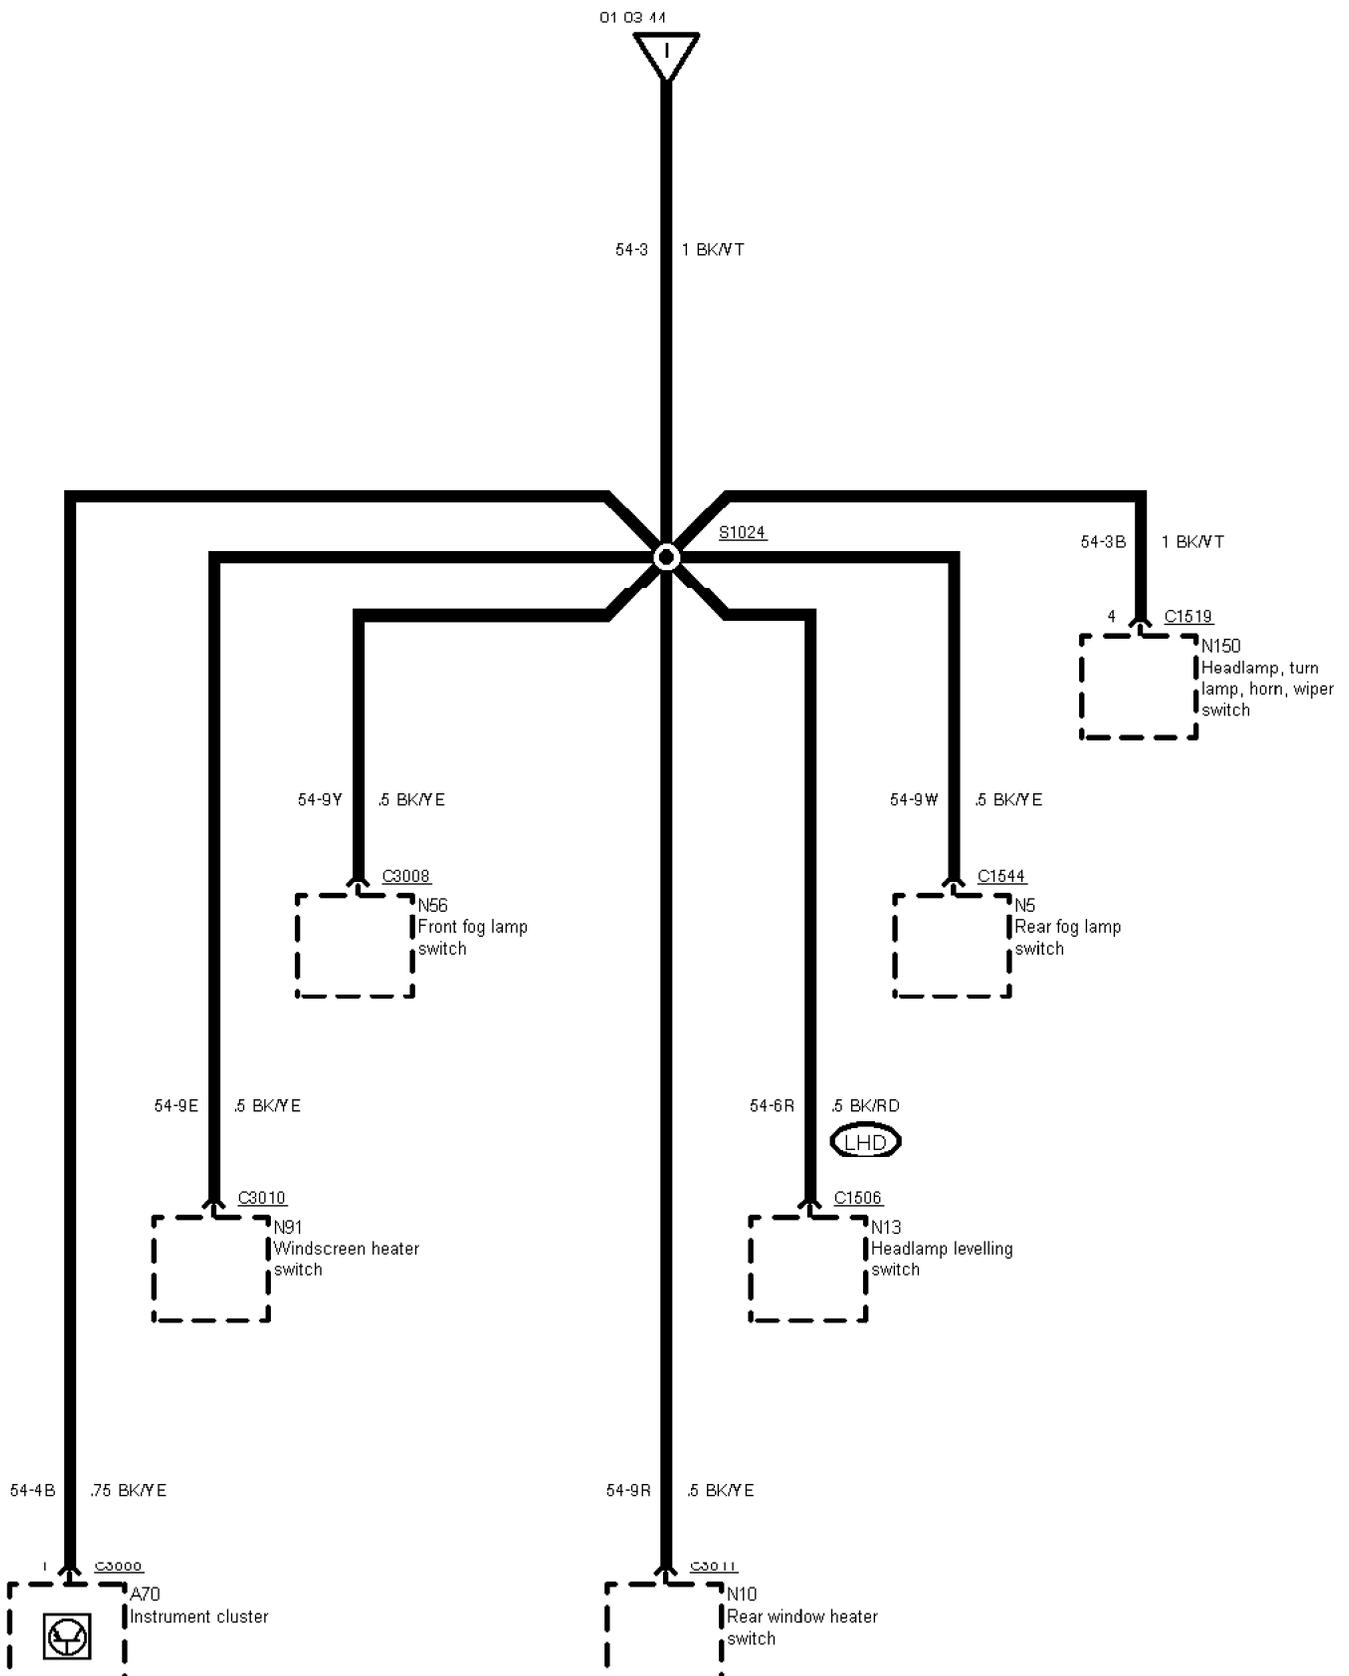


— — — J



— — — J

01-03-046 , Fuse Details , As of 95 without RS Cosworth Fuse 12

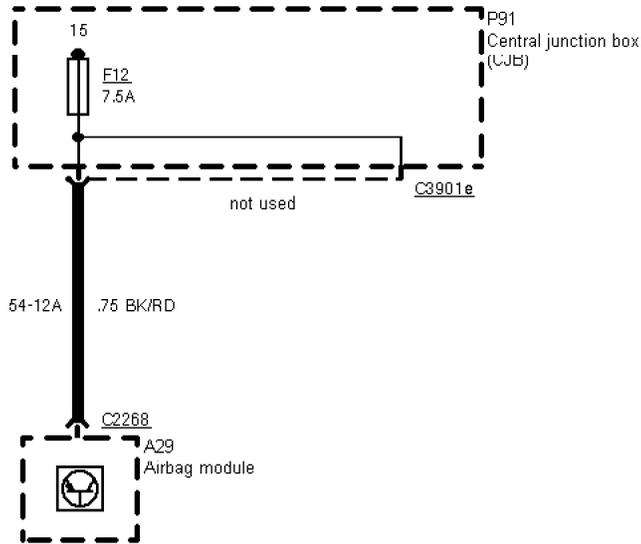



As of 95 without RS Cosworth Diesel/Carburettor models Fuse 13

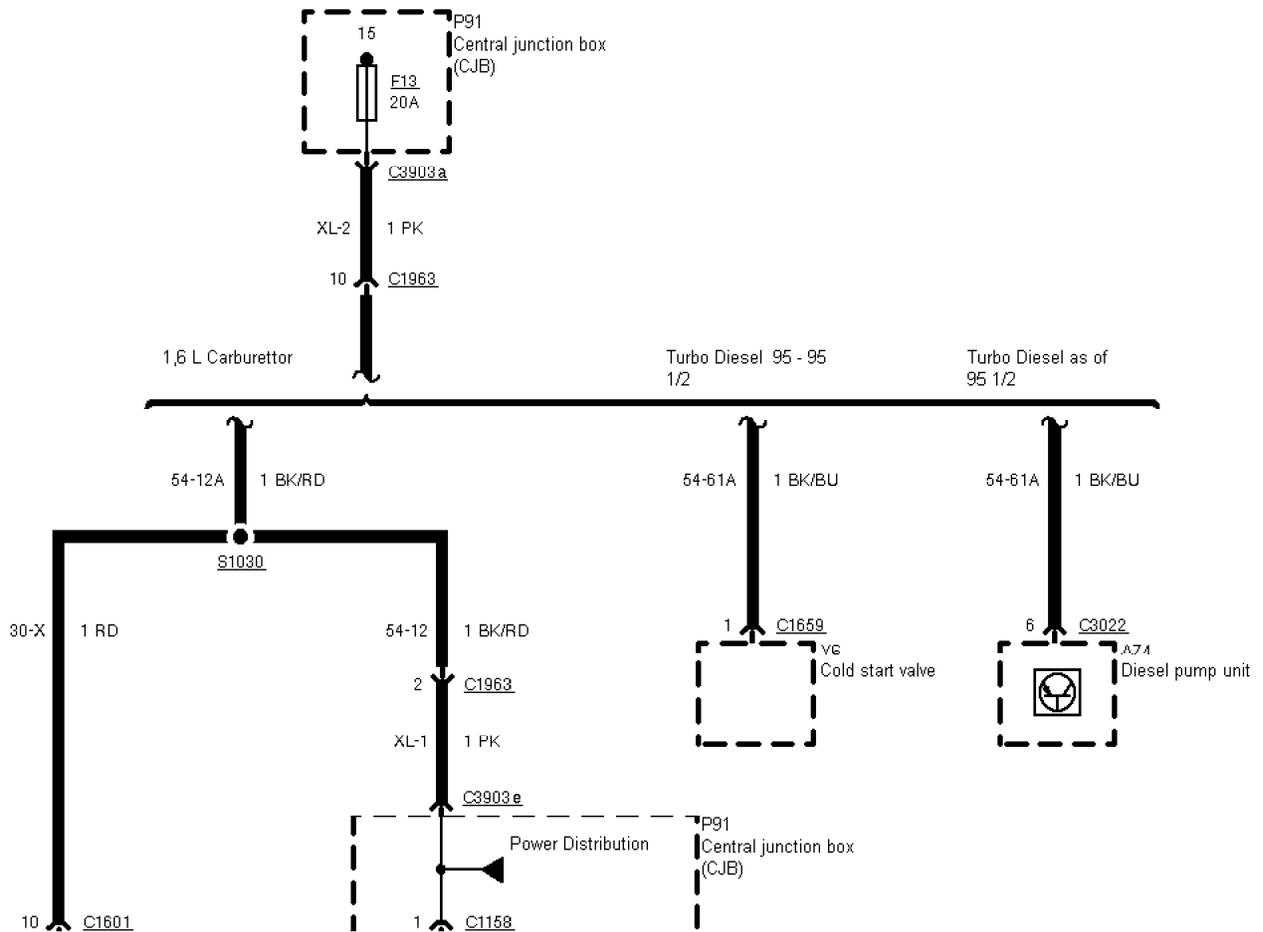

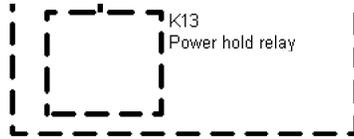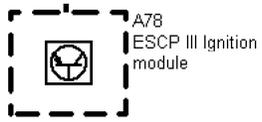


01-03-047 , Fuse Details , As of 95 without RS Cosworth Fuse 13 With fuel injection


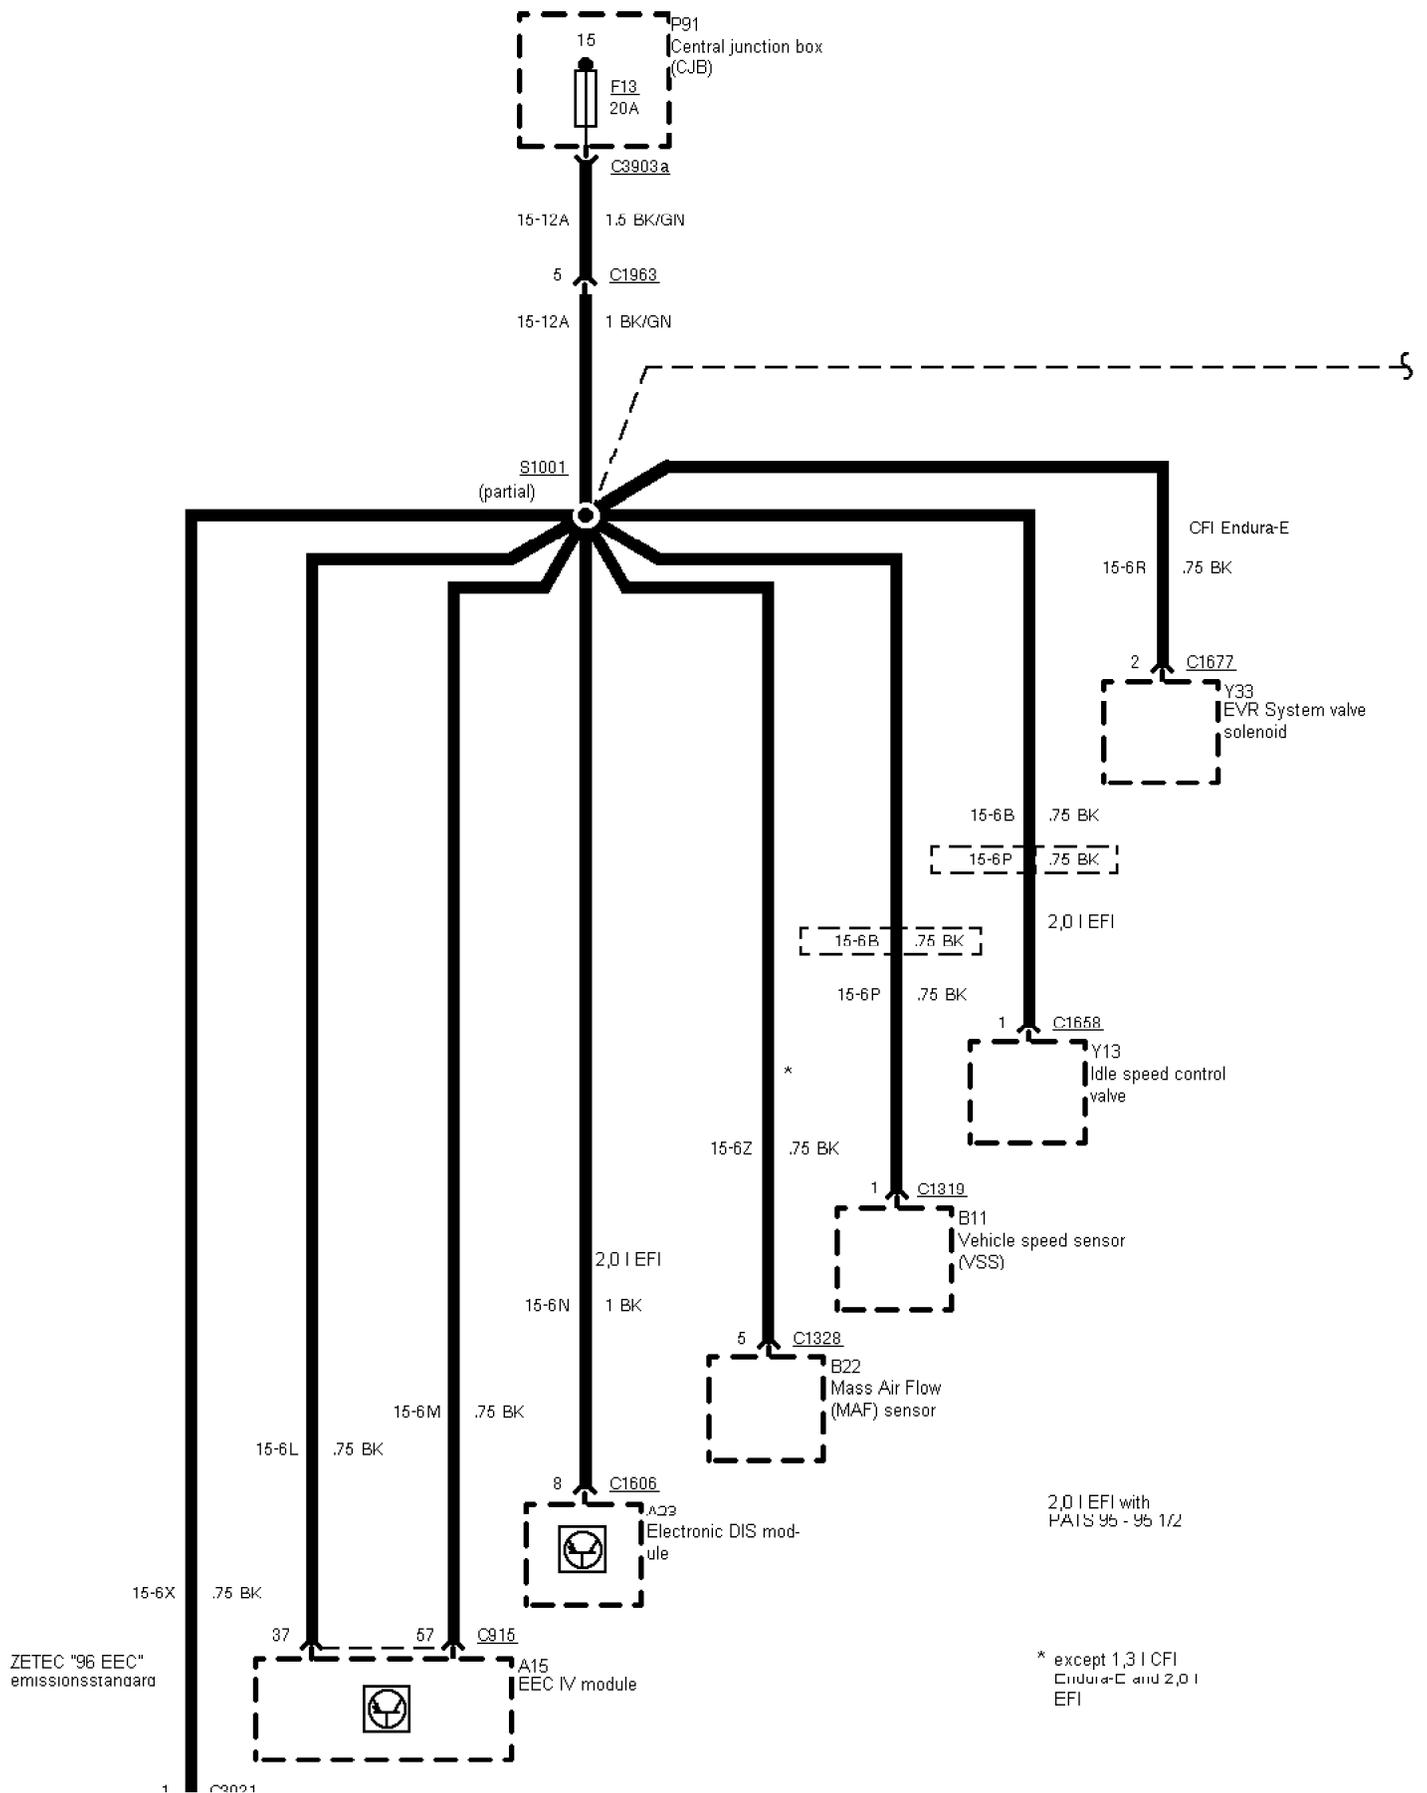


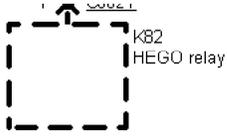

01-03-048 , Fuse Details , As of 95 without RS Cosworth Fuse 13 With fuel injection


* ZETEC
 ** 1,4 I EFI
 *** ZETEC, 1,4 I EFI

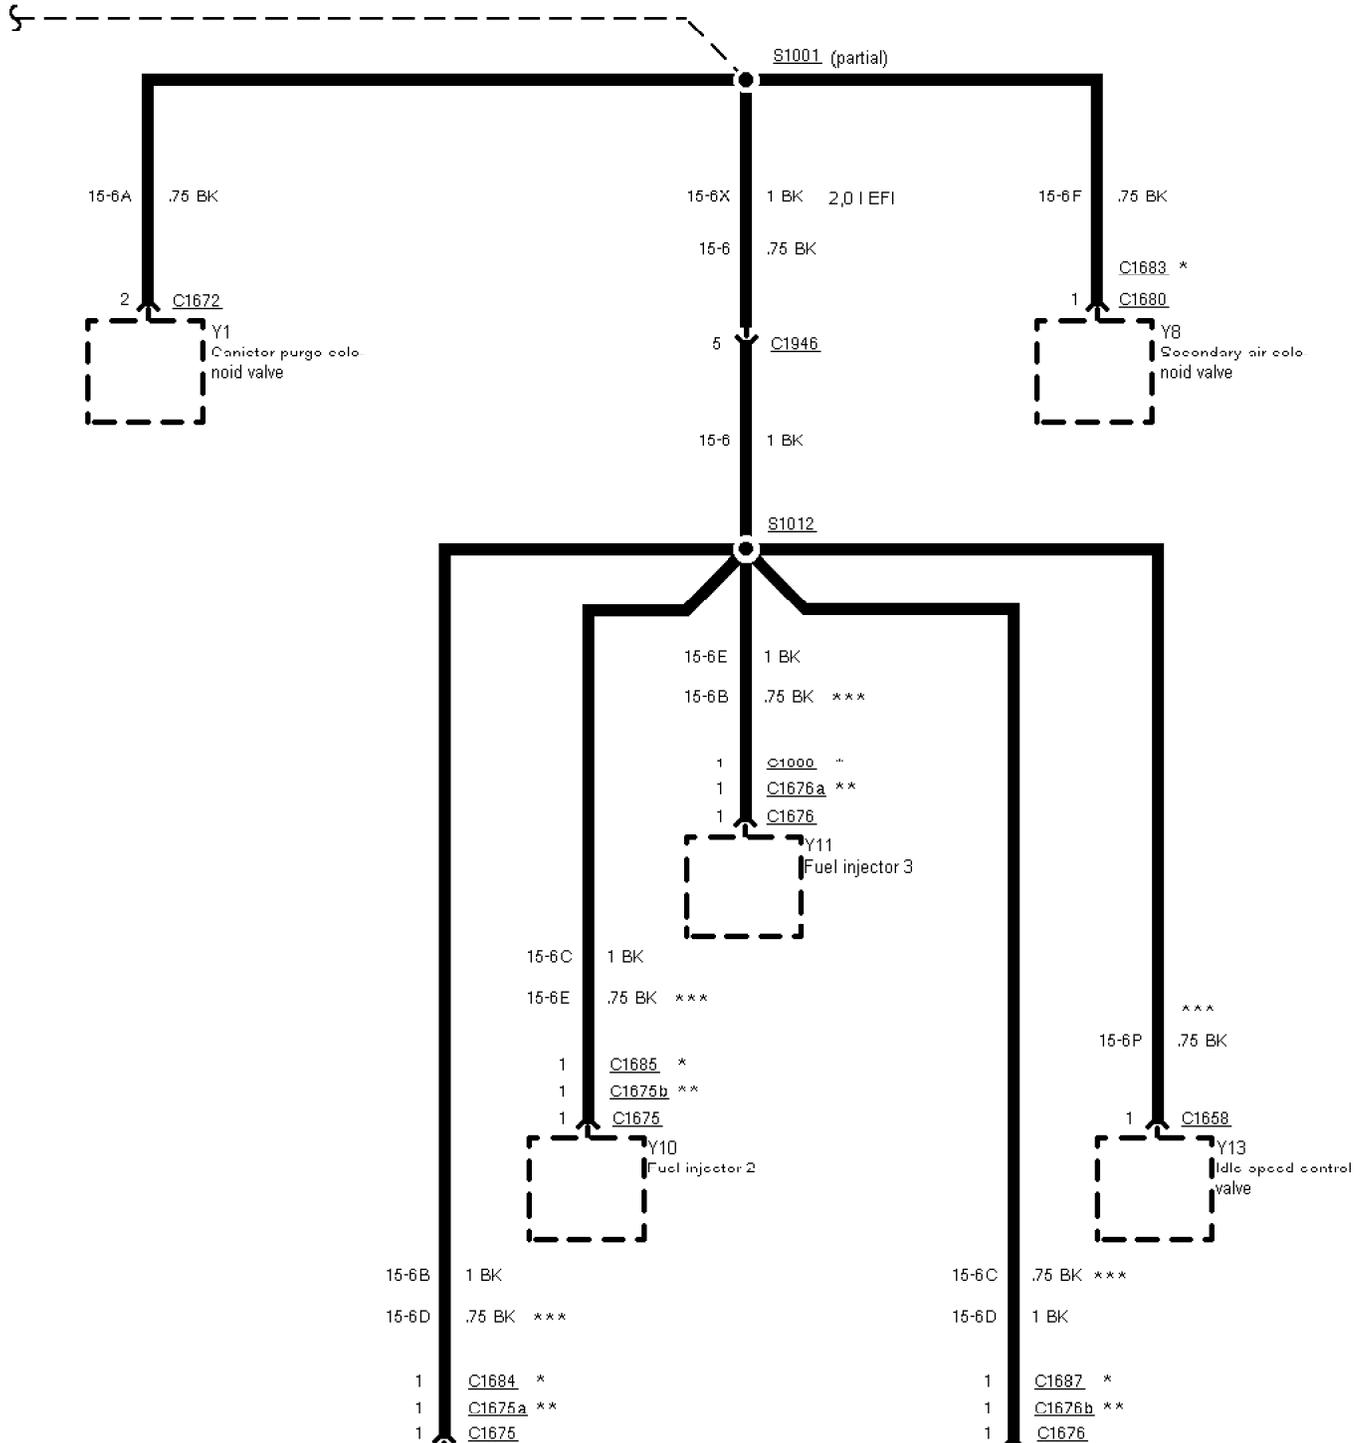

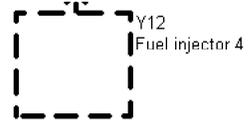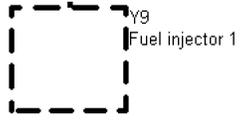


01-03-049 , Fuse Details , As of 95 without RS Cosworth Fuse 14

- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

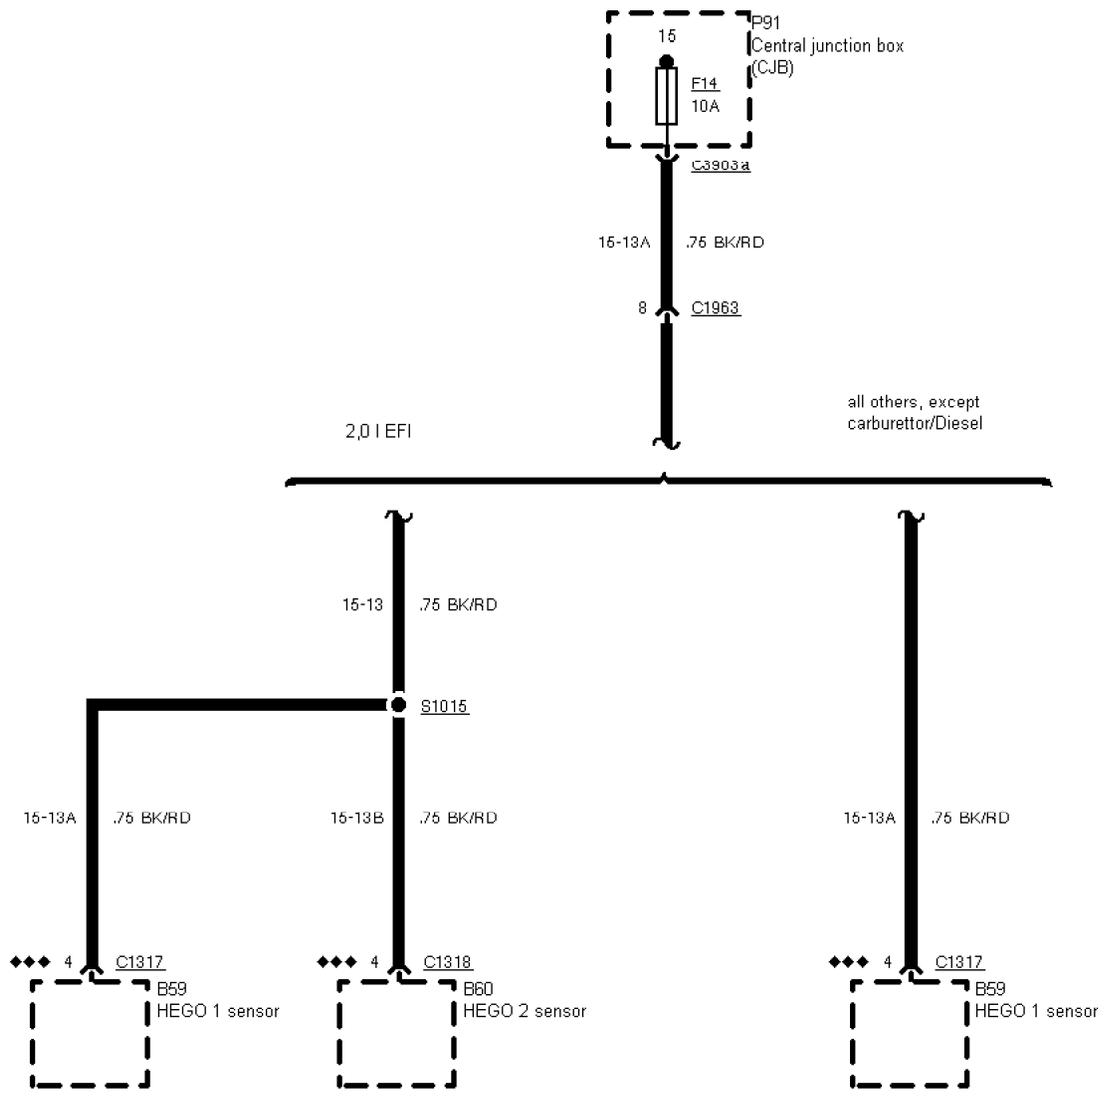



As of 95 without RS Cosworth Fuse 15

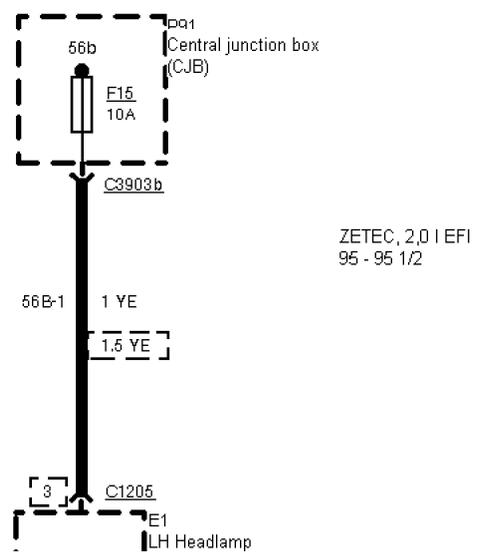



 
01-03-050 , Fuse Details , As of 95 without RS Cosworth Fuse 16

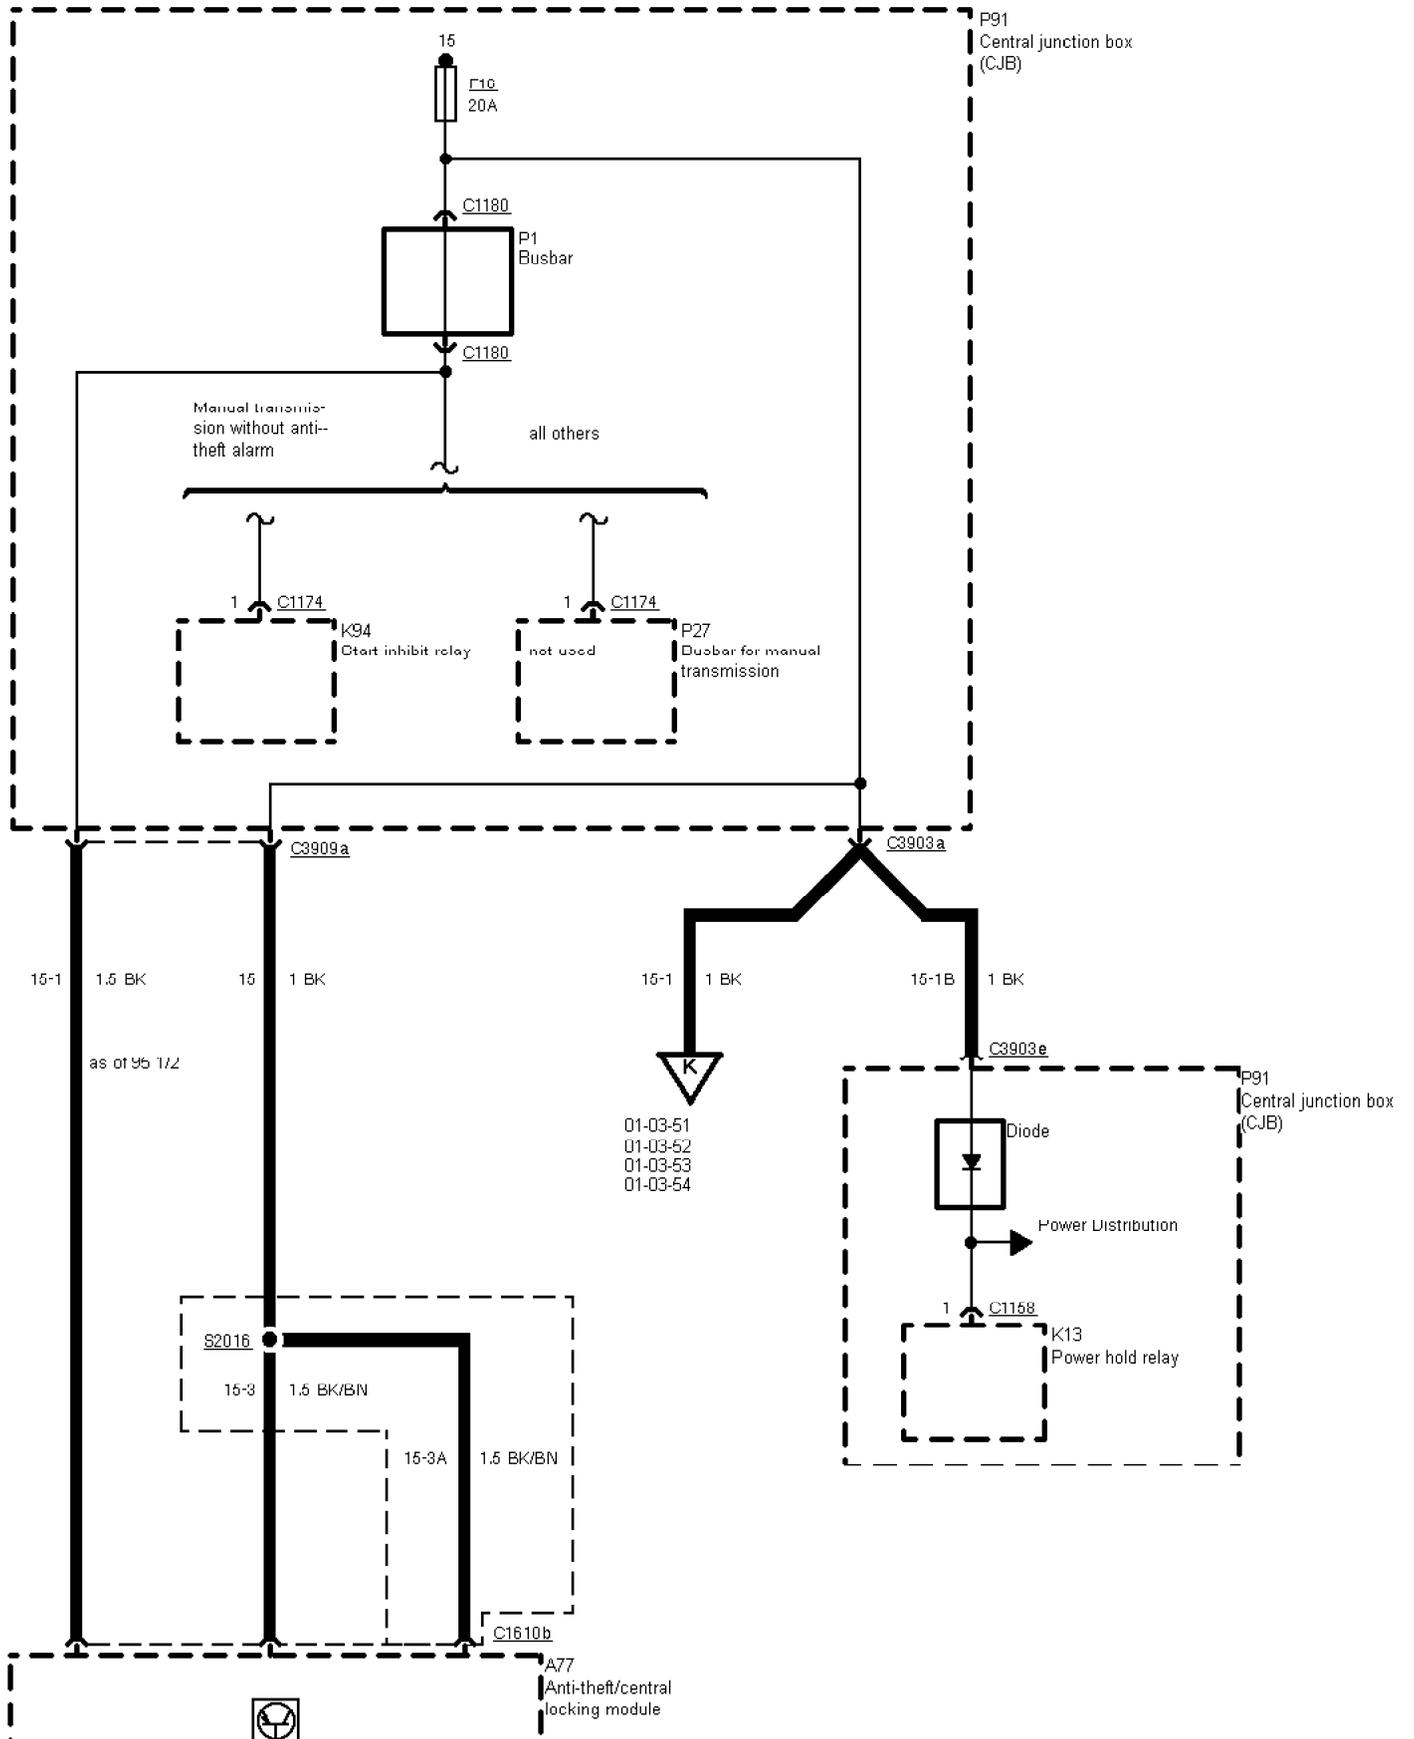




01-03-051 , Fuse Details , As of 95,without RS Cosworth Fuse 16


Engine Control Manual
Transmission 1,3/1,4/1,6
I, Carburettor

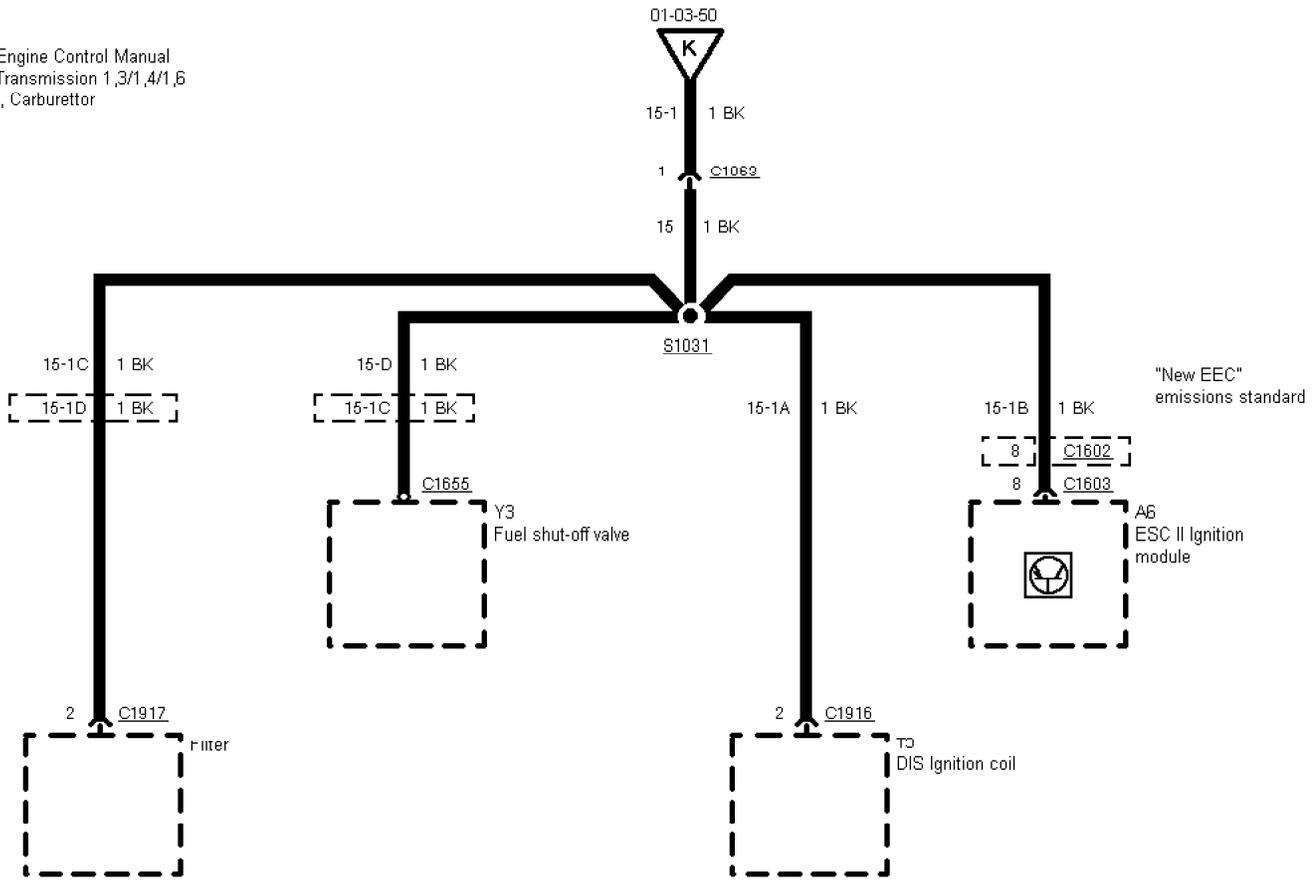

As of 95 without RS Cosworth Fuse 15

Engine Control 1,6 I
Automatic Transmission,
Carburettor

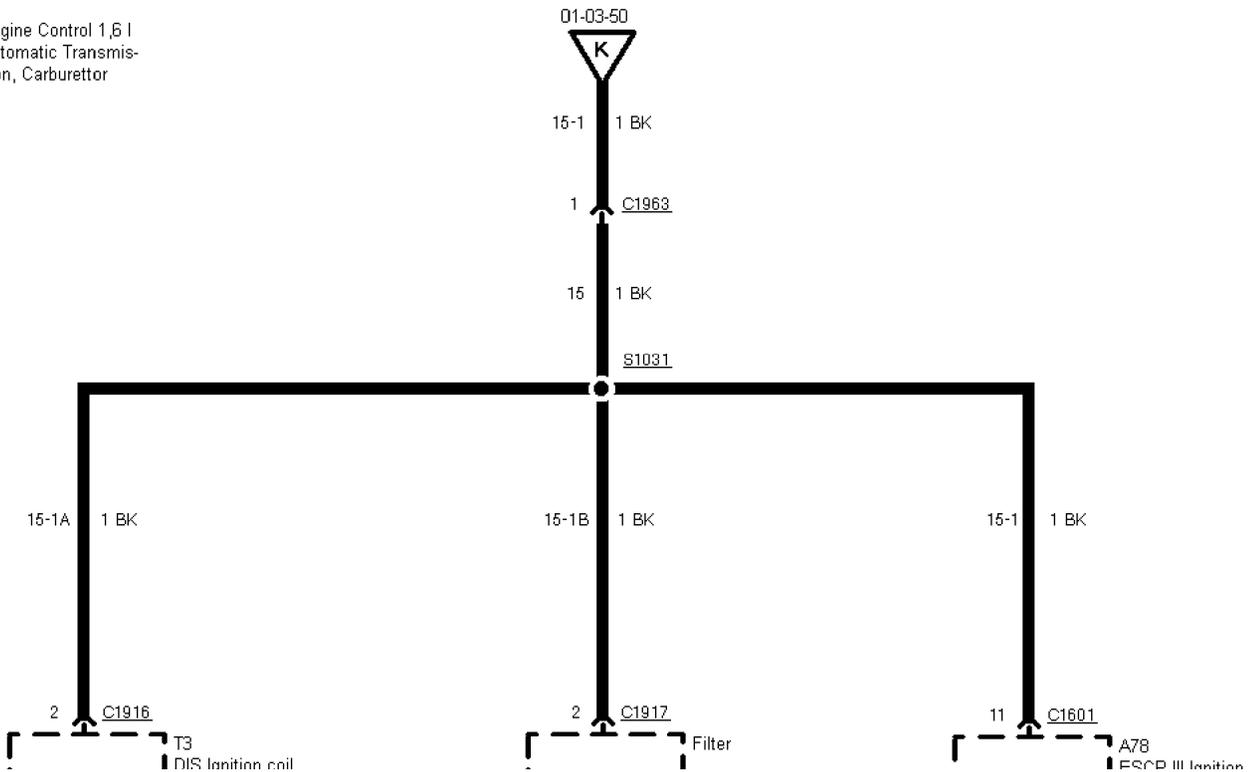


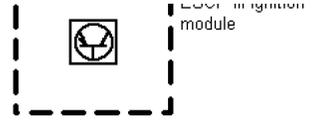

01-03-052 , Fuse Details , As of 95 without RS Cosworth Fuse 16

Engine Control 1,3
 V1,4 I CFI Endura--
 E


◆ → 95
 ◆◆ 95 → 95 ½
 ◆◆◆ 95 ½ →

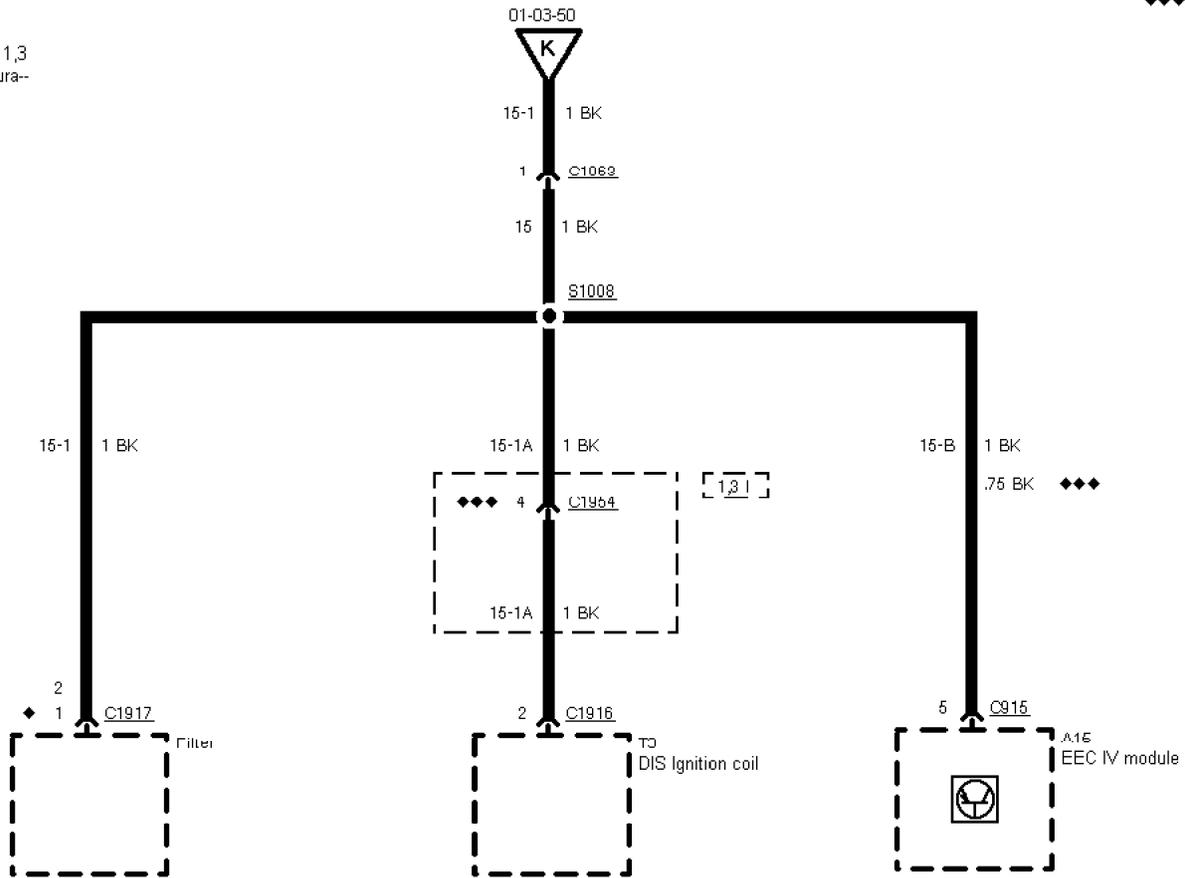

As of 95 without, RS Cosworth Fuse 16

Engine Control 1,4 I
 CFI Fuel Injection

Engine Control 1,6 I/-
 1,8 I ZETEC

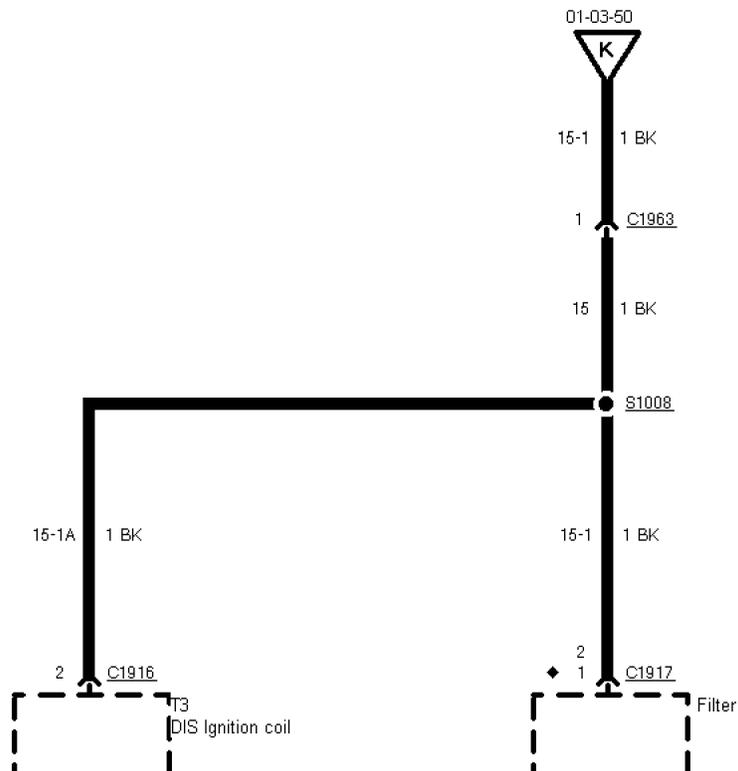




01-03-053 , Fuse Details , As of 95 without RS Cosworth Fuse 16


Engine Control 2,0
I EFi

◆ → '95
◆◆ 95 → '95 1/2
◆◆◆ '95 1/2 →

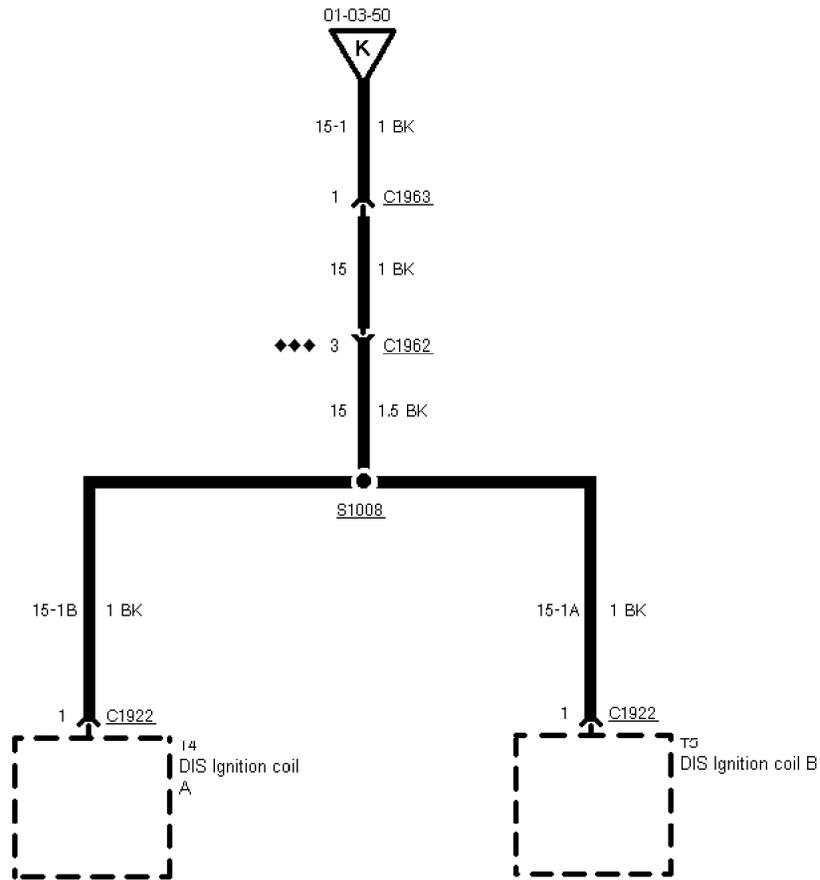


As of '95 without RS Cosworth Fuse 16

Engine Control 1,8
I Diesel

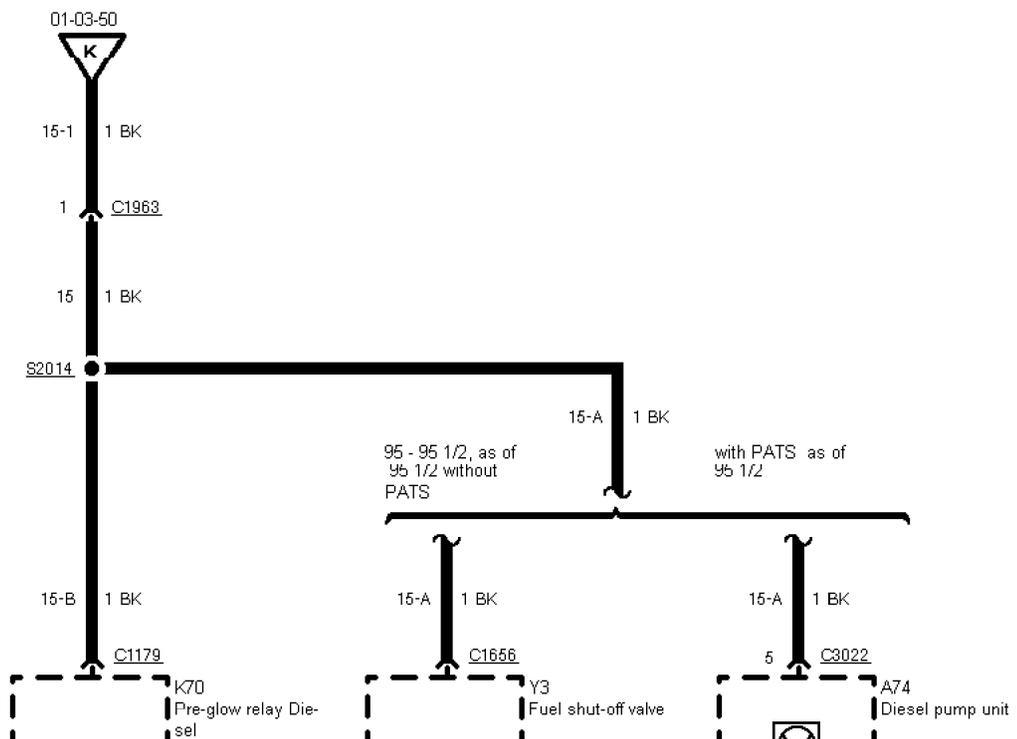




01-03-054 , Fuse Details , As of 95 without RS Cosworth Fuse 16

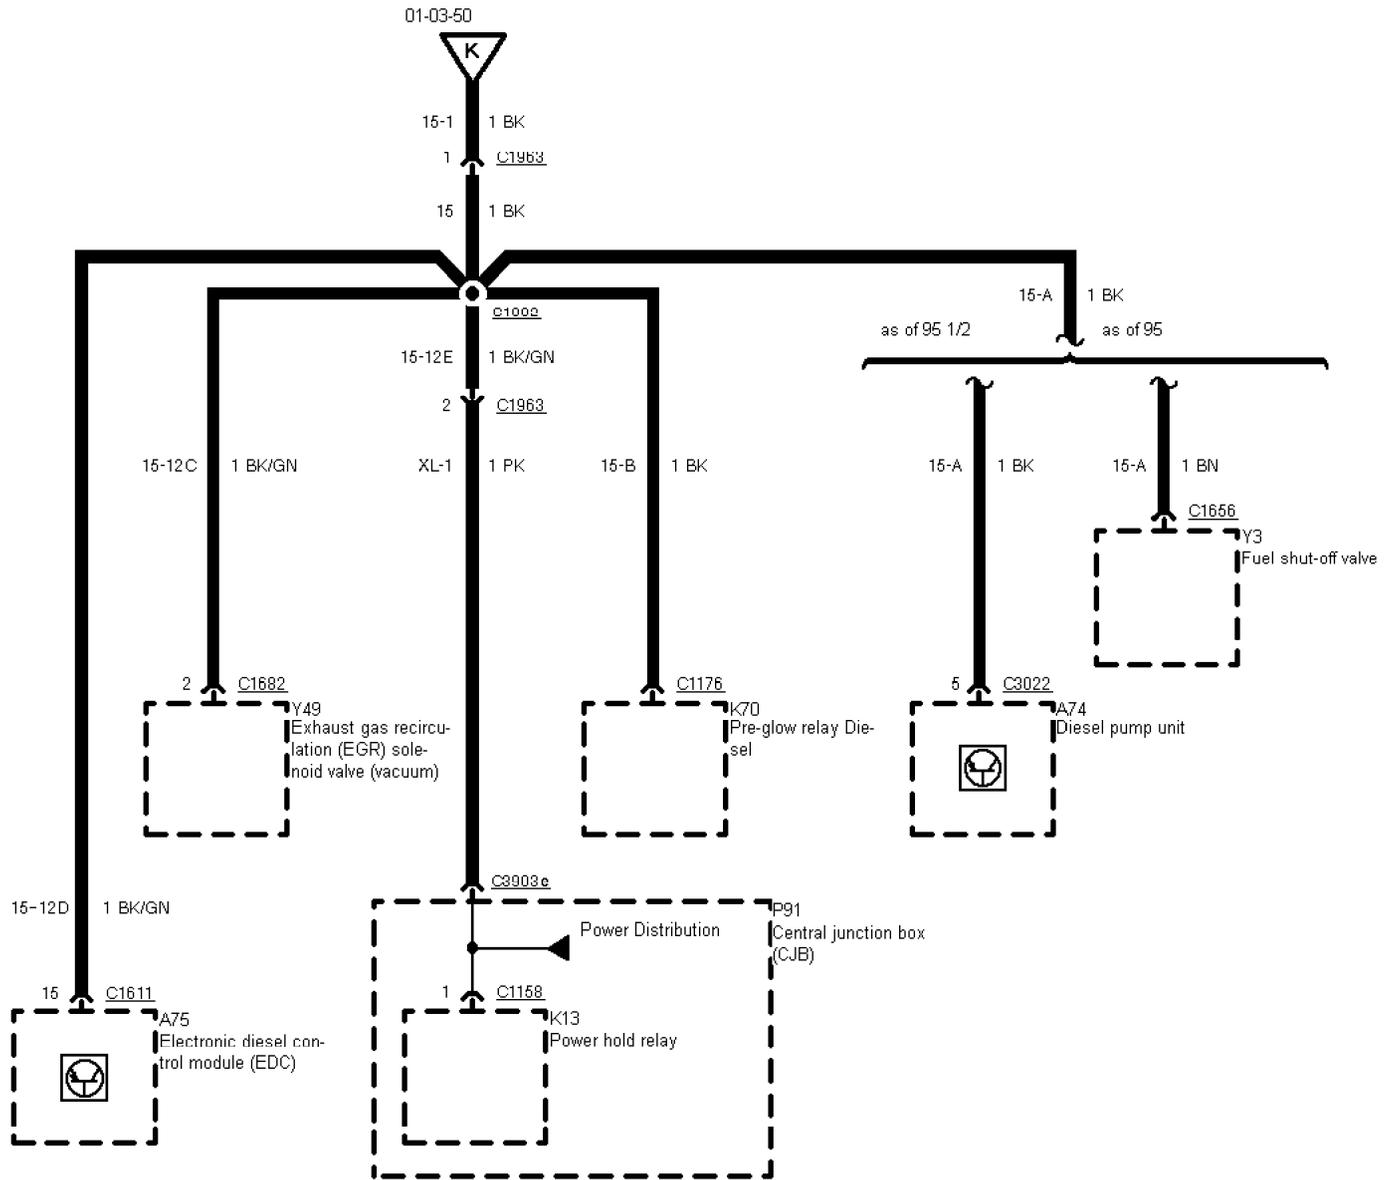


As of 95 without RS Cosworth Fuse 17

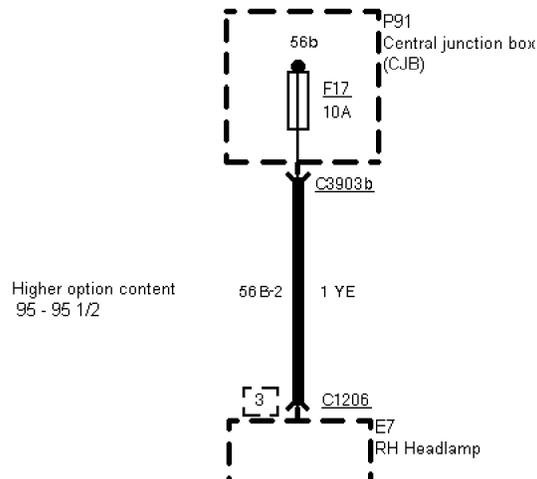




01-03-055 , Fuse Details , As of 95 without RS Cosworth Fuse 18 Except Cabriolet

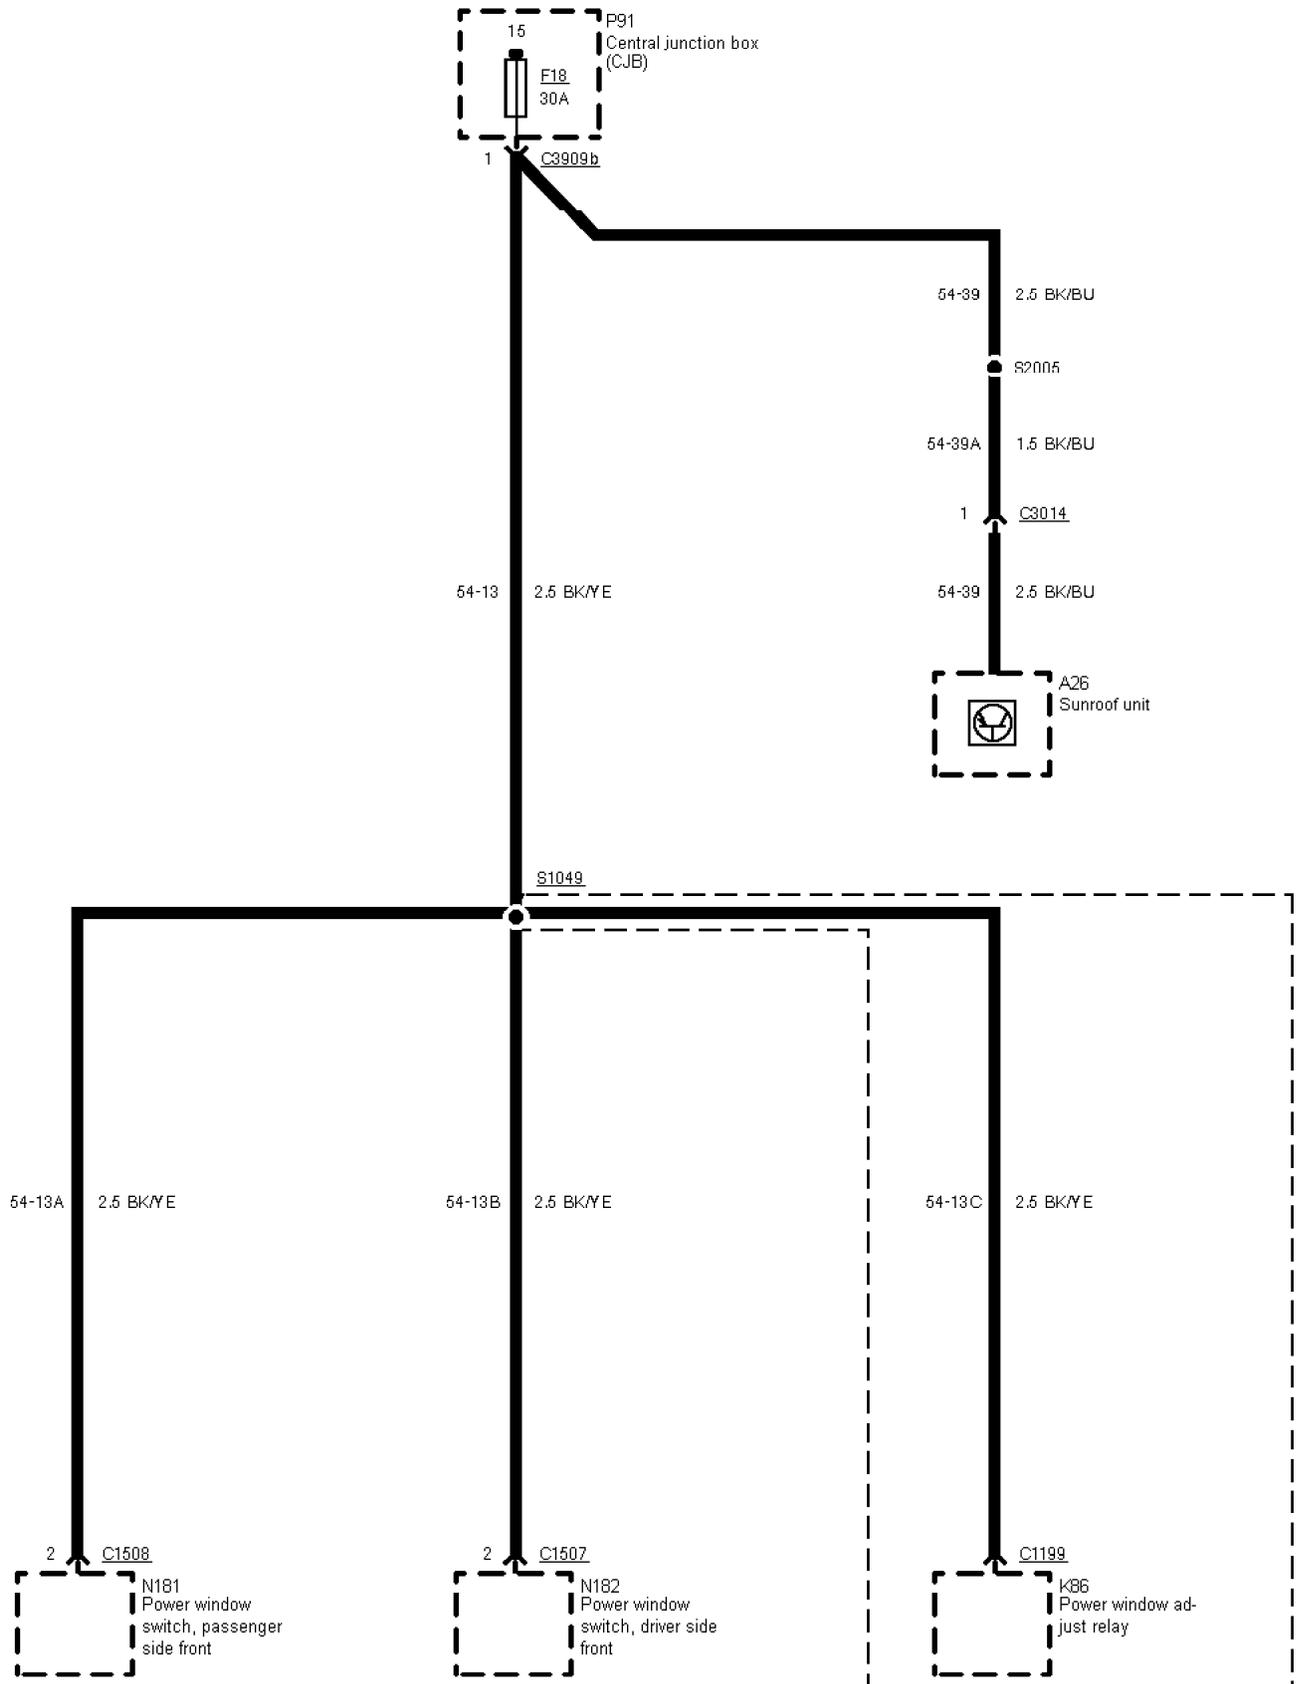

01-03-056 , Fuse Details , As of 95 without RS Cosworth Fuse 18 Cabriolet

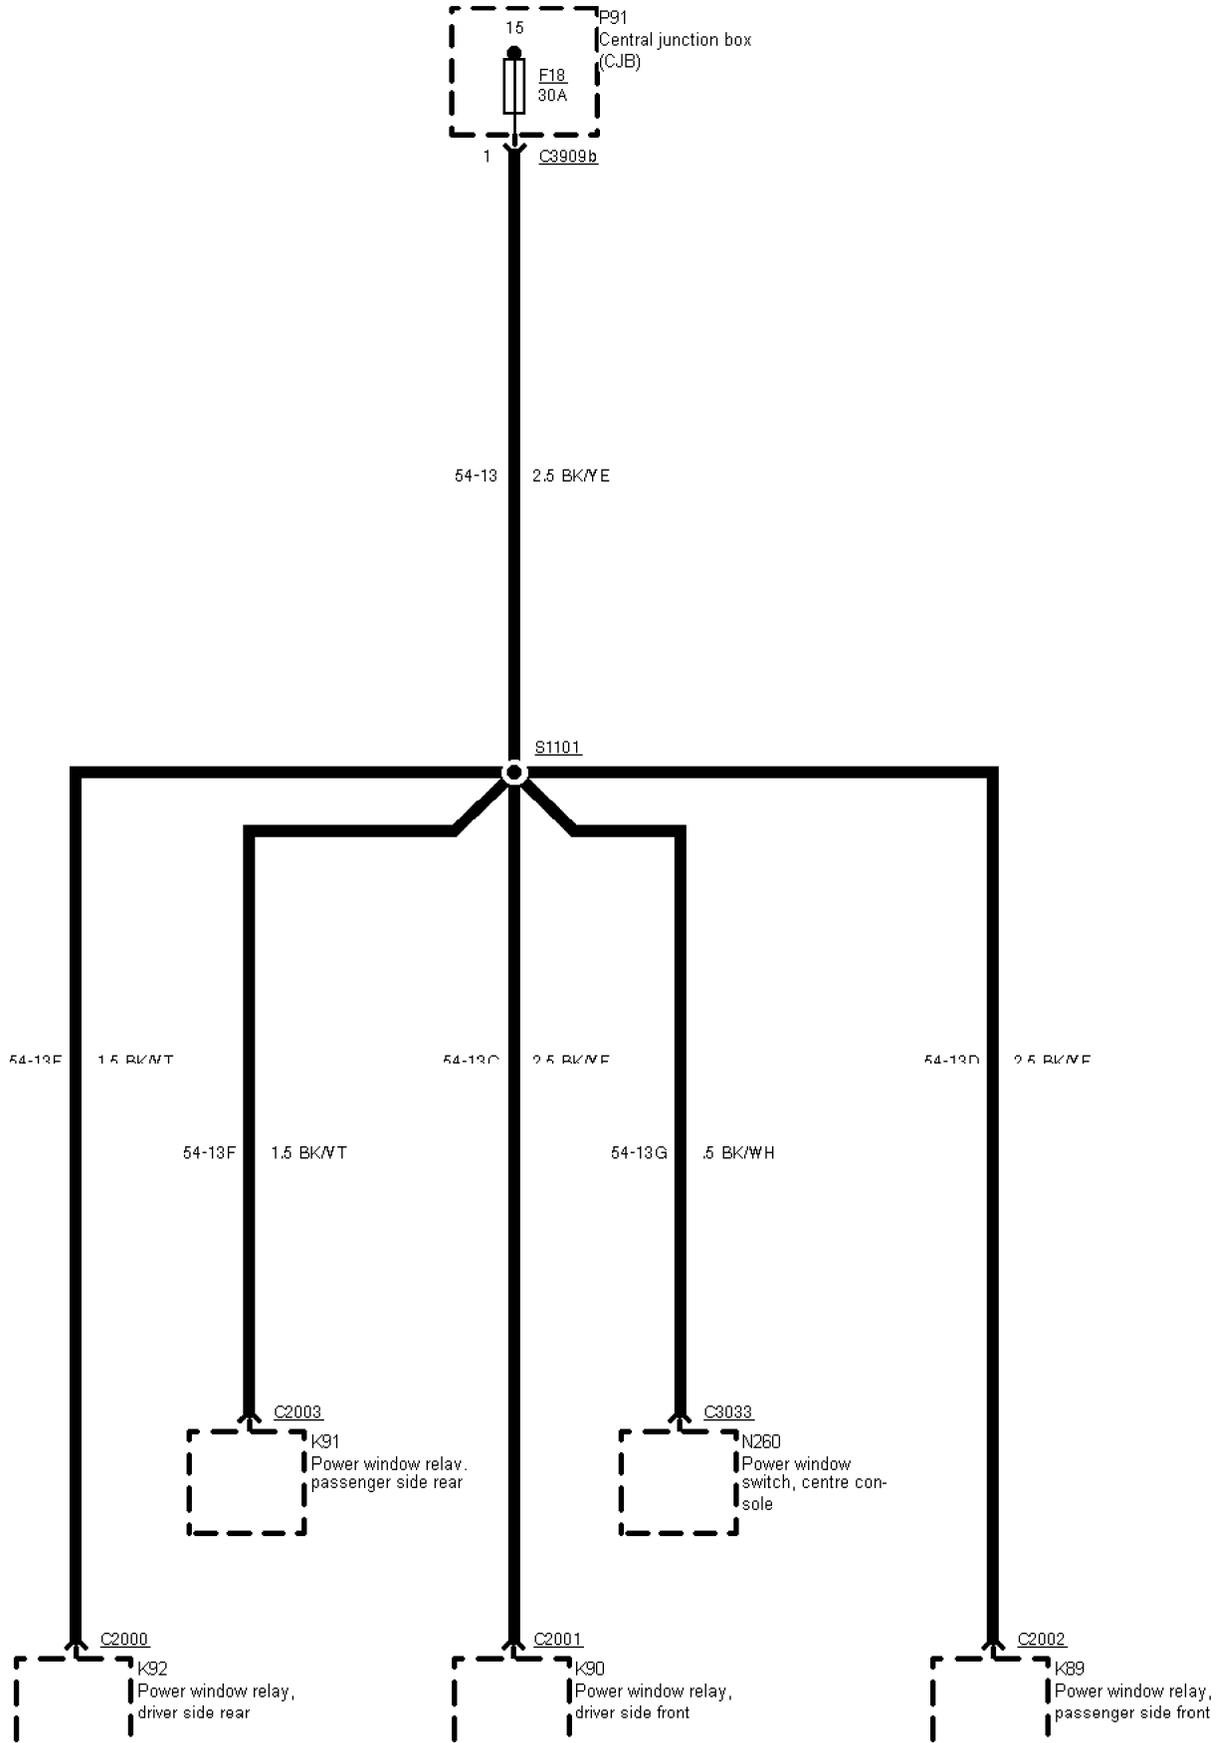


-----J


-----J

-----J


01-03-057 , Fuse Details , As of 95 without RS Cosworth Fuses 20 and 21

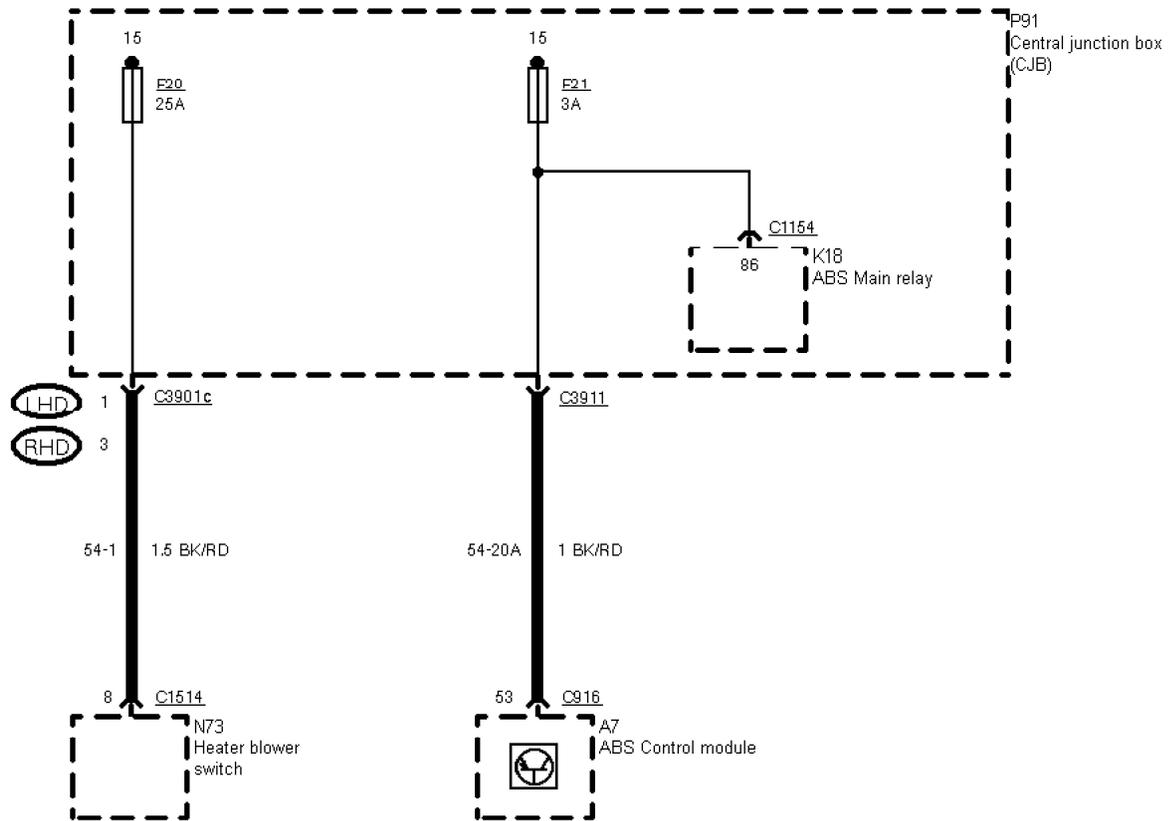


Fuse 22

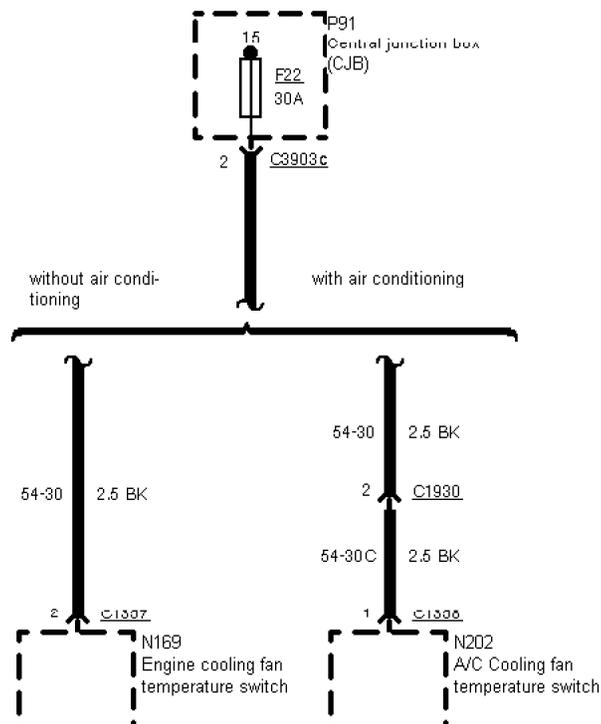


01-03-058 , Fuse Details , As of 95 without RS Cosworth Fuse 23

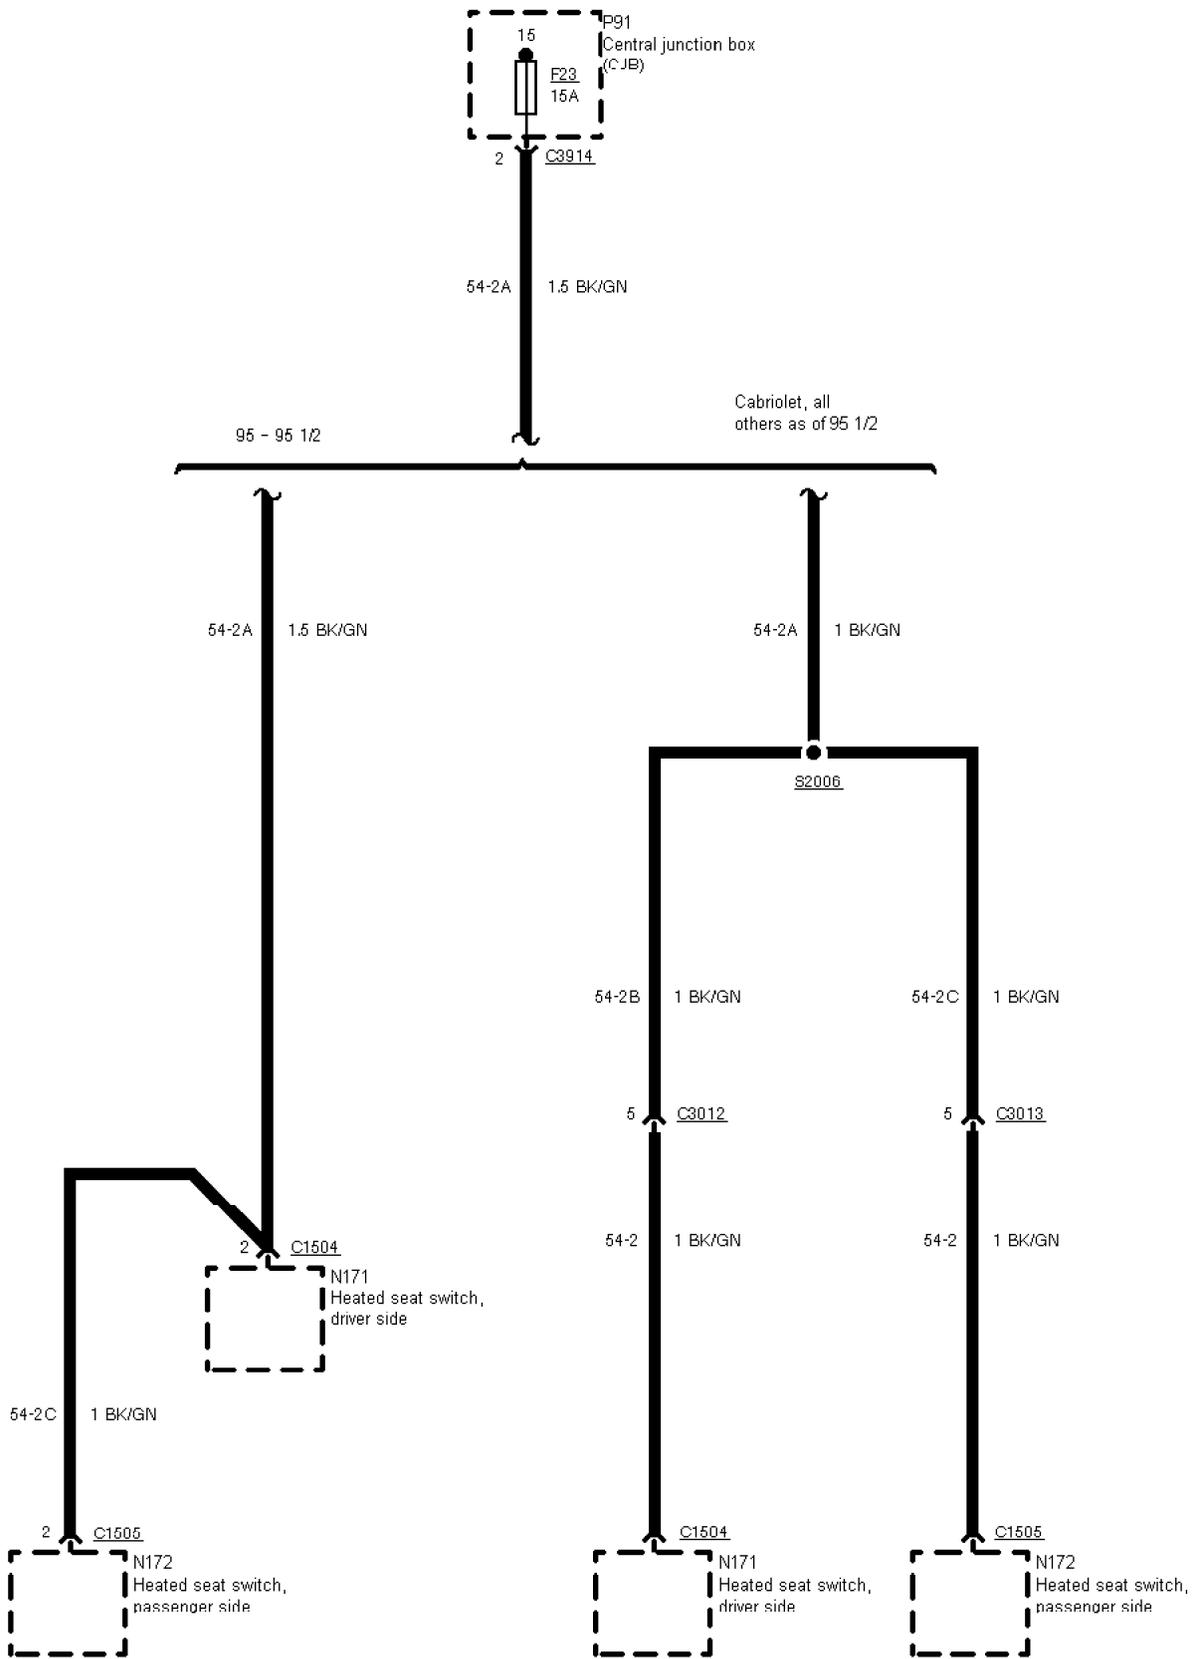


 01-03-059 , Fuse Details , As of 95 without RS Cosworth Fuse 24

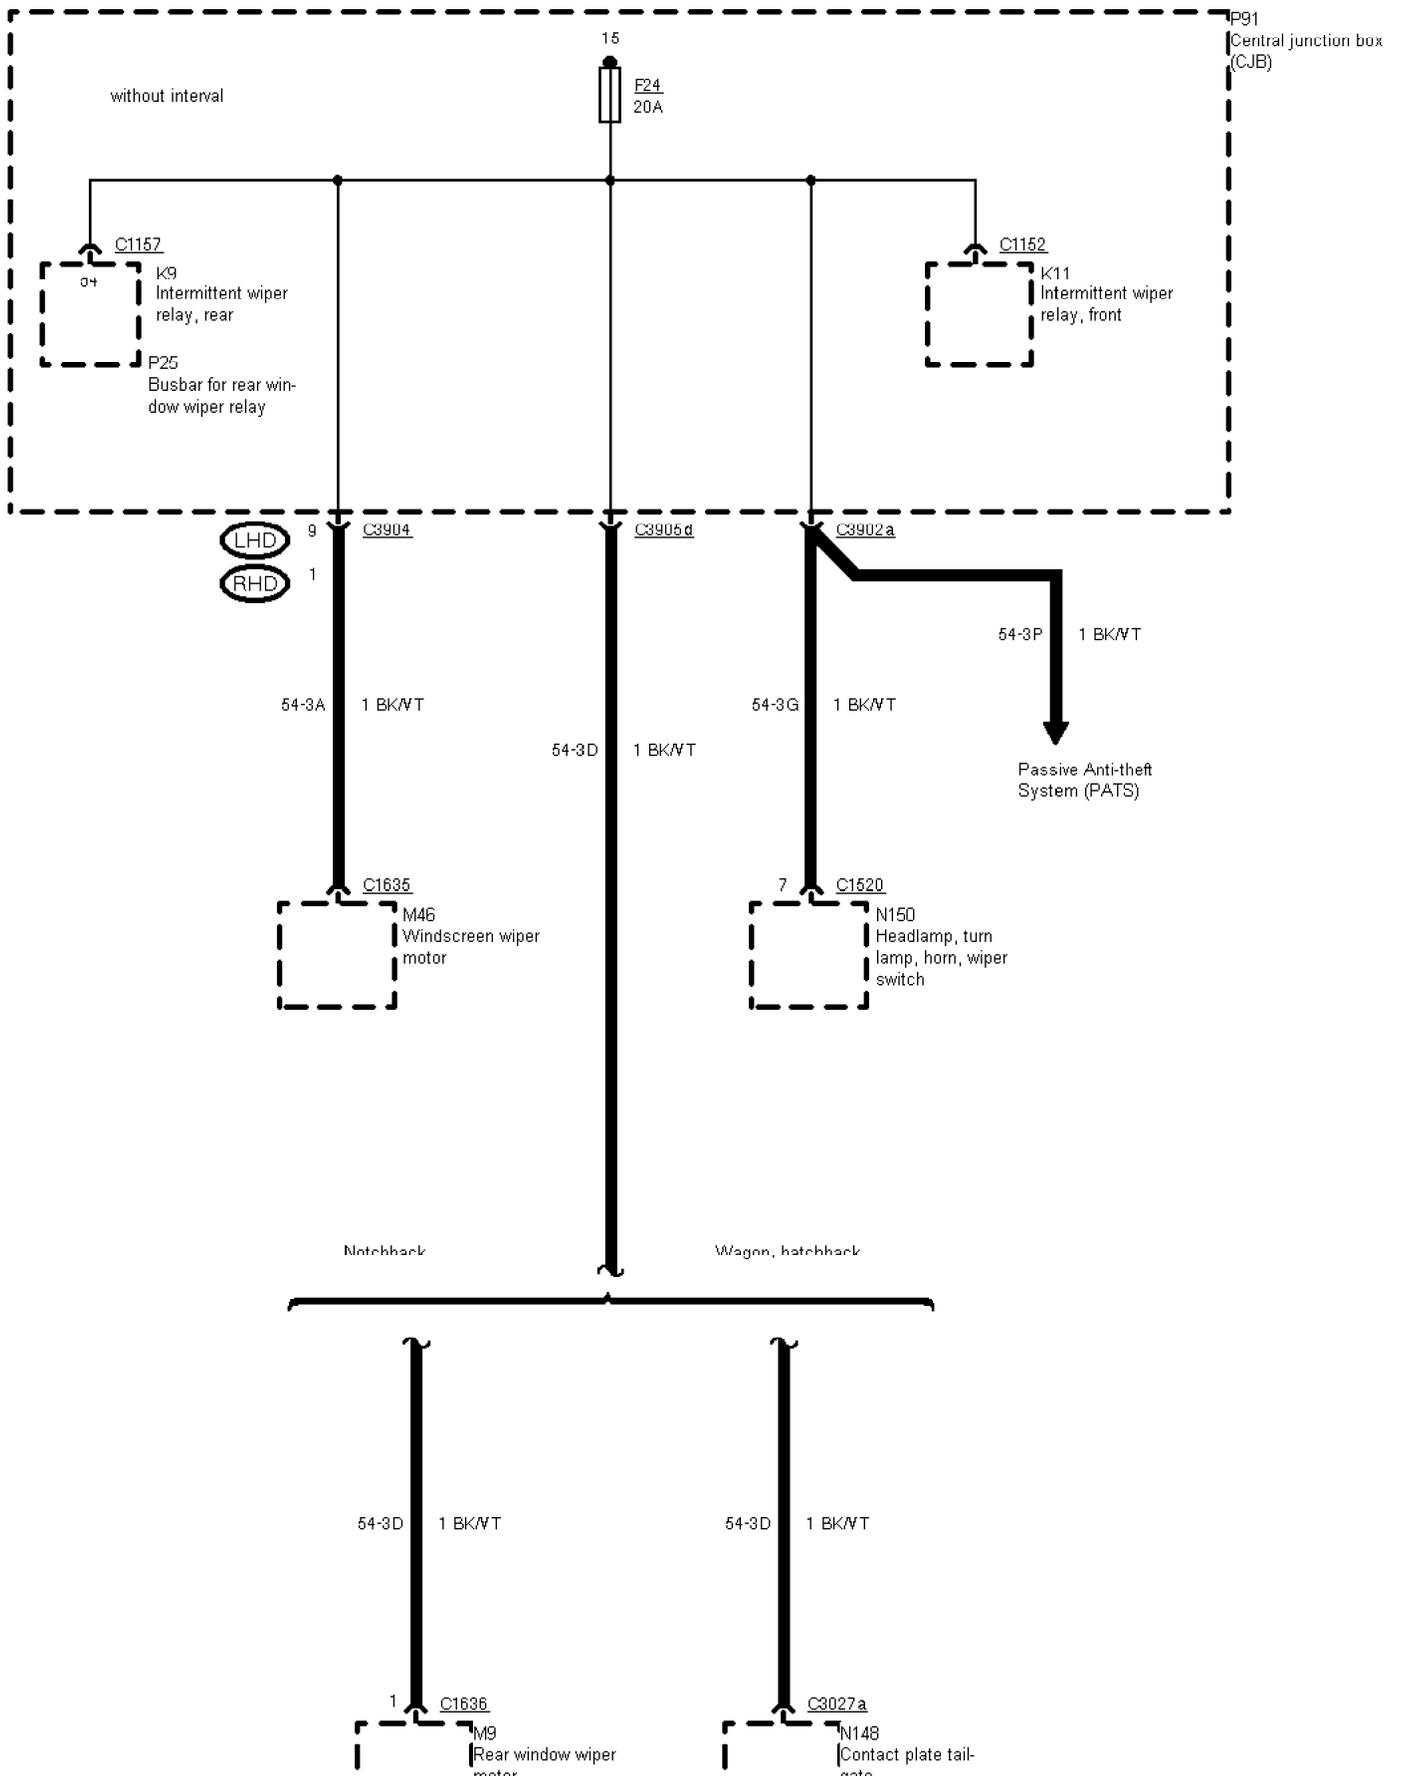






01-03-060 , Fuse Details , As of 95 without RS Cosworth Fuse 25


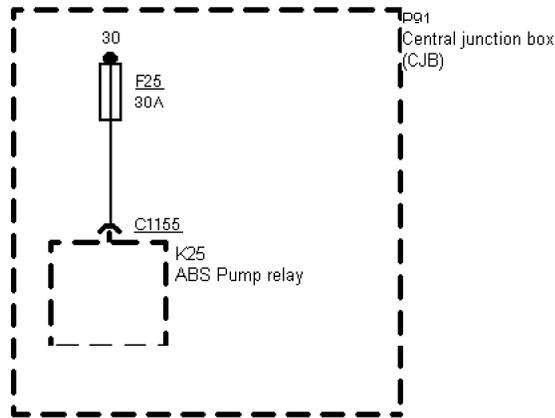


As of 95 without R3 Cosworth Fuse 20

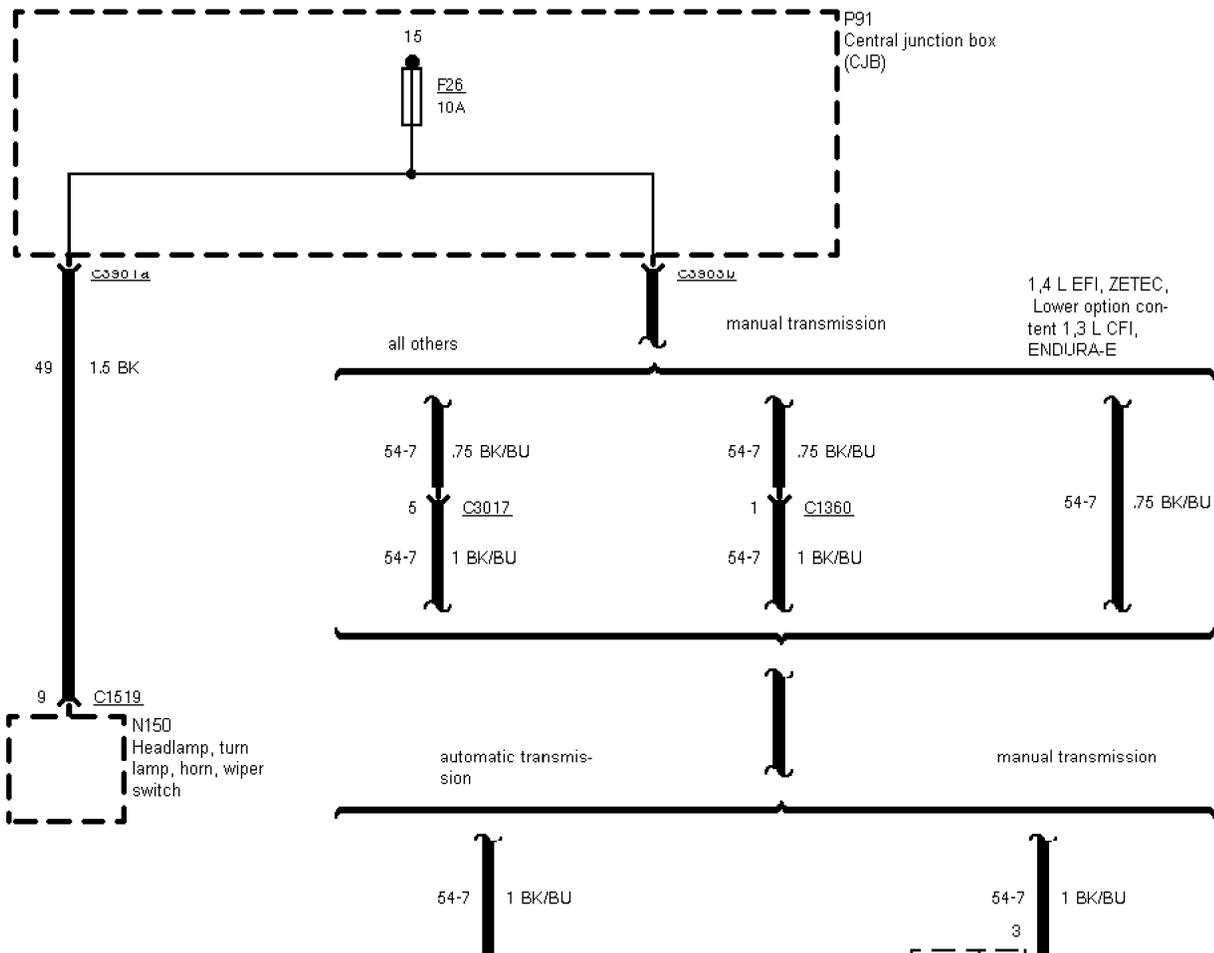


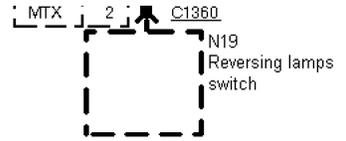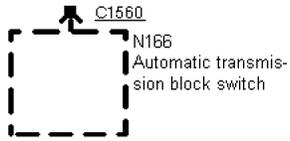


01-03-061 , Fuse Details , As of 95 without RS Cosworth Fuse 27

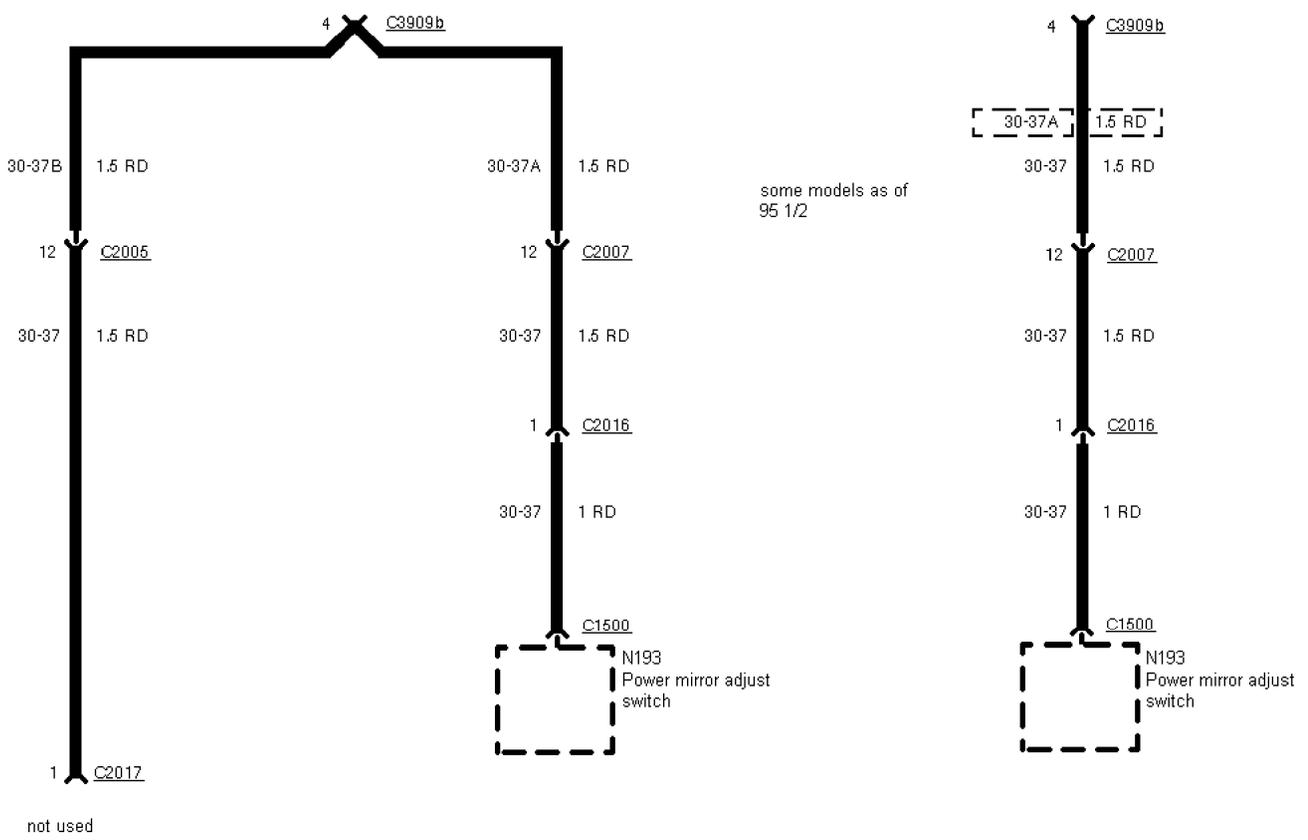
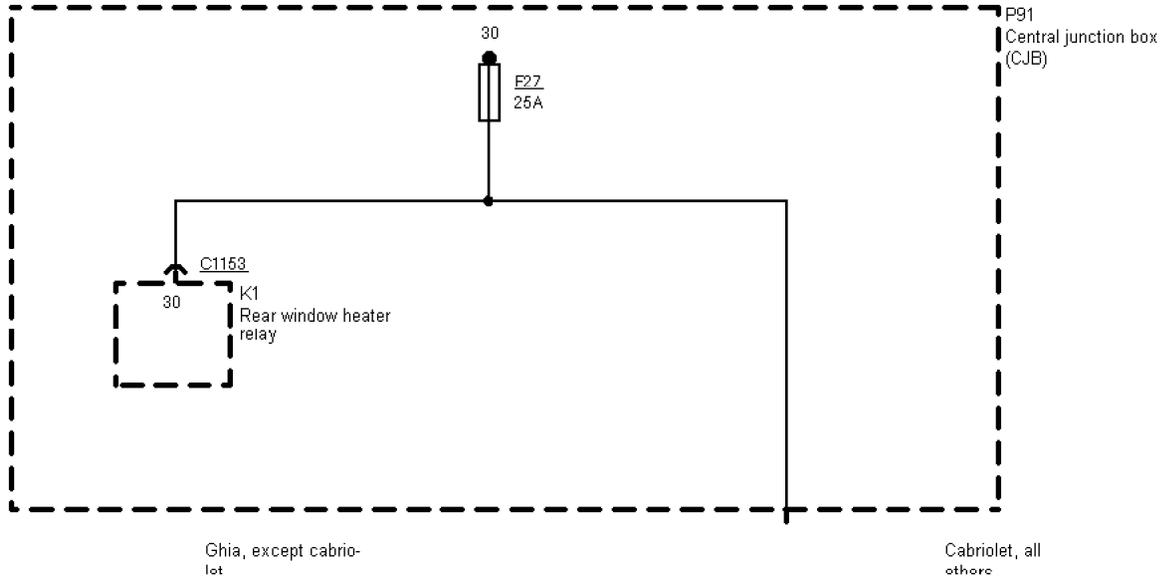


01-03-062 , Fuse Details , As of 95 without RS Cosworth Fuse 28

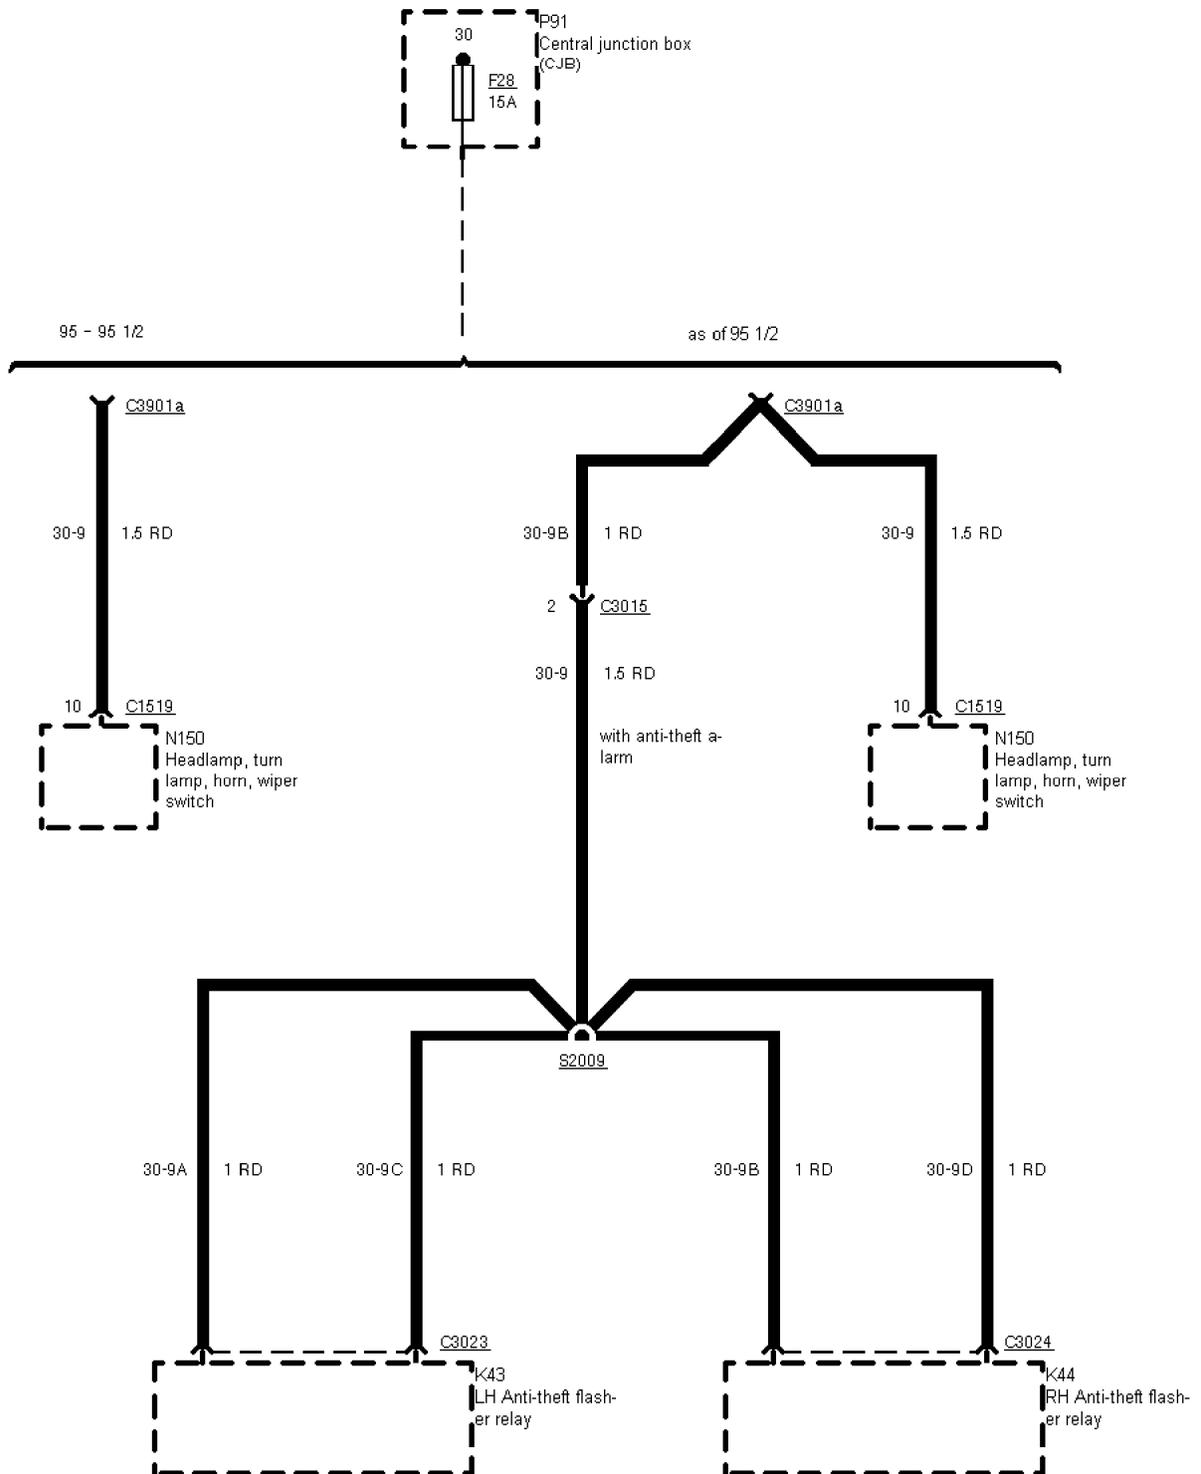

  
01-03-063 , Fuse Details , As of 95 without RS Cosworth Fuse 29


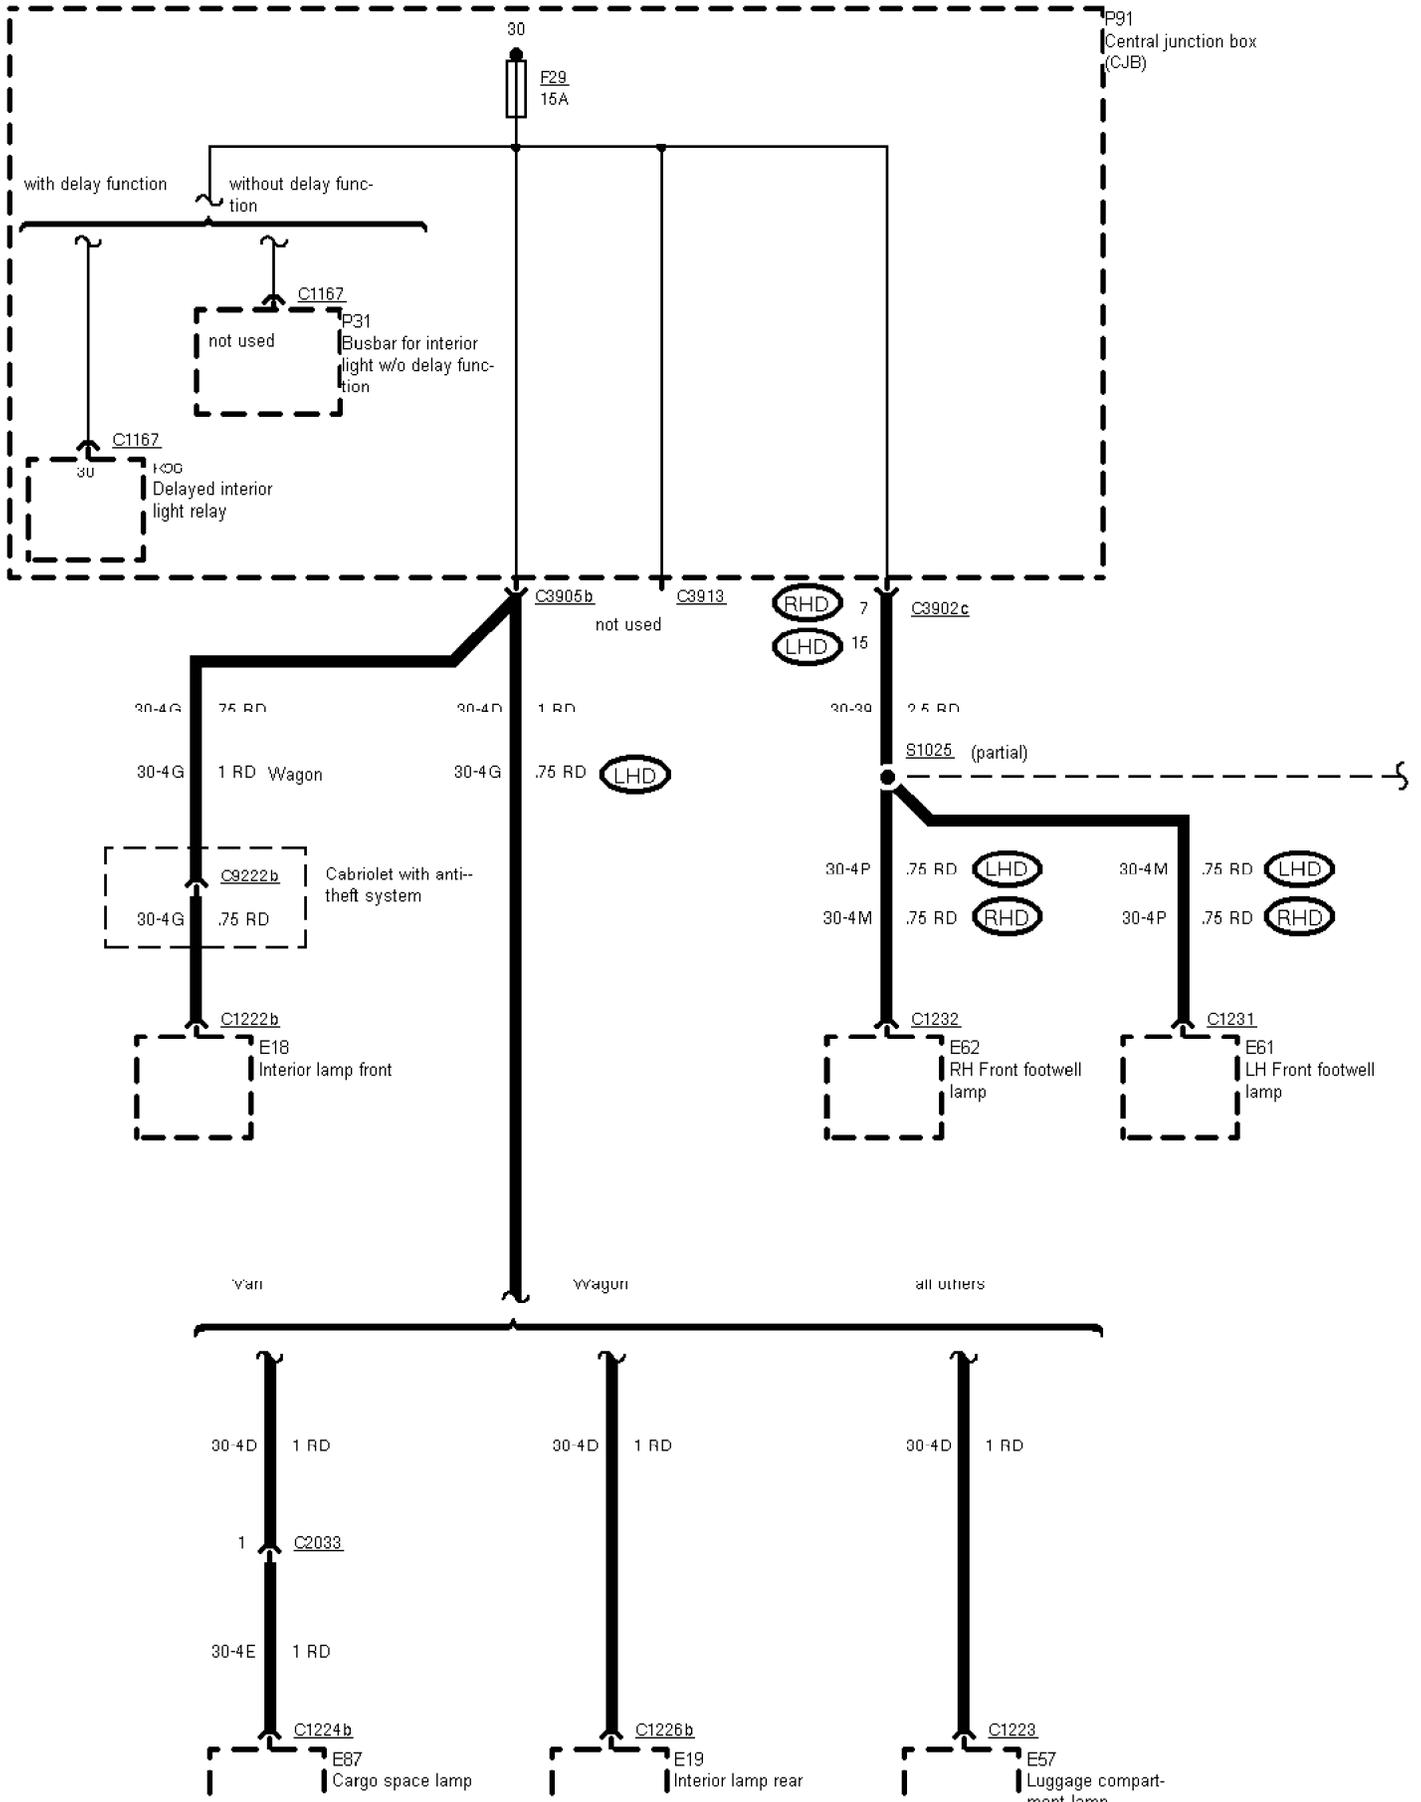




01-03-064 , Fuse Details , As of 95 without RS Cosworth Fuse 29

  
- ◆ → 95
- ◆◆ 95 → 95 ½
- ◆◆◆ 95 ½ →

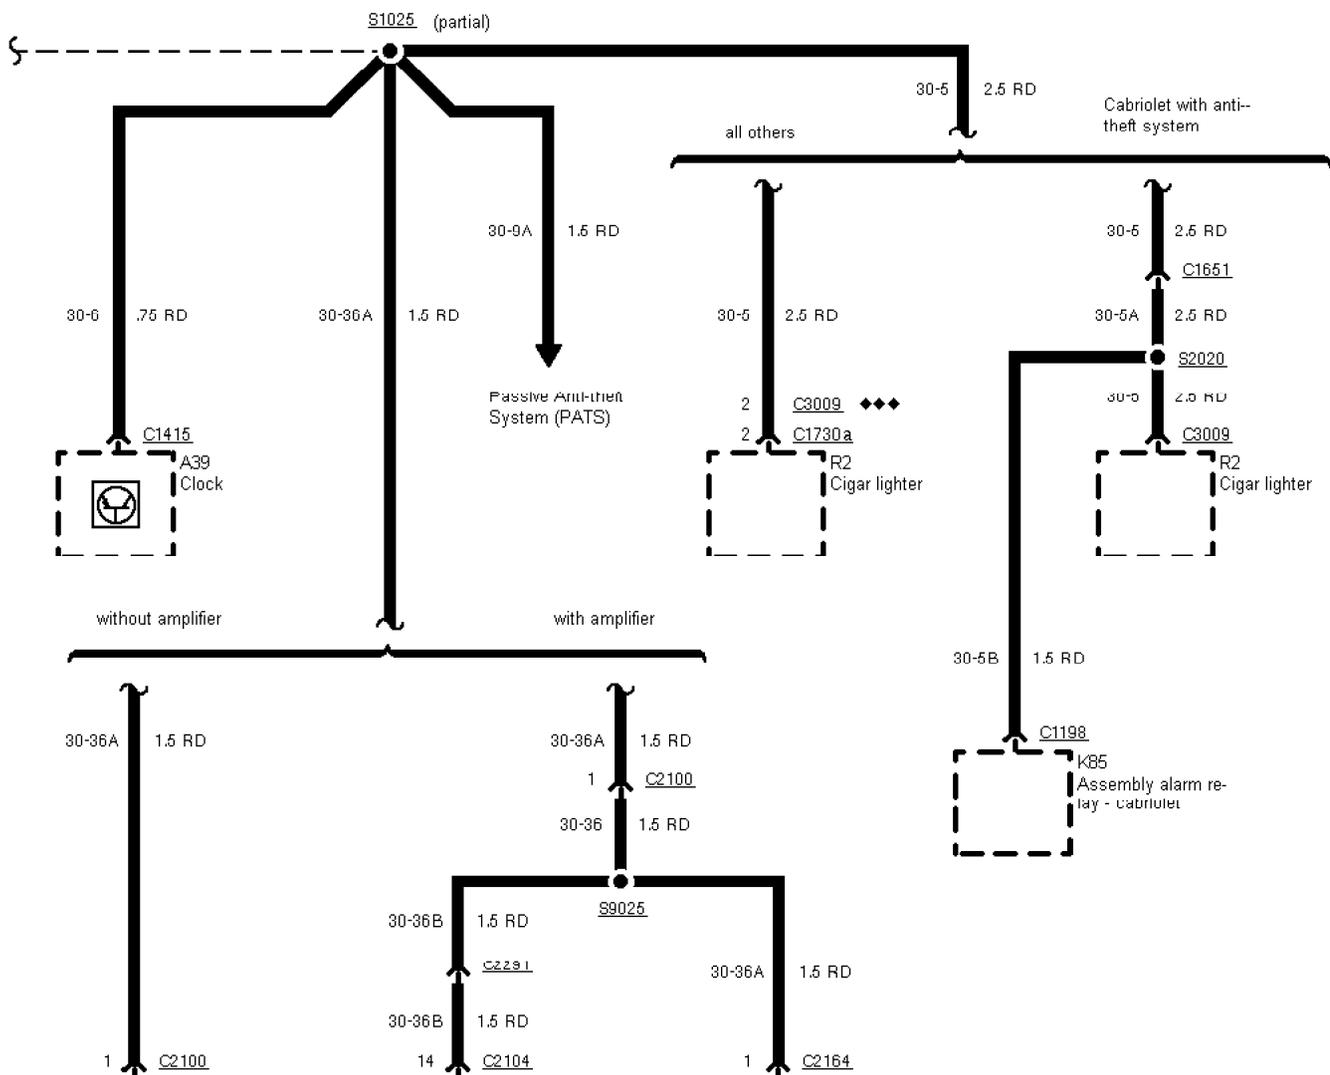




01-03-065 , Fuse Details , As of 95 without RS Cosworth Fuses 30, 31 and 32

- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

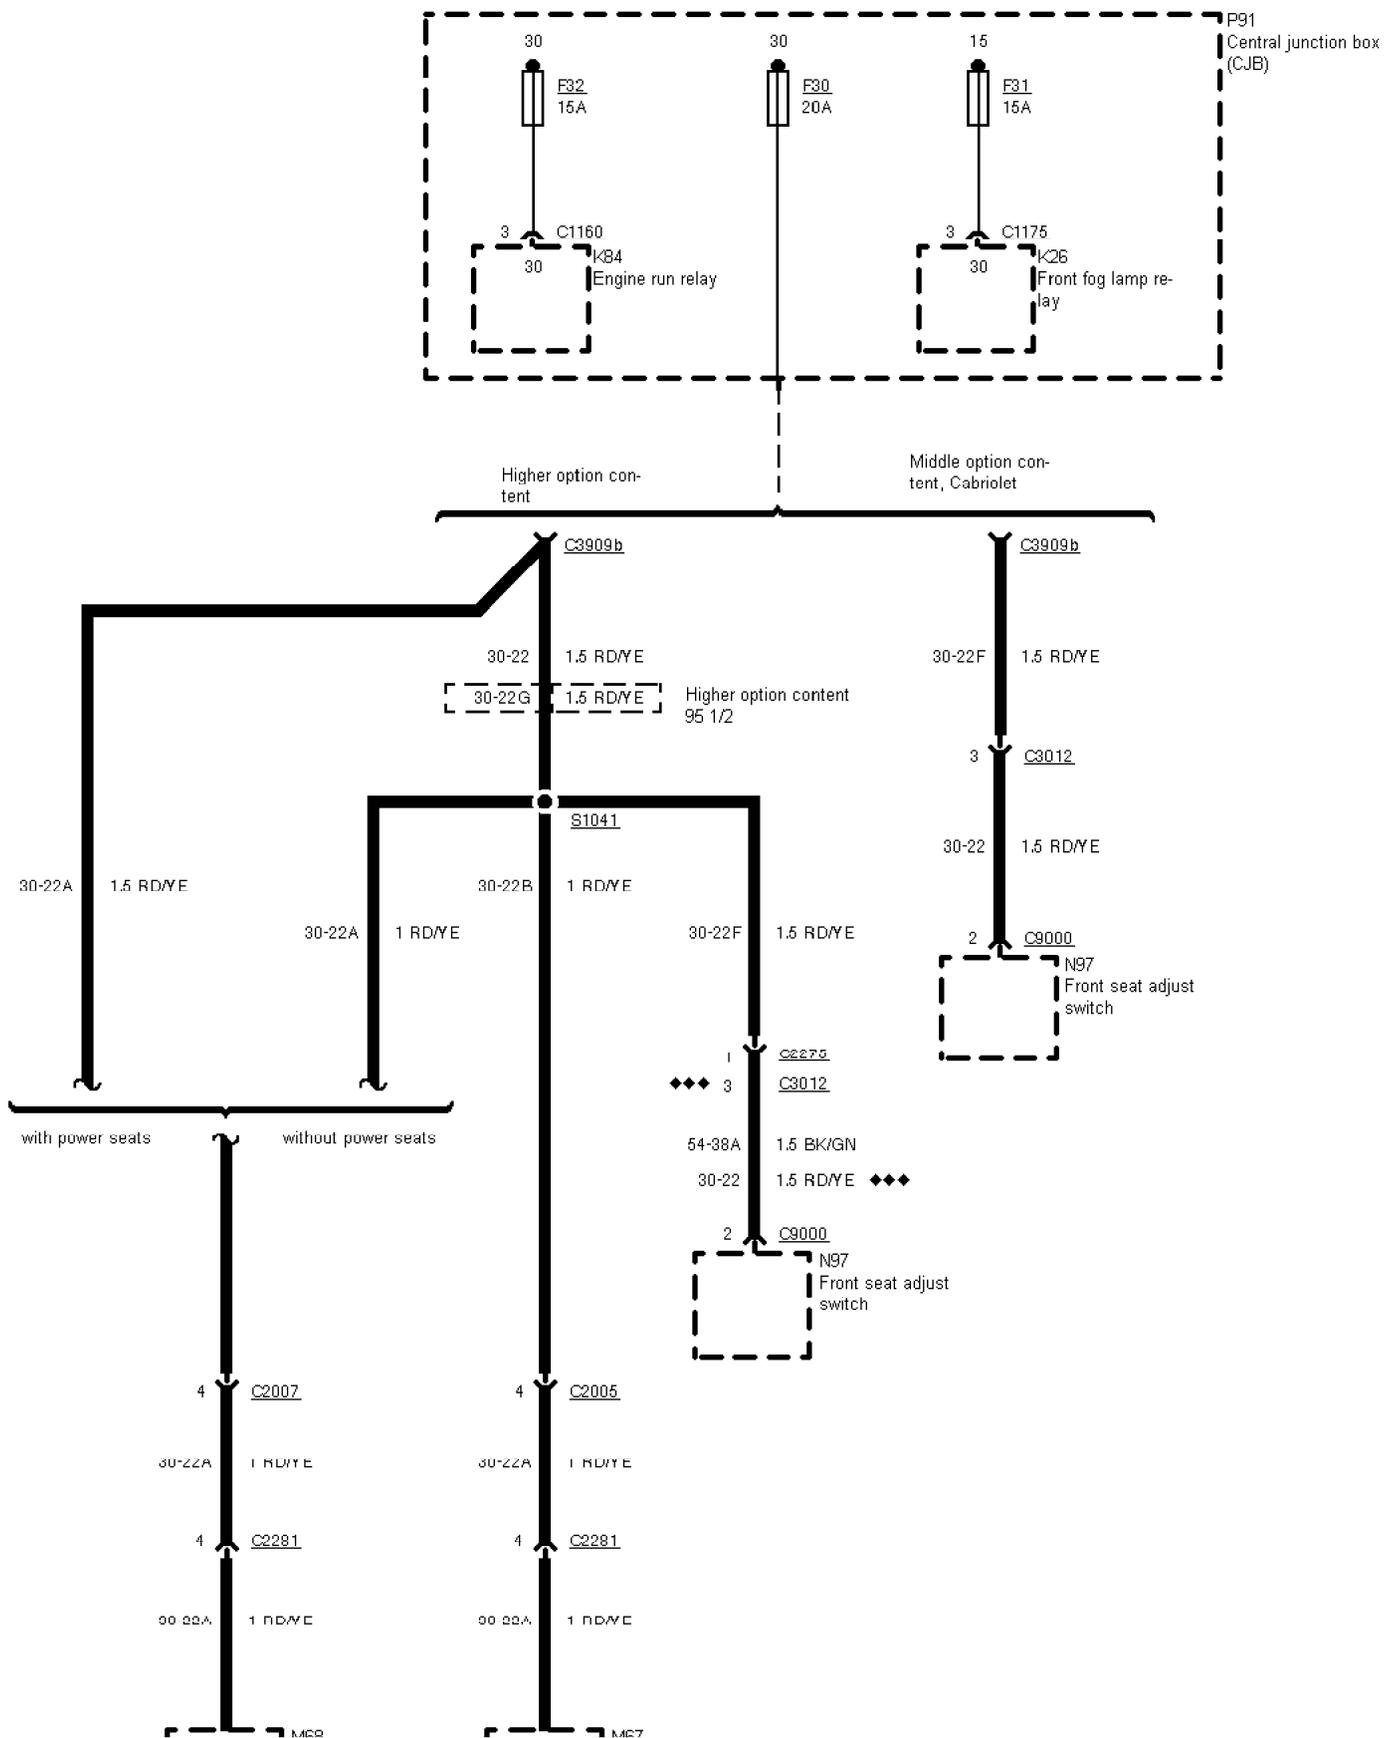




01-03-066 , Fuse Details , As of 95 without RS Cosworth Fuse 33

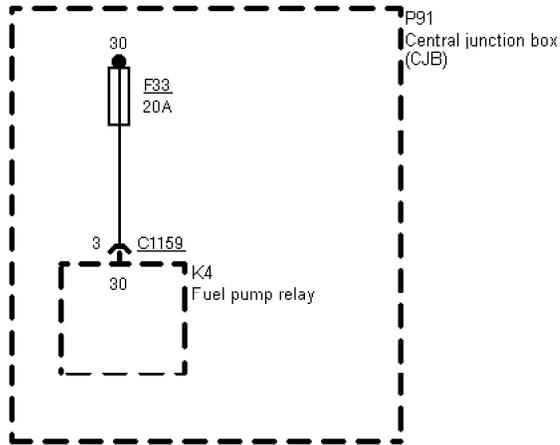


As of 95 without RS Cosworth Fuse 34

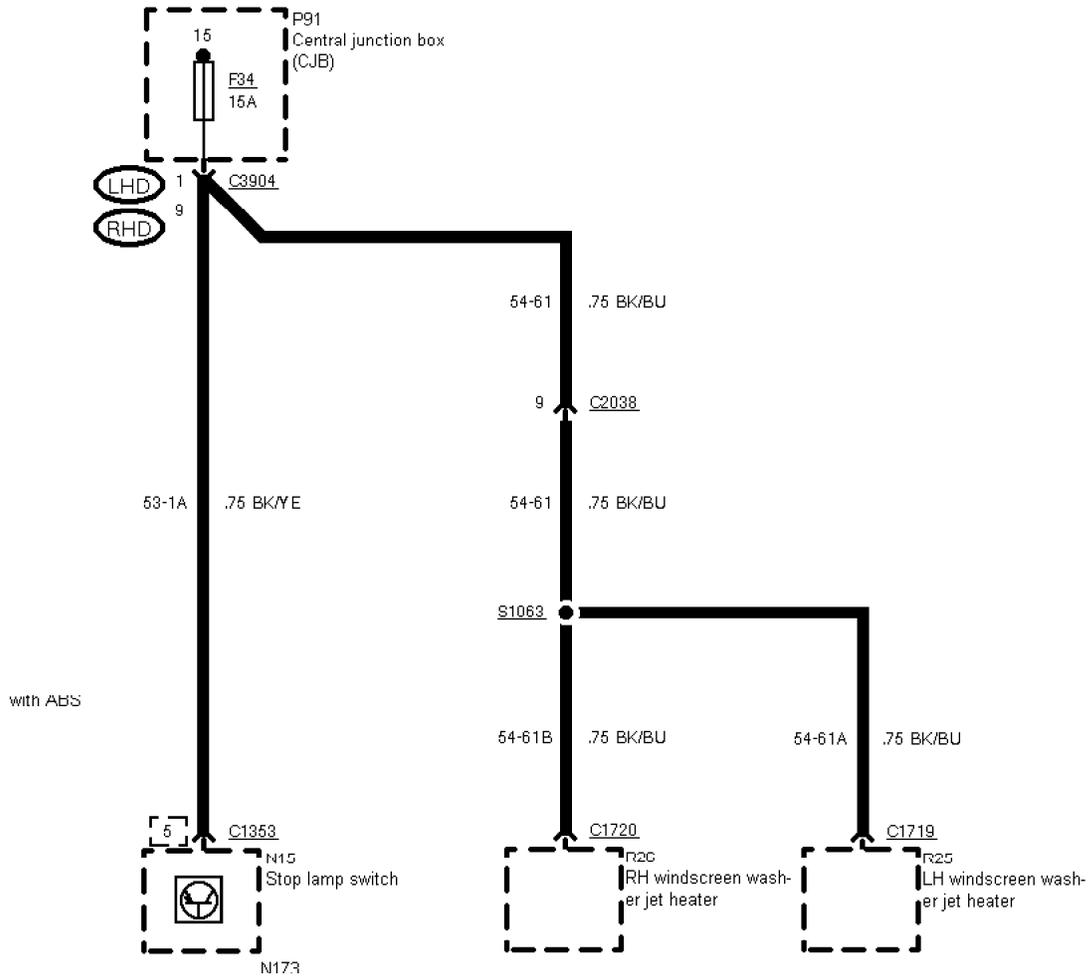

....
ABS Pedal travel
sensor/stop lamp
switch

01-03-067 , Fuse Details , As of 95 without RS Cosworth Fuse 35

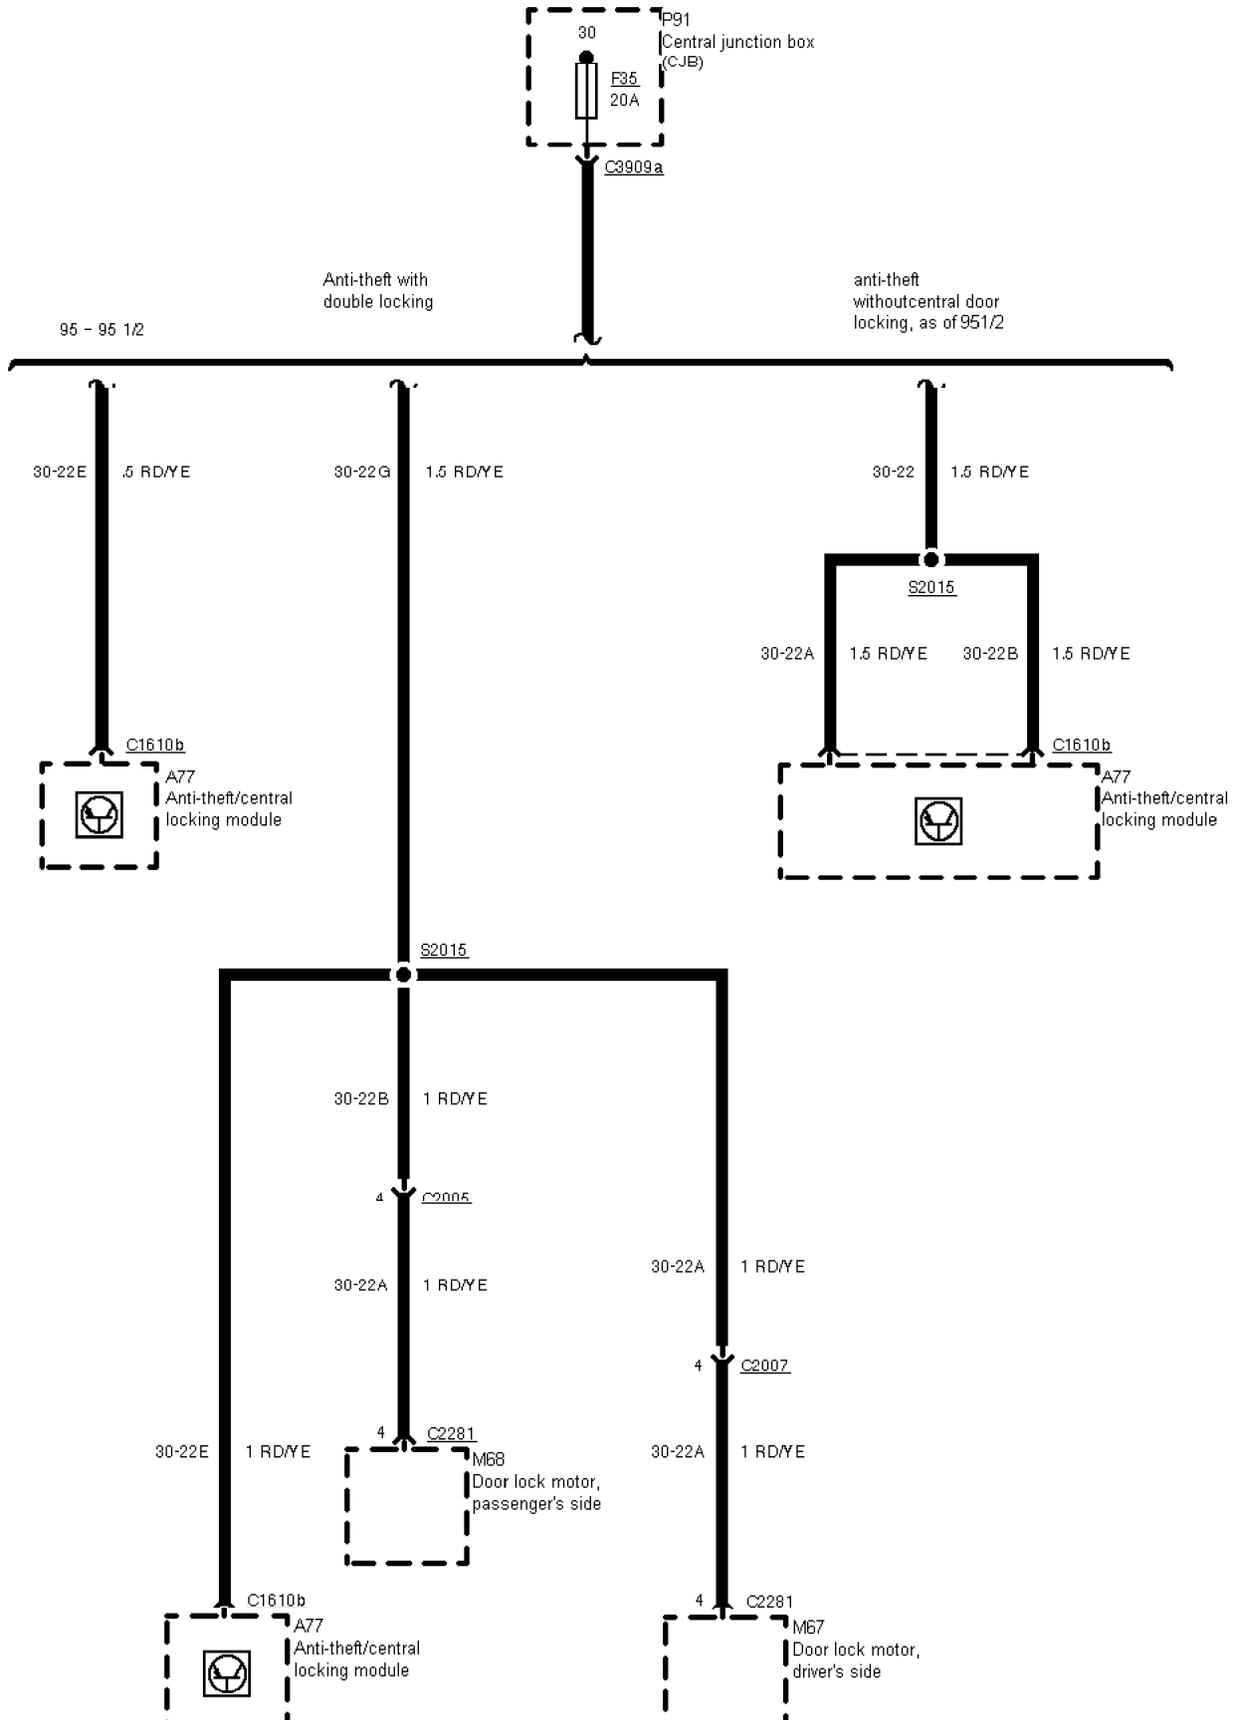

01-03-068 , Fuse Details , As of 95 without RS Cosworth Fuses FB37, FB38 and FB40, cabriolet only

