


Trim Panel - A Pillar - Remove And Install (43 616 0)

Remove

1. Locally detach the front door weatherstrip.

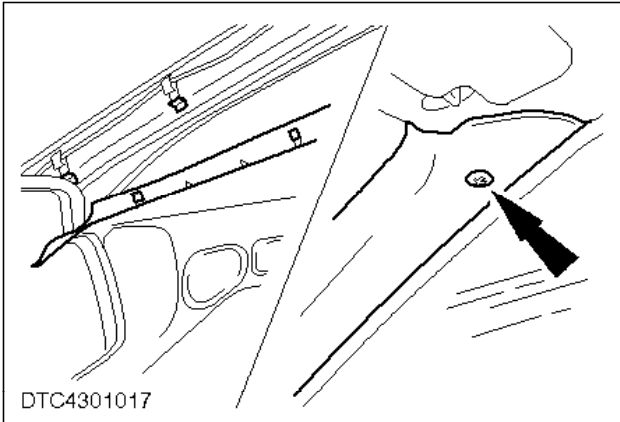

2. Remove the A-pillar trim panel (three clips, one screw).

Install

3. Refit the components in reverse order.
-