



Printed by BoltPDF (c) NCH Software. Free for non-commercial use only.






33-05-002 , Instrument Cluster (MY '95 1/2 ->) , Except RS Cosworth

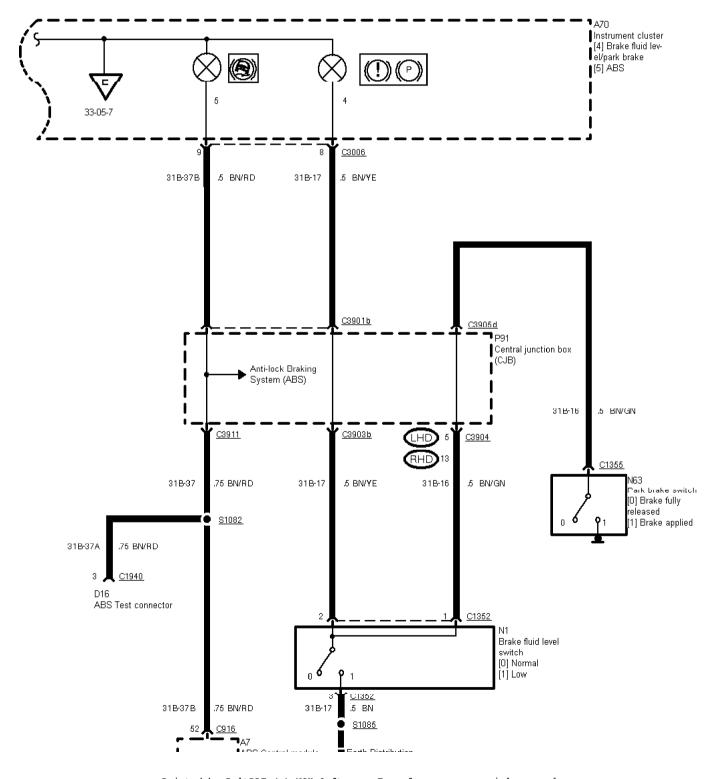


Printed by BoltPDF (c) NCH Software. Free for non-commercial use only.



33-05-003 , Instrument Cluster (MY '95 1/2->) , Except RS Cosworth

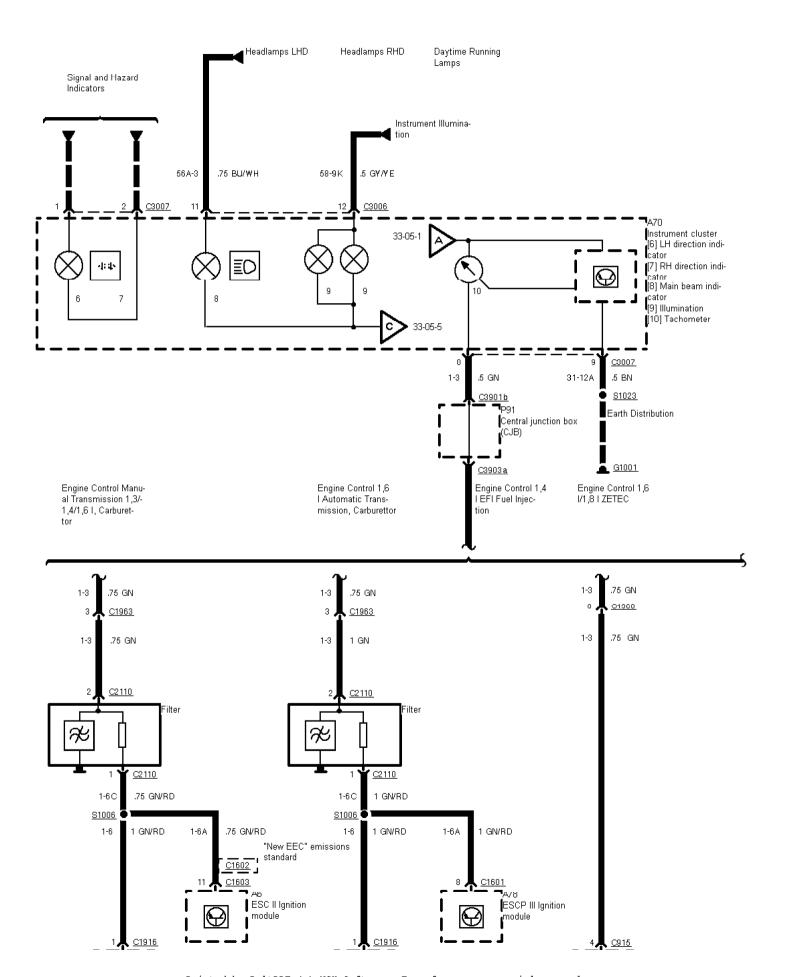


Printed by BoltPDF (c) NCH Software. Free for non-commercial use only.







33-05-004 , Instrument Cluster (MY '95 1/2 ->) , Except RS Cosworth

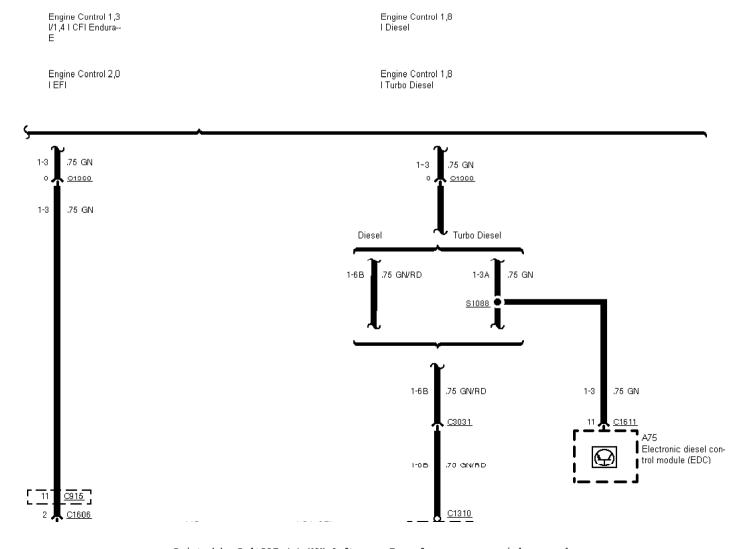


Printed by BoltPDF (c) NCH Software. Free for non-commercial use only.



1,3 L CFI, ENDURA-E as of 95 1/2 with internal PATS



33-05-005, Instrument Cluster (MY '95 1/2 ->), Except RS Cosworth

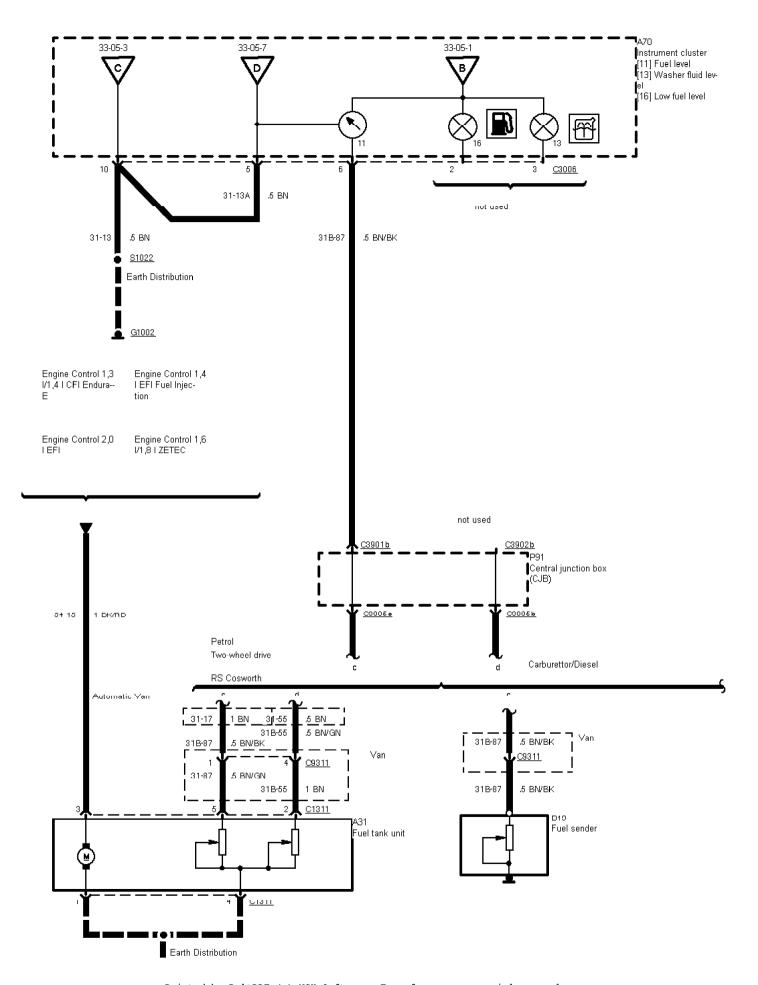

Printed by BoltPDF (c) NCH Software. Free for non-commercial use only.




33-05-006, Instrument Cluster (MY '95 1/2 ->), Except RS Cosworth

Four-wheel drive Engine Control 2,0 I EFI .5 BN/GN <u>C1944</u> 31B-87 2 .5 BN/BK 31B-41 .5 BN/₩H .5 BN/BK C1632 31B-55 .5 BN/GN 1 BK/RD 31B-87 A32 Additional fuel tank Engine Control 2,0 I EFI C1632 C1632 31B-87A .5 BN/BK 54-15 1.5 BK/RD 31-67B 1 BN <u>C1311</u> <u>81231</u> A31 Fuel tank unit Earth Distribution lacksquare<u>G1046</u> 7 <u>C1311</u>


Printed by BoltPDF (c) NCH Software. Free for non-commercial use only.



33-05-007, Instrument Cluster (MY '95 1/2 ->), Except RS Cosworth

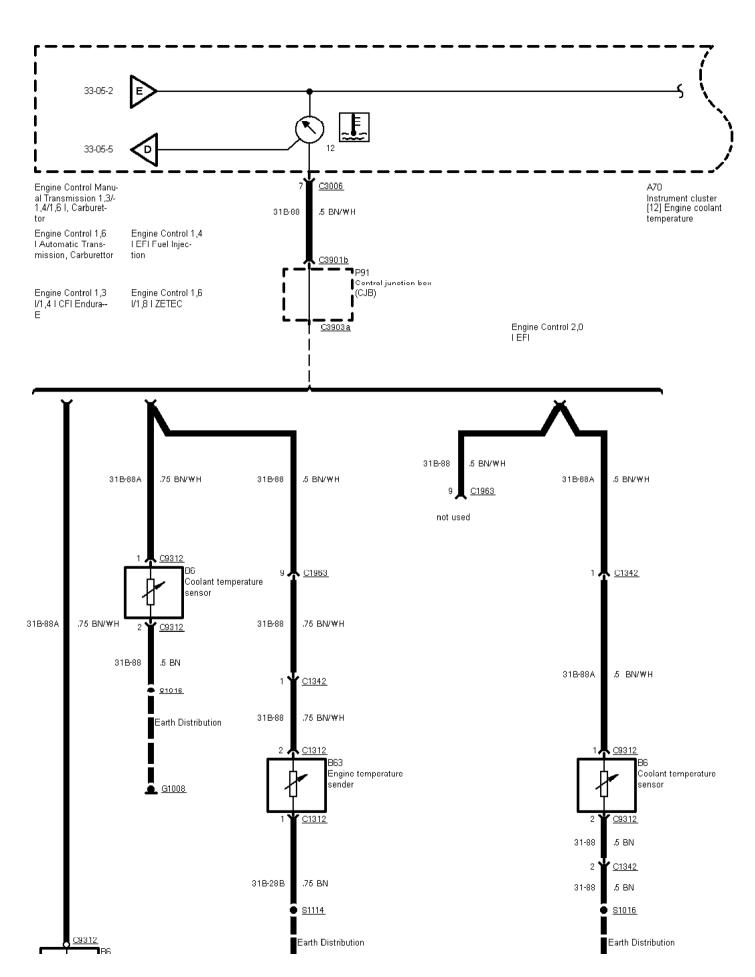

Printed by BoltPDF (c) NCH Software. Free for non-commercial use only.







33-05-008 , Instrument Cluster (MY '95 1/2 ->) , Except RS Cosworth

